FOX-120

Intel[®] LV Celeron[®] M Processor

Multipurpose & Waterproof

Panel PC

with 12" TFT LCD

FOX-120 Manual 1st Ed July 2008

Copyright Notice

This document is copyrighted, 2008. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- Award is a trademark of Award Software International, Inc.
- Intel[®], Celeron[®] and Pentium[®] are trademarks of Intel[®] Corporation.
- Microsoft Windows[®] is a registered trademark of Microsoft Corp.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin operating your PC, please make sure that the following materials are enclosed:

- 1 USB Cable with water proof Connector
- 2 COM Cables with water proof Connectors
- 1 waterproof Connecter for DC–in (Female)
- 1 waterproof Connecter for LAN (optional)
- 1 waterproof Connecter for audio –Line-out (optional)
- 1 Easy stand
- 1 CD-ROM for manual (in PDF format)
- 1 FOX-120 Multi purpose & Waterproof Panel PC

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

Safety & Warranty

- 1. Read these safety instructions carefully.
- 2. Keep this user's manual for later reference.
- 3. Disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
- 4. For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
- 5. Keep this equipment away from humidity.
- 6. Put this equipment on a firm surface during installation. Dropping it or letting it fall could cause damage.
- 7. The openings on the enclosure are for air convection. Protect the equipment from overheating. DO NOT COVER THE OPENINGS.
- 8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- 9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- 10. All cautions and warnings on the equipment should be noted.
- 11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
- 12. Never pour any liquid into an opening. This could cause fire or electrical shock.
- 13. Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
- 14. If any of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.

- d. The equipment does not work well, or you cannot get it to work according to the user's manual.
- e. The equipment has been dropped and damaged.
- f. The equipment has obvious signs of breakage.
- DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20°C (-4°F) OR ABOVE 70°C (140°F). IT MAY DAMAGE THE EQUIPMENT.
- 16. DO NOT OPEN the sealed Enclosure /case of equipment. Once enclosure is disassembled without approval, it will lead in abnormal operating of water proof gel. For Guarantee of water proof function, please make sure configuration/ peripheral (HDD,RAM, peripherals) has been confirmed to install before shipping.

FCC Safety



This device complies with Part 15 FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

F O X - 1 2 0

Below Table for China RoHS Requirements 产品中有毒有害物质或元素名称及含量

AAEON Panel PC/ Workstation

		有毒有害物质或元素				
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
印刷电路板	x	0	0	0	0	0
及其电子组件	^	0	0	0	0	0
外部信号	×	0	0	0	0	0
连接器及线材	~	0	0	0	0	0
外壳	×	0	0	0	0	0
中央处理器	x	0	0	0	0	0
与内存	~	0	0	0	0	0
硬盘	×	0	0	0	0	0
液晶模块	×	0	0	0	0	0
光驱	×	0	0	0	0	0
触控模块	×	0	0	0	0	0
电源	×	0	0	0	0	0
O: 表示该有毒有害	物质在	该部件	近有均质	材料中的	含量均在	•

O:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。

备注:

一、此产品所标示之环保使用期限,系指在一般正常使用状况下。

二、上述部件物质中央处理器、内存、硬盘、光驱、触控模块为选购品。

F O X - 1 2 0

Contents

Chapter 1 General Information

1.1 Introduction	1-2
1.2 Features	1-3
1.3 Specification	1-4
1.4 Dimension	1-6

Chapter 2 Hardware Installation

2.1 USB 1/2 Connecter	2-2
2.2 COM 1 Connector for RS232	2-2
2.3 COM 2 Connector for RS232/RS422/RS485	2-3
2.4 Audio (Line out)	2-4
2.5 DC-in 9~30V Connector	2-4

Chapter 3 Award BIOS set up

3.1 Sys	stem Test and Initialization	
3.2 Awa	ard BIOS Setup	

Chapter 4 Driver Installation

4.1 Installation 4	ł	-				;		(2
--------------------	---	---	--	--	--	---	--	---	---

Appendix FAQ

A.1 FAQA-2

F O X - 1 2 0

Chapter

General Information

Chapter 1 General Information 1-1

1.1 Introduction

FOX-120 Multipurpose & Waterproof panel PC is а high-performance computing and completely fan-less solution for applications in outdoor. semi-outdoor. and harsh indoor environment, that comes with Intel Celeron M Low Power processor, 12" wide View-angle display (with sunlight readability), Sealing enclosure(6 sides of IP65 certified) and Water proof I/O connectors for Ethernet, multi-COM port, audio and USB interfaces. In addition, with water resistant bottoms on front panel, FOX has user-friendly interface for brightness control and a variety of optional wireless for real time communication or navigation.

Besides, for system integrators, a simple, complete, compact and highly integrated system helps you smoothly build an industrial grade solution into your applications. By this concept, FOX is design with valuable features (listed in next section) to serve various field of markets such as Vehicle, food factory, slaughter house, Pharmacy Production, Production Plant Hospital Operation Room, and Outdoor KIOSK Public Information Terminal.

With FOX, we believe the end user can optimize the workflow of operations and management in daily business.

1.2 Features

- 12" High Brightness & Wide View-Angle LCD Panel
- Polarized Touch Panel Control for Outdoor Readability (Optional)
- Slim, Rugged, Sealing Enclosure with All sides of IP65 Certified
- Supports Windows 2000, XP, XP Embedded
- Wide Operating Temperature Range:
 -20°C~60 °C (With W/T CFD); -20 °C ~55 °C (With W/T HDD)
- Day and Night Mode Display:
 Day Mode for Sunlight Readability; Night Mode for Power Saving
- Multi-Wireless Options:
 WIFI LAN with Internal Antenna (optional)
 GPS Module with Internal Antenna (optional)
- Waterproof Lockable I/O: Standard M12 Waterproof Connector
- User Friendly Bottom Control on Front Panel

1.3 Specification

System

•	CPU	Onboard Intel Celeron M 1.5GHz/ ULV
		Celeron M 600MHz Processor
•	Memory	Onboard 256/512MB, up to 1G DDR
		SDRAM
•	LCD / CRT Controller	Intel 852GM
•	Ethernet	Intel 82562 10/100Base-TX, RJ-45
		connector x 1
•	M12 water proof I/O Port	2 RS-232
		2 USB 2.0 ports,
		Audio Line-out (optional)
		10/100Base-TX RJ-45 (optional)
•	Storage Disk Drive	Type II Compact Flash™ internal slot
		Anti-vibration 2.5" Hard disk drive bay
•	OS Support	Windows 2000, XP, XP Embedded

Mechanical

•	Construction	Metal
•	Front Panel Color	Silver Gray- RAL9007
•	Mounting	VESA 75-100mm holes,
		Vehicle Mounting
•	Dimension	9.65" (W) x 7.2" (H) x 2.37" (D)
		(410mm x 336mm x 59.6mm)

 
	Multipurpose & Waterproof Panel P(FOX-120
•	Net Weight	9.9 lb (4.5Kg)
•	Gross Weight	12.1 lb (5.5Kg)
En	vizonmontol	
En	vironmental	
•	Operating Temperature	
		With W/T Hard Disk drive
		-4°F~140°F (-20°C~60°C)
		with W/T CompactFlash™Disk
٠	Storage Temperature	-22°F~158°F(-30℃~70℃)
•	Operating Humidity	10% to 90%@35 $^\circ\!\!\mathbb{C}$, non-condensing
•	Vibration	Random Operation 3G, 5-500Hz
٠	Shock	15G peak acceleration (11 msec.
		duration)
•	EMC	CE/FCC Class A
•	Power Supply	Input: DC 9~30V
LC	D	
•	Display Type	12" Color TFT LCD
•	Max. Resolution	800 × 600
٠	Max. Colors	262K colors
•	Dot Size	0.3075mm x 0.3075mm
٠	Luminance	450 nits
٠	Viewing Angle	140° (H) x 110 ° (V)
•	Backlight MTBF	50,000 hours


Touch Screen

- Type 8-wire analog resistive
- Light Transmission >74%
- Lifetime 1 million activations

Note: All AAEON's LCD products are manufactured with High precision technology. However, in all LCD panels there maybe a small number of defective pixels that do not change color. This is a normal occurrence for all LCD displays from all manufacturers and should not be noticeable or objectionable under normal operation. AAEON qualify the LCD panel following industry standard: total 7 dead pixels on a screen or if there are 3 within 1 inch square area of each other on the display.

1.4 Dimension



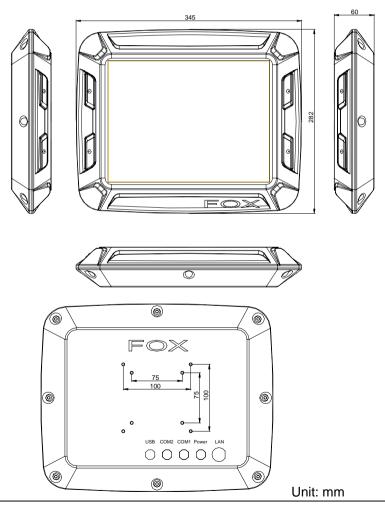

Chapter 1 General Information 1-7

F O X - 1 2 0

Front side



Side Backs



F O X - 1 2 0

Chapter

Hardware Installation

Chapter 2 Quick Installation Guide 2-1


2.1 USB 1/2 Connecter



<u>Pin Assignments</u> Front View

	11011	0 1101	
Pin	Signal	Pin	Signal
1	USB V+	2	USB V+
3	USB D1-	4	USB D1+
5	GND	6	USB D2+
7	USB D2-	8	GND

 2.2 COM1 Connector for RS-232




Pin Assignments Front View

		THOME THEM	
Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS

Chapter 2 Quick Installation Guide 2 - 2

2.3 COM2 Connector for RS232/RS422/RS485

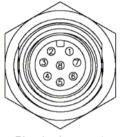

<u>Pin Assignments</u> <u>Front View</u>

RS-232

Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS

RS-422

Pin	Signal	Pin	Signal
1	TXD-	2	RXD+
3	TXD+	4	RXD-

RS-485

Pin	Signal	Pin	Signal
1	TXD-	2	NC
3	TXD+	4	NC

2.4 Audio (Line out)

		Pin Assignments Front View
Pin	Signal	Pin Signal
1	R-out	2 N/A
3	L-out	4 GND

2.5 DC-IN 9~30V Connecter

		Pin Assignments
		Front View
Pin	Signal	Pin Signal
1	DC V+	2 N/A
3	GND	4 NC

F O X - 1 2 0

Chapter 3

Award BIOS Setup

Chapter 3 Award BIOS Setup 3-1

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

Press <F1> to RESUME

Write down the message and press the F1 key to continue the boot up sequence.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- 1. You are starting your system for the first time
- 2. You have changed the hardware attached to your system
- 3. The CMOS memory has lost power and the configuration information has been erased.

TheFOX-120 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 Award BIOS Setup

Awards BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press immediately. This will allow you to enter Setup.

Standard CMOS Features

Use this menu for basic system configuration. (Date, time, IDE, etc.)

Advanced BIOS Features

Use this menu to set the advanced features available on your system.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system performance.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals. (Primary slave, secondary slave, keyboard, mouse etc.)

Power Management Setup

Use this menu to specify your settings for power management. (HDD power down, power on by ring, KB wake up, etc.)

PnP/PCI Configurations

This entry appears if your system supports PnP/PCI.

PC Health Status

This menu allows you to set the shutdown temperature for your system.

Frequency/Voltage Control

Use this menu to specify your settings for auto detect DIMM/PCI clock and spread spectrum.

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While AWARD has designated the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

Set Supervisor/User Password

Use this menu to set Supervisor/User Passwords.

Save and Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

You can refer to the "AAEON BIOS Item Description.pdf" file in the CD for the meaning of each setting in this chapter.

F O X - 1 2 0

Chapter

Driver Installation

Chapter 4 Driver Installation 4 - 1

There are several installation ways depending on the driver package under different Operating System application. The Auto-run program will run automatically. However, if the Auto-run program cannot be run smoothly, please follow the steps below to install the drivers:

Step 1-Install Intel INF Update for Windows 9x-2003 Driver

Step 2-Install Intel Extreme Graphics 2 Driver

Step 3-Install Intel LAN Driver

Step 4-Install Realtek AC97 codec Driver

Step 5-Install Touch Screen Driver

USB 2.0 Drivers are available for download using Windows Update for both Windows XP and Windows 2000. For additional information regarding USB 2.0 support in Windows XP and Windows 2000, please visit <u>www.microsoft.com/hwdev/usb/.</u>

For installation procedures of each driver, you may see the details in the following.

4.1 Installation

Insert the FOX-120 CD-ROM into the CD-ROM drive and install the drivers from Step 1 to Step 5 in order.

Step 1 – Install Intel INF Update for Windows 9x-2003 Driver

- 1. Click on the Step 1- Intel INF Update for Windows 9x-2003 folder
- 2. Double click on Setup.exe
- 3. Follow the instructions that the window shows
- 4. The system will help you install the driver automatically
- Step 2 Install Intel Extreme Graphics 2 Driver
 - 1. Click on the **Step 2** –**Intel Extreme Graphics 2 Driver** folder and select the OS your system is
 - 2. Double click on Setup.exe located in the OS folder
 - 3. Follow the instructions that the window shows
 - 4. The system will help you install the driver automatically
- Step 3 Install Intel LAN Driver
 - Click on the Step 3 –Intel LAN Driver folder and select the OS your system is
 - 2. Double click on .exe file located in the OS folder
 - 3. Follow the instructions that the window shows
 - 4. The system will help you install the driver automatically

Step 4 - Install Realtek AC97 codec Driver

- 1. Click on the Step 4 –Realtek AC97 codec Driver folder and then double click on wdm_a361.exe
- 2. Follow the instructions that the window shows
- 3. The system will help you install the driver automatically
- Step 5 Install Touch Screen Driver
 - Click on the Step 5 Touch Screen Driver folder and double click on Setup.exe
 - 2. Follow the instructions that the window shows
 - 3. The system will help you install the driver automatically

F O X - 1 2 0

Appendix A

FAQ

Appendix A FAQ A-1

A.1 FAQ

Installing Windows 2000 from a USB CD-ROM Drive May Cause a "Stop 0x7B" Error

Answer:

Only if you install Windows 2000 SP3 version, the error will be automatically corrected.

Categorized List of Fixes in Windows 2000 Service Pack 3 (SP3) http://support.microsoft.com/default.aspx?scid=%2fsupport%2fserv icepacks%2fwindows%2f2000%2fsp3fixlist.asp

Q294820 - Installing Windows 2000 from a USB CD-ROM Drive May Cause a "Stop 0x7B" Error

http://support.microsoft.com/default.aspx?scid=kb;en-us;294820

PSS ID Number: 294820 Article Last Modified on 5/28/2003 The information in this article applies to: Microsoft Windows 2000 Server SP1 Microsoft Windows 2000 Server SP2 Microsoft Windows 2000 Advanced Server SP1 Microsoft Windows 2000 Advanced Server SP2 Microsoft Windows 2000 Professional SP1 Microsoft Windows 2000 Professional SP2 This article was previously published under Q294820

SYMPTOMS

If you are using a Universal Serial Bus (USB) CD-ROM drive to install Windows 2000 on certain legacy-free computers, you may receive a "Stop 0x0000007B" Inaccessible_boot_device error message while booting from the installation CD. Because many legacy-free computers do not have a standard CD-ROM drive or floppy disk drive, the USB CD-ROM drive may be the only method for installing or recovering Windows.

CAUSE

Windows 2000 Setup does not support certain USB CD-ROM drives as bootable devices. This causes error message during the Text-mode portion of Setup.

RESOLUTION

Please contact your computer manufacturer for information about obtaining updated Windows 2000 Setup disks that you can use to boot your computer with a USB CD-ROM device.

STATUS

Microsoft has confirmed that this is a problem in the Microsoft products that are listed at the beginning of this article.

A.2 FAQ

What does the Day/Night Mode button actually do?

Answer:

Day mode is the highest brightness for out door use, Night mode is lowest one for power saving and navigation safty.

A.3 FAQ

What type of anti-glare treatment are you putting onto your touch screen and what is the LCD brightness reduction with this treatment?

Answer:

We use Low Reflection touch screen with Anti-Refelctive surface which incorporates "circular polarizer" filems inside. It is new technology of Touch panel, which has several layers of films, applied to reduce the amount of reflection back into the users eye (Reflectivity: $1.5 \pm 1\%$) and increase "contrast ratio" of display in outdoor environment.