

EMB-B75B

Industrial Motherboard

Copyright Notice

This document is copyrighted, 2013. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use. The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, the original manufacturer assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

The original manufacturer reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMI is a trademark of American Megatrends Inc.
- Intel®, Core™ are trademarks of Intel® Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

The original manufacturer reserves the right to make changes in the product design without notice to its users.

All other product names or trademarks are properties of their respective owners.

Contents

Contents	iii
Chapter 1 Product overview	1-1
1.1 Package contents	1-1
1.2 Features	1-1
1.3 Specifications	1-2
Chapter 2 Motherboard information	2-1
2.1 Before you proceed	2-1
2.2 Motherboard layout	2-2
2.3 Screw size	2-4
2.3.1 Component side	2-4
2.3.2 Solder side	2-5
2.4 Central Processing Unit (CPU)	2-6
2.4.1 Installing the CPU	2-7
2.4.2 CPU heatsink and fan assembly installation	2-9
2.5 System memory	2-11
2.5.1 Installing a DIMM	2-11
2.6 Jumpers	2-12
2.7 Connectors	2-15
2.7.1 Rear panel connectors	2-15
2.7.2 Internal connectors	2-17
Chapter 3 BIOS setup	3-1
3.1 BIOS setup program	3-1
3.1.1 BIOS menu screen	3-2
3.1.2 Menu bar	3-2
3.1.3 Navigation keys	3-3
3.1.4 Menu items	3-3
3.1.5 Submenu items	3-3
3.1.6 Configuration fields	3-3
3.1.7 Pop-up window	3-3
3.1.8 Scroll bar	3-3
3.1.9 General help	3-3

3.2	Main menu	3-4
	3.2.1 System Time [xx:xx:xx]	3-4
	3.2.2 System Date [Day xx/xx/xxxx].....	3-4
3.3	Advanced menu	3-5
	3.3.1 ACPI Setting	3-5
	3.3.2 CPU Configuration	3-5
	3.3.3 SATA Configuration	3-6
	3.3.4 USB Configuration	3-7
	3.3.5 Super IO Configuration	3-7
	3.3.6 H/W Monitor	3-8
	3.3.7 S5 RTC Wake Settings	3-8
3.4	Chipset	3-10
	3.4.1 PCH-IO Configuration	3-10
	3.4.2 System Agent (SA) Configuration	3-11
3.5	Boot	3-12
3.6	Security menu	3-13
	Administrator Password	3-13
	User Password	3-14
3.7	Save & Exit menu	3-15
 Appendix		
	Notices	A-1
	Federal Communications Commission Statement	A-1
	ASUS Recycling/Takeback Services	A-1

Chapter 1

Product overview

1.1 Package contents

Check your industrial motherboard package for the following items.

- 1 x Industrial Motherboard
- 1 x SATA Cable
- 1 x SATA Power Cable
- 1 x I/O Shield
- 1 x Support CD



If any of the above items is damaged or missing, contact your distributor or sales representative immediately.

1.2 Features

- Intel® Socket 1155 For 3rd/2nd Generation Core™ i7/Core™ i5/Core™ i3/Pentium®/Celeron® Processors up to 95W
- Two 240-pin Dual Channel DDR3 1600/1333/1066MHz DIMMs Up To 16GB
- SATA 6.0 Gb/s x 1, SATA 3.0 Gb/s x 1, USB3.0 x 2, USB2.0 x 6, COM x 2
- PCI-Express[x16] x 1
- EuP/ErP Compliance

1.3 Specifications

SYSTEM	
Form factor	Mini-ITX
CPU	LGA1155 socket for Intel® 3 rd /2 nd Generation Core™ i7 / Core™ i5 /Core™ i3 / Pentium® / Celeron® processors Supports Intel® 22/32nm CPU up to 95W Supports Intel® Turbo Boost Technology 2.0 • The Intel® Turbo Boost Technology 2.0 support depends on the CPU types.
Memory	2 x DIMM (8GB per DIMM), max. 16GB, unbuffered, non-ECC DDR3 1600 / 1333 / 1066 MHz Dual-channel memory architecture
Chipset	Intel® B75 Express Chipset
I/O Chipset	ITE 8728F
Ethernet	1 x Realtek® PCIe Gb LAN 8111F
BIOS	64MB Flash AMI BIOS ROM
Wake on LAN	Yes (WOL/PXE)
Watchdog Timer	1~255 steps by software program
H/W Status Monitor	Monitors CPU/Chassis temperature Monitors Vcore/5V/3.3V/12V voltages Monitors CPU/Chassis fan speed
Expansion slot	1 x PCI Express 3.0/2.0 x16 slot
Battery	Lithium battery
Power requirement	1 x 24-pin ATX connector 1 x 4-pin ATX 12V power connector 1 x SATA power connector
Board size	6.7 in. x 6.7 in. (17.0 cm x 17.0 cm)
Gross weight	1.1 lb (0.5 Kg)
Operating temperature	32°F~140°F (0°C~55°C)
Storage temperature	-40°F~176°F (-40°C~80°C)
Operating humidity	0%~90% relative humidity, non-condensing
Power compliance	Compliant with Eup/ErP
Certificate	CE/FCC

(continued on the next page)

DISPLAY	
Chipset	Intel® Graphics Media Accelerator
Resolution	Up to 1920x1200@60Hz for VGA Up to 1920x1080@60Hz for HDMI Up to 1920x1200@60Hz, Dual Channel 18/24 bit, Supports EDID LVDS autodetect (pin 2 define 3.3V)
Output interface	1 x VGA port 1 x HDMI port LVDS
I/O	
Storage	1 x SATA 6.0Gb/s port 1 x SATA 3.0Gb/s ports
Serial port	1 x RS-232 on rear I/O 1 x RS-232 at mid-board
USB	2 x USB3.0 (Type A port) on rear I/O 2 x USB2.0 (Type A port) on rear I/O 2 x USB2.0 (Pin header) supports additional 4 USB ports
RTC	Internal RTC
Keyboard/Mouse	1 x PS/2 Keyboard on rear I/O 1 x PS/2 Mouse on rear I/O
Audio	Realtek ALC887, MIC-in/Line-in/ Line-out
Ethernet	1 x RJ-45 ports on rear I/O
Display	1 x VGA port on rear I/O 1 x HDMI port on rear I/O (2nd HDMI reserved for optional BOM)
Others	1 x Front panel connector (Pin header) 1 x Digital I/O header

Chapter 2

Motherboard information

2.1 Before you proceed

Take note of the following precautions before you install motherboard components or change any motherboard settings.




CAUTION!

- Unplug the power cord from the wall socket before touching any component.
- Before handling components, use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, to avoid damaging them due to static electricity.
- Hold components by the edges to avoid touching the ICs on them.
- Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that came with the component.
- Before you install or remove any component, ensure that the ATX power supply is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, or components.

Main and Standby Power LEDs

The motherboard comes with one standby power LED and main power LED that light up to indicate that the system is ON, in sleep mode, or in soft-off mode. This is a reminder that you should shut down the system and unplug the power cable before removing or plugging in any motherboard component. The illustration below shows the location of the onboard LEDs.

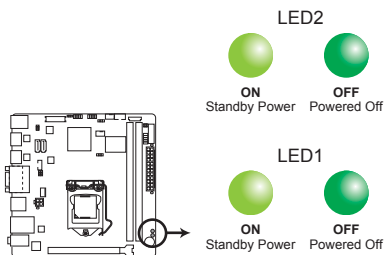

EMB-B75B Onboard LED


2.2 Motherboard layout



NOTE: Place four screws into the holes indicated by circles to secure the motherboard to the chassis.




CAUTION! Do not overtighten the screws! Doing so can damage the motherboard.

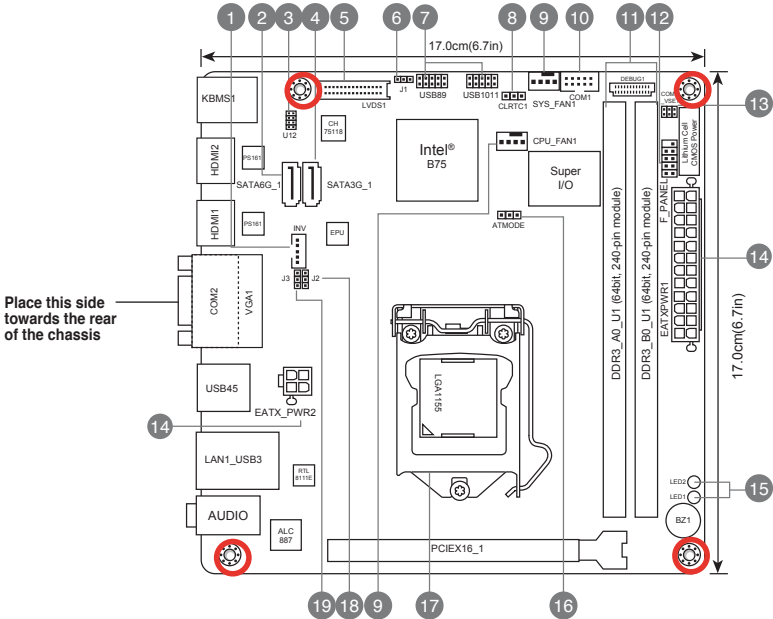


Connectors/Jumpers/Slots		Page
1.	Backlight inverter power connector (5-pin INV1)	2-23
2.	Intel® B75 Serial ATA 6.0Gb/s connector (7-pin SATA6G_1)	2-20
3.	BIOS Programmable Connector (8-pin U12)	2-23
4.	Intel® B75 Serial ATA 3.0Gb/s connectors (7-pin SATA3G_1)	2-20
5.	LVDS connector (30-pin LVDS1)	2-22
6.	LVDS panel voltage selection (3-pin J1)	2-14
7.	USB 2.0 connectors (10-1 pin USB89, USB1011)	2-21
8.	Clear RTC RAM (CLRTC1)	2-12
9.	CPU and system fan connectors (4-pin CPU_FAN1, 4-pin SYS_FAN1)	2-18
10.	Serial port connectors (10-1 pin COM1)	2-22
11.	DIMM memory slots	2-18
12.	System panel connector (10-1 pin F_PANEL)	2-19
13.	COM1 Ring/+5V/+12V selection (COM1_VSET1)	2-13
14.	ATX power connectors (24-pin EATX_PWR1, 4-pin EATX_PWR2)	2-17
15.	Standby Power (LED SB_PWR)	2-1
16.	AT Mode (ATMODE)	2-13
17.	Intel® LGA1155 CPU socket	2-6
18.	Inverter voltage selection (3-pin J2)	2-14
19.	Inverter backlight control mode selection (3-pin J3)	2-14

2.3 Screw size

2.3.1 Component side

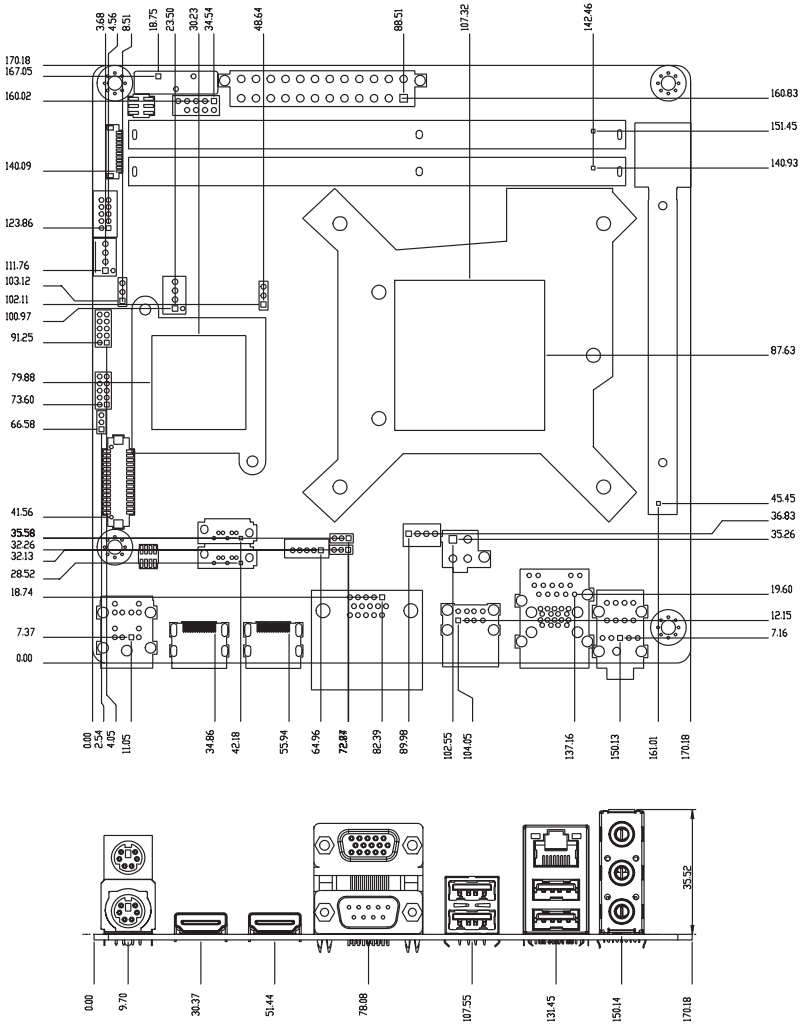


2.3.2 Solder side

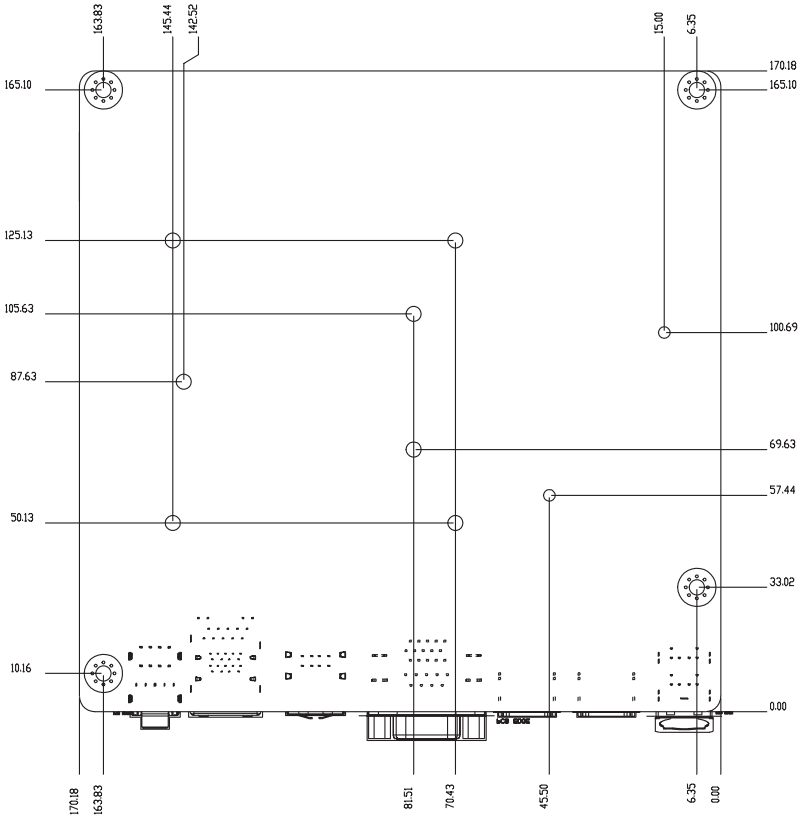

2.4 Central Processing Unit (CPU)

The motherboard comes with a surface mount LGA1155 socket designed for the Intel® 2nd Generation Core™ i7 / Core™ i5 / Core™ i3 processors.

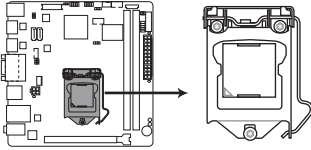

EMB-B75B CPU socket LGA1155



IMPORTANT: Unplug all power cables before installing the CPU.




CAUTION!



- Upon purchase of the motherboard, ensure that the PnP cap is on the socket and the socket contacts are not bent. Contact your retailer immediately if the PnP cap is missing, or if you see any damage to the PnP cap/socket contacts/motherboard components. The manufacturer will shoulder the cost of repair only if the damage is shipment/transit-related.
 - Keep the cap after installing the motherboard. The manufacturer will process Return Merchandise Authorization (RMA) requests only if the motherboard comes with the cap on the LGA1155 socket.
 - The product warranty does not cover damage to the socket contacts resulting from incorrect CPU installation/removal, or misplacement/loss/incorrect removal of the PnP cap.
-

2.4.1 Installing the CPU




CAUTION! The LGA1156 CPU is incompatible with the LGA1155 socket. DO NOT install a LGA1156 CPU on the LGA1155 socket.

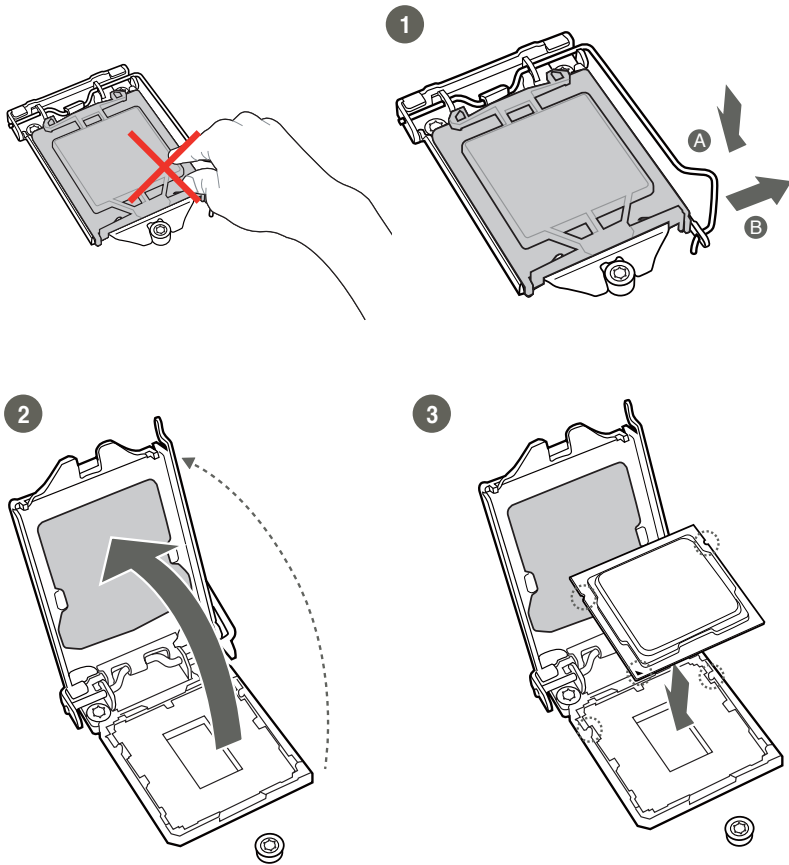



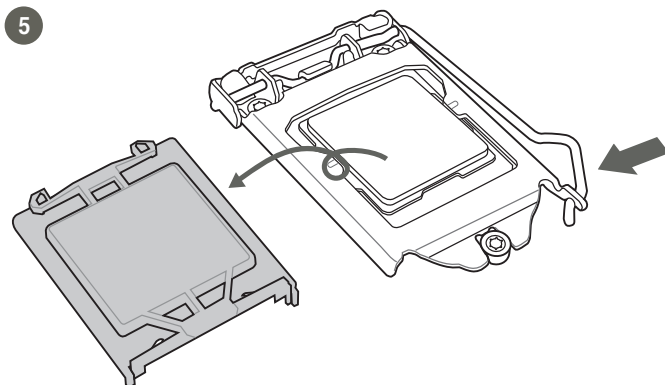
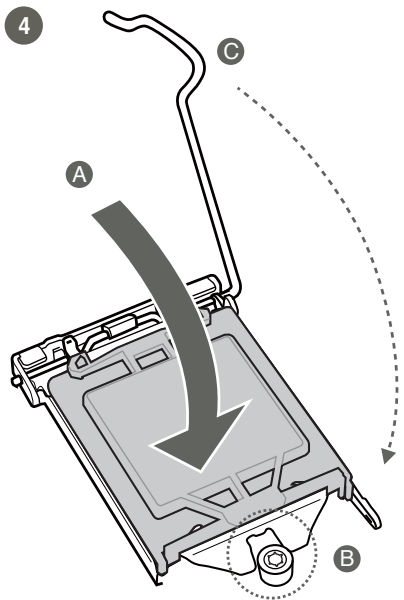


2.4.2 CPU heatsink and fan assembly installation


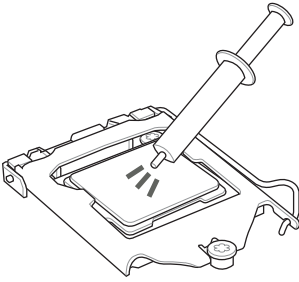


CAUTION! Apply the Thermal Interface Material to the CPU heatsink and CPU before you install the heatsink and fan if necessary.

To install the CPU heatsink and fan assembly

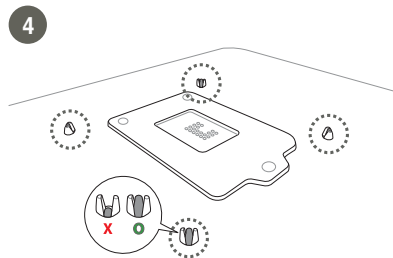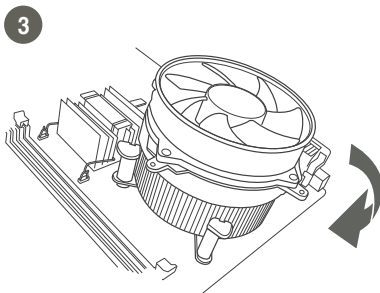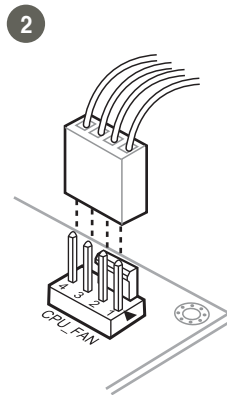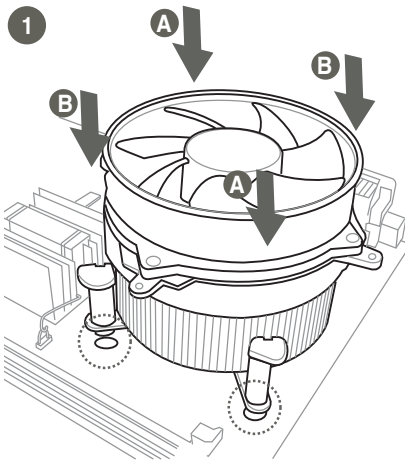


To uninstall the CPU heatsink and fan assembly

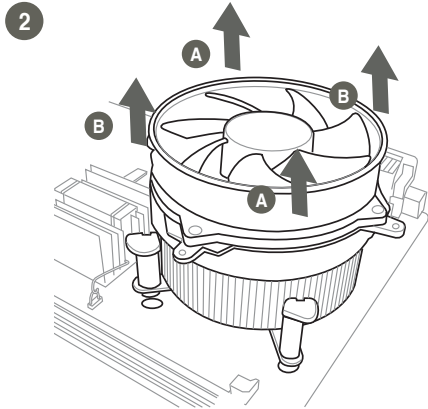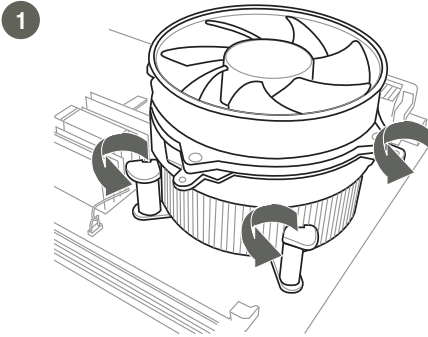


2.5 System memory

2.5.1 Installing a DIMM


1

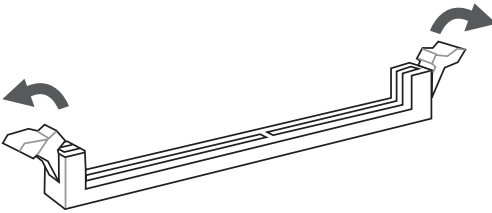


2

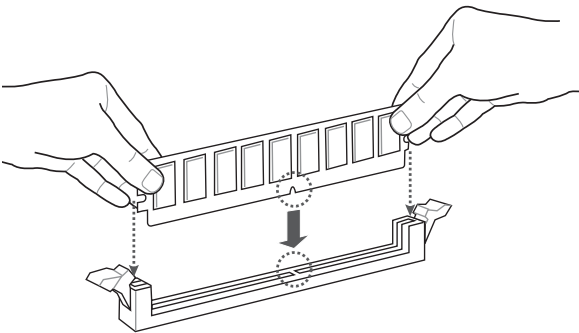

3

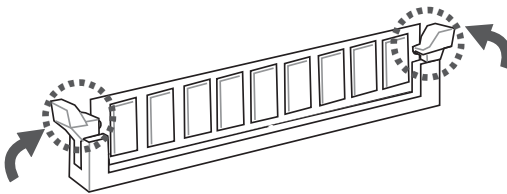


To remove a DIMM

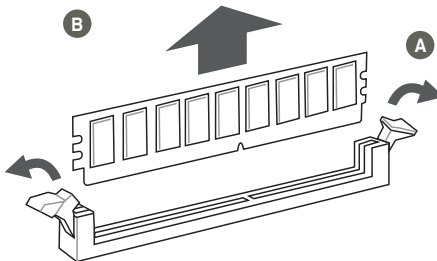

2.6 Jumpers

1. Clear RTC RAM (CLRRTC1)

This jumper allows you to clear the Real Time Clock (RTC) RAM in CMOS. You can clear the CMOS memory of date, time, and system setup parameters by erasing the CMOS RTC RAM data. The onboard button cell battery powers the RAM data in CMOS, which include system setup information such as system passwords.

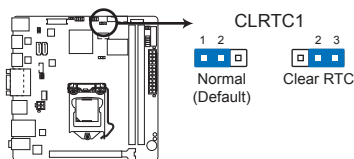

EMB-B75B Clear RTC RAM

To erase the RTC RAM:

1. Turn OFF the computer and unplug the power cord.
2. Move the jumper cap from pins 1-2 (default) to pins 2-3. Keep the cap on pins 2-3 for about 5~10 seconds, then move the cap back to pins 1-2.
3. Plug the power cord and turn ON the computer.
4. Hold down the **** key during the boot process and enter BIOS setup to reenter data.




CAUTION! Except when clearing the RTC RAM, never remove the cap on CLRRTC jumper default position. Removing the cap will cause system boot failure!



NOTES:

- If the steps above do not help, remove the onboard battery and move the jumper again to clear the CMOS RTC RAM data. After clearing the CMOS, reinstall the battery.
 - You do not need to clear the RTC when the system hangs due to overclocking. For system failure due to overclocking, use the CPU Parameter Recall (C.P.R) feature. Shut down and reboot the system so the BIOS can automatically reset parameter settings to default values.
-


2. AT Mode (ATMODE)

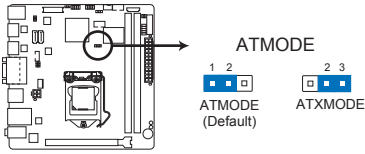

EMB-B75B ATMODE setting

AT MODE	1-2
ATX MODE	2-3


3. COM1 Ring/+5V/+12V selection (COM1_VSET1)

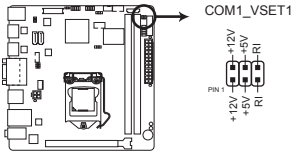

EMB-B75B COM VSET connector

+12V	1-2
+5V	3-4
Ring	5-6


4. LVDS panel voltage selection (3-pin J1)

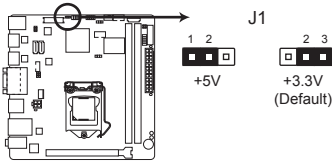

EMB-B75B LVDS Panel Voltage Selection

+5V	1-2
+3.3V	2-3


5. Inverter voltage selection (3-pin J2)

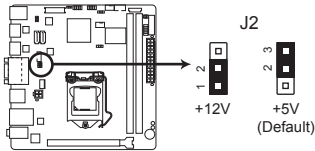

EMB-B75B Inverter Voltage Selection

+12V	1-2
+5V (Default)	2-3

6. Inverter Backlight Control mode selection (3-pin J3)

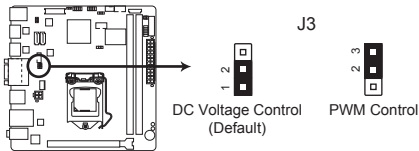


EMB-B75B Mode Selection for Back Light Control of Inverter

DC Voltage Control	1-2
PWM Control (Default)	2-3

2.7 Connectors


2.7.1 Rear panel connectors

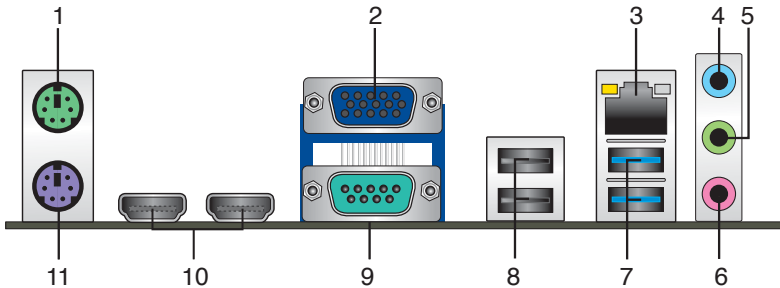

1. **PS/2 Mouse port (green).** This port is for a PS/2 mouse.
2. **Video Graphics Adapter (VGA) port.** This 15-pin port is for a VGA monitor or other VGA-compatible devices.
3. **LAN (RJ-45) ports.** These ports allow Gigabit connection to a Local Area Network (LAN) through a network hub. Refer to the table below for the LAN port LED indications.

LAN port LED indications

ACT/LINK LED		SPEED LED	
Status	Description	Status	Description
OFF	No link	OFF	10 Mbps connection
ORANGE	Linked	ORANGE	100 Mbps connection
BLINKING	Data activity	GREEN	1 Gbps connection

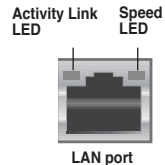

4. **Line In port (light blue).** This port connects the tape, CD, DVD player, or other audio sources.
5. **Line Out port (lime).** This port connects to a headphone or a speaker. In 4-channel and 6-channel configurations, the function of this port becomes Front Speaker Out.
6. **Microphone port (pink).** This port connects a microphone.



NOTE: Refer to the audio configuration table on the next page for the function of the audio ports in the 2, 4, or 6-channel configuration.

Audio 2, 4, 6-channel configuration

Port	2-channel	4-channel	6-channel
Light Blue (Rear panel)	Line In	Rear Speaker Out	Rear Speaker Out
Lime (Rear panel)	Line Out	Front Speaker Out	Front Speaker Out
Pink (Rear panel)	Mic In	Mic In	Bass/Center
Lime (Front panel)	-	-	-

7. **USB 3.0 ports.** These two 9-pin Universal Serial Bus (USB) ports connect to USB 3.0/2.0 devices.



NOTES:


- DO NOT connect a keyboard / mouse to any USB 3.0 port when installing Windows® operating system.
 - Due to USB 3.0 controller limitation, USB 3.0 devices can only be used under Windows® OS environment and after the USB 3.0 driver installation.
 - USB 3.0 devices can only be used as data storage only.
 - We strongly recommend that you connect USB 3.0 devices to USB 3.0 ports for faster and better performance for your USB 3.0 devices.
-

8. **USB 2.0 ports.** These two 4-pin Universal Serial Bus (USB) ports are available for connecting USB 2.0/1.1 devices.
9. **Serial ports.** These ports connect a modem, or other devices that conform with serial specification.
10. **HDMI ports.** These ports are for High-Definition Multimedia Interface (HDMI) connectors, and are HDCP compliant allowing playback of HD DVD, Blu-ray, and other protected content.
11. **PS/2 Keyboard port (purple).** This port is for a PS/2 keyboard.

2.7.2 Internal connectors

1. ATX power connectors (24-pin EATX_PWR1, 4-pin EATX_PWR2)

These connectors are for ATX power supply plugs. The power supply plugs are designed to fit these connectors in only one orientation. Find the proper orientation and push down firmly until the connectors completely fit.

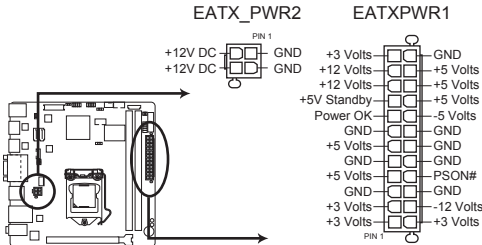

EMB-B75B ATX power connectors




IMPORTANT:

- For a fully configured system, we recommend that you use a power supply unit (PSU) that complies with ATX 12 V Specification 2.0 (or later version) and provides a minimum power of 350 W.
- DO NOT forget to connect the 4-pin ATX +12V power plug. Otherwise, the system will not boot up.
- We recommend that you use a PSU with higher power output when configuring a system with more power-consuming devices. The system may become unstable or may not boot up if the power is inadequate.

2. CPU and system fan connectors (4-pin CPU_FAN1, 4-pin SYS_FAN1)

Connect the fan cables to the fan connectors on the motherboard, ensuring that the black wire of each cable matches the ground pin of the connector.

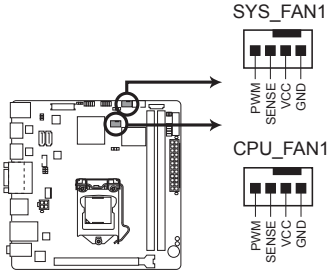

EMB-B75B Fan connectors




CAUTION: Do not forget to connect the fan cables to the fan connectors. Insufficient air flow inside the system may damage the motherboard components. These are not jumpers! Do not place jumper caps on the fan connectors!



NOTE: The CPU_FAN connector supports a CPU fan of maximum 2A (24 W) fan power.

3. System panel connector (10-1 pin F_PANEL)

This connector supports several chassis-mounted functions.

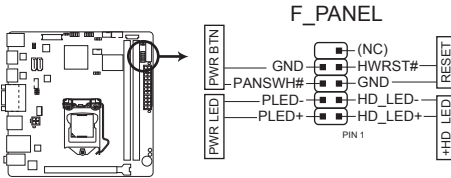

EMB-B75B System panel connector

- **System power LED (2-pin PLED)**

This 2-pin connector is for the system power LED. Connect the chassis power LED cable to this connector. The system power LED lights up when you turn on the system power, and blinks when the system is in sleep mode.

- **Hard disk drive activity LED (2-pin +HDLED)**

This 2-pin connector is for the HDD Activity LED. Connect the HDD Activity LED cable to this connector. The IDE LED lights up or flashes when data is read from or written to the HDD.

- **ATX power button/soft-off button (2-pin PWRBTN)**


This 2-pin connector is for the system power button.

- **Reset button (2-pin RESET)**

This 2-pin connector is for the chassis-mounted reset button for system reboot without turning off the system power.

4. Intel® B75 Serial ATA 3.0Gb/s connectors (7-pin SATA3G_1)

These connectors connect to Serial ATA 3.0 Gb/s hard disk drives and optical drives via Serial ATA 3.0 Gb/s signal cables.

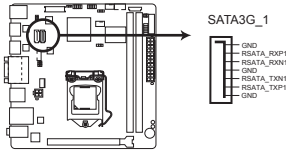

EMB-B75B SATA 3.0Gb/s connector




NOTES:

- You must install Windows® XP Service Pack 3 or later version before using Serial ATA hard disk drives.
- When using hot-plug and NCQ, set the SATA Mode Selection item in the BIOS to [AHCI]. See section 3.3.3 **SATA Configuration** for details.

5. Intel® B75 Serial ATA 6.0Gb/s connector (7-pin SATA6G_1)

This connector connects to Serial ATA 6.0 Gb/s hard disk drives via Serial ATA 6.0 Gb/s signal cables.

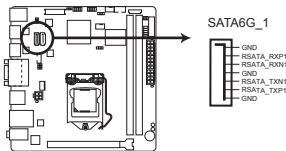

EMB-B75B SATA 6.0Gb/s connector




NOTES:

- You must install Windows® XP Service Pack 3 or later version before using Serial ATA hard disk drives.
- When using hot-plug and NCQ, set the SATA Mode Selection item in the BIOS to [AHCI]. See section 3.3.3 **SATA Configuration** for details.

6. USB 2.0 connectors (10-1 pin USB89, USB1011)

These connectors are for USB 2.0 ports. Connect the USB module cable to any of these connectors, then install the module to a slot opening at the back of the system chassis. These USB connectors comply with USB 2.0 specification that supports up to 480 Mbps connection speed.

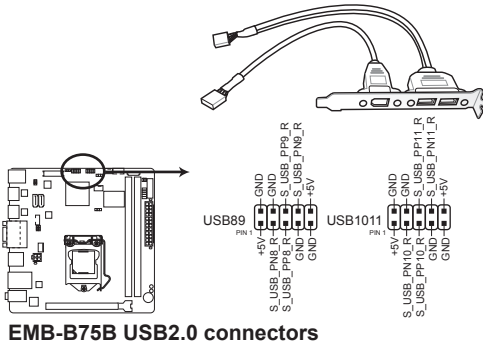


CAUTION! Never connect a 1394 cable to the USB connectors. Doing so will damage the motherboard!



NOTE: The USB module cable is purchased separately.

7. Serial port connectors (10-1 pin COM1)

These connectors are for serial (COM) ports. Connect the serial port module cable to this connector, then install the module to a slot opening at the back of the system chassis.

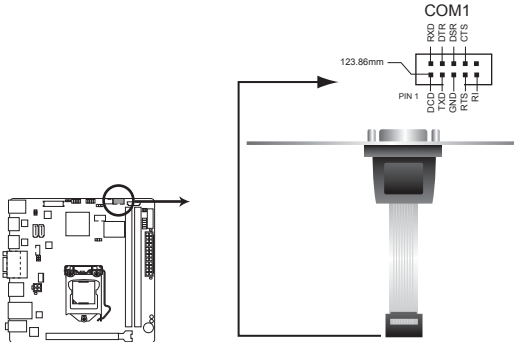


EMB-B75B Serial port connector



NOTE: The COM module is purchased separately.

8. LVDS connector (30-pin LVDS)


This connector is for a LCD monitor that supports Low-Voltage Differential Signaling (LVDS) interface.

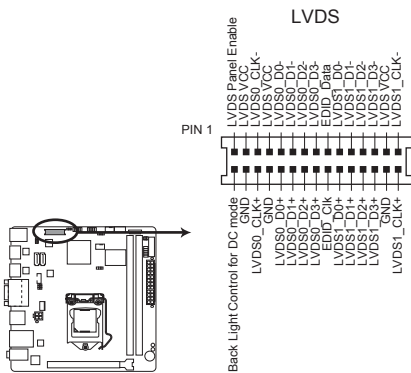

EMB-B75B LVDS connector

9. BIOS programmable connector (8-pin U12)

 
Use this connector to flash the BIOS ROM.



EMB-B75B BIOS Programmable Connector

10. Backlight inverter power connector (5-pin INV1)

Connect the backlight inverter power cable to this connector.

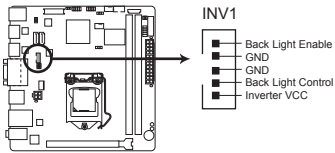

EMB-B75B Inverter Connector

Chapter 3

BIOS setup

3.1 BIOS setup program

Use the BIOS Setup program to update the BIOS or configure its parameters. The BIOS screens include navigation keys and brief online help to guide you in using the BIOS Setup program.

Entering BIOS Setup at startup

To enter BIOS Setup at startup:

Press <Delete> during the Power-On Self Test (POST). If you do not press <Delete>, POST continues with its routine.

Entering BIOS Setup after POST

To enter BIOS Setup after POST:

- Press <Ctrl>+<Alt>+ simultaneously.
- Press the reset button on the system chassis.
- Press the power button to turn the system off then back on. Do this option only if you failed to enter BIOS Setup using the first two options.




NOTE: Using the power button, reset button, or the <Ctrl>+<Alt>+ keys to reboot a running operating system can cause damage to your data or system. Always shut down the system properly from the operating system.



IMPORTANT:

- The default BIOS settings for this motherboard apply to most working conditions and ensures optimal performance. If the system becomes unstable after changing any BIOS settings, load the default settings to regain system stability. Select the option Restore Defaults under the Save & Exit Menu. See section **3.7 Save & Exit Menu**.
 - The BIOS setup screens shown in this section are for reference purposes only, and may not exactly match what you see on your screen.
-

3.1.1 BIOS menu screen

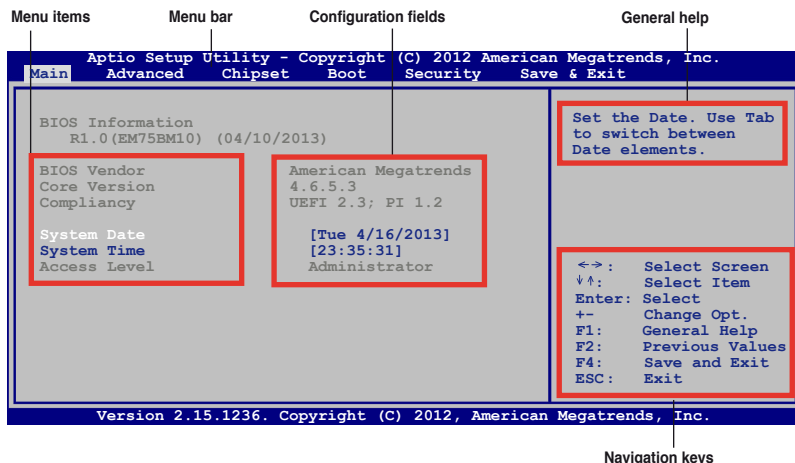

3.1.2 Menu bar

The menu bar on top of the screen has the following main items:

- Main** For changing the basic system configuration.
- Advanced** For changing the advanced system settings.
- Chipset** For changing the chipset configuration.
- Boot** For changing the system boot configuration.
- Security** For selecting the exit options and loading default settings.
- Save & Exit** For selecting the exit options and loading default settings.

To select an item on the menu bar, press the right or left arrow key on the keyboard until the desired item is highlighted.

3.1.3 Navigation keys

At the bottom right corner of a menu screen are the navigation keys for that particular menu. Use the navigation keys to select items in the menu and change the settings.



NOTE: Some of the navigation keys differ from one screen to another.

3.1.4 Menu items

The highlighted item on the menu bar displays the specific items for that menu. For example, selecting Main shows the Main menu items.

The other items on the menu bar have their respective menu items.

3.1.5 Submenu items

A solid triangle before each item on any menu screen means that the item has a submenu. To display the submenu, select the item and press **<Enter>**.

3.1.6 Configuration fields

These fields show the values for the menu items. If an item is user-configurable, you can change the value of the field opposite the item. You cannot select an item that is not user-configurable. A configurable field is enclosed in brackets, and is highlighted when selected. To change the value of a field, select it then press **<Enter>** to display a list of options.

3.1.7 Pop-up window

Select a menu item then press **<Enter>** to display a pop-up window with the configuration options for that item.

3.1.8 Scroll bar

A scroll bar appears on the right side of a menu screen when there are items that do not fit on the screen. Press the **<Up>** / **<Down>** arrow keys or **<Page Up>** / **<Page Down>** keys to display the other items on the screen.

3.1.9 General help

At the top right corner of the menu screen is a brief description of the selected item.

3.2 Main menu

When you enter the BIOS Setup program, the **Main** menu screen appears, giving you an overview of the basic system information.



Refer to section 3.1.1 **BIOS menu screen** for information on the menu screen items and how to navigate through them.

```
Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.
Main  Advanced  Chipset  Boot  Security  Save & Exit

BIOS Information
R1.0 (EM75BM10) (04/10/2013)

BIOS Vendor          American Megatrends
Core Version         4.6.5.3
Compliance          UEFI 2.3; PI 1.2

System Date          [Tues 04/16/2013]
System Time          [23:35:31]
Access Level         Administrator

Set the Date. Use Tab
to switch between
Date elements.

<->: Select Screen
v^: Select Item
Enter: Select
+-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save and Exit
ESC: Exit

Version 2.15.1236. Copyright (C) 2012, American Megatrends, Inc.
```

3.2.1 System Time [xx:xx:xx]

Allows you to set the system time.

3.2.2 System Date [Day xx/xx/xxxx]

Allows you to set the system date.

3.3 Advanced menu

The **Advanced** menu items allow you to change the settings for the CPU and other system devices.



Be cautious when changing the settings of the Advanced menu items. Incorrect field values can cause the system to malfunction.



3.3.1 ACPI Setting

The items in this menu allow you to configure the system ACPI parameters.

ACPI Sleep State [S3 only (Suspend to...)]

Allows you to select the ACPI sleep state that the system will enter when the SUSPEND button is pressed. Configuration options: [Suspend Disabled] [S1 only(CPU Stop Clock)] [S3 only(Suspend to RAM)]

3.3.2 CPU Configuration

The items in this menu show CPU-related information that the BIOS automatically detects.

Hyper-threading [Enabled]

Intel® Hyper-Threading Technology allows a hyper-threading processor to appear as two logical processors to the operating system, allowing the operating system to schedule two threads or processes simultaneously. Configuration options:

[Enabled] Two threads per activated core are enabled.

[Disabled] Only one thread per activated core is enabled.



This item appears only if you installed a CPU that supports Intel® Hyper-threading technology.

Intel(R) Virtualization Tech [Enabled]

Enables or disables Intel® Virtualization Technology. Virtualization enhanced by Intel® Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions. With virtualization, one computer system can function as multiple virtual systems.

Configuration options: [Enabled] [Disabled]

3.3.3 SATA Configuration

While entering Setup, the BIOS automatically detects the presence of SATA devices. The SATA Port items show **Empty** if no SATA device is installed to the corresponding SATA port.

SATA Controller(s) [Enabled]

Allows you to enable or disable SATA devices.

Configuration options: [Enabled] [Disabled]



The following item appear when you set the SATA Controller(s) item to [Enabled].

SATA Mode Selection [IDE]

Allows you to set the SATA configuration.

[IDE] Set to [IDE] when you want to use the Serial ATA hard disk drives as Parallel ATA physical storage devices.

[AHCI] Set to [AHCI] when you want the SATA hard disk drives to use AHCI (Advanced Host Controller Interface). AHCI allows the onboard storage driver to enable advanced Serial ATA features. This increases storage performance on random workloads by allowing the drive to internally optimize the order of commands.

IDE Legacy/Native Mode Selection [Native]

Allows you to select the SATA mode selection.

Configuration options: [Native] [Legacy]

3.3.4 USB Configuration

The items in this menu allow you to configure USB support.



The USB Devices item shows the auto-detected values. If no USB device is detected, the item shows **None**.

Legacy USB Support [Enabled]

- [Enabled] Enables support for USB devices on legacy operating systems.
- [Disabled] The USB devices can be used only in BIOS setup.
- [Auto] Allows the system to detect the presence of USB devices at startup. If detected, the USB controller legacy mode is enabled. If no USB device is detected, the legacy USB support is disabled.

USB3.0 Support [Enabled]

- [Enabled] Enables the USB 3.0 (XHCI) Controller support.
- [Disabled] Disables the function.

3.3.5 Super IO Configuration

The items in this menu allow you to configure the system super IO chip settings.

Serial Port 1/Port 2 Configuration

Allow you to configure the Serial Port 1/Port 2 settings.

Serial Port [Enabled]

Enables or disables the Serial COM port.
Configuration options: [Enabled] [Disabled]

Change Settings [Auto]

Allows you to select an optimal setting for the Super IO device.
Configuration options: [Auto] [IO=3F8h; IRQ=4] [IO=3F8h; IRQ=3,4,5,6,7,8,9,10,11,12]
[IO=2F8h; IRQ=3,4,5,6,7,8,9,10,11,12] [IO=3E8h; IRQ=3,4,5,6,7,8,9,10,11,12]
[IO=2E8h; IRQ=3,4,5,6,7,8,9,10,11,12]

Device Mode [RS-232]

Allows you to change the Serial Port mode.
Configuration options: [RS-232] [RS-422] [RS-485]

EUP Function [Disabled]

Allows you to enable or disable the EUP function.
Configuration options: [Disabled] [Enabled]

3.3.6 H/W Monitor

The items in this menu display hardware status and provide configuration settings for system fans.

CPU Fan/SYS Fan Control [Enabled]

Allows you to enable or disable CPU Fan/System Fan Control.

[Enabled] Fan will run based on the user-defined settings.

[Disabled] Fan will always run at full speed.



The following two items appear when you set the CPU Fan/SYS Fan Control item to [Enabled].

Fan Control Mode [Manual Mode]

Allows you to set the Fan Control configuration.

[Manual Mode] Fan speed depends on PWM Duty.

[Automatic Mode] Fan speed depends on the CPU temperature.

PWM Duty [200]

Allows you to enter the value for PWM Duty.

Configuration options: [0 ~ 255]

3.3.7 S5 RTC Wake Settings

Enable system to wake up from S5 using RTC alarm.

Wake system with Fixed Time [Disabled]

Allows you to enable or disable system wake on alarm event. When enabled, the exact time for the system to wake up can be specified. Configuration options:

[Enabled] [Disabled]



The following items appear when you set the Wake system with Fixed Time item to [Enabled].

Wake up day/Wake up hour/Wake up minute/Wake up second

You can input specific time values for the day, hour, minute, and seconds for when the system will wake up.

Wake system with Dynamic Time [Disabled]

Allows you to enable or disable system wake on alarm event. When enabled, the system will wake up at the current time plus the specified number of minutes. Configuration options: [Enabled] [Disabled]



The following item appears when you set the Wake system with Dynamic Time item to [Enabled].

Wake up minute increase

You can input the number of minutes added to the current time before the system wakes up.



You can only select either Wake system with Fixed Time or Wake system with Dynamic Time. When one item is enabled, the other is unavailable.

3.4 Chipset

The Chipset menu allows you to change the advanced chipset settings. Select an item then press <Enter> to display the sub-menu.

3.4.1 PCH-IO Configuration

PCI Express Configuration

Allows you to configure the PCI Express settings.

USB Configuration

Allows you to configure USB 3.0 and USB 2.0 controllers.

PCH Azalia Configuration

Allows you to configure the PCH Azalia settings.

Power Mode [Enabled]

Allows you to select the power supply type.

Configuration options: [ATX Type] [AT Type]

Resume on PCIE Wake [Enabled]

Allows you to enable or disable PCIE devices to generate a wake event.

Configuration options: [Enabled] [Disabled]

Resume on PCI PME [Enabled]

Allows you to enable or disable the PCI PME wake function.

Configuration options: [Enabled] [Disabled]

Resume on Ring [Enabled]

Allows you to enable or disable Ring to generate a wake event.

Configuration options: [Enabled] [Disabled]

Restore AC Power Loss [Last State]

[Power On] The system goes into on state after an AC power loss.

[Power Off] The system goes into off state after an AC power loss.

[Last State] The system goes into either off or on state, whatever the system state was before the AC power loss.

3.4.2 System Agent (SA) Configuration

Graphics Configuration

Allows you to configure the graphics settings.

Primary Display [Auto]

Select which graphics device would be used as primary display.

Configuration options: [Auto] [IGFX] [PEG] [PCI]

Internal Graphics [Auto]

Configure IGD support for display. Configuration options: [Auto] [Disabled] [Enabled]

DVMT Pre-Allocated [64M]

Select DVMT 5.0 Pre-Allocated graphics memory size used by the Internal Graphics Device. Configuration options: [32M, 64M, 96M ~ 1024M]

DVMT Total Gfx Mem [MEM]

Select DVMT 5.0 total graphics memory size used by the Internal Graphics Device.

Configuration options: [128M] [256M] [MAX]

Primary IGFX Boot Display [VBIOS Default]

Select which video device will be activated during POST. This setting does not apply if external graphics hardware is available. VGA support only available on the primary display.

Configuration options: [VBIOS Default] [CRT] [LVDS1] [HDMI1] [HDMI2]

Secondary IGFX Boot Display [LVDS1]

A secondary display will appear based on your selection. Configuration options:

[Disabled] [CRT] [LVDS1] [HDMI1] [HDMI2]

Select LCD Panel Type [1024x768, 18bit, 60Hz]

Select LCD panel type used by the Internal Graphics Device. Select the appropriate resolution, bit rate, and refresh rate for your LCD panel.

LVDS Backlight Level [80%]

Select backlight brightness of LVDS. Configuration options: [100%~0%]

LVDS Backlight Type [Normal]

Select backlight control type. Configuration options: [Normal] [Inverted]

NB PCIe Configuration

Allows you to configure the NB PCI Express settings.

PEG0 - Gen X [Auto]

Configure PEG0 device. Configuration options: [Auto] [Gen1] [Gen2] [Gen3]

Enable PEG [Enabled]

Enable or disable PEG support. Configuration options: [Disabled] [Enabled] [Auto]

Detect Non-Compliance Device [Disabled]

Detect non-compliant PCI Express hardware in PEG.

Configuration options: [Enabled] [Disabled]

Memory Information

Displays currently installed memory.

3.5 Boot

The Boot menu items allow you to change the system boot options.

Quiet Boot [Enabled]

Enables or disables the Quiet Boot option.

Configuration options: [Enabled] [Disabled]

Launch 8111E PXE OpROM [Disabled]

Enables or disables the Realtek 8111E PXE OpROM on boot.

Configuration options: [Enabled] [Disabled]

Boot Option Priorities

This item specifies the boot device priority sequence from the available devices. The number of device items displayed are dependent on the number of bootable storage devices installed on the system.

Configuration options: [Enabled] [Disabled]

Hard Drive BBS Priorities

This item specifies the boot device priority sequence from the available legacy devices. The number of legacy device items displayed are dependent on the number of bootable legacy storage devices installed on the system.

Configuration options: [Enabled] [Disabled]

3.6 Security menu

The Security menu items allow you to change the system security settings.

Administrator Password

If you have set an administrator password, we recommend that you enter the administrator password for accessing the system. Otherwise, you might be able to see or change only selected fields in the BIOS setup program.

To set an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. Confirm the password when prompted.

To change an administrator password:

1. Select the Administrator Password item and press <Enter>.
2. From the Enter Current Password box, key in the current password, then press <Enter>.
3. From the Create New Password box, key in a new password, then press <Enter>.
4. Confirm the password when prompted.

To clear the administrator password, follow the same steps as in changing an administrator password, but press <Enter> when prompted to create/confirm the password. After you clear the password, the Administrator Password item on top of the screen shows Not Installed.

User Password

If you have set a user password, you must enter the user password for accessing the system. The User Password item on top of the screen shows the default Not Installed. After you set a password, this item shows Installed.

To set a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. Confirm the password when prompted.

To change a user password:

1. Select the User Password item and press <Enter>.
2. From the Enter Current Password box, key in the current password, then press <Enter>.
3. From the Create New Password box, key in a new password, then press <Enter>.
4. Confirm the password when prompted.

To clear the user password, follow the same steps as in changing a user password, but press <Enter> when prompted to create/confirm the password. After you clear the password, the User Password item on top of the screen shows Not Installed.

3.7 Save & Exit menu

The Save & Exit menu items allow you to load the optimal default values for the BIOS items, and save or discard your changes to the BIOS items.

Save Changes and Reset

This option allows you to save the changes and exit the Setup program.

Discard Changes and Reset

This option allows you to exit the Setup program without saving your changes. When you select this option or if you press <Esc>, a confirmation window appears. Select **Yes** to discard changes and exit.

Restore Defaults

This option allows you to load the default values for each of the parameters on the Setup menus. When you select this option or if you press <F3>, a confirmation window appears. Select **Yes** to load the default values.

Save as User Defaults

This option allows you to save the current changes as the user's default values.

Restore User Defaults

This option allows you to load the user's default values.

Appendix

Notices

Federal Communications Commission Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING! The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.



DO NOT throw the mercury-containing button cell battery in municipal waste. This symbol of the crossed out wheeled bin indicates that the battery should not be placed in municipal waste.



電子信息產品污染控制標示：圖中之數字為產品之環保使用期限。僅指電子信息產品中含有的有毒有害物質或元素不致發生外洩或突變從而對環境造成污染或對人身、財產造成嚴重損害的期限。

有毒有害物質或元素的名稱及含量說明標示：

部件名稱	有害物質或元素					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六 價 鉻 (Cr(VI))	多 溴 聯 苯 (PBB)	多 溴 二 苯 醚 (PBDE)
印刷電路板及其電子組件	×	○	○	○	○	○
外部信號連接頭及線材	×	○	○	○	○	○

○：表示該有毒有害物質在該部件所有均質材料中的含量均在 SJ/T 11363-2006 標準規定的限量要求以下。

×

×：表示該有毒有害物質至少在該部件的某一均質材料中的含量超出 SJ/T 11363-2006 標準規定的限量要求，然該部件仍符合歐盟指令 2002/95/EC 的規範。

備註：此產品所標示之環保使用期限，係指在一般正常使用狀況下。