

OS List ONYX-154

機種：														
OS Driver	Windows 95	Windows XP	Windows 2000	Windows 9X	Linux	Windows 2003	Windows NT	Windows 98 SE	Windows 98	Windows ME	Unix	DOS		
Step 1 - Intel INF Update for Windows 9x-2003		V	V	V		V		V	V	V				
Step 2 - Intel Extreme Graphics 2 Driver		V	V	V		V		V	V	V				
Step 3 - LAN Driver		V	V	V		V		V	V	V				
Step 4 - Realtek AC97 codec Driver		V	V	V	V	V		V	V	V				
Step 5- Card Reader Driver		V	V	V				V	V	V				
Step 6 - Touch panel		V	V	V				V	V	V				
Step 7 - Smart card		V	V	V				V	V	V				

*註.已上所列為較常用 OS 類別與 Driver 類別，若是有沒適合的選項，請於空白處填寫新的 OS 與 Driver 類別