

How to update UEFI BIOS.

Author: VanessaLee

Release date: 2017/08/14

Before start you need some files (list as bellow)

- a. USB drive x1
- b. BIOS package x1
- c. EUT x1

Step1. Please unzip attachment file and put EFI file and BIOS package into usb storage.

 
(Note: The file let USB be UEFI bootable drive.)

EFI.RAR link: <http://pan.baidu.com/s/1gfBvVMF>


Step2. Remove all other bootable devices except USB.

Step3. Boot into BIOS setup and select UEFI: Built-in EFI Shell/ UEFI: USB disk.

e.g.

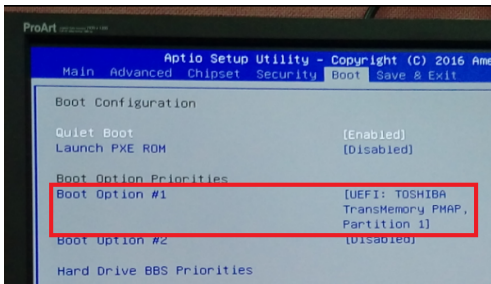


 Step4. Input "fs0" and press enter after booting into shell.

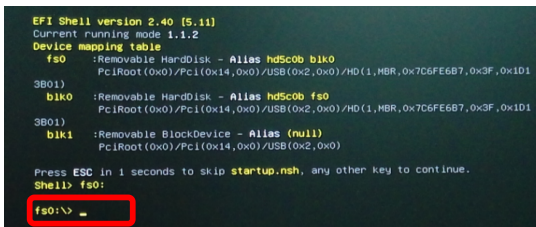

Step5: Enter the directory with BIOS file and update batch (Execute go.nsh)

 e.g.

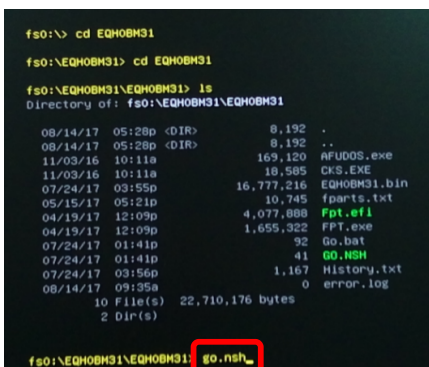

Step5: Confirm update procedure is completed without problem and reboot system.