

DSS-CV20

Digital Signage System

2.5" HDD/ SDD x 1

1 Gigabit Ethernet Port/

1 RS-232/ 4 USB2.0 Ports

1 VGA, 1 HDMI

Copyright Notice

This document is copyrighted, 2013. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMI is a trademark of American Megatrends Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- Intel® is a trademark of Intel® Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- SoundBlaster is a trademark of Creative Labs, Inc.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 Gift Box (Including Power Adapter)
- 1 DVD-ROM for Manual (in PDF Format) and Drivers
- 1 DSS-CV20

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

Contents

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features	1-3
1.3 Specifications	1-4
1.4 General System Information	1-6

Chapter 2 Hardware Installation

2.1 Mechanical Drawing.....	2-2
2.2 Installing the 2.5" Hard Disk Drive.....	2-3
2.3 Installing the Antenna.....	2-6

Chapter 3 Driver Installation

3.1 Installation	3-3
------------------------	-----

Chapter 4 I/O Information

4.1 I/O Address Map	4-2
4.2 1 st MB Memory Address Map.....	4-3
4.3 IRQ Mapping Chart	4-4

Chapter

1

General Information

1.1 Introduction

DSS-CV20 adopts the Intel® Atom™ D2550 Processor, up to 1.86GHz. The chipset is equipped with Intel® NM10. Moreover, the system memory features two 204-pin DDR3 1066 SODIMM up to 4GB. It deploys one LAN port that consist of 10/100/1000Base-TX Ethernet LAN RJ-45 port. DSS-CV20 condensed appearance features desktop and wallmount form factor that fits nicely into a space-limited environment.

This compact DSS-CV20 equipped with one 2.5" Hard Disk Drive/ Solid State Disk and one SD/SDHC/SDXC/MMC for expansion. In addition, it features one RS-232 COM port and four USB2.0 on the front panel. Furthermore, it equips up to 1920x1200 @ 60Hz for VGA and HDMI.

With the increasing demands of high performance in audio and video, AAEON released the specific Digital Signage system to fulfill the needs of multimedia and digital signage applications.

1.2 Features

- Intel® Atom™ D2550 Processor (1M Cache, 1.86GHz)
- 2 x 204-pin Dual Channel DDR3 1066MHz up to 4GB
- Intel® Integrated Graphics Engine GMA3650 supports Dual View by VGA, HDMI
- Optional Wireless LAN (Wi-Fi 802.11b/g/n)
- Gigabit Ethernet x 1
- Slim (26.2mm) & Light (0.69kg)
- HDD/SSD x 1; SD/SDHC/SDXC/MMC x 1
- Max. Power Consumption 22W
- VESA Mount supported

1.3 Specifications

System

Form Factor	Digital Signage
Processor	Intel® Atom D2550 1.86GHz
System Memory	204-pin DDR3 1066 SODIMM x 2, Max. 4GB
Chipset	Intel® NM10
Ethernet	10/100/1000Base-TX, RJ-45 x 1
BIOS	AMI BIOS
I/O Chip	NCT 5579D
Storage	2.5" HDD/SDD x 1
Optical ROM	--
LED	Power indicator x 1
Expansion	Card reader: SD/SDHC/SDXC/MMC
Power Supply	19V DC power adapter
Dimension (WxHxD)	8.46" x 0.98" x 6.77" (215mm x 25mm x 172mm)
Weight	1.52 lb (0.69Kg)
Chassis Color	Black
OS Support	Windows® 7 32-bit

External I/O

Serial Port	RS-232 x 1
--------------------	------------

Universal Serial Bus USB2.0 x 4 (on front panel)

Audio Audio jack x 2 (S/PDIF, MIC-in)

Ethernet RJ-45 x 2

Display Up to 1920x1200/ 60Hz for VGA

Up to 1920x1200/ 60Hz for HDMI

Power Switch ATX Power Switch x 1

Environment

Operating Temp. 32°F~104 °F (0 °C ~40 °C)

Storage Temp. -4°F~140 °F (-20 °C ~60 °C)

Storage Humidity 10~95% @ 40 °C, non-condensing


Vibration 1g rms/ 5~500Hz/ operation

Shock 20G peak acceleration (11 m sec.
duration)

Certification CE/ FCC Class A

1.4 General System Information

Front Panel

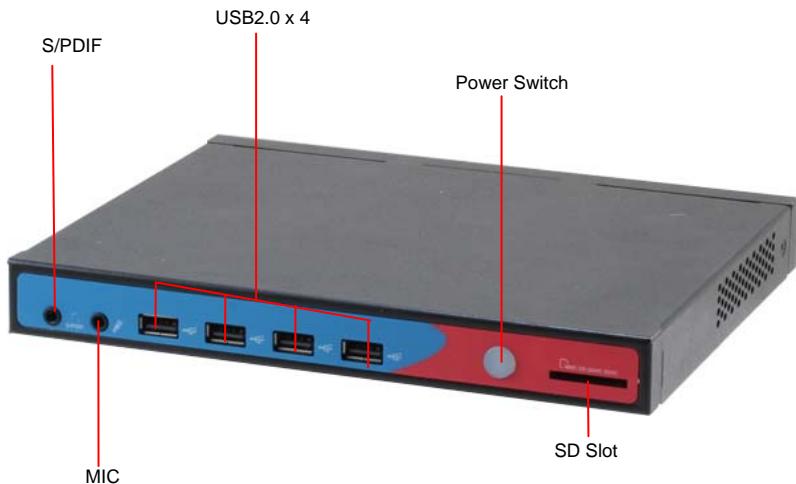


Chapter

2

Hardware Installation

2.1 Mechanical Drawing

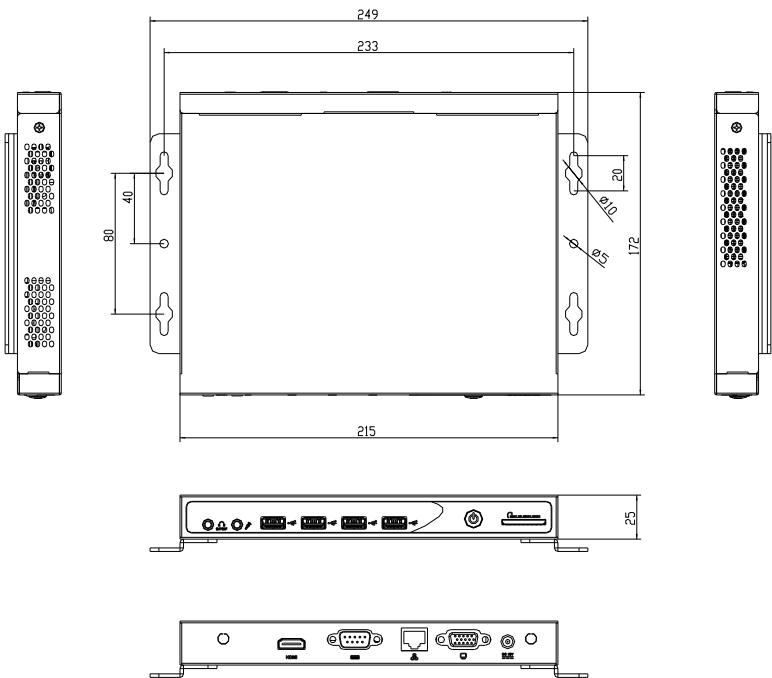

2.2 Installing the 2.5" Hard Disk Drive

Step 1: Unfasten the two screws on the side panels of the DSS-CV20 and remove the upper lid



Step 2: Loosen HDD bracket on the standoff with two screws



Step 3: Lock HDD on the HDD bracket with two screws



Step 4: Turn the HDD to another side and push it into the slot until connecting firmly



Step 5: Lock the bracket of HDD on the standoff with two screws



2.3 Installing the Antenna

Step 1: Break the hole of antenna



Step 2: Install the connector of antenna



Step 3: Screw the antenna on the connector



Step 4: Install the Wi-Fi module and fix it by a screw



Chapter

3

Driver Installation

The DSS-CV20 comes with an AutoRun CD-ROM that contains all drivers and utilities that can help you to install the driver automatically.

Insert the driver CD, the driver CD-title will auto start and show the installation guide. If not, please follow the sequence below to install the drivers.

Follow the sequence below to install the drivers:

- Step 1 – Install Chipset Driver
- Step 2 – Install VGA Driver
- Step 3 – Install Audio Driver
- Step 4 – Install LAN Driver

Please read instructions below for further detailed installations.

3.1 Installation

Insert the DSS-CV20 CD-ROM into the CD-ROM drive and install the drivers from Step 1 to Step 4 in order.

Step 1 – Install Chipset Driver

1. Click on the **Step1 - CHIPSET** folder and double click on the **infinst_autol.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 2 – Install VGA Driver

1. Click on the **Step2 - VGA** folder and double click on the **Setup.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 3 – Install Audio Driver

1. Click on the **Step3 - AUDIO** folder and double click on the **Setup.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 4 – Install LAN Driver

1. Click on the **Step4 - LAN** folder and double click on the **setup.exe** file

2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Chapter

4

I/O Information

4.1 I/O Address Map

- Input/output (IO)
 - [00000000 - 00000CF7] PCI bus
 - [00000010 - 0000001F] Motherboard resources
 - [00000022 - 0000003F] Motherboard resources
 - [00000044 - 0000005F] Motherboard resources
 - [00000070 - 00000071] Motherboard resources
 - [00000072 - 0000007F] Motherboard resources
 - [00000080 - 00000080] Motherboard resources
 - [00000084 - 00000086] Motherboard resources
 - [00000088 - 00000088] Motherboard resources
 - [0000008C - 0000008E] Motherboard resources
 - [00000090 - 0000009F] Motherboard resources
 - [000000A2 - 000000BF] Motherboard resources
 - [000000E0 - 000000EF] Motherboard resources
 - [00000290 - 0000029F] Motherboard resources
 - [000003B0 - 000003BB] Intel(R) Graphics Media Accelerator 3600 Series
 - [000003C0 - 000003DF] Intel(R) Graphics Media Accelerator 3600 Series
 - [000003F8 - 000003FF] Communications Port (COM1)
 - [00000400 - 0000047F] Motherboard resources
 - [00000400 - 0000047F] Motherboard resources
 - [000004D0 - 000004D1] Motherboard resources
 - [00000500 - 0000053F] Motherboard resources
 - [00000500 - 0000053F] Motherboard resources
 - [00000800 - 0000081F] Intel(R) N10/ICH7 Family SMBus Controller - 27DA
 - [0000D000 - 0000FFFF] PCI bus
 - [0000E000 - 0000E0FF] Realtek PCIe GBE Family Controller
 - [0000E000 - 0000EFFF] Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
 - [0000F000 - 0000F00F] Standard AHCI1.0 Serial ATA Controller
 - [0000F020 - 0000F03F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
 - [0000F040 - 0000F05F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
 - [0000F060 - 0000F07F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
 - [0000F080 - 0000F09F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
 - [0000FOA0 - 0000FOA3] Standard AHCI1.0 Serial ATA Controller
 - [0000FOB0 - 0000FOB7] Standard AHCI1.0 Serial ATA Controller
 - [0000FOC0 - 0000FOC3] Standard AHCI1.0 Serial ATA Controller
 - [0000FOD0 - 0000FOD7] Standard AHCI1.0 Serial ATA Controller
 - [0000FOE0 - 0000FOE7] Intel(R) Graphics Media Accelerator 3600 Series

4.2 1st MB Memory Address Map

Memory	
	[00000000 - 00000FFF] Motherboard resources
	[00000000 - 00000FFF] Motherboard resources
	[00000000 - 00003FFF] Motherboard resources
	[000A0000 - 000BFFFF] Intel(R) Graphics Media Accelerator 3600 Series
	[000A0000 - 000BFFFF] PCI bus
	[000C0000 - 000DFFFF] PCI bus
	[000E0000 - 000EFFFF] PCI bus
	[000F0000 - 000FFFFFF] PCI bus
	[7F800000 - 7FFFFFFF] PCI bus
	[80000000 - FEBFFFFFF] PCI bus
	[DFD00000 - DFDFFFFFF] Intel(R) Graphics Media Accelerator 3600 Series
	[DFE00000 - DFE03FFF] Realtek PCIe GBE Family Controller
	[DFE00000 - DFEFFFFFF] Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
	[DFE04000 - DFE04FFF] Realtek PCIe GBE Family Controller
	[DFF00000 - DFF03FFF] High Definition Audio Controller
	[DFF04000 - DFF043FF] Standard AHCI1.0 Serial ATA Controller
	[DFF05000 - DFF053FF] Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
	[E0000000 - EFFFFFFF] System board
	[FEC00000 - FEC00FFF] Motherboard resources
	[FED14000 - FED19FFF] System board
	[FED1C000 - FED1FFFF] Motherboard resources
	[FED1C000 - FED1FFFF] Motherboard resources
	[FED20000 - FED8FFFFFF] Motherboard resources
	[FED45000 - FED8FFFFFF] Motherboard resources
	[FEE00000 - FEE00FFF] Motherboard resources
	[FF000000 - FFFFFFFF] Intel(R) 82802 Firmware Hub Device
	[FFE00000 - FFFFFFFF] Motherboard resources

4.3 IRQ Mapping Chart

Interrupt request (IRQ)	
ISA (ISA) 0x00000004 (04)	Communications Port (COM1)
ISA (ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
ISA (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
ISA (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System

ISA 0x00000083 (131)	Microsoft ACPI-Compliant System
ISA 0x00000084 (132)	Microsoft ACPI-Compliant System
ISA 0x00000085 (133)	Microsoft ACPI-Compliant System
ISA 0x00000086 (134)	Microsoft ACPI-Compliant System
ISA 0x00000087 (135)	Microsoft ACPI-Compliant System
ISA 0x00000088 (136)	Microsoft ACPI-Compliant System
ISA 0x00000089 (137)	Microsoft ACPI-Compliant System
ISA 0x0000008A (138)	Microsoft ACPI-Compliant System
ISA 0x0000008B (139)	Microsoft ACPI-Compliant System
ISA 0x0000008C (140)	Microsoft ACPI-Compliant System
ISA 0x0000008D (141)	Microsoft ACPI-Compliant System
ISA 0x0000008E (142)	Microsoft ACPI-Compliant System
ISA 0x0000008F (143)	Microsoft ACPI-Compliant System
ISA 0x00000090 (144)	Microsoft ACPI-Compliant System
ISA 0x00000091 (145)	Microsoft ACPI-Compliant System
ISA 0x00000092 (146)	Microsoft ACPI-Compliant System
ISA 0x00000093 (147)	Microsoft ACPI-Compliant System
ISA 0x00000094 (148)	Microsoft ACPI-Compliant System
ISA 0x00000095 (149)	Microsoft ACPI-Compliant System
ISA 0x00000096 (150)	Microsoft ACPI-Compliant System
ISA 0x00000097 (151)	Microsoft ACPI-Compliant System
ISA 0x00000098 (152)	Microsoft ACPI-Compliant System
ISA 0x00000099 (153)	Microsoft ACPI-Compliant System
ISA 0x0000009A (154)	Microsoft ACPI-Compliant System
ISA 0x0000009B (155)	Microsoft ACPI-Compliant System
ISA 0x0000009C (156)	Microsoft ACPI-Compliant System
ISA 0x0000009D (157)	Microsoft ACPI-Compliant System
ISA 0x0000009E (158)	Microsoft ACPI-Compliant System
ISA 0x0000009F (159)	Microsoft ACPI-Compliant System
ISA 0x000000A0 (160)	Microsoft ACPI-Compliant System
ISA 0x000000A1 (161)	Microsoft ACPI-Compliant System
ISA 0x000000A2 (162)	Microsoft ACPI-Compliant System
ISA 0x000000A3 (163)	Microsoft ACPI-Compliant System
ISA 0x000000A4 (164)	Microsoft ACPI-Compliant System
ISA 0x000000A5 (165)	Microsoft ACPI-Compliant System
ISA 0x000000A6 (166)	Microsoft ACPI-Compliant System
ISA 0x000000A7 (167)	Microsoft ACPI-Compliant System
ISA 0x000000A8 (168)	Microsoft ACPI-Compliant System
ISA 0x000000A9 (169)	Microsoft ACPI-Compliant System
ISA 0x000000AA (170)	Microsoft ACPI-Compliant System
ISA 0x000000AB (171)	Microsoft ACPI-Compliant System
ISA 0x000000AC (172)	Microsoft ACPI-Compliant System
ISA 0x000000AD (173)	Microsoft ACPI-Compliant System
ISA 0x000000AE (174)	Microsoft ACPI-Compliant System
ISA 0x000000AF (175)	Microsoft ACPI-Compliant System
ISA 0x000000B0 (176)	Microsoft ACPI-Compliant System
ISA 0x000000B1 (177)	Microsoft ACPI-Compliant System
ISA 0x000000B2 (178)	Microsoft ACPI-Compliant System
ISA 0x000000B3 (179)	Microsoft ACPI-Compliant System
ISA 0x000000B4 (180)	Microsoft ACPI-Compliant System
ISA 0x000000B5 (181)	Microsoft ACPI-Compliant System
ISA 0x000000B6 (182)	Microsoft ACPI-Compliant System
ISA 0x000000B7 (183)	Microsoft ACPI-Compliant System
ISA 0x000000B8 (184)	Microsoft ACPI-Compliant System
ISA 0x000000B9 (185)	Microsoft ACPI-Compliant System

-  (ISA) 0x000000BA (186) Microsoft ACPI-Compliant System
-  (ISA) 0x000000BB (187) Microsoft ACPI-Compliant System
-  (ISA) 0x000000BC (188) Microsoft ACPI-Compliant System
-  (ISA) 0x000000BD (189) Microsoft ACPI-Compliant System
-  (ISA) 0x000000BE (190) Microsoft ACPI-Compliant System
-  (PCI) 0x00000007 (07) Intel(R) N10/ICH7 Family SMBus Controller - 27DA
-  (PCI) 0x00000010 (16) Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
-  (PCI) 0x00000010 (16) Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
-  (PCI) 0x00000011 (17) Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
-  (PCI) 0x00000012 (18) Intel(R) N10/ICH7 Family PCI Express Root Port - 27D4
-  (PCI) 0x00000012 (18) Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
-  (PCI) 0x00000013 (19) Intel(R) N10/ICH7 Family PCI Express Root Port - 27D6
-  (PCI) 0x00000013 (19) Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
-  (PCI) 0x00000013 (19) Standard AHCI1.0 Serial ATA Controller
-  (PCI) 0x00000016 (22) High Definition Audio Controller
-  (PCI) 0x00000017 (23) Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
-  (PCI) 0x00000017 (23) Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
-  (PCI) 0xFFFFFFF(-3) Realtek PCIe GBE Family Controller
-  (PCI) 0xFFFFFFF(-2) Intel(R) Graphics Media Accelerator 3600 Series