DSS-CV21

Digital Signage System 2.5" HDD/ SDD x 1 1 Gigabit Ethernet Port/ 1 RS-232/ 4 USB2.0 Ports HD Audio Codec (2CH Audio) 1 VGA, 1 HDMI

> DSS-CV21 Manual 1st Ed. March 2013

Copyright Notice

This document is copyrighted, 2013. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMI is a trademark of American Megatrends Inc.
- CompactFlash[™] is a trademark of the Compact Flash Association.
- Intel[®] is a trademark of Intel[®] Corporation.
- Microsoft Windows[®] is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- SoundBlaster is a trademark of Creative Labs, Inc.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 Gift Box (Including Power Adapter)
- 1 DVD-ROM for Manual (in PDF Format) and Drivers
- 1 DSS-CV21

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

D S S - C V 2 1

Contents

Chapter 1 General Information

1.1 Introduction	1-2
1.2 Features	1-3
1.3 Specifications	1-4
1.4 General System Information	1-6

Chapter 2 Hardware Installation

2.1 Mechanical Drawing	. 2-2
2.2 Installing the 2.5" Hard Disk Drive	. 2-3
2.3 Installing the Antenna	. 2-7

Chapter 3 Driver Installation

3.1 Installation

Chapter 4 I/O Information

4.1 I/O Address Map	4-2
4.2 1 st MB Memory Address Map	4-3
4.3 IRQ Mapping Chart	4-4

D S S - C V 2 1

Chapter

General Information

Chapter 1 General Information 1-1

1.1 Introduction

DSS-CV21 adopts the Intel[®] Atom[™] D2550 Processor, up to 1.86GHz. The chipset is equipped with Intel[®] NM10. Moreover, the system memory features two 204-pin DDR3 1066 SODIMM up to 4GB. It deploys one LAN port that consist of 10/100/1000Base-TX Ethernet LAN RJ-45 port. DSS-CV21 condensed appearance features desktop and wallmount form factor that fits nicely into a space-limited environment.

This compact DSS-CV21 equipped with one 2.5" Hard Disk Drive/ Solid State Disk and one SD/SDHC/SDXC/MMC for expansion. In addition, it features one RS-232 COM port and four USB2.0 on the front panel. Furthermore, it equips up to 1920x1200 @ 60Hz for VGA and HDMI.

With the increasing demands of high performance in audio and video, AAEON released the specific Digital Signage system to fulfill the needs of multimedia and digital signage applications.

1.2 Features

- Intel[®] Atom[™] D2550 Processor (1M Cache, 1.86GHz)
- 2 x 204-pin Dual Channel DDR3 1066MHz up to 4GB
- Intel[®] Integrated Graphics Engine GMA3650 supports Dual View by VGA, HDMI
- Optional Wireless LAN (Wi-Fi 802.11b/g/n)
- Gigabit Ethernet x 1
- Slim (26.2mm) & Light (0.69kg)
- HDD/SSD x 1; SD/SDHC/SDXC/MMC x 1
- Max. Power Consumption 22W
- VESA Mount supported
- Fanless

D S S - C V 2 1

1.3 Specifications

System	
Form Factor	Digital Signage
Processor	Intel [®] Atom D2550 1.86GHz
System Memory	204-pin DDR3 1066 SODIMM x 2, Max.
	4GB
Chipset	Intel [®] NM10
Ethernet	10/100/1000Base-TX, RJ-45 x 1
BIOS	AMI BIOS
I/O Chip	NCT 5579D
Storage	2.5" HDD/SDD x 1
Optical ROM	
LED	Power indicator x 1
Expansion	Card reader: SD/SDHC/SDXC/MMC
Power Supply	19V DC power adapter
Dimension (WxHxD)	9.45" x 1.26" x 6.69" (240mm x 32mm x
	170mm)
Weight	2.2 lb (1Kg)
Chassis Color	Black
OS Support	Windows [®] 7 32-bit
External I/O	
Serial Port	RS-232 x 1

Chapter 1 General Information 1-4

Digital	Signage	System
---------	---------	--------

Universal Serial Bus USB2.0 x 4 (on front panel)


Audio	Audio jack x 2 (S/PDIF & MIC-in)
Ethernet	RJ-45 x 2
Display	Up to 1920x1200/ 60Hz for VGA
	Up to 1920x1200/ 60Hz for HDMI
Power Switch	ATX Power Switch x 1

Environment

Operating Temp.	32°F~104 °F (0 °C ~40 °C)
Storage Temp.	-4°F~140 °F (-20 °C ~60 °C)
Storage Humidity	10~95% @ 40 $^{\circ}$ C, non-condensing
Vibration	1g rms/ 5~500Hz/ operation
Shock	20G peak acceleration (11 m sec.
	duration)
Certification	CE/ FCC Class A

1.4 General System Information

Front Panel

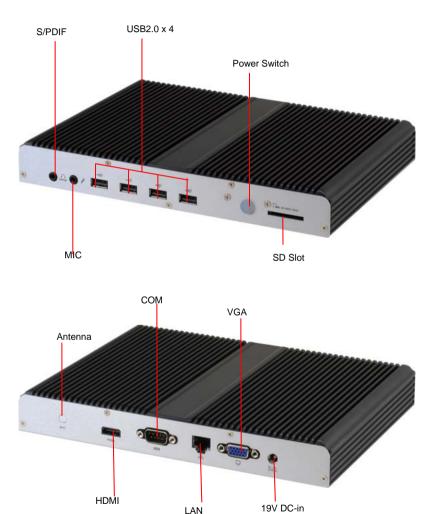




Hardware Installation

Chapter 2 Hardware Installation 2-1

2.1 Mechanical Drawing

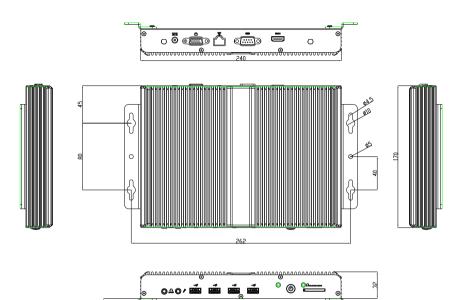

2.2 Installing the 2.5" Hard Disk Drive

Step 1: Unfasten the four screws on the bottom case of the DSS-CV21




Step 2: Unfasten the screw on the front panel



Step 3: Unfasten the four screws on the rear panel



Step 4: Pull up the case of DSS-CV21

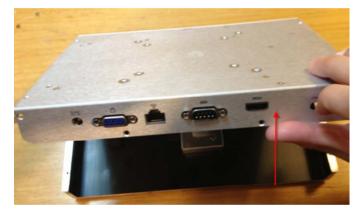

Step 5: Loosen the Hard Disk Drive (HDD) bracket on the standoff with two screws



Chapter 2 Hardware Installation 2-4

D S S - C V 2 1





Step 7: Turn the HDD to another side and push it into the slot until connecting firmly



Chapter 2 Hardware Installation 2-5




Step 9: Lock the bracket of HDD on the standoff with two screws

D S S - C V 2 1

2.3 Installing the Antenna

Step 1: Break the hole of antenna

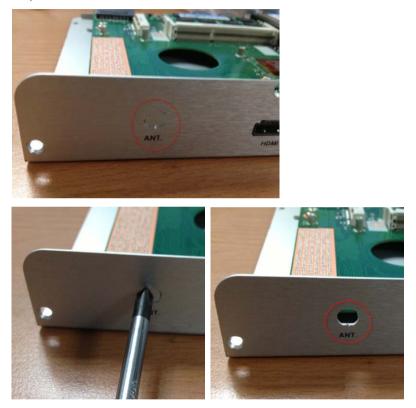

Step 2: Install the connector of antenna




Step 3: Screw the antenna on the connector



Chapter 2 Hardware Installation 2-8

D S S - C V 2 1

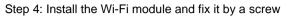





Driver Installation

Chapter 3 Driver Installation 3-1

The DSS-CV21 comes with an AutoRun CD-ROM that contains all drivers and utilities that can help you to install the driver automatically.

Insert the driver CD, the driver CD-title will auto start and show the installation guide. If not, please follow the sequence below to install the drivers.

Follow the sequence below to install the drivers:

Step 1 – Install Chipset Driver Step 2 – Install VGA Driver Step 3 – Install Audio Driver Step 4 – Install LAN Driver

Please read instructions below for further detailed installations.

3.1 Installation

Insert the DSS-CV21 CD-ROM into the CD-ROM drive and install the drivers from Step 1 to Step 4 in order.

Step 1 – Install Chipset Driver

- 1. Click on the **Step1 CHIPSET** folder and double click on the **infinst_autol.exe** file
- 2. Follow the instructions that the window shows
- 3. The system will help you install the driver automatically
- Step 2 Install VGA Driver
 - 1. Click on the *Step2 VGA* folder and double click on the *Setup.exe* file
 - 2. Follow the instructions that the window shows
 - 3. The system will help you install the driver automatically
- Step 3 Install Audio Driver
 - 1. Click on the **Step3 AUDIO** folder and double click on the **Setup.exe** file
 - 2. Follow the instructions that the window shows
 - 3. The system will help you install the driver automatically
- Step 4 Install LAN Driver
 - Click on the Step4 LAN folder and double click on the setup.exe file

- 2. Follow the instructions that the window shows
- 3. The system will help you install the driver automatically

D S S - C V 2 1

Chapter

I/O Information

4.1 I/O Address Map

🛛 📲 Input/output (IO)
[00000000 - 00000CF7] PCI bus
[000003B0 - 000003BB] Intel(R) Graphics Media Accelerator 3600 Series
[000003C0 - 000003DF] Intel(R) Graphics Media Accelerator 3600 Series
[000003F8 - 000003FF] Communications Port (COM1)
19 [00000D00 - 0000FFFF] PCI bus
- 🔮 [0000E000 - 0000E0FF] Realtek PCIe GBE Family Controller
[0000F000 - 0000F00F] Standard AHCI 1.0 Serial ATA Controller
[0000F040 - 0000F05F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
[0000F060 - 0000F07F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
[0000F080 - 0000F09F] Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
[0000F0A0 - 0000F0A3] Standard AHCI1.0 Serial ATA Controller
[0000F0B0 - 0000F0B7] Standard AHCI1.0 Serial ATA Controller
[0000F0C0 - 0000F0C3] Standard AHCI1.0 Serial ATA Controller
[0000F0D0 - 0000F0D7] Standard AHCI1.0 Serial ATA Controller
[0000F0E0 - 0000F0E7] Intel(R) Graphics Media Accelerator 3600 Series

4.2 1st MB Memory Address Map

Memory
[00000000 - 00000FFF] Motherboard resources
[00000000 - 00000FFF] Motherboard resources
[00000000 - 00003FFF] Motherboard resources
Intel(R) Graphics Media Accelerator 3600 Series
19 [000A0000 - 000BFFFF] PCI bus
1 [000C0000 - 000DFFFF] PCI bus
19 [000E0000 - 000EFFF] PCI bus
1000F0000 - 000FFFFF] PCI bus
📲 [DFD00000 - DFDFFFF] Intel(R) Graphics Media Accelerator 3600 Series
🚽 👰 [DFE00000 - DFE03FFF] Realtek PCIe GBE Family Controller
📲 [DFE04000 - DFE04FFF] Realtek PCIe GBE Family Controller
🔤 [DFF04000 - DFF043FF] Standard AHCI1.0 Serial ATA Controller
🏺 [DFF05000 - DFF053FF] Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
📲 [FFE00000 - FFFFFFF] Motherboard resources

D S S - C V 2 1

4.3 IRQ Mapping Chart

⊿ · 📓 Interrupt request (IRQ)	
(ISA) 0x00000004 (04)	Communications Port (COM1)
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
(ISA) 0x000006C (108)	Microsoft ACPI-Compliant System
(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
(ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
(ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
(ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
(ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
1 (ISA) 0x000007C (124)	Microsoft ACPI-Compliant System

Chapter 4 I/O Information 4-4

D S S - C V 2 1

	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
I (ISA) 0x0000086 (134)	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
(ISA) 0x000008B (139)	Microsoft ACPI-Compliant System
(ISA) 0x000008C (140)	Microsoft ACPI-Compliant System
(ISA) 0x000008D (141)	Microsoft ACPI-Compliant System
(ISA) 0x000008E (142)	Microsoft ACPI-Compliant System
(ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
(ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
(ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
(ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
(ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
* m * * *	
(ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
(ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
19 (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
19 (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
(ISA) 0x00000A7 (167)	Microsoft ACPI-Compliant System
(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
(ISA) 0x000000B0 (170)	
	Microsoft ACPI-Compliant System
(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
(ISA) 0x00000B5 (181)	Microsoft ACPI-Compliant System
	Microsoft ACPI-Compliant System
19 (ISA) 0x00000B7 (183)	Microsoft ACPI-Compliant System
19 (ISA) 0x00000B8 (184)	Microsoft ACPI-Compliant System
19 (ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System

D S S - C V 2 1

j	(ISA) 0x00000BA (186	Microsoft ACPI-Compliant System
····j	(ISA) 0x00000BB (187)	Microsoft ACPI-Compliant System
····]	(ISA) 0x00000BC (188	Microsoft ACPI-Compliant System
j	(ISA) 0x00000BD (189	Microsoft ACPI-Compliant System
j	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(PCI) 0x00000007 (07)	Intel(R) N10/ICH7 Family SMBus Controller - 27DA
	(PCI) 0x00000010 (16)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
📋	(PCI) 0x00000010 (16)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
	(PCI) 0x00000011 (17)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
	(PCI) 0x00000012 (18)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D4
🖥	(PCI) 0x00000012 (18)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
	(PCI) 0x00000013 (19)	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D6
🖥	(PCI) 0x00000013 (19)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
	(PCI) 0x00000013 (19)	Standard AHCI 1.0 Serial ATA Controller
	(PCI) 0x00000016 (22)	High Definition Audio Controller
0	(PCI) 0x00000017 (23)	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
i	(PCI) 0x00000017 (23)	Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
	(PCI) 0xFFFFFFD (-3)	Realtek PCIe GBE Family Controller
	(PCI) 0xFFFFFFFE (-2)	Intel(R) Graphics Media Accelerator 3600 Series
_		