



FWS-7370

Rackmount Network Appliance

User's Manual 1st Ed

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Intel® and Atom® are registered trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- Marvell® Alaska® is a registered trademark of Marvell
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● FWS-7370	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arise, please contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON System

QQ4-381 Rev.A2

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
液晶模块	×	○	○	○	○	○
光驱	×	○	○	○	○	○
触控模块	×	○	○	○	○	○
电源	×	○	○	○	○	○
电池	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

×：表示该有害物质的某一均质材料超出了 GB/T 26572 的限量要求，然而该部件仍符合欧盟指令 2011/65/EU 的规范。

环保使用期限(EFUP (Environmental Friendly Use Period))：10 年

备注：

一、此产品所标示之环保使用期限，系指在一般正常使用状况下。

二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。

三、上述部件物质液晶模块、触控模块仅一体机产品适用。

China RoHS Requirement (EN)

Name and content of hazardous substances in product

AAEON System

QO4-381 Rev.A2

Part Name	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB Assemblies	×	○	○	○	○	○
Connector and Cable	×	○	○	○	○	○
Chassis	○	○	○	○	○	○
CPU and Memory	×	○	○	○	○	○
Hard Disk	×	○	○	○	○	○
LCD Modules	×	○	○	○	○	○
CD-ROM/DVD-ROM	×	○	○	○	○	○
Touch Modules	×	○	○	○	○	○
Power	×	○	○	○	○	○
Battery	×	○	○	○	○	○
The table is prepared in accordance with the provisions of SJ/T 11364. ○ : Indicates that said hazardous substance contained in all of the homogenous materials for this product is below the limit requirement of GB/T 26572. × : Indicates that said hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement of GB/T 26572. But this product still be compliance with 2011/65/EU Directive (allowed with 2011/65/EU Annex III of RoHS exemption with number 6(c),7(a),7(c)-1). EFUP (Environment Friendly Use Period) value: 10 years. Notes: 1. This product defined period of use is under normal condition. 2. In above part, CPU/Memory/ Hard Disk/CD-ROM/DVD-ROM/ Power are optional. 3. In above part, LCD Modules/ Touch Modules are for all-in-one product model.						

Table of Contents

Chapter 1 - Product Specifications	1
1.1 Specifications	2
Chapter 2 – Hardware Information	5
2.1 Dimensions	6
2.1.1 FWS-7370 System.....	6
2.1.2 FWS-7370 Main Board.....	7
2.1.3 PER-T700 Riser Card	9
2.2 Jumpers and Connectors.....	10
2.2.1 FWS-7370 Main Board.....	10
2.2.2 PER-T700 Riser Card	12
2.3 List of Jumpers	13
2.3.1 Clear CMOS (CN5)	13
2.4 List of Connectors.....	14
2.4.1 Power Switch and Hardware Reset Header, Power LED, HDD LED (CN28)	15
2.4.2 Case-Open Connector (CN8)	15
2.4.3 Digital I/O for SIO (CN7)	16
2.4.4 Status LED (LED20).....	17
2.4.5 Bypass LED (LED21)	17
2.5 2.5" HDD Installation.....	19
2.6 NIM Module Installation.....	23
2.7 PER-T700 & NIM Module Installation	25
Chapter 3 - AMI BIOS Setup	28
3.1 System Test and Initialization	29
3.2 AMI BIOS Setup	30
3.3 Setup Submenu: Main.....	31

3.4	Setup Submenu: Advanced.....	31
3.4.1	Trusted Computing.....	32
3.4.2	Hardware Monitor	34
3.4.2.1	Smart Fan Function.....	34
3.4.3	SIO Configuration.....	35
3.4.3.1	Serial Port Configuration	36
3.4.4	Serial Port Console Redirection	37
3.4.4.1	Console Redirection Settings.....	38
3.4.5	SDIO Configuration.....	40
3.4.6	Power Management.....	41
3.4.7	Digital IO Port Configuration	42
3.4.8	LAN Bypass Configuration.....	43
3.4.9	Case Open Configuration.....	44
3.5	Setup Submenu: Platform Configuration	45
3.5.1	PCH-IO Configuration	45
3.5.2	SATA Configuration	46
3.5.2.1	Controller SATA Configuration	46
3.5.3	SCS Configuration	47
3.5.4	Server ME Configuration.....	48
3.6	Setup Submenu: Socket Configuration.....	49
3.6.1	Processor Configuration.....	49
3.6.2	Memory Configuration.....	50
3.6.3	Memory Topology	50
3.7	Setup Submenu: Security.....	51
3.7.1	Secure Boot.....	52
3.7.2	Key Management.....	53
3.7.3	Boot	55
3.8	Setup Submenu: Save & Exit.....	56

Appendix A – Software Development Kit Information..... 57

 A.1 Software Development Kit Support List..... 58

Chapter 1

Product Specifications

1.1 Specifications

System

Form Factor	1U Rackmount Network Appliance
Processor	Intel Atom® P5300/C5000 Processors (Max 83W)
Chipset	-
System Memory	DDR4 SODIMM x 2, up to 64GB (ECC/Non-ECC)

Network

Ethernet	Intel® Ethernet Controller I226-V, 2.5GbE RJ-45 x 4 1GbE by Marvell® Alaska® 88E1543, 1GbE RJ-45 x 4 10GbE SFP+ x 4
Bypass	2 Pairs LAN Bypass (1GbE RJ-45 x 1, 2.5GbE RJ-45 x 1)
Other	NIM Slot x 1 (PCIe [x1]) or PoE Module for 2.5GbE RJ-45 x 2

Note: NIM and PoE Modules cannot be supported simultaneously. Therefore, NIM module not supported if PoE is occupied, and vice-versa.

Display

Graphic Controller	-
Connector	-

Storage

HDD	2.5" HDD Bay x 2 (1 SATA co-lay with M.2 2242 M-Key)
CF/CFast/mSATA	eMMC, up to 128GB

Internal/Expansion Interface

PCIe Slot	PCIe [x4] Slot x 1 (PCIe [x1] x 2 signal) M.2 3042/52 B-Key x 1 (5G)
-----------	---

Internal/Expansion Interface

USB	USB 2.0 (Type-A) x 2
-----	----------------------

Miscellaneous

RTC	Internal RTC
Watchdog Timer	1~255 step by software programmable
Software Button	GPIO Programmable Push Button x 1
TPM	TPM 2.0 SPI
GPIO	DIO Pin Header x 1 (4-in/4-out)
Fan	CPU Fan x 2
MTBF (Hours)	-
Color	Black

Environmental Parameters and Dimension

Power Requirement	AC/DC open frame 200W PSU
Operating Temperature	32°F ~ 122°F (0°C ~ 40°C) with 0.2m/s air flow
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Operating Humidity	10% ~ 80%
Storage Humidity	10% ~ 80% @40C, non-condensing
Vibration	0.5G / 5 ~ 500Hz / operation (2.5" SSD) 1.5G / 5 ~ 500Hz / non-operation
Shock	10G peak acceleration (11 m sec. duration), operation (2.5" SSD) 20G peak acceleration (11 m sec. duration), non-operation
Dimensions (W x D x H)	16.9" x 7.8" x 1.7" (430mm x 200mm x 44mm)

I/O


Front Panel	Power LED x 1
	Status LED x 1
	HDD LED x 1
	Bypass LED x 2
	SW Programmable Button x 1
	RJ-45 Console Port x 1
Rear Panel	AC Power Input x 1
	Power Button x 1

Chapter 2

Hardware Information


2.1 Dimensions

2.1.1 FWS-7370 System

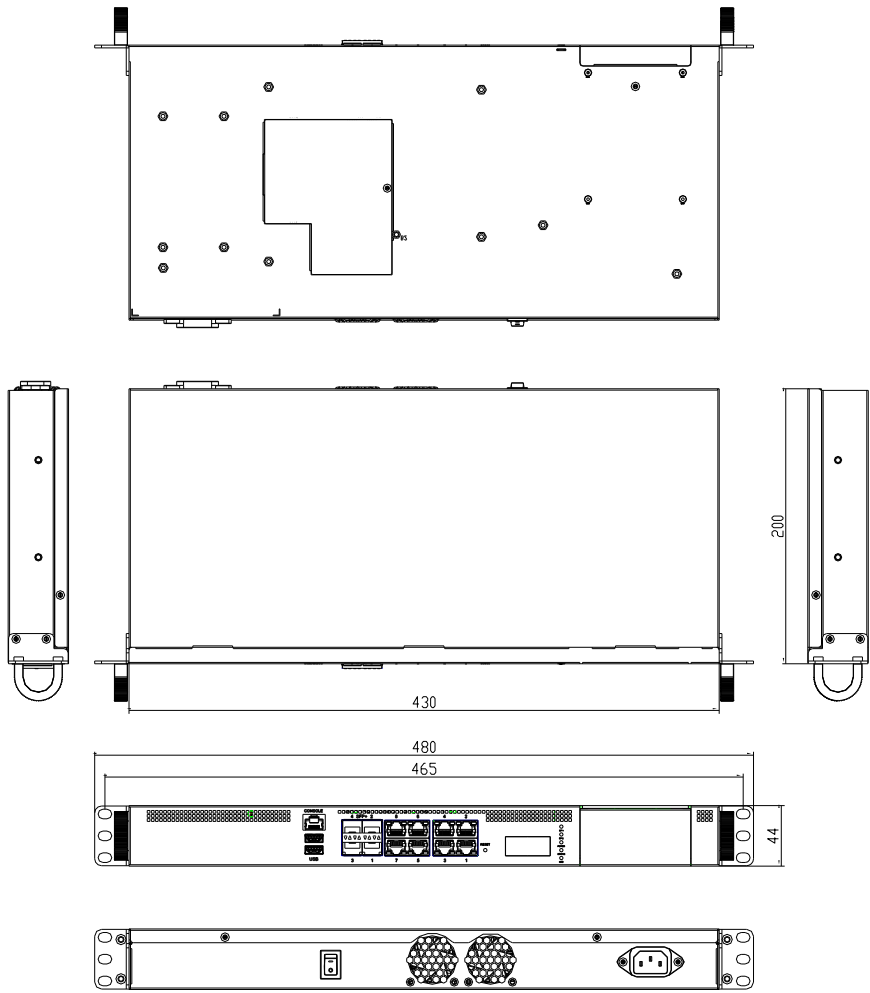


2.1.2 FWS-7370 Main Board


Main Board Component Side

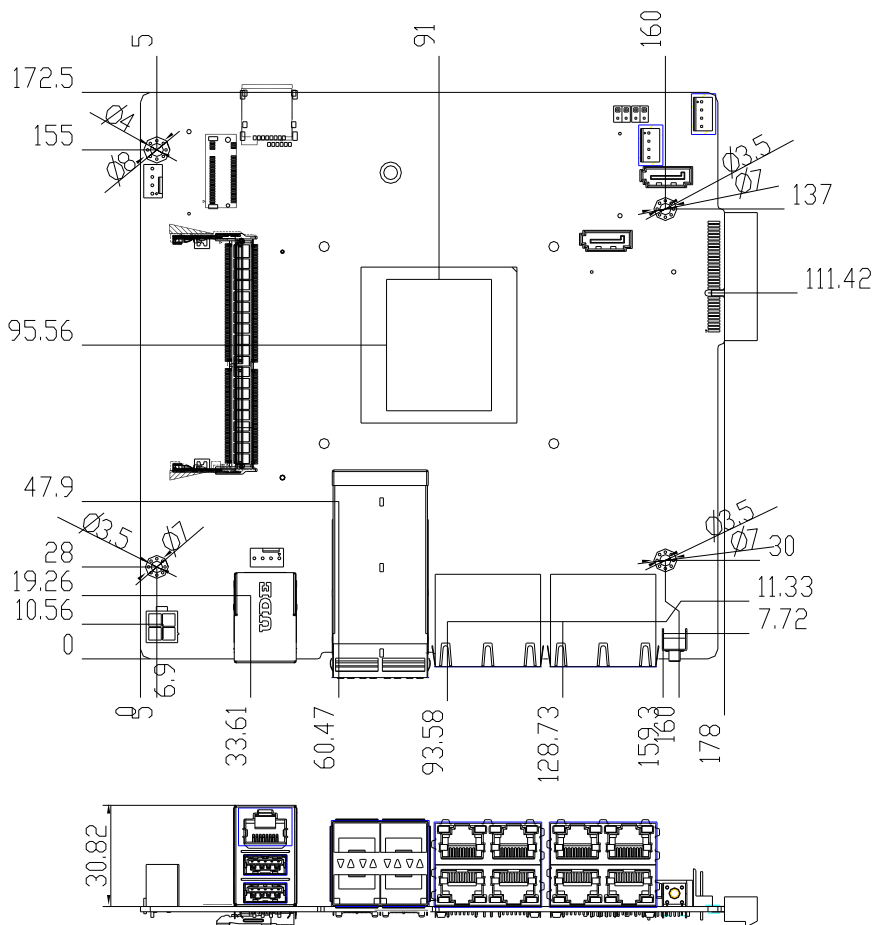

Main Board Solder Side

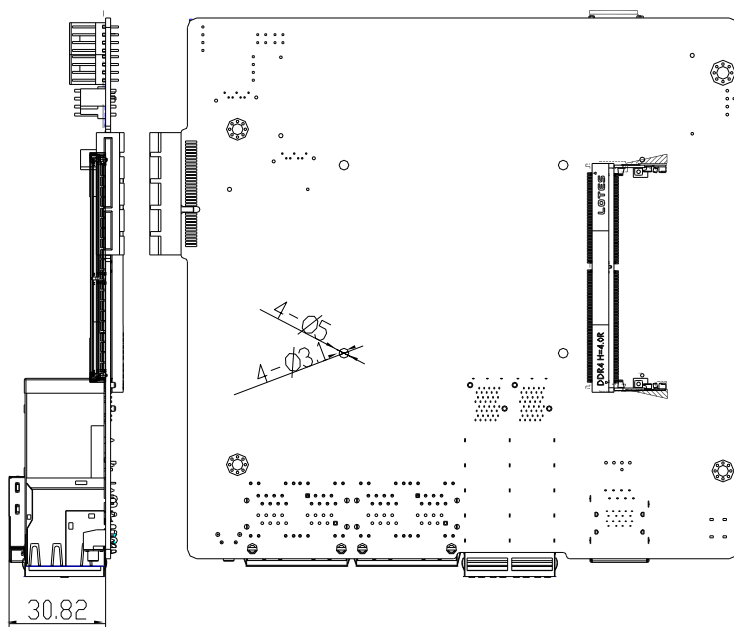


2.1.3 PER-T700 Riser Card

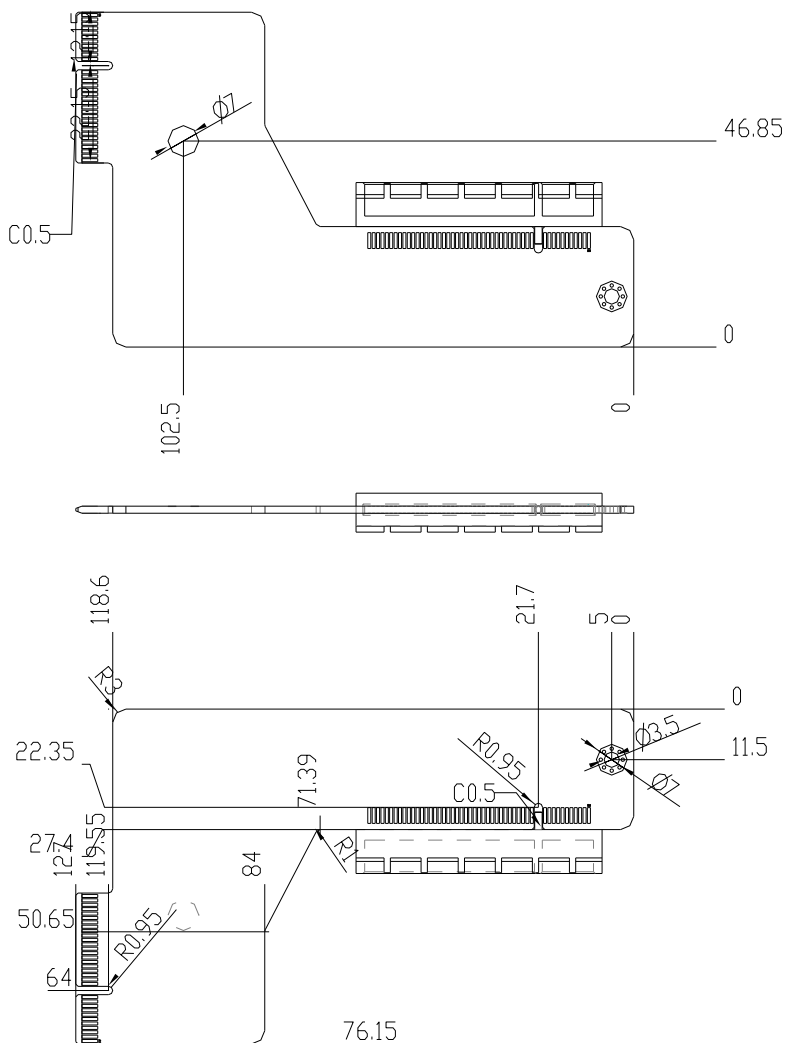


2.2 Jumpers and Connectors

2.2.1 FWS-7370 Main Board


Component Side

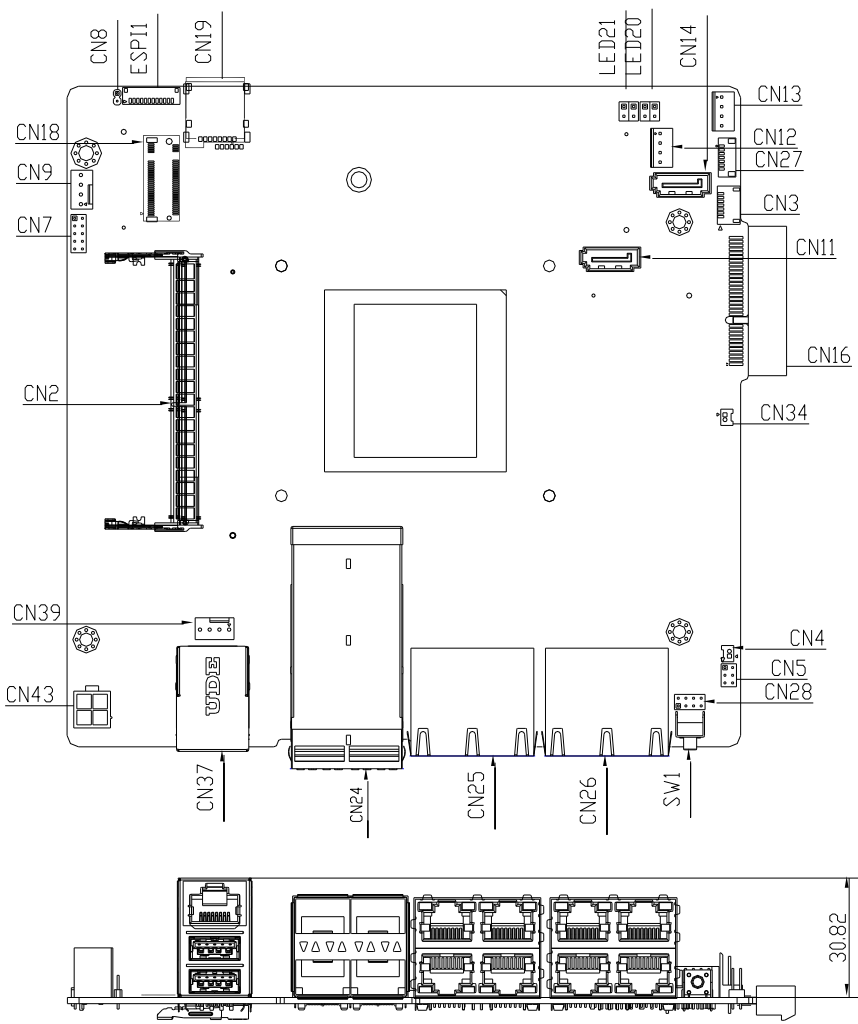

Solder Side

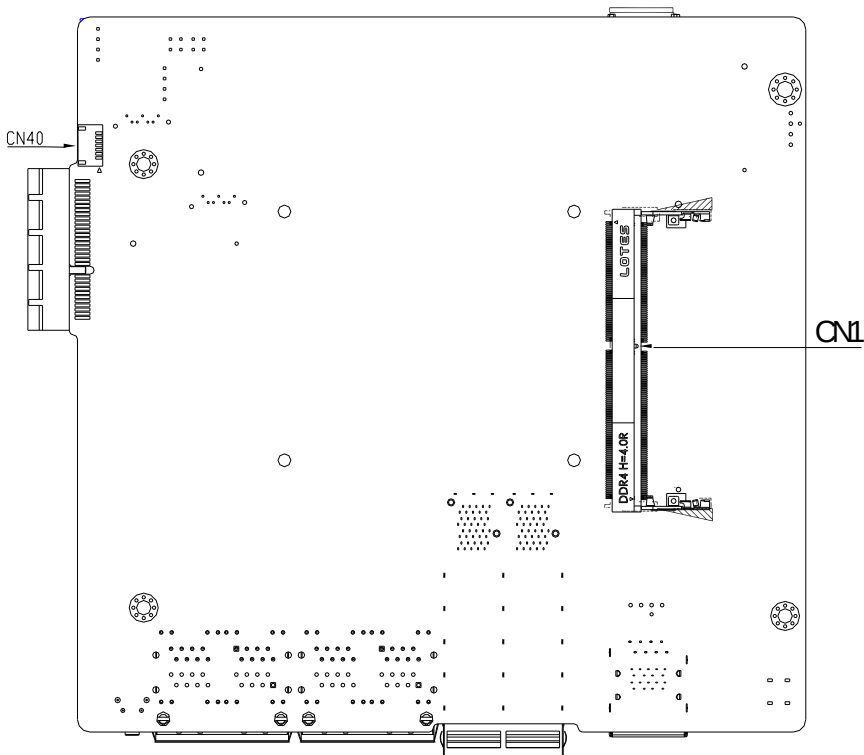

2.2.2 PER-T700 Riser Card

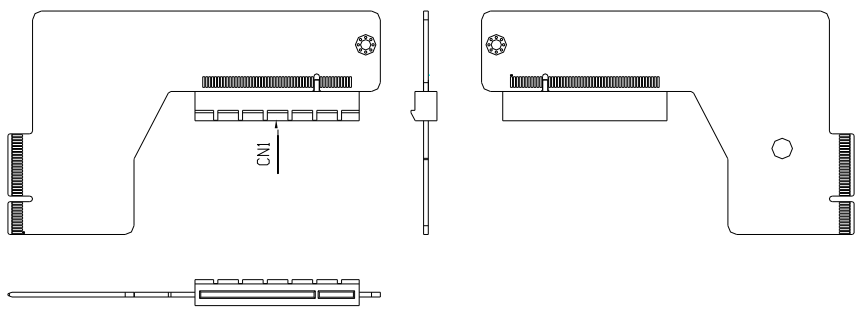


2.3 List of Jumpers

The FWS-7370 system board is equipped with a number of jumpers which can be configured for your application. This section details those jumpers and their settings.

Label	Function
CN5	Clear CMOS/Reset all Registers

2.3.1 Clear CMOS (CN5)

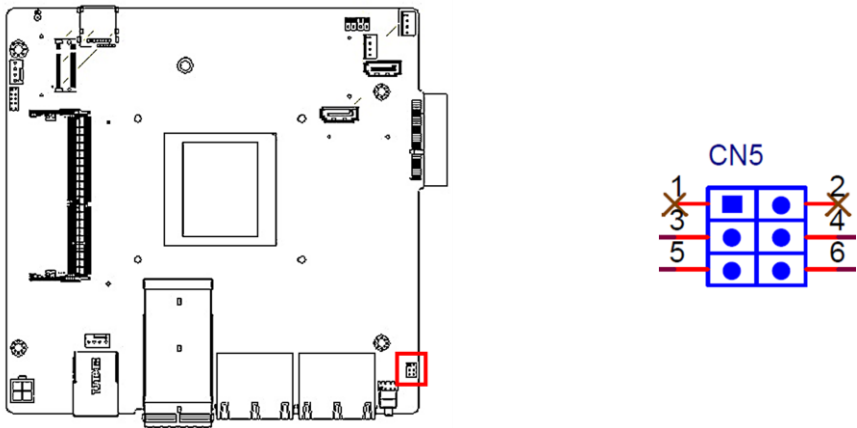

Normal	2-4
Clear CMOS	4-6



Normal	1-3
Clear RTC	3-5

2.4 List of Connectors

The FWS-7370 system board is equipped with a number of connectors which can be used for configuring your system and connecting with external modules. This section details those connectors and settings.



Label	Function
CN1	DDR4 SODIMM
CN11	SATA Connector
CN12	SATA Power
CN13	SATA Power
CN14	SATA Connector (Co-lay with M.2 SSD Slot 1)
CN16	GF for PoE0 Card
CN18	M.2 3052 B-Key (USB 2.0/USB 3.0)
CN19	Push-Push Micro SIM Card for CN18 M.2 B-Key or Mini PCIe Slot 3
CN2	DDR4 SODIMM
CN24	10G SFP+
CN25	1GbE RJ-45
CN26	2.5GbE RJ-45
CN27	PIC Debug Port
CN28	Power Switch and Hardware Reset Header, Power LED, HDD LED
CN43	+12V Input
CN3	BIOS Flash Header
CN34	SMBus Header
CN37	RJ-45 Console Port + USB 3.0 x 2
CN39	CPU Fan (Specific BOM SKU required)
CN4	Battery Header
CN40	LED Signal Header for PoE
CN5	Clear CMOS
CN7	Digital I/O for SIO
CN8	Case-Open Connector
CN9	CPU Fan
ESPI1	eSPI Debug Port
LED20	Status LED
LED21	Bypass LED 1, 2
SW1	Reset Button

2.4.1 Power Switch and Hardware Reset Header, Power LED, HDD LED (CN28)

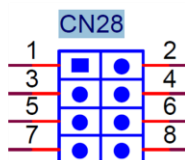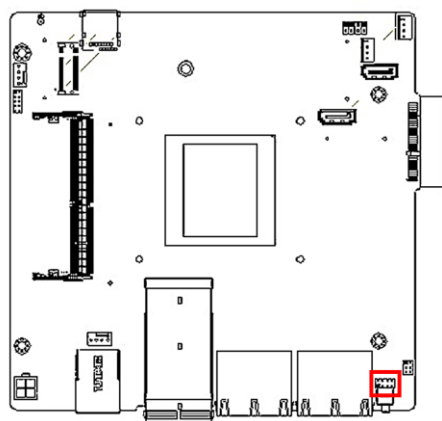



Pin	Signal Type	Pin	Signal Type
1	Power Switch	2	GND
3	HW Reset	4	GND
5	PWR external LED+	6	GND
7	SATA external LED+	8	SATA external LED-

 2.4.2 Case-Open Connector (CN8)

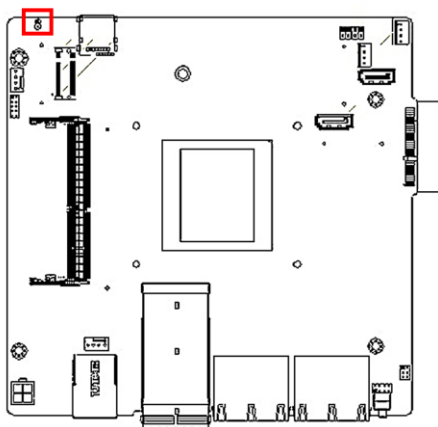



Pin	Signal Type
1	GND
2	SIO_COPEN#

2.4.3 Digital I/O for SIO (CN7)

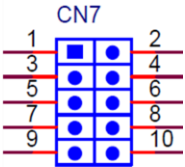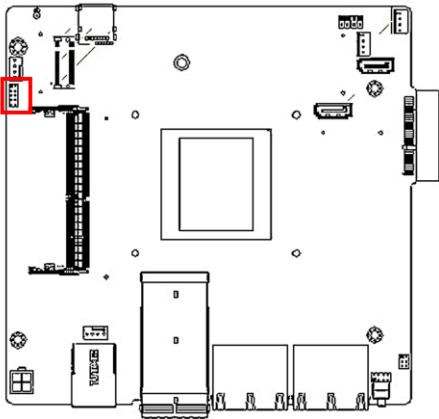



Pin	Signal Type	Pin	Signal Type
1	DII 1	2	DIO 1
3	DII 2	4	DIO 2
5	DII 3	6	DIO 3
7	DII 4	8	DIO 4
9	+5V	10	GND

2.4.4 Status LED (LED20)

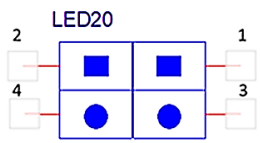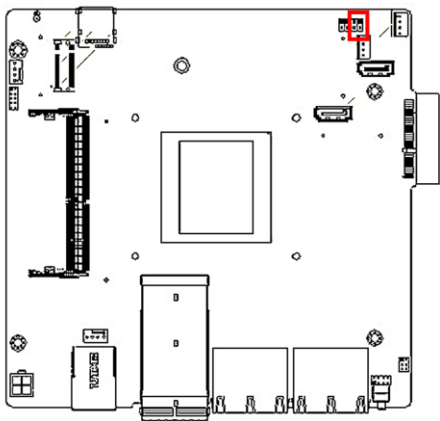

Pin	Signal Type	Pin	Signal Type
1	STLED-GRN	2	STLED-RED

2.4.5 Bypass LED (LED21)

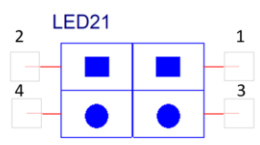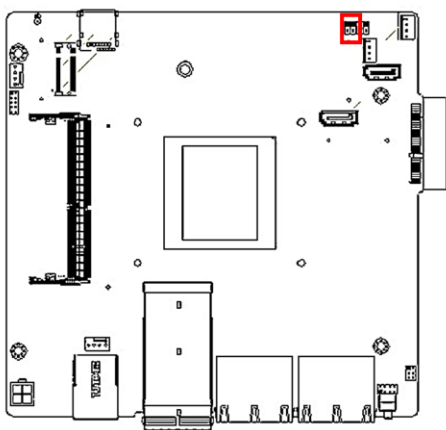


Pin	Signal Type	Pin	Signal Type
1	P2_BPLED	2	P2_BPLED#
3	P1_BPLED	4	P1_BPLED#

The Bypass 1, Bypass 2 LED, Power LED, HDD LED, and Status LED are wired to LED holders mounted on the chassis. The actual appearance is shown in the diagram below:



The signals for the LEDs originate from LED20, LED21, and CN28.

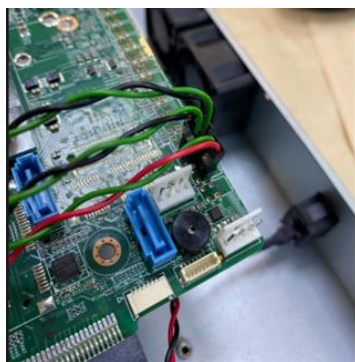

LED20 /LED21




CN28

2.5 2.5" HDD Installation


Step 1: Unscrew the upper lid of the chassis.




Step 2: Attach the assembled cushions to the hard disk drive bracket.

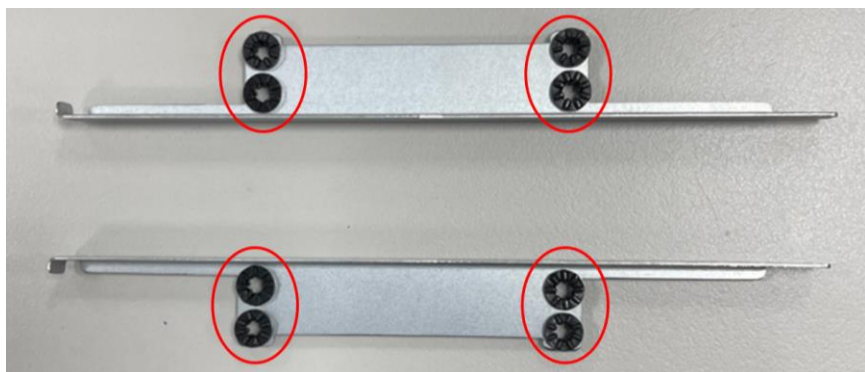


Step 3: Secure the hard disk drive onto the brackets using eight screws.

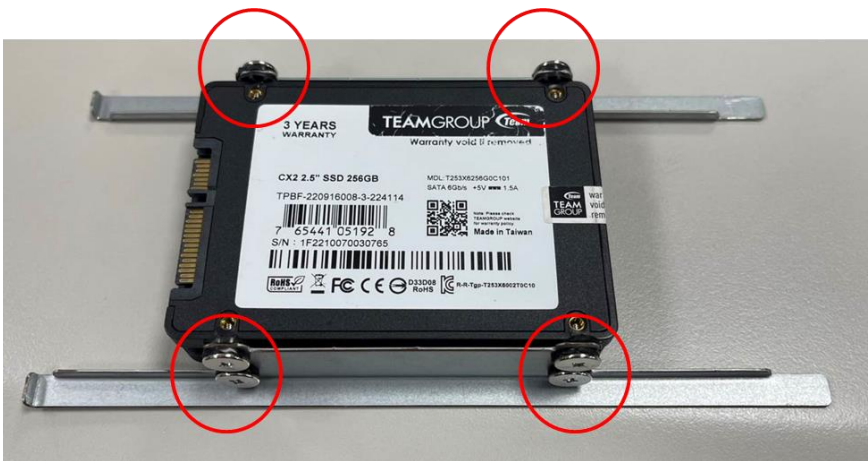

Step 4: Connect the SATA cable and power cable to the mainboard.

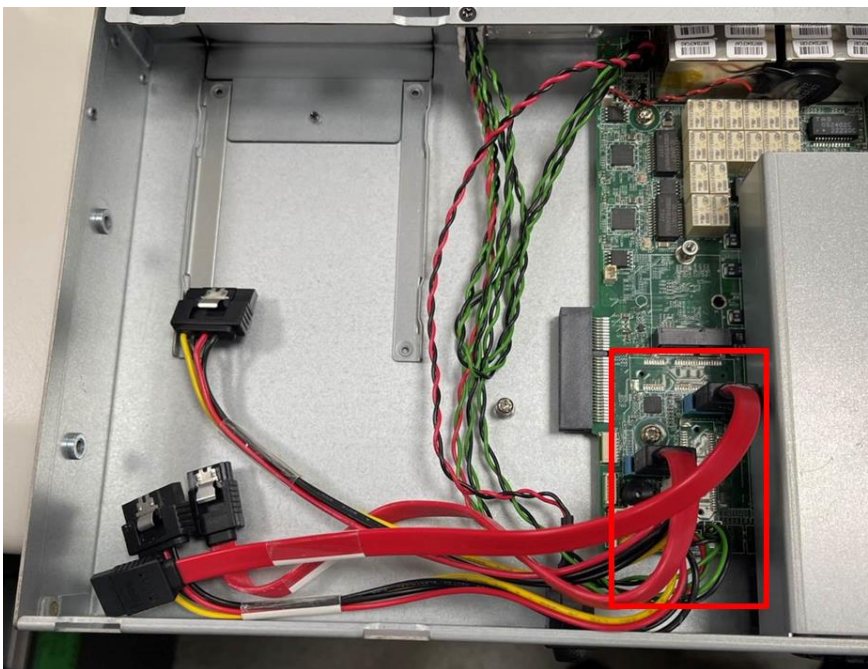

Step 5: Place the hard drive bracket onto the chassis.

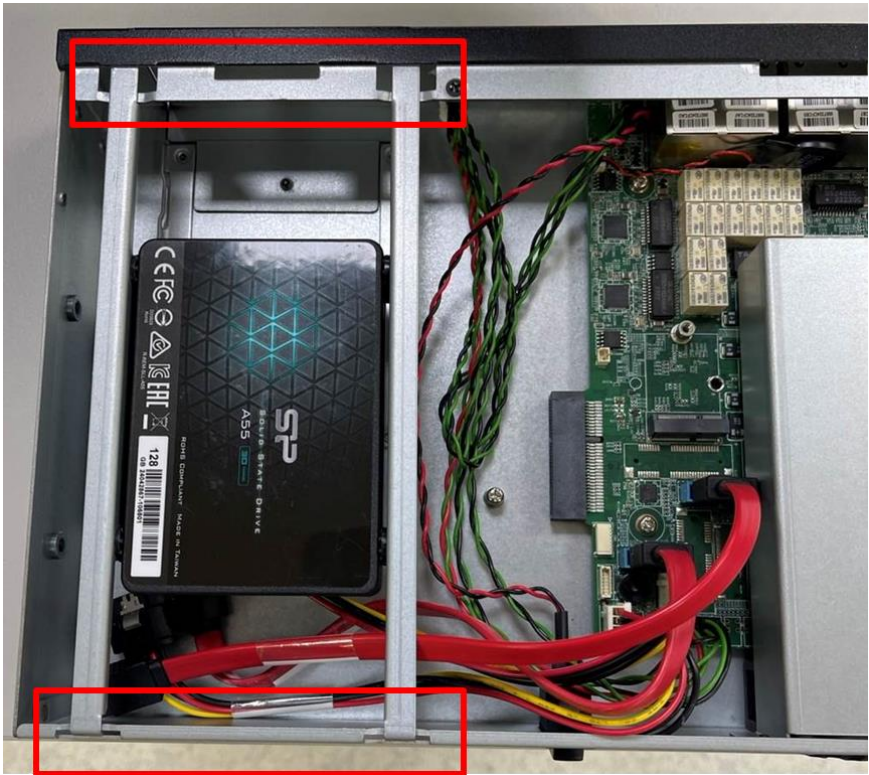


Step 6: Connect the SATA cable and power cable to the hard disk drive.




2.6 NIM Module Installation

Step 1: Loosen the screws on the bottom of chassis.

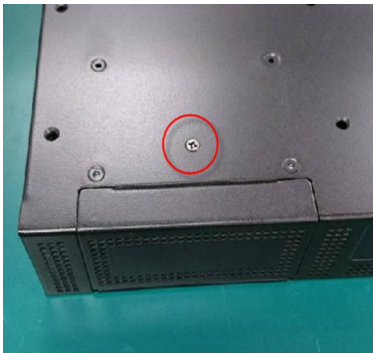

Step 2: Remove the null Module cover or existing LAN module.

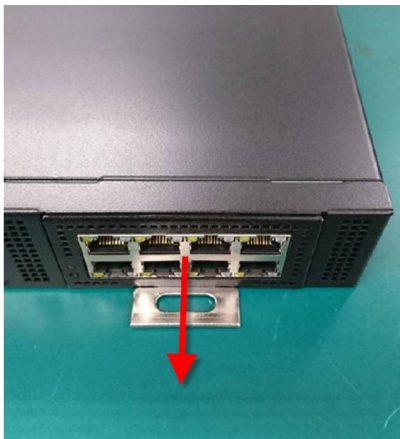

Step 3: Insert the LAN Module and fasten the screws.



2.7 PER-T700 & NIM Module Installation

Step 1: Unscrew the upper lid of the chassis.




Step 2: Loosen the screws on the bottom of chassis.




Step 3: Remove the null Module cover or existing LAN module.




Step 4: Lower the PER-T700 module into place, ensuring the connector aligns properly with the slot. Push it securely into the connector and fasten the PER-T700 module using a screw.

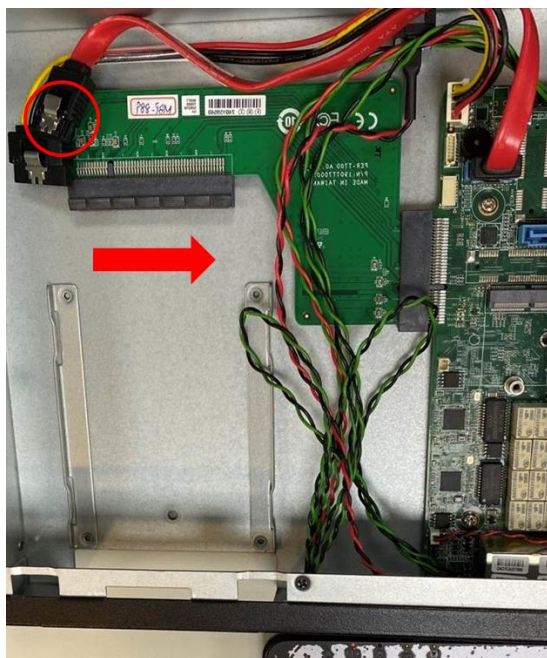

Step 5: Lower the NIM module into position and insert it firmly into the slot.

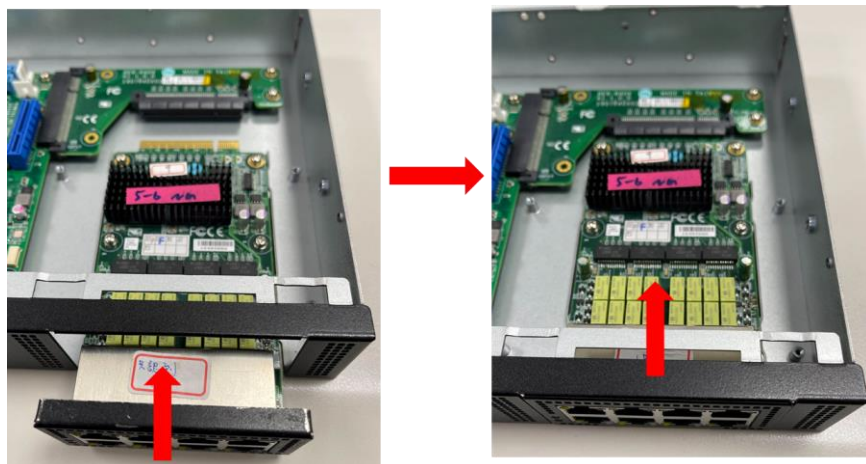

Step 6: Fasten the screws on the bottom of the chassis.

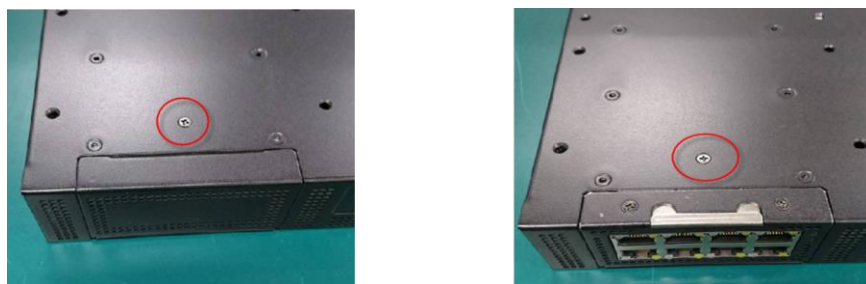

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration stored in the CMOS memory and BIOS NVRAM. If system configuration is not found or system configuration data error is detected, system will load optimized default and re-boot with this default system configuration automatically.

There are three situations in which the CMOS settings will need to be set or changed:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The system configuration is reset by Clear-CMOS jumper
4. The CMOS memory has lost power and the configuration information has been erased.

The FWS-7370 CMOS memory has an integral lithium battery backup for data retention. You have to replace the battery when it finally runs down.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main: Basic information and set Date & Time.

Advanced: Major feature configuration (e.g.: Super IO, Hardware Monitor, Digital I/O, etc.).

Platform Configuration: For PCH and Server ME configuration

Socket Configuration: Configures processor settings

Security: Set BIOS Administrator/User password.

Boot: Adjust Boot configuration/priorities.

Save& Exit: Save changes/restore defaults and exit system setup.


3.3 Setup Submenu: Main

```
Aptio Setup - American Megatrends International, LLC.
Main Advanced Platform Configuration Socket Configuration Security >
-----
BIOS Information                                     |Set the Date. Use Tab
FWS-7370 R1.0 (K737AM10) (11/22/2024)              |to switch between Date
                                                    |elements.
BIOS Vendor      American Megatrends                |Default Ranges:
Compliance       UEFI 2.7; PI 1.6                   |Year: 1998-9999
                                                    |Months: 1-12
System Date      [Mon 12/02/2024]                   |Days: Dependent on month
System Time      [16:22:32]                          |Range of Years may vary.
Access Level      Administrator                     |-----
                                                    |><: Select Screen
                                                    |^v: Select Item
                                                    |Enter: Select
                                                    |+/-: Change Opt.
                                                    |F1: General Help
                                                    |F2: Previous Values
                                                    |F3: Optimized Defaults
                                                    |F4: Save & Exit
                                                    |ESC: Exit
-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

3.4 Setup Submenu: Advanced

```
Aptio Setup - American Megatrends International, LLC.
Main Advanced Platform Configuration Socket Configuration Security >
-----
|> Trusted Computing                               |Trusted Computing
|> Hardware Monitor                               |Settings
|> SIO Configuration                             |
|> Serial Port Console Redirection                |
|> SDIO Configuration                            |
|
| AAEON Features
|> Power Management
|> Digital IO Port Configuration
|> LAN Bypass Configuration
|> Case Open Configuration
|
|-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Exit
|ESC: Exit
-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

3.4.1 Trusted Computing

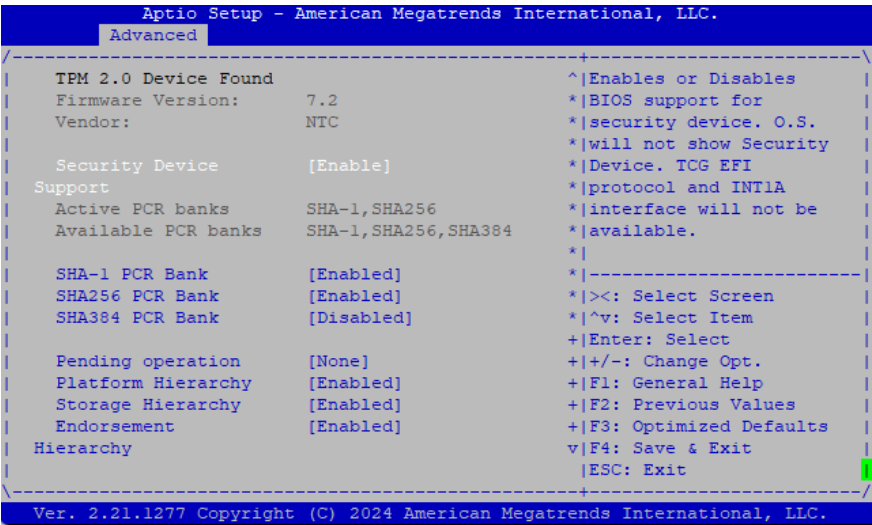

Options Summary		
Security Device Support	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.		
SHA-1 PCR Bank	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SHA-1 PCR Bank		
SHA256 PCR Bank	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SHA256 PCR Bank.		
SHA384 PCR Bank	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable or Disable SHA384 PCR Bank.		
Pending operation	None	Optimal Default, Failsafe Default
	TPM Clear	
Schedule an Operation for the Security Device. NOTE: Your Computer will reboot during restart in order to change State of Security Device.		
Platform Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default

Options Summary		
Enable or Disable Platform Hierarchy		
Storage Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Storage Hierarchy		
Endorsement Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Endorsement Hierarchy		
TPM2.0 UEFI Spec Version	TCG_1_2	
	TCG_2	Optimal Default, Failsafe Default
Select the TCG2 Spec Version Support, TCG_1_2: The Compatible mode for Win8/Win10, TCG_2: Support new TCG2 protocol and event format for Win10 or later		
Physical Presence Spec Version	1.2	
	1.3	Optimal Default, Failsafe Default
Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3		
Device Select	TPM 1.2	
	TPM 2.0	
	Auto	Optimal Default, Failsafe Default
TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found. TPM 1.2 devices will be enumerated.		
Disable Block Sid	Disabled	Optimal Default, Failsafe Default
	Enabled	
Override to allow SID authentication in TCG Storage device		

3.4.2 Hardware Monitor

```

Apdio Setup - American Megatrends International, LLC.
  Advanced
-----
| Monitor hardware status                                ^|Smart Fan function
|                                                         *|setting
|> Smart Fan Function                                   *|
|                                                         *|
| CPU Temperature           : +34 .                      *|
| System Temperature       : +24 .                      *|
|                                                         *|
| CPU FAN                   : 2002 RPM                    *|
| CPU FAN 2                 : N/A                        *|
|                                                         *|-----
| VCORE                     : +1.787 V                   *|>: Select Screen
| VMEM                      : +1.220 V                   *|^v: Select Item
| +5V                       : +5.095 V                   *|Enter: Select
| +3.3V                     : +3.379 V                   *|+/-: Change Opt.
| 5VSB                      : +5.095 V                   *|F1: General Help
| +12V                      : +12.033 V                   *|F2: Previous Values
| VSB3V                     : +3.357 V                   +|F3: Optimized Defaults
| VBAT                      : +3.052 V                   v|F4: Save & Exit
|                                                         |ESC: Exit
|-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.

```

3.4.2.1 Smart Fan Function

```

Apdio Setup - American Megatrends International, LLC.
  Advanced
-----
| Smart Fan Function                                ^|Smart Fan Mode Select
|                                                         *|
| Smart Fan 1 Mode           [Automatic Mode]          *|
| Fan off temperature       10                         *|
| limit                     *|
| Fan start temperature     60                         *|
| limit                     *|
| Fan full speed           100                         *|
| temperature limit        *|
| Fan start PWM            60                         *|-----
| PWM SLOPE SETTING        5                         *|>: Select Screen
|                                                         *|^v: Select Item
| Smart Fan 2 Mode         [Automatic Mode]            *|Enter: Select
| Fan off temperature     10                         *|+/-: Change Opt.
| limit                   *|
| Fan start temperature   60                         *|F1: General Help
| limit                   +|F2: Previous Values
|                       +|F3: Optimized Defaults
|                       v|F4: Save & Exit
|                       |ESC: Exit
|-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.

```

Options Summary		
Smart Fan Mode	Software Mode	
	Automatic Mode	Optimal Default, Failsafe Default
Smart Fan Mode Select		
Manual PWM Setting	127	Optimal Default, Failsafe Default
Manual Mode Fan will work with this Manual PWM value		
Fan off temperature limit	10	Optimal Default, Failsafe Default
Fan will off when temperature lower than this limit		
Fan start temperature limit	60	Optimal Default, Failsafe Default
Fan will work when temperature higher than this limit		
Fan full temperature limit	100	Optimal Default, Failsafe Default
Fan will full speed when temperature higher than this limit		
Fan start PWM	60	Optimal Default, Failsafe Default
Fan will start with this PWM value		
Fan slope setting	5	Optimal Default, Failsafe Default
PWM SLOPE Selection		
Slope = PWM value/°C		

3.4.3 SIO Configuration

```

Aprio Setup - American Megatrends International, LLC.
Advanced
-----
AMI SIO Driver Version :   A5.15.00
|
|View and Set Basic
|properties of the SIO
Super IO Chip Logical Device(s) Configuration
|Logical device. Like IO
> [*Active*]   Serial Port
|Base, IRQ Range, DMA
|Channel and Device Mode.
|
WARNING: Logical Devices state on the left
side of the control, reflects the current
Logical Device state. Changes made during
Setup Session will be shown after you restart
the system.
|
|-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Exit
|ESC: Exit
|-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.

```


3.4.3.1 Serial Port Configuration



Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2F8h; IRQ=3;	
	IO=3F8h; IRQ=4;	
Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts.		

3.4.4 Serial Port Console Redirection

```
Aptio Setup - American Megatrends International, LLC.
Advanced

COM0
Console Redirection [Enabled]
> Console Redirection Settings


Serial Port for Out-of-Band Management/
Windows Emergency Management Services (EMS)
Console Redirection [Enabled]
EMS
> Console Redirection Settings

|-----|
|><: Select Screen|
|^v: Select Item |
|Enter: Select   |
|+/-: Change Opt.|
|F1: General Help|
|F2: Previous Values|
|F3: Optimized Defaults|
|F4: Save & Exit  |
|ESC: Exit       |
|-----|

Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

Options Summary		
Console Redirection	Disabled	
	Enabled	Optimal Default, Failsafe Default
Console Redirection Enable or Disable		
Console Redirection	Disabled	
	Enabled	Optimal Default, Failsafe Default
Console Redirection Enable or Disable		


3.4.4.1 Console Redirection Settings

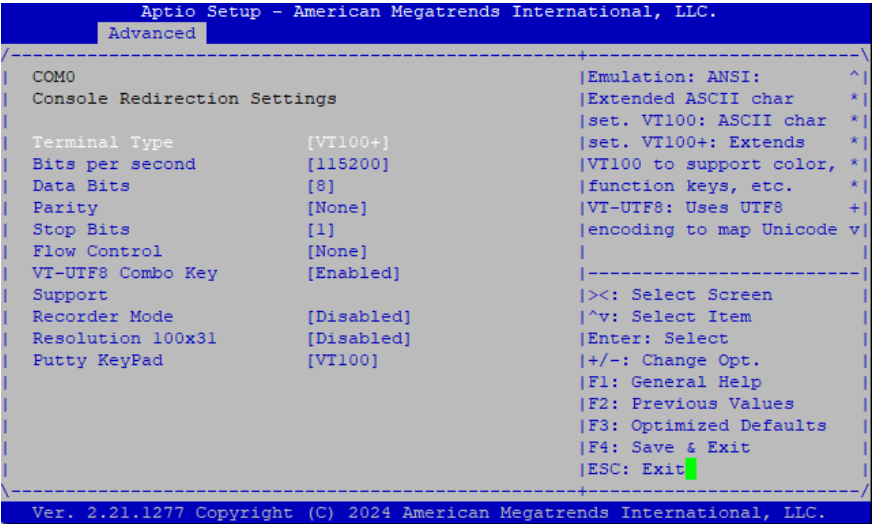

Options Summary		
Terminal Type	VT100	
	VT100+	Optimal Default, Failsafe Default
	VT-UTF8	
	ANSI	
Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100Plus: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes		
Bits per Second	9600	
	19200	
	38200	
	57600	
	115200	Optimal Default, Failsafe Default
Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.		
Data Bits	7	
	8	Optimal Default, Failsafe Default
Data Bits		


Options Summary		
Parity	None	Optimal Default, Failsafe Default
	Even	
	Odd	
	Mark	
	Space	
A Parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if the num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0 Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.		
Stop Bits	0	
	1	Optimal Default, Failsafe Default
Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.		
Flow control	None	Optimal Default, Failsafe Default
	Hardware RTS / CTS	
Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.		
VT-Combo Key Support	Disable	
	Enable	Optimal Default, Failsafe Default
Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.		
Recorder Mode	Disable	Optimal Default, Failsafe Default
	Enable	
With this mode enabled only text will be sent. This is to capture Terminal data		
Resolution 100x31	Disable	Optimal Default, Failsafe Default
	Enable	
Enables or disables extended terminal resolution.		
Resolution 100x31	VT100	Optimal Default, Failsafe Default
	LINUX	
	XTERMR6	
	SCO	
	ESCN	
	VT400	
Select FunctionKey and KeyPad on Putty.		

3.4.5 SDIO Configuration

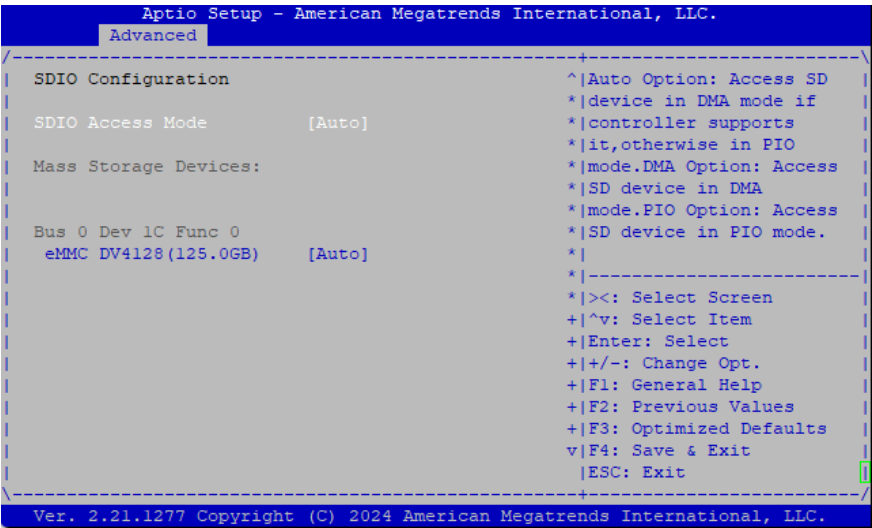


Options Summary		
SDIO Access Mode	Auto	Optimal Default, Failsafe Default
	ADMA	
	SDMA	
	PIO	
Auto Option: Access SD device in DMA mode if controller supports it, otherwise in PIO mode.		
DMA Option: Access SD device in DMA mode.		
PIO Option: Access SD device in PIO mode		

3.4.6 Power Management

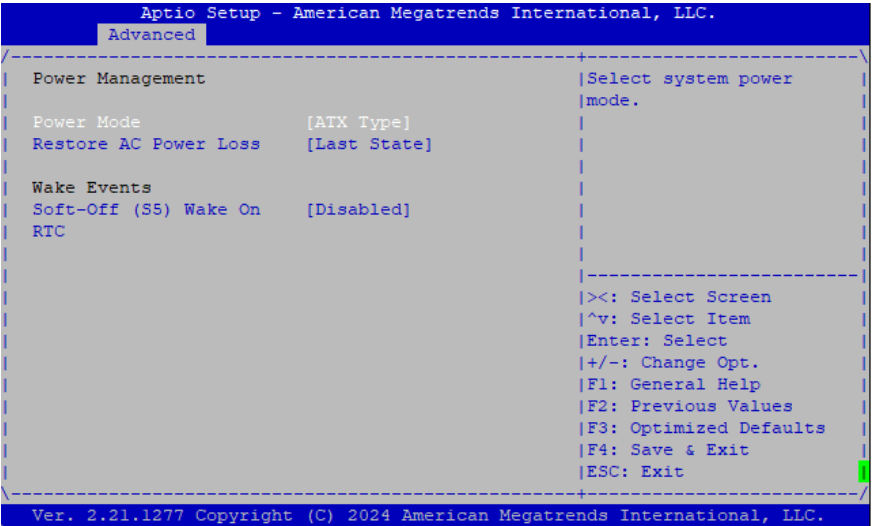


Options Summary		
Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select Power Supply Mode.		
Restore AC Power Loss	Power Off	
	Power On	
	Last State	Optimal Default, Failsafe Default
Select AC power state when power is re-applied after a power failure.		
RTC wake system from S5	Disabled	Optimal Default, Failsafe Default
	Fixed Time	
	Dynamic Time	
Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified		

3.4.7 Digital IO Port Configuration

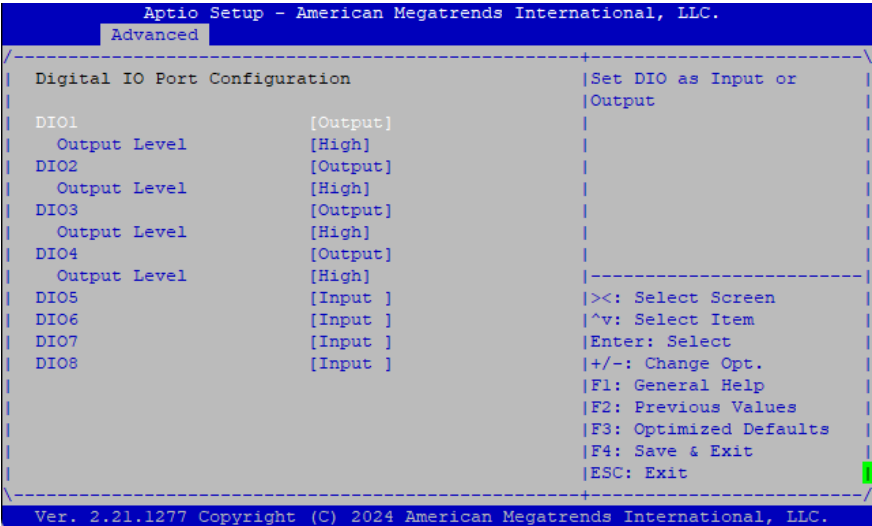


Options Summary		
DIO Port 1 ~ 4	Output	Optimal Default, Failsafe Default
	Input	
Set DIO as Input or Output		
Output Level	High	Optimal Default, Failsafe Default
	Low	
Set output level when DIO pin is output		
DIO Port 5 ~ 8	Output	
	Input	Optimal Default, Failsafe Default
Set DIO as Input or Output		

3.4.8 LAN Bypass Configuration

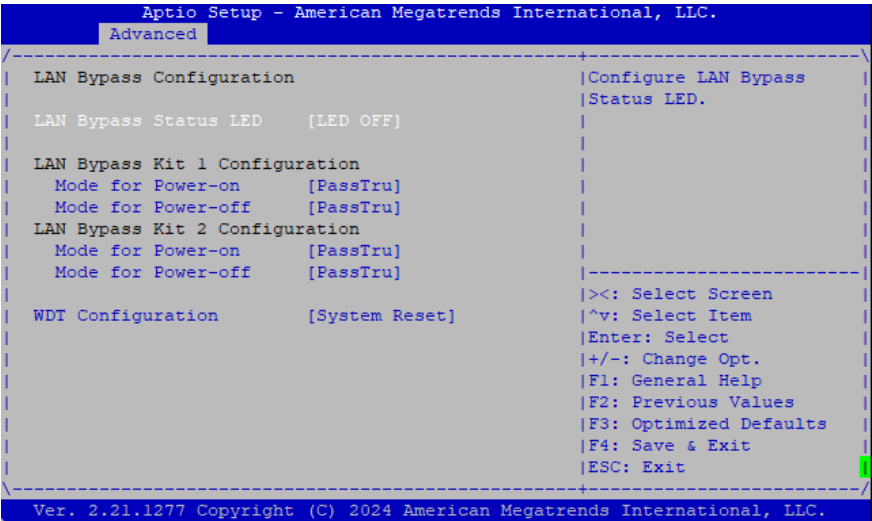


Options Summary		
LAN Bypass Status LED	LED OFF	Optimal Default, Failsafe Default
	RED LED ON	
	RED LED BLINK	
	RED LED FAST BLINK	
	GREEN LED ON	
	GREEN LED BLINK	
	GREEN LED FAST BLINK	
Configure LAN Bypass Status LED.		
Mode for Power-on	PassTru	Optimal Default, Failsafe Default
	ByPass	
Configure LAN kit behavior when system in power-on state. (Bypass/Pass Through)		
Mode for Power-off	PassTru	Optimal Default, Failsafe Default
	ByPass	
Configure LAN kit behavior when system in power-off state. (Bypass/Pass Through)		
WDT Configuration	System Reset	Optimal Default, Failsafe Default
	Force ByPass	
Configure WDT behavior, System Reset or Force Bypass		

3.4.9 Case Open Configuration

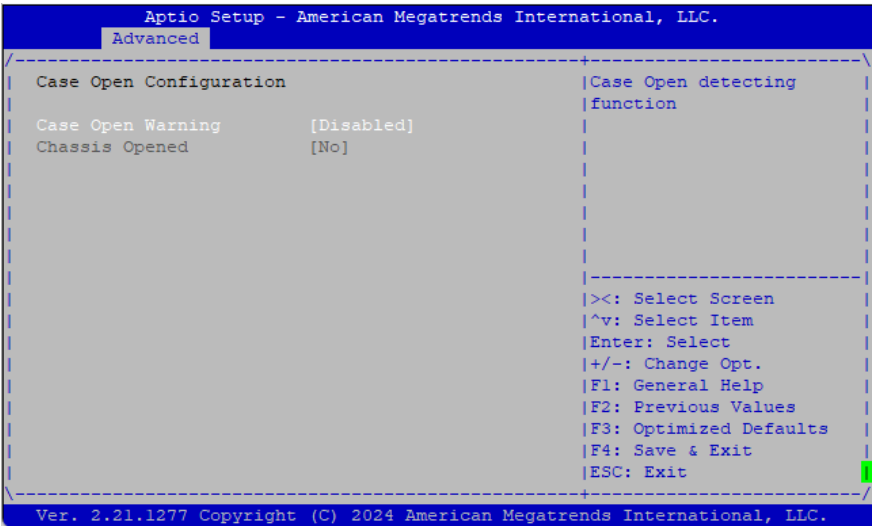


Options Summary		
Case Open Warning	Disable	Optimal Default, Failsafe Default
	Enable	
	Clear	
Case Open detecting function.		

3.5 Setup Submenu: Platform Configuration

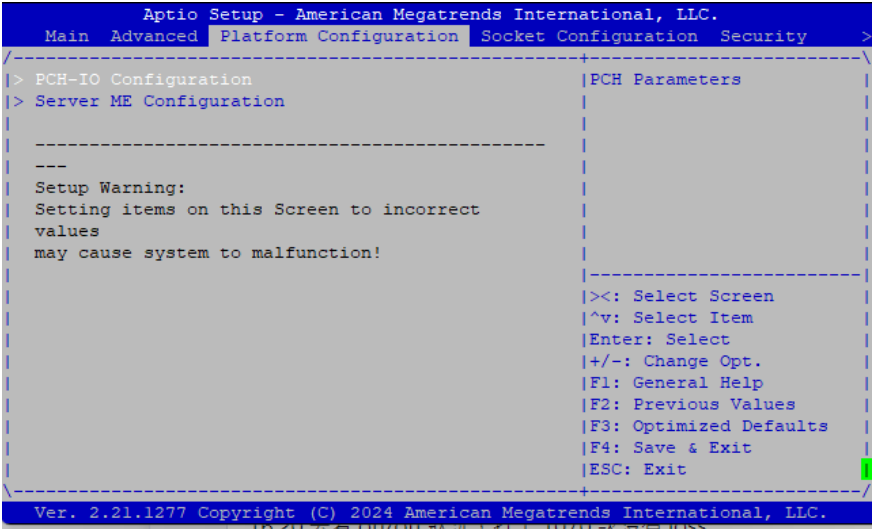

3.5.1 PCH-IO Configuration

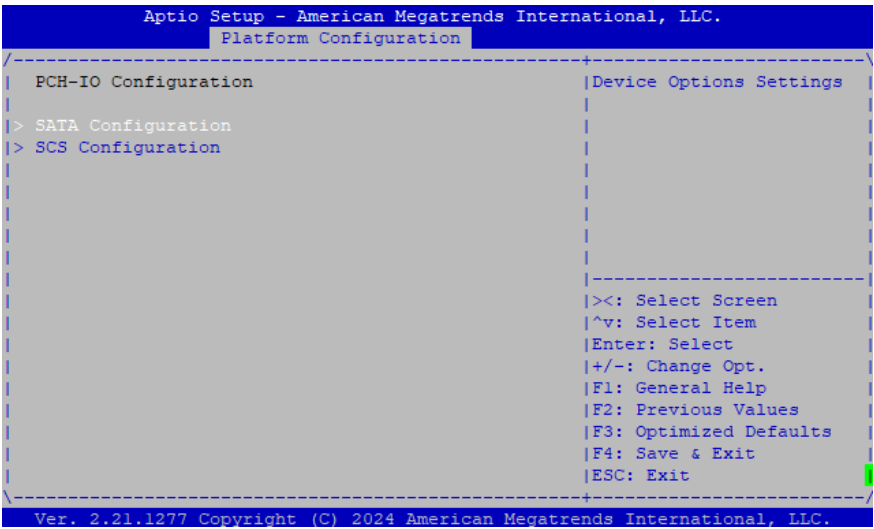

3.5.2 SATA Configuration

```
Aptio Setup - American Megatrends International, LLC.
Platform Configuration

|> Controller 1 SATA Configuration      |SATA Controller 1
|> Controller 3 SATA Configuration    |Device Options Settings
|
|
|
|
|
|
|<: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Exit
|ESC: Exit

Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

3.5.2.1 Controller SATA Configuration


```
Aptio Setup - American Megatrends International, LLC.
Platform Configuration

| Controller 1 SATA Configuration      |SATA test settings
|
| SATA Configuration      [Enabled]
|
| SATA Port 1      [Not Installed]
|   Software Preserve      Unknown
|
|
|
|<: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Exit
|ESC: Exit

Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

Options Summary		
SATA Configuration	Enable	Optimal Default, Failsafe Default
SATA test settings		

3.5.3 SCS Configuration

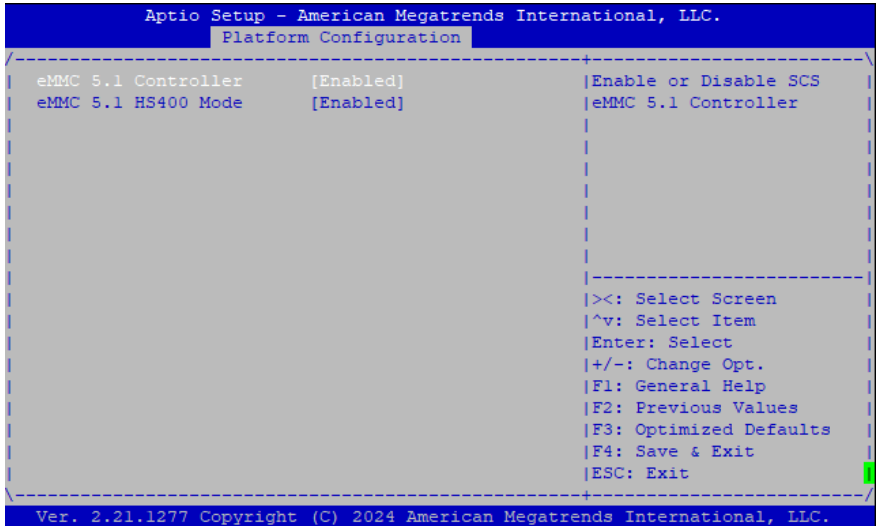

Options Summary		
eMMC 5.1 Controller	Enable	Optimal Default, Failsafe Default
	Disable	
Enable or Disable SCS eMMC 5.1 Controller		
eMMC 5.1 HS400 Mode	Enable	Optimal Default, Failsafe Default
	Disable	
Enable or Disable SCS eMMC 5.1 HS400 Mode		

3.5.4 Server ME Configuration

```
Aptio Setup - American Megatrends International, LLC.
Platform Configuration

General ME Configuration
Oper. Firmware Version 12:5.0.3.300
Backup Firmware Version N/A
Recovery Firmware Version 12:5.0.3.300
ME Firmware Status #1 0x00000255
ME Firmware Status #2 0x88114026
Current State Operational
Error Code No Error
Recovery Cause N/A

HMRFP0_ENABLE Message [Disabled]


Enable/Disable sending
HMRFP0_ENABLE message
to ME

><: Select Screen
^v: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit


Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

Options Summary		
HMRFP0_ENABLE Message	Enable	
	Disable	Optimal Default, Failsafe Default
Enable / Disable sending HMRFP0_ENABLE message to ME		

3.6 Setup Submenu: Socket Configuration

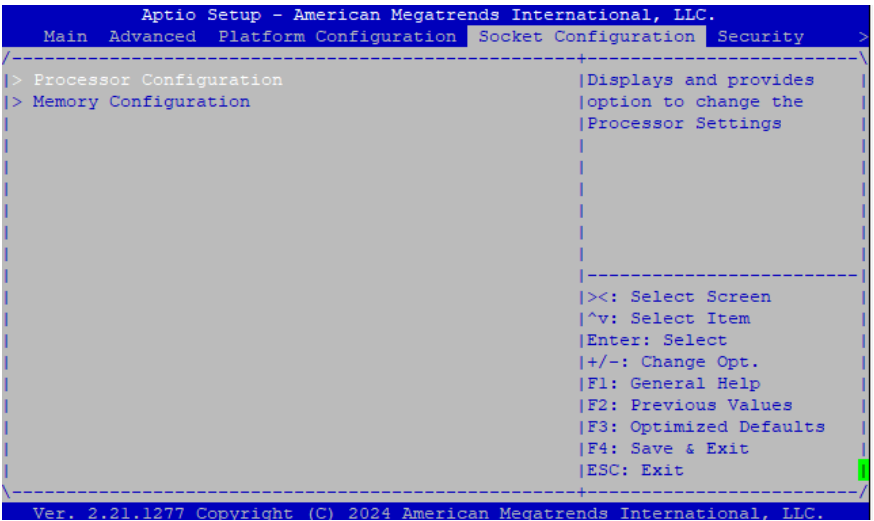

3.6.1 Processor Configuration

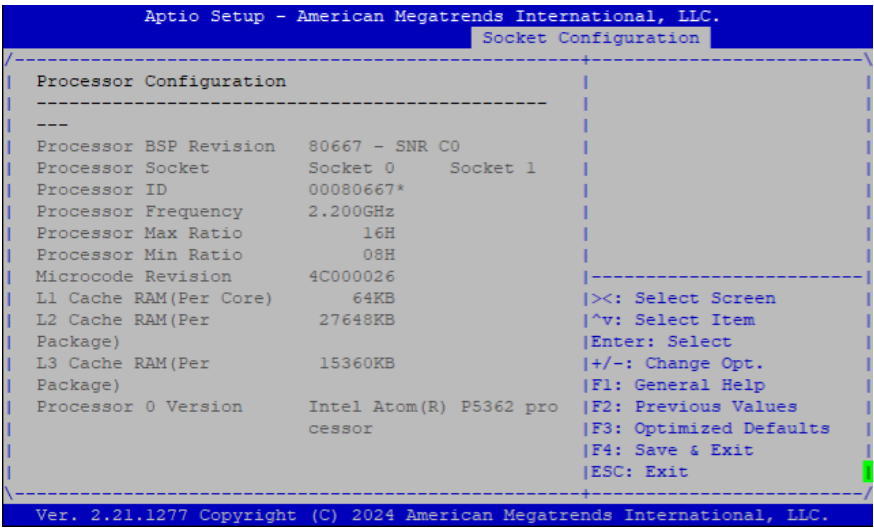

3.6.2 Memory Configuration

```
Aptio Setup - American Megatrends International, LLC.
Socket Configuration

-----
Integrated Memory Controller (iMC)
-----

> Memory Topology

| Displays memory
| topology with Dimm
| population information
|
|-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Exit
|ESC: Exit
|
|-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

3.6.3 Memory Topology

```
Aptio Setup - American Megatrends International, LLC.
Socket Configuration

-----
Socket0.ChB.Dimm0:
2666MT/s Innodisk
SRx8 4GB SODIMM
-----

|-----
|><: Select Screen
|^v: Select Item
|Enter: Select
|+/-: Change Opt.
|F1: General Help
|F2: Previous Values
|F3: Optimized Defaults
|F4: Save & Exit
|ESC: Exit
|
|-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

3.7 Setup Submenu: Security

```
Aptio Setup - American Megatrends International, LLC.
Main Advanced Platform Configuration Socket Configuration Security >
-----
| Password Description                                ^|Set Administrator
|                                                    *|Password
| If ONLY the Administrator's password is set,      *|
| then this only limits access to Setup and is      *|
| only asked for when entering Setup.              *|
| If ONLY the User's password is set, then this    *|
| is a power on password and must be entered to    *|
| boot or enter Setup. In Setup the User will      *|
| have Administrator rights.                      *|
| The password length must be                      *|-----
| in the following range:                          *|><: Select Screen
| Minimum length          3                        *|^v: Select Item
| Maximum length         20                        *|Enter: Select
|                                                    *|+/-: Change Opt.
| Administrator Password                          *|F1: General Help
| User Password                                   *|F2: Previous Values
|                                                    +|F3: Optimized Defaults
|                                                    v|F4: Save & Exit
|                                                    |ESC: Exit
|-----
Ver. 2.21.1277 Copyright (C) 2024 American Megatrends International, LLC.
```

Change User/Supervisor Password

You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

If you highlight these items and press Enter, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.7.1 Secure Boot



Options Summary		
Secure Boot	Disabled	Optimal Default, Failsafe Default
	Enabled	
Secure Boot activated when: Secure Boot is enabled Platform Key(PK) is enrolled, System mode is User/Deployed, and CSM is disabled		
Secure Boot Customization	Custom	Optimal Default, Failsafe Default
	Standard	
Customizable Secure Boot mode: In Custom mode Secure Boot Policy variables can be configured by a physically present user without full authentication		
Restore Factory Keys	Yes	Optimal Default, Failsafe Default
	No	
Force System to User Mode. Configure NVRAM to contain OEM-defined factory default Secure Boot keys		
Reset To Setup Mode	Yes	Optimal Default, Failsafe Default
	No	
Delete NVRAM content of all UEFI Secure Boot key databases		


3.7.2 Key Management

```
Aptio Setup - American Megatrends International, LLC.
Security
-----
Vendor Keys          Valid          ^|Install factory default
Factory Key Provision [Disabled]    *|Secure Boot keys after
> Restore Factory Keys               *|the platform reset and
> Reset To Setup Mode                *|while the System is in
> Export Secure Boot variables       *|Setup mode
> Enroll Efi Image                   *|
Device Guard Ready      *|
> Remove 'UEFI CA' from DB           *|-----
> Restore DB defaults               *|>=: Select Screen
Secure Boot variable | Size| Keys| Key Source *|v: Select Item
> Platform Key(PK)   | 0| 0| No Keys *|Enter: Select
> Key Exchange Keys  | 0| 0| No Keys *|+/-: Change Opt.
> Authorized Signatures| 0| 0| No Keys *|F1: General Help
> Forbidden Signatures| 0| 0| No Keys *|F2: Previous Values
> Authorized TimeStamps| 0| 0| No Keys +|F3: Optimized Defaults
v|F4: Save & Exit
|ESC: Exit
-----
Ver. 2.21.i277 Copyright (C) 2024 American Megatrends International, LLC.
```

Options Summary		
Factory Key Provision	Disabled	Optimal Default, Failsafe Default
	Enabled	
Provision factory default keys on next re-boot only when System in Setup Mode		
Restore Factory Keys	Yes	Optimal Default, Failsafe Default
	No	
Force System to User Mode. Configure NVRAM to contain OEM-defined factory default Secure Boot keys		
Reset To Setup Mode	Yes	Optimal Default, Failsafe Default
	No	
Delete NVRAM content of all UEFI Secure Boot key databases		
Export Secure Boot variables	OK	Optimal Default, Failsafe Default
Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device		
Enroll Efi Image	OK	Optimal Default, Failsafe Default
Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device		
Remove 'UEFI CA' from DB	Yes	Optimal Default, Failsafe Default
	No	


Options Summary		
Device Guard ready system must not list 'Microsoft UEFI CA' Certificate in Authorized Signature database (db)		
Restore DB defaults	Yes	Optimal Default, Failsafe Default
	No	
Restore DB variable to factory defaults		
Secure Boot variable	Size	Keys Key Source
Enroll Factory Defaults or load certificates from a file: 1.Public Key Certificate in: a)EFI_SIGNATURE_LIST b)EFI_CERT_X509 (DER encoded) c)EFI_CERT_RSA2048 (bin) d)EFI_CERT_SHA256,384,512 2.Authenticated UEFI Variable 3.EFI PE/COFF Image(SHA256) Key Source: Factory,External,Mixed		

3.7.3 Boot

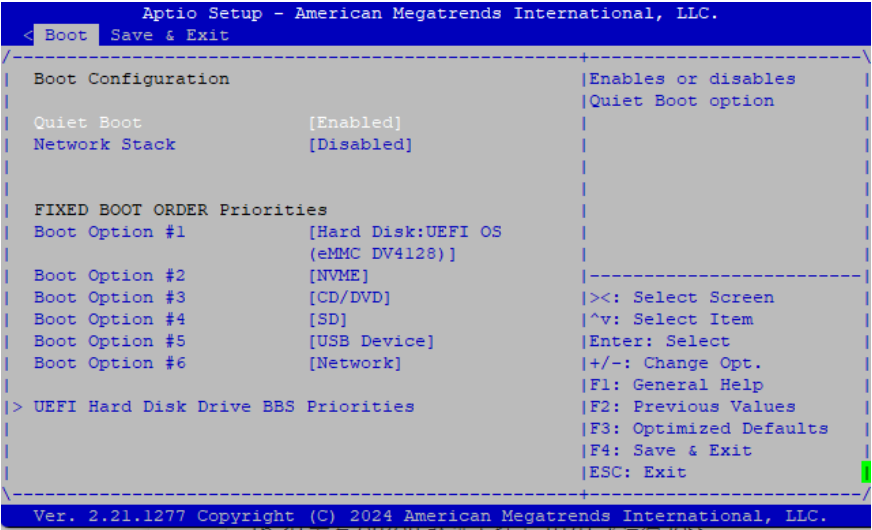

Options Summary		
Quiet Boot	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enables or disables Quiet Boot option.		
Network Stack	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable UEFI Network Stack		
Fixed Boot order Priorities		
Sets the system boot order		

3.8 Setup Submenu: Save & Exit

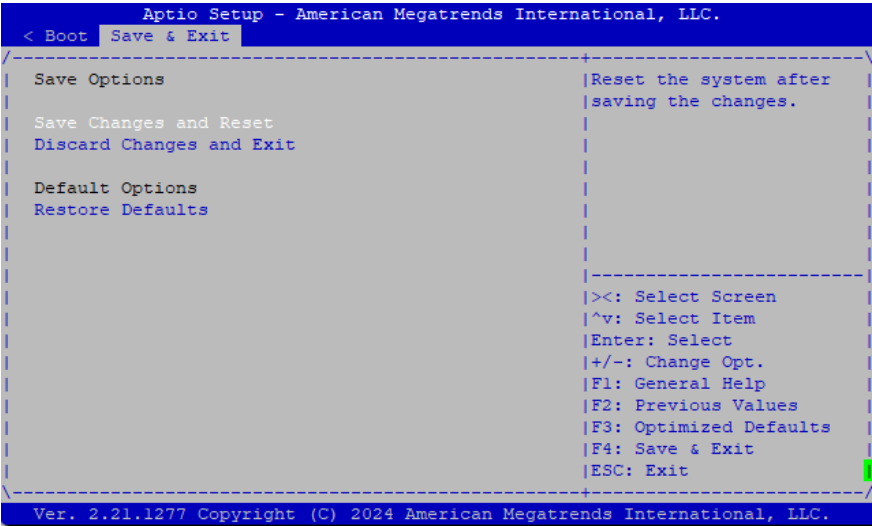

Options Summary	
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Exit	Exit system setup without saving any changes.
Restore Defaults	Restore/Load Default values for all the setup options.

Appendix A

Software Development Kit Information

A.1 Software Development Kit Support List

The FWS-7370 is available with a software development kit (SDK) supporting a range of additional functions and interfaces.

Function	SDK Support
Watchdog Timer	Yes
Software Programming Button	Yes
Status LED	Yes
LAN Bypass	Yes
DIO	Yes
HW Monitor	Yes
Smart PoE	Yes

For more information regarding the above SDK support list, please contact your AAeon or visit <https://www.aaeon.com/en/contacts/> for more information.