

SRG-4858P

IoT Gateway System

User's Manual 1st Ed

Copyright Notice

This document is copyrighted, 2021. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgements

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel® is a registered trademark of Intel Corporation
- ARM, Cortex, and Cortex-A8 are registered trademarks of Arm Limited (or its subsidiaries).
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM and VGA are trademarks of International Business Machines Corporation.
- Ubuntu is a registered trademark of Canonical

All other product names or trademarks are properties of their respective owners. No ownership is implied or assumed for products, names or trademarks not herein listed by the publisher of this document.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● SRG-4858P	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

产品中有毒有害物质或元素名称及含量

AAEON System

QO4-381 Rev.A0

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯 醚(PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
液晶模块	×	×	○	○	○	○
光驱	×	○	○	○	○	○
触控模块	×	○	○	○	○	○
电源	×	○	○	○	○	○
电池	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

×：表示该有害物质的某一均质材料超出了 GB/T 26572 的限量要求，然而该部件仍符合欧盟指令 2011/65/EU 的规范。

备注：

一、此产品所标示之环保使用期限，系指在一般正常使用状况下。

二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。

三、上述部件物质液晶模块、触控模块仅一体机产品适用。

China RoHS Requirement (EN)

Hazardous and Toxic Materials List

AAEON System

QO4-381 Rev.A0

Component Name	Hazardous or Toxic Materials or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBBs)	Polybrominated diphenyl ethers (PBDEs)
PCB and Components	X	O	O	O	O	O
Wires & Connectors for Ext.Connections	X	O	O	O	O	O
Chassis	O	O	O	O	O	O
CPU & RAM	X	O	O	O	O	O
HDD Drive	X	O	O	O	O	O
LCD Module	X	X	O	O	O	O
Optical Drive	X	O	O	O	O	O
Touch Control Module	X	O	O	O	O	O
PSU	X	O	O	O	O	O
Battery	X	O	O	O	O	O

This form is prepared in compliance with the provisions of SJ/T 11364.

O: The level of toxic or hazardous materials present in this component and its parts is below the limit specified by GB/T 26572.

X: The level of toxic of hazardous materials present in the component exceed the limits specified by GB/T 26572, but is still in compliance with EU Directive 2011/65/EU (RoHS 2).

Notes:

1. The Environment Friendly Use Period indicated by labelling on this product is applicable only to use under normal conditions.
2. Individual components including the CPU, RAM/memory, HDD, optical drive, and PSU are optional.
3. LCD Module and Touch Control Module only applies to certain products which feature these components.

Table of Contents

Chapter 1 - Product Specifications	1
1.1 Specifications	2
Chapter 2 – Hardware Information	4
2.1 Dimensions	5
2.2 I/O Location.....	6
2.3 Wireless Hardware Setup.....	8
2.3.1 Mini Card Installation	8
2.3.2 SIM Card Installation	9
Chapter 3 – Gateway Setup and Configuration	10
3.1 Connecting to System	11
3.2 User Account Management	14
3.3 Network Settings	15
3.3.1 Check IP Settings:	15
3.3.2 Set Static IP	16
3.3.3 Set Dynamic IP	17
3.4 Cellular Network Settings.....	18
3.4.1 Check Cellular Module Status	18
3.4.2 Dial Up Cellular Module	19
3.5 Wi-Fi and Bluetooth Network Settings	20
3.5.1 Scan for Wi-Fi Access Points	20
3.5.2 Connect to Wi-Fi Access Point.....	20
3.5.3 Disconnect from Wi-Fi Access Point.....	21
3.5.4 Check Wi-Fi Connection Status	21
3.5.5 Enter Bluetooth Control Panel	22
3.5.6 Scan for Bluetooth Device	22
3.5.7 Pair Bluetooth Device.....	23

3.5.8	Check Pared Bluetooth Devices.....	23
3.6	System Management.....	24
3.6.1	Check OS Version	24
3.6.2	Check Storage Status.....	25
3.6.3	Shut Down the System	25
3.6.4	Set Date and Time.....	26
3.7	I/O Management.....	27
3.7.1	Control GPIO (LEDs).....	27
3.7.2	RS-485 2-wire Pin Definition	28

Chapter 1

Product Specifications

1.1 Specifications

General

CPU	ARM Cortex-A8 800 MHz RISC Processor
Memory	DDR3L 1GB
Storage	eMMC 8GB
OS Support	Debian 10 (Buster)
RTC Supported	Yes
Security	–

Interface

Ethernet Ports	2 x Auto-sensing 10/100/1000 Mbps ports (RJ45 connector)
USB Ports	1 x USB2.0 (Type A Connector)
Serial Ports	10 x RS485 (Terminal Block)
Expansion Ports	1 x Mini PCIe Slot
SIM Slot	1 x Micro SIM
SD Slot	1 x microSD
Debug Port	1 x Mini USB
Function Port	–

Radio Frequency Interface

Wi-Fi	–
Bluetooth	–

Physical Characteristics

Dimensions	5.67" x 3.94" x 1.73" (144mm x 100mm x 44mm)
Weight	512 g
Mounting	DIN-rail mounting, Wall Mount

Environmental

Operating Temperature	32°F ~ 140°F (0°C ~ 60°C)
Operating Humidity	10% ~ 95% relative humidity, non-condensing
Storage Temperature	-40°F ~ 176°F (-40°C ~ 80°C)
Vibration	2 Grms at IEC 60068-2-64, random wave, 5-500 Hz, 1 hour per axis (without USB devices attached)


Certification

EMC	EN 55032/24
EMI	FCC Part 15B Class A
EMS	IEC 61000-4-2 ESD:Contact: 4 kV; Air: 8 kV IEC 61000-4-3 RS: 80 MHz to 1 GHz: 3 V/m IEC 61000-4-4 EFT: Power: 1 kV; Signal: 0.5 kV IEC 61000-4-5 Surge: Power: 0.5 kV IEC 61000-4-6 CS: 0.15 to 80MHz; 3 Vrms IEC 61000-4-8 PFMF: 50Hz/60Hz, 1 A/m
CE Red	–
Green Product	RoHS
MTBF	855,890 Hours

Chapter 2

Hardware Information


2.2 I/O Location

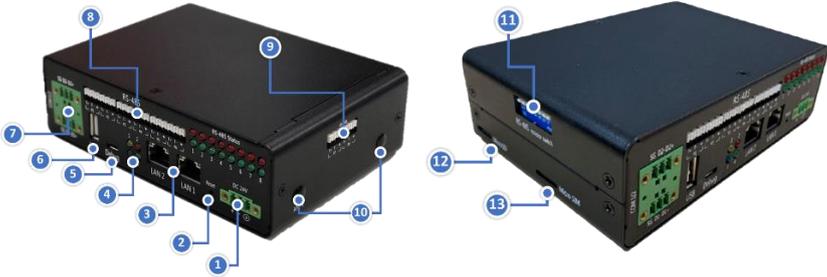

Reference	Function
-----------	----------

- | | |
|---|--|
| 1 | DC Power Jack
Supports DC 9~ 30V input |
| 2 | Reset Button
Reboots the system |

- | | |
|---|--|
| 3 | Gigabit LaN Port
Standard RJ-45 jack for connection to Local Area Network (LAN). |
|---|--|

 

LED	Function	Status
Yellow	Active status	ON: LAN link is established. OFF: LAN link is not established. Blink: Data received and transmitted.
Orange /Green	Link Speed status	Green on: 10/100Mbps. Orange on: 1000Mbps.

- | | |
|---|---|
| 4 | LED
User can control LED with GPIO.
Control command for LED 1: |
|---|---|



```
turn on: echo 1 > /sys/class/leds/srt3352:led1/brightness
turn off: echo 0 > /sys/class/leds/srt3352:led1/brightness
```

See Chapter 3 for more information

Reference	Function
5	Debug Port User can log into the gateway's operating system via SSH with debug port (Micro USB connector)
6	USB2.0 Port USB2.0 Type A Connector, supports USB mass storage devices
7	RS-485 Port Dual RS-485 Port
8	RS-485 Port 6 x RS-485 Ports
9	RS-485 Port Dual RS-485 Port
10	Antenna Connector Supports Antennas for 2.4GHz or LTE
11	RS-485 Terminal Resistor Used with long distance connection between gateway and RS-485 device
12	microSD Slot Inserting a microSD slot can help increase storage capacity
13	Micro SIM Slot Insert a Micro SIM card here when using an LTE Mini Card Module

2.3 Wireless Hardware Setup

The SRG-4858P features both a SIM Card and Mini Card slot for connecting to wireless networks such as 4G. This section details how to install a SIM Card and 4G/LTE module on the mini card slot.

2.3.1 Mini Card Installation

Step 1: Remove the six screws securing the top cover.



Step 2: Insert the 4G/LTE module into the Mini Card slot at an angle, then push down gently and secure with a screw. Connect the coaxial cable to the 4G/LTE module.



Step 3: Replace the top cover and secure with the screws.

2.3.2 SIM Card Installation

To install a SIM Card (Micro SIM) simply insert the SIM Card into the slot on the side of the system as shown. Take care to make sure the card is oriented correctly.



Chapter 3

Gateway Setup and Configuration

3.1 Connecting to System

When connecting a PC or laptop to the SRG-4858P system, it is recommended to use PuTTY with Windows 10. Users can download the software from the PuTTY website.

<https://www.putty.org/>

For Windows 7 or older, users must first set up their PC to recognize the system. The following instructions detail how to set up your PC to connect to the SRG-4858P system by installing the CDC Serial Driver.


Step 1: Download the PuTTY software.

Step 2: Connect the host PC to the gateway with a USB cable to the Micro USB port.

Step 3: Open **Device Manager** and locate **Multifunction Composite Gadget**. Double click on the device. A pop-up should appear, with a notice that the CDC Serial is unrecognized.




Step 4: Open PuTTY and use the following settings to connect to the system.

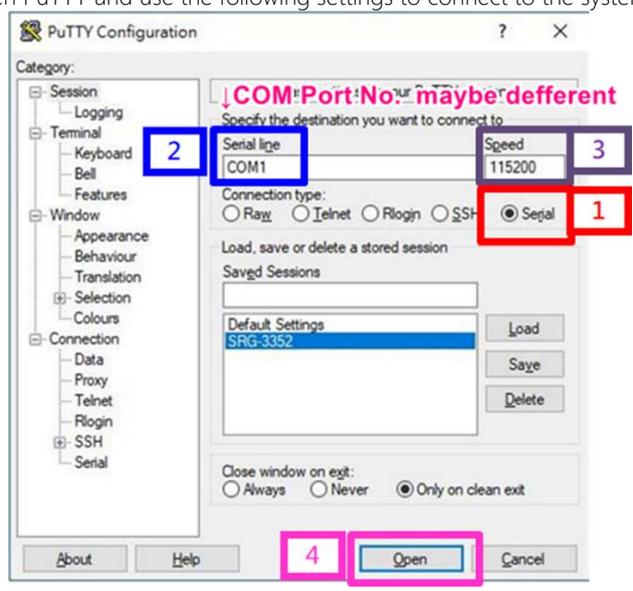

Serial Port Settings	
Baud Rate	115200 bps
Parity	None
Data bits	8
Stop bits	1
Flow Control	None

Click "Open" to connect with the gateway system.

Step 5: You will see the login prompt once the host PC successfully connects to the gateway.

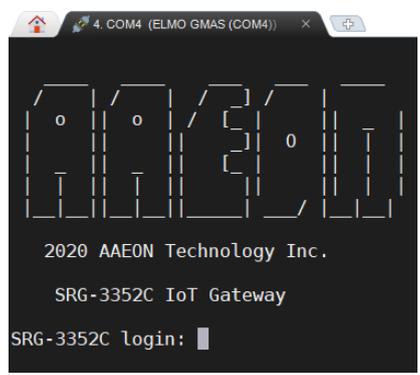

Default login information is:

- Username: **aaeon**
- Password: **aaeon**

3.2 User Account Management

This section details how to manage user accounts on the system.

Add User Account

- ✓ Command Line:

```
$ sudo useradd -m -G sudo -s /bin/bash USERACCOUNT
```

USERACCOUNT -> Account name you want to add

- ✓ Return (test3 is the account name in this example):

```
aaeon@SRG-3352C:~$ sudo useradd -m -G sudo -s /bin/bash test3
aaeon@SRG-3352C:~$ █
```

Delete User Account

- ✓ Command Line:

```
$ sudo userdel USERACCOUNT
```

USERACCOUNT -> Account name you want to delete

- ✓ Result:

```
aaeon@SRG-3352C:~$ sudo userdel test1
```

3.3 Network Settings

This section details how to check and setup the network settings.

3.3.1 Check IP Settings:

Check the IP setting by entering the following command into Terminal/Command Line:

```
$ nmcli con show NETWORKPROFILE
```

NETWORKPROFILE refers to one of the system's network connections as follows:

NETWORKPROFILE	Port/Hardware
Ethernet0	LAN1
Ethernet1	LAN2
Modem	4G LTE module

For example, to pull up the IP settings for LAN1, us the following command:

```
$ nmcli con show Ethernet0
```

You should see the following results:

```
aaeon@SRG-3352C:~$ nmcli con show Ethernet0 | grep ipv4
ipv4.method:                auto
ipv4.dns:                    --
ipv4.dns-search:             --
ipv4.dns-options:            ""
ipv4.dns-priority:           0
ipv4.addresses:              192.168.3.127/24
ipv4.gateway:                --
ipv4.routes:                 --
ipv4.route-metric:           -1
ipv4.route-table:            0 (unspec)
ipv4.ignore-auto-routes:     no
ipv4.ignore-auto-dns:       no
ipv4.dhcp-client-id:         --
ipv4.dhcp-timeout:           0 (default)
ipv4.dhcp-send-hostname:     yes
ipv4.dhcp-hostname:          --
ipv4.dhcp-fqdn:              --
ipv4.never-default:          no
ipv4.may-fail:               yes
ipv4.dad-timeout:            -1 (default)
```

3.3.2 Set Static IP

Step 1: Enter edit mode with the following command:

```
$ nmcli con edit NETWORKPROFILE
```

See table in 3.3.1 for NETWORKPROFILE values

Command should return the following (Ethernet0 used in this example):

```
aaeon@SRG-3352C:~$ nmcli con edit Ethernet0
===| nmcli interactive connection editor |===
Editing existing '802-3-ethernet' connection: 'Ethernet0'

Type 'help' or '?' for available commands.
Type 'print' to show all the connection properties.
Type 'describe [<setting>.<prop>]' for detailed property description.

You may edit the following settings: connection, 802-3-ethernet (ethernet), 802-1x, dc
b, sriov, ethtool, match, ipv4, ipv6, tc, proxy
nmcli> █
```

Step 2: Edit the IP Address with the following commands:

```
$ nmcli> goto ipv4
$ nmcli> set address IPADDRESS/24
```

IPADDRESS is the address you wish to use. This example uses 192.168.3.127

```
$ nmcli> save
$ nmcli> quit
```

You have now exited the edit mode.

```
$ sudo ifconfig PORT down
$ sudo ifconfig PORT up
```

PORT variables are eth0 for Ethernet0 or eth1 for Ethernet1; this example uses eth0.

The following will be returned:

```
aaeon@SRG-3352C:~$ sudo nmcli con edit Ethernet0
===| nmcli interactive connection editor |===
Editing existing '802-3-ethernet' connection: 'Ethernet0'

Type 'help' or '?' for available commands.
Type 'print' to show all the connection properties.
Type 'describe [<setting>.<prop>]' for detailed property description.

You may edit the following settings: connection, 802-3-ethernet (ethernet), 802-1x, dc, sriov, ethtool, match, ipv4, ipv6, tc, proxy
nmcli> goto ipv4
You may edit the following properties: method, dns, dns-search, dns-options, dns-priority, addresses, gateway, routes, route-metric, route-table, ignore-auto-ru
tes, ignore-auto-dns, dhcp-client-id, dhcp-timeout, dhcp-send-hostname, dhcp-hostname, dhcp-fqdn, never-default, may-fail, dad-timestamp
nmcli ipv4s set address 192.168.3.127/24
Do you also want to set 'ipv4.method' to 'manual'? [yes]: yes
nmcli ipv4s save
Connection 'Ethernet0' (d2a83a52-315f-3ed3-b9f8-c7de6091feb5) successfully updated.
nmcli ipv4s quit
aaeon@SRG-3352C:~$ sudo ifconfig eth0 down
aaeon@SRG-3352C:~$ sudo ifconfig eth0 up
```

3.3.3 Set Dynamic IP

Step 1: Enter edit mode with the following command:

```
$ nmcli con edit NETWORKPROFILE
```

See table in 3.3.1 for NETWORKPROFILE values

Command should return the following (Ethernet0 used in this example):

```
aaeon@SRG-3352C:~$ nmcli con edit Ethernet0
===| nmcli interactive connection editor |===
Editing existing '802-3-ethernet' connection: 'Ethernet0'

Type 'help' or '?' for available commands.
Type 'print' to show all the connection properties.
Type 'describe [<setting>.<prop>]' for detailed property description.

You may edit the following settings: connection, 802-3-ethernet (ethernet), 802-1x, dc
b, sriov, ethtool, match, ipv4, ipv6, tc, proxy
nmcli> █
```

Step 2: Edit the IP address with the following commands:

```
$ nmcli> goto ipv4
$ nmcli> remove address
$ nmcli> save
$ nmcli> quit
```

You have now exited edit mode

The following should be returned:

```
aaeon@SRG-3352C:~$ sudo nmcli con edit Ethernet0
===| nmcli interactive connection editor |===
Editing existing '802-3-ethernet' connection: 'Ethernet0'

Type 'help' or '?' for available commands.
Type 'print' to show all the connection properties.
Type 'describe [<setting>.<prop>]' for detailed property description.

You may edit the following settings: connection, 802-3-ethernet (ethernet), 802-1x, dcb, sriov, ethtool, match, ipv4, ipv6, tc, proxy
nmcli: goto ipv4
You may edit the following properties: method, dns, dns-search, dns-options, dns-priority, addresses, gateway, routes, route-metric, route-table, ignore-auto-ro
utes, ignore-auto-dns, dhcp-client-id, dhcp-timeout, dhcp-send-hostname, dhcp-hostname, dhcp-fqdn, never-default, may-fail, dad-timeout
nmcli: ipv4: remove address
nmcli: ipv4: save
Connection 'Ethernet0' (d2a83a52-315f-3ed3-b9f8-c7de691feb5) successfully updated.
nmcli: ipv4: quit
aaeon@SRG-3352C:~$ █
```

3.4 Cellular Network Settings

This section details how to check and manage the cellular network settings.

3.4.1 Check Cellular Module Status

Step 1: To check the status of the cellular module, enter the following command:

```
$ mmcli -m 0
```

The system should output the following:

```

aaeon@SRG-3352C:~$ mmcli -m 0
General |      dbus path: /org/freedesktop/ModemManager1/Modem/0
         |      device id: 97a2a2d2331bf970dd9c52a85cb7517b2619e6c4
-----|-----
Hardware | manufacturer: QUALCOMM INCORPORATED
         | model: QUECTEL Mobile Broadband Module
         | revision: EC25EFAR06A02M4G
         | h/w revision: 10000
         | supported: gsm-umts, lte
         | current: gsm-umts, lte
         | equipment id: 866758041336559
-----|-----
System   |      device: /sys/devices/platform/ocp/47400000.usb/47401c00.usb/musb-hdrc.1/usb/l1/1-1/1.1
         |      drivers: option1, qmi_wwan
         |      plugin: Quectel
         |      primary port: cdc-wdm0
         |      ports: ttyUSB0 (qcdm), ttyUSB2 (at), cdc-wdm0 (qmi), wwan0 (net),
         |             ttyUSB3 (at)
-----|-----
Status   |      state: failed
         |      failed reason: sim-missing
         |      power state: on
         |      signal quality: 0% (cached)
-----|-----
Modes    |      supported: allowed: 2g; preferred: none
         |                allowed: 3g; preferred: none
         |                allowed: 4g; preferred: none
         |                allowed: 2g, 3g; preferred: 3g
         |                allowed: 2g, 3g; preferred: 2g
         |                allowed: 2g, 4g; preferred: 4g
         |                allowed: 2g, 4g; preferred: 2g
         |                allowed: 3g, 4g; preferred: 3g
         |                allowed: 3g, 4g; preferred: 4g
         |                allowed: 2g, 3g, 4g; preferred: 4g
         |                allowed: 2g, 3g, 4g; preferred: 3g
         |                allowed: 2g, 3g, 4g; preferred: 2g
         |      current: allowed: any; preferred: none
-----|-----
Bands    |      supported: egsm, dcs, utran-1, utran-5, utran-8, eutran-1, eutran-3,
         |                eutran-5, eutran-7, eutran-8, eutran-20, eutran-38, eutran-40,
         |                eutran-41
-----|-----
IP       |      supported: ipv4, ipv6, ipv4v6
aaeon@SRG-3352C:~$

```

3.4.2 Dial Up Cellular Module

Step 1: Follow the steps in the previous section to check the cellular module status. The system should return a state of “registered” under Status if the module is ready to use.

```
Status | lock: sim-pin2
        | unlock retries: sim-pin (1), sim-pin2 (3), sim-puk (10), sim-puk2 (10)
        | state: registered
        | power state: on
        | access tech: umts
        | signal quality: 34% (recent)
```

If there is an issue, the state will show “failed” along with a failed reason such as “sim missing”.

```
Status | state: failed
        | failed reason: sim-missing
        | power state: on
        | signal quality: 0% (cached)
```

Step 2: Enable the cellular module with the following command:

```
$ mmcli -m 0 -e
```

System will return the following if successful:

```
root@SRG-3352C:~# mmcli -m 0 -e
successfully enabled the modem
```

Step 3: Dial up the cellular module with the following command:

```
$ nmcli con up id Modem
```

System will return the following:

```
root@SRG-3352C:~# nmcli con up id Modem
Connection successfully activated (D-Bus active path: /org/freedesktop/NetworkManager/ActiveConnection/2)
```

Step 4: You can check the cellular module connection with the command:

```
$ ifconfig
```

```
wlan0: flags=4099<UP,BROADCAST,MULTICAST> mtu 1500
        ether f2:c7:26:ec:ab:85 txqueuelen 1000 (Ethernet)
        RX packets 0 bytes 0 (0.0 B)
        RX errors 0 dropped 0 overruns 0 frame 0
        TX packets 0 bytes 0 (0.0 B)
        TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

wlan0: flags=4305<UP,POINTOPOINT,RUNNING,NOARP,MULTICAST> mtu 1500
        inet 10.96.28.171 netmask 255.255.255.248 destination 10.96.28.171
        unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00 txqueuelen 1000 (UNSPEC)
        RX packets 0 bytes 0 (0.0 B)
        RX errors 0 dropped 0 overruns 0 frame 0
        TX packets 0 bytes 0 (0.0 B)
        TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0
```

3.5 Wi-Fi and Bluetooth Network Settings

This section details how to check and setup Wi-Fi and Bluetooth wireless networks.

3.5.1 Scan for Wi-Fi Access Points

To scan for Wi-Fi access points, enter the following command:

```
$ nmcli dev wifi
```

The system will return a list of Wi-Fi networks with their name, signal strength and security type.

```
aaeon@SRG-3352C:~$ nmcli dev wifi
IN-USE SSID          MODE  CHAN  RATE  SIGNAL  BARS  SECUR
ITY
      Tomato24      Infra  1
195 Mbit/s 100
      TOTOLINK99     Infra  3
270 Mbit/s 100
      TOTOLINK N150RA S  Infra  11
135 Mbit/s 100
      ASUS           Infra  2
130 Mbit/s 90
      TP-LINK_FE7C    Infra  3
270 Mbit/s 90
      DIRECT-5WAA-LA11-2122msGN  Infra  1
130 Mbit/s 89
      An-WiFi        Infra  4
65 Mbit/s 89
      dlink-E37D     Infra  9
270 Mbit/s 87
      Newton flaming laser sword  Infra  11
130 Mbit/s 82
```

3.5.2 Connect to Wi-Fi Access Point

To connect to a Wi-Fi network, enter the following command

```
$ nmcli dev wifi connect 'SSID' password 'PASSWORD'
```

SSID is the name of the network you want to connect to

PASSWORD is the network password for the chosen SSID

The system will show the following if successful:

```
aaeon@SRG-3352C:~$ sudo nmcli dev wifi connect 'TOTOLINK99' password 'password'
[sudo] password for aaeon:
Device 'wlan0' successfully activated with '64da4185-ebf6-4b1f-acfd-eb36d214cbb5'.
aaeon@SRG-3352C:~$
```

3.5.3 Disconnect from Wi-Fi Access Point

To disconnect from a Wi-Fi network, enter the following command:

```
$ sudo nmcli con down id 'SSID'
```

SSID is the name of the network you want to disconnect from

The system will return the following if successful:

```
aaeon@SRG-3352C:~$ sudo nmcli con down id TOTOLINK99
[sudo] password for aaeon:
Connection 'TOTOLINK99' successfully deactivated (D-Bus active path: /org/freedesktop/NetworkManager/ActiveConnection/2)
aaeon@SRG-3352C:~$ █
```

3.5.4 Check Wi-Fi Connection Status

To check the status of a Wi-Fi connection, enter the following command:

```
$ nmcli dev
```

If connected, the system will return a “connected” status for wlan0:

```
aaeon@SRG-3352C:~$ sudo nmcli dev
DEVICE      TYPE      STATE      CONNECTION
eth0        ethernet  connected  Ethernet0
wlan0       wifi      connected  TOTOLINK99
eth1        ethernet  unavailable --
cdc-wdm0    gsm       unavailable --
lo          loopback  unmanaged  --
aaeon@SRG-3352C:~$ █
```

If disconnected, the system will return “disconnected” status for wlan0

```
aaeon@SRG-3352C:~$ sudo nmcli dev
DEVICE      TYPE      STATE      CONNECTION
eth0        ethernet  connected  Ethernet0
wlan0       wifi      disconnected --
eth1        ethernet  unavailable --
cdc-wdm0    gsm       unavailable --
lo          loopback  unmanaged  --
aaeon@SRG-3352C:~$ █
```

3.5.5 Enter Bluetooth Control Panel

Before managing Bluetooth settings, you must first enter the Bluetooth Control Panel with the following command:

```
$ sudo bluetoothctl
```

The system will return the following:

```
aaeon@SRG-3352C:~$ sudo bluetoothctl
Agent registered
[bluetooth]# █
```

3.5.6 Scan for Bluetooth Device

To scan for a Bluetooth Device, enter the following commands:

```
$ power on
```

This command turns on the Bluetooth module

```
$ scan on
```

The system will return a list of devices and their MAC addresses:

```
aaeon@SRG-3352C:~$ sudo bluetoothctl
Agent registered
[bluetooth]# power on
Changing power on succeeded
[bluetooth]# scan on
Discovery started
[CHG] Controller 18:93:D7:01:BB:4E Discovering: yes
[NEW] Device 00:07:32:00:00:44 BLEVS_000044
[NEW] Device 6E:22:7D:C5:6A:87 6E-22-7D-C5-6A-87
[NEW] Device C0:EE:40:70:06:D8 GW6506D8
[NEW] Device 62:59:FE:7F:AC:03 62-59-FE-7F-AC-03
[NEW] Device 6E:09:A9:1F:38:43 6E-09-A9-1F-38-43
[NEW] Device 74:35:40:C9:C4:2C 74-35-40-C9-C4-2C
[NEW] Device 00:07:32:00:00:31 BLEVS_000031
[NEW] Device 00:07:32:71:13:92 SV87711392
[NEW] Device 00:07:32:71:14:40 SV87711440
[NEW] Device 75:C3:03:E2:1F:A4 75-C3-03-E2-1F-A4
[NEW] Device 18:04:ED:6E:5F:39 Uspace-CHTIOT-RD
[NEW] Device 6E:64:FF:00:47:F1 6E-64-FF-00-47-F1
[NEW] Device 00:07:32:71:14:41 SV87711441
[NEW] Device 41:AA:02:91:53:80 41-AA-02-91-53-80
[NEW] Device 71:B2:F4:3C:6F:9F 71-B2-F4-3C-6F-9F
[NEW] Device 7B:D4:9E:89:AB:C1 7B-D4-9E-89-AB-C1
[NEW] Device 00:07:32:A3:45:0D SV87A3450D
[NEW] Device 68:8F:5B:73:51:88 68-8F-5B-73-51-88
```

3.5.7 Pair Bluetooth Device

To pair a Bluetooth Device, enter the following command while in the control panel:

```
$ pair MAC_ID
```

MAC_ID is the MAC address of the device you wish to connect to.

This example is connecting to device E8:6F:38:83:CF:10

```
[bluetooth]# pair E8:6F:38:83:CF:10
Attempting to pair with E8:6F:38:83:CF:10
[CHG] Device E8:6F:38:83:CF:10 Connected: yes
Request confirmation
[agent] Confirm passkey 656573 (yes/no): yes
[CHG] Device E8:6F:38:83:CF:10 ServicesResolved: yes
[CHG] Device E8:6F:38:83:CF:10 Paired: yes
Pairing successful
```

3.5.8 Check Paired Bluetooth Devices

To check which Bluetooth devices are paired with the system, use the command:

```
$ paired-devices
```

The system will return a list of connected devices and their MAC addresses.

```
[DESKTOP-6E636SN]# paired-devices
Device E8:6F:38:83:CF:10 DESKTOP-6E636SN
[DESK] Device 78:34:9E:10:5B:57 78:34:9E
```

3.6 System Management

This section details how to check the OS version, storage device status, shutdown the system and set the date and time.

3.6.1 Check OS Version

To check which OS version the system is running, enter the command:

```
$ cat /etc/os-release
```

The system will return the OS information:

```
aaeon@SRG-3352C:~$ cat /etc/os-release
PRETTY_NAME="Debian GNU/Linux 10 (buster)"
NAME="Debian GNU/Linux"
VERSION_ID="10"
VERSION="10 (buster)"
VERSION_CODENAME=buster
ID=debian
HOME_URL="https://www.debian.org/"
SUPPORT_URL="https://www.debian.org/support"
BUG_REPORT_URL="https://bugs.debian.org/"
IMAGE_UUID="412c9c76-8f21-4a11-9803-9b9df58ead58"
BUILD_ID="5f5e4a9"
BUILD_DATE="2020/11/25"
VARIANT="SRG-3352x Debian Buster image"
VARIANT_VERSION="1.0-beta"
aaeon@SRG-3352C:~$ █
```

3.6.2 Check Storage Status

To check the status of the system storage, enter the following command:

```
$ df -h
```

The system will return a list of storage devices, capacity and usage

```
aaeon@SRG-3352C:~$ df -h
Filesystem      Size  Used Avail Use% Mounted on
udev            471M   0  471M   0% /dev
tmpfs           100M   6.9M  93M   7% /run
overlay         5.1G  199M  4.6G   5% /
tmpfs           498M   0  498M   0% /dev/shm
tmpfs           5.0M   0   5.0M   0% /run/lock
tmpfs           498M   0  498M   0% /sys/fs/cgroup
tmpfs           498M   0  498M   0% /var/volatile
/dev/mmcblk1p2  58M   21M   34M  39% /boot
tmpfs           100M   0  100M   0% /run/user/1000
aaeon@SRG-3352C:~$
```

3.6.3 Shut Down the System

To force the system to shut down, use following command. Note, you may need to enter the user password.

```
$ sudo shutdown now
```

On successful shutdown, terminal will return "Error reading from serial device".

```
aaeon@SRG-3352C:~$ shutdown now
Failed to set wall message, ignoring: Interactive authentication required.
Failed to power off system via logind: Interactive authentication required.
Failed to open initctl fifo: Permission denied
Failed to talk to init daemon.
aaeon@SRG-3352C:~$ sudo shutdown now
[sudo] password for aaeon:
aaeon@SRG-3352C:~$
Error reading from serial device
```

3.6.4 Set Date and Time

Step 1: Check current date and time by issuing the following command:

```
$ timedatectl
```

The system will return the current system clock settings

```
aaeon@SRG-3352C:~$ timedatectl
    Local time: Thu 2020-11-26 05:22:16 UTC
    Universal time: Thu 2020-11-26 05:22:16 UTC
    RTC time: Thu 2020-11-26 05:22:17
    Time zone: Etc/UTC (UTC, +0000)
System clock synchronized: yes
    NTP service: inactive
    RTC in local TZ: no
aaeon@SRG-3352C:~$ █
```

Step 2: Change the date and time by issuing the following command:

```
$ date MMDDhhmmYYYY
```

Command uses the following formatting:

MM – Month

DD – Day

hh – Hour (in 24-hour clock)

mm – Minute

YYYY – Year

The system will return the following:

```
aaeon@SRG-3352C:~$ sudo date 11261400
Thu 26 Nov 2020 02:00:00 PM UTC
aaeon@SRG-3352C:~$ timedatectl
    Local time: Thu 2020-11-26 14:00:10 UTC
    Universal time: Thu 2020-11-26 14:00:10 UTC
    RTC time: Thu 2020-11-26 06:00:51
    Time zone: Etc/UTC (UTC, +0000)
System clock synchronized: no
    NTP service: inactive
    RTC in local TZ: no
aaeon@SRG-3352C:~$ █
```

3.7 I/O Management

This section details how to operate the programmable I/O functions; GPIO and RS-485 2-wire connectors.

3.7.1 Control GPIO (LEDs)

To control the GPIO manually, issue the following commands, this example uses led1:

GPIO On:

```
$ echo 1 > /sys/class/leds/srt3352:led1/brightness
```

GPIO Off:


```
$ echo 0 > /sys/class/leds/srt3352:led1/brightness
```

```
root@SRG-3352C:/home/aaeon# echo 1 > /sys/class/leds/srt3352:led1/brightness
root@SRG-3352C:/home/aaeon# echo 0 > /sys/class/leds/srt3352:led1/brightness
```

Use the following table to reference each LED label for the command:

Number	Label	Picture	Number	Label	Picture
1 Yellow	led1		3 Blue	led3	
2 Red	led2		4 Green	led4	

3.7.2 RS-485 2-wire Pin Definition

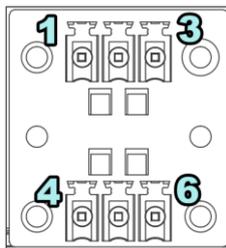

System Reference	Pins
/dev/ttyS5 (COM2)	Pins 1-3
/dev/ttyS4 (COM1)	Pins 4-6

Pin	COM1 Definition	COM2 Definition
1	-	SG
2	-	D2-
3	-	D2+
4	SG	-
5	D1-	-
6	D1+	-
7	-	-
8	-	-
9	-	-