

HSB-668I

Onboard VIA Mark CoreFusion CPU

Half-Size Card

Realtek 8100C/8110S Ethernet

AC97 Codec Audio

Copyright Notice

This document is copyrighted, 2009. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- Award is a trademark of Award Software International, Inc.
- VGA is a trademarks of International Business Machines Corporation.
- DOC2000 is a registered trademarks of M-system Co., Ltd
- Microsoft Windows[®] is a registered trademark of Microsoft Corp.
- VIA is a trademark of VIA Technology, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- Winbond is a trademark of Winbond Electronic Corp.

Please be notified that all other products' name or trademarks not be mentioned above are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 Floppy Cable
- 1 ATA-100 Cable
- 1 USB Cable
- 1 Keyboard Cable
- 1 Serial + Parallel Cable
- 1 ATX Cable
- 1 Serial Cable
- 1 Two Serial Ports Cable
- 1 Quick Installation Guide
- 1 Utility CD
- 1 HSB-688I Half-size CPU Card

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

Contents

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features	1-3
1.3 Specifications	1-4

Chapter 2 Quick Installation Guide

2.1 Safety Precautions	2-2
2.2 Location of Connectors and Jumpers	2-3
2.3 Mechanical Drawing	2-4
2.4 List of Jumpers	2-5
2.5 List of Connectors	2-6
2.6 Setting Jumpers	2-8
2.7 COM2 Pin 9 Function (RIB or +5V) Selection (JP1)	2-9
2.8 Clear CMOS (JP2)	2-9
2.9 LCD Voltage Selection (JP3)	2-9
2.10 DOC2000 Address (Selection By BIOS).....	2-9
2.11 Front Panel Connector (FP1)	2-9
2.12 Front Panel Connector (FP2)	2-10
2.13 RS-232 Serial Port Connector(COM1/COM3/COM4)	2-10
2.14 RS-232/422/485 Serial Port Connector (COM2).....	2-10
2.15 IrDA Connector (IR1).....	2-11
2.16 LPT Port Connector (LPT1)	2-11

2.17 USB Connector (USB1)	2-11
2.18 Fan Connector (FAN1)	2-12
2.19 AC97 Connector (CN1)	2-12
2.20 ATX Power Control Connector (CN2)	2-12
2.21 LAN LED Connector (CN3/CN4)	2-13
2.22 18/24-Bit TTL Channel Connector (CN5)	2-13
2.23 36-Bit TTL Channel Connector (CN6)	2-14
2.24 LVDS Channel Connector (CN7)	2-14
2.25 PS/2 Keyboard/Mouse Connector (CN8)	2-15
2.26 Internal Keyboard Connector (CN9)	2-15

Chapter 3 Award BIOS Setup

3.1 System Test and Initialization	3-2
3.2 Award BIOS Setup	3-3

Chapter 4 Driver Installation

4.1 Installation	4-3
------------------------	-----

Appendix A Programming the Watchdog Timer

A.1 Programming	A-2
-----------------------	-----

Appendix B I/O Information

B.1 I/O Address Map	B-2
B.2 1 st MB Memory Address Map	B-3
B.3 IRQ Mapping Chart	B-4
B.4 DMA Channel Assignments	B-4

Chapter

1

**General
Information**

1.1 Introduction

HSB-668I is a new standard ISA bus half-size CPU Card with onboard VIA Mark CoreFusion 533MHz processor integrating with North Bridge. It supports up to 128MB memory on board and is with one SO-DIMM that memory can support up to 512MB. The HSB-668I performs as a strengthened single board computer with low power consumption while no CPU fan required.

This product is integrated AGP 4X 2D/3D video accelerator with 2 channel TTL interface. It supports 36bit LVDS LCD/CRT, and up to 32 MB frame buffer using system memory.

Excellent connectivity is provided by embedded 10/100Mbps or Gigabit Ethernet connection. The HSB-668I also offers comprehensive I/O support, including 3 USB ports for connecting the latest peripherals and four serial ports for industry standard applications. Other onboard feature is include a parallel port, an IrDA port, and an AC-97 SoundBlaster compatible audio. The SSD solution supports DOC2000 as external storage.

Overall, this powerful CPU card aims to be your most effective choice and perform low power applications at real affordable price!

1.2 Features

- Onboard VIA CoreFusion 533MHz Processor (Fanless)
- Onboard Memory supports up to 128MB
- One SODIMM SDRAM, Memory Up To 512MB
- Integrated ProSavage4 Graphic, 2D/3D VGA Support
- 2 Channel 36-bit LVDS LCD Support
- Integrated AC97 Codec Audio (Daughter Board Optional)
- Two 10/100 Base-TX Ethernet (One 10/100 & GbE Optional)
- DOC2000 PC-104 Interface Socket
- Two Ultra ATA 100 Channel
- Supports PC-104 Interface Socket
- 3 USB 1.1 / 1 Parallel / 1 IrDA Port
- 4 COM Ports (3 RS-232, 1 RS-232/422/485)
- Watchdog Function 1 ~ 255 Sec.
- ISA High-driver Support

1.3 Specifications

System

- Form Factor ISA Half-size SBC
- Processor Onboard VIA Mark
CoreFusion 533MHz CPU
- System Memory 1 x 144-pin 3.3V SDR
SODIMM Socket up to
512MB (on board
memory supports up to
128MB), supports
PC100/133 types
- Chipset Mark + VT82C686B
- VGA Controller Integrated on Mark, 32MB
frame buffer share system
memory
- Ethernet 10/100Mb or
10/100/1000Mb LAN
optional, RJ-45 x 2,
Realtek 8100C/8110S
Option
- Audio(Daughter Board) AC97 Codec, MIC-in/
Line-in/ Line-out/ CD-in
- BIOS Award Plug & Play ISA
BIOS – 4Mb ROM

- IDE Interface 2 x ATA-100 channel
(Support four ATAPI devices)
- Expansion Interface ISA Interface/PC-104
- Watchdog Timer 1~255 Sec. can be set with software
- RTC Internal RTC
- Power Requirement +5V Only
- Operating Temperature 32°F~140°F (0°C ~ 60°C)
- EMC CE / FCC Class A

I/O

- Floppy Drive Interface 1 x Standard Floppy Disk Drive port, supports up to one Floppy Device
- Serial Port 4x COM ports: (Internal Pin Header)
COM 1: RS-232
COM 2: RS-232/422/485
(Pin9 Supports +5V by Jumper)
COM3: RS-232
COM4: RS-232
- Parallel Port 1x Parallel Port supports SPP/EPP/ ECP mode
- Keyboard and Mouse 1 x Mini-DIN PS/2 K/B and

- Universal Serial Bus
 - Mouse connector
 - 1 x internal keyboard pin header
 - One USB 1.1 Port
 - One 5x2 pin header for Internal
- SSD
 - DOC2000 support
- IR Interface
 - Supports one IrDA and CIR header

Chapter

2

Quick Installation Guide

Notice:

The Quick Installation Guide is derived from Chapter 2 of user manual. For other chapters and further installation instructions, please refer to the user manual CD-ROM that came with the product.



2.1 Safety Precaution

Warning!


Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.

Caution!


Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis

2.2 Location of Connectors and Jumpers

Component Side

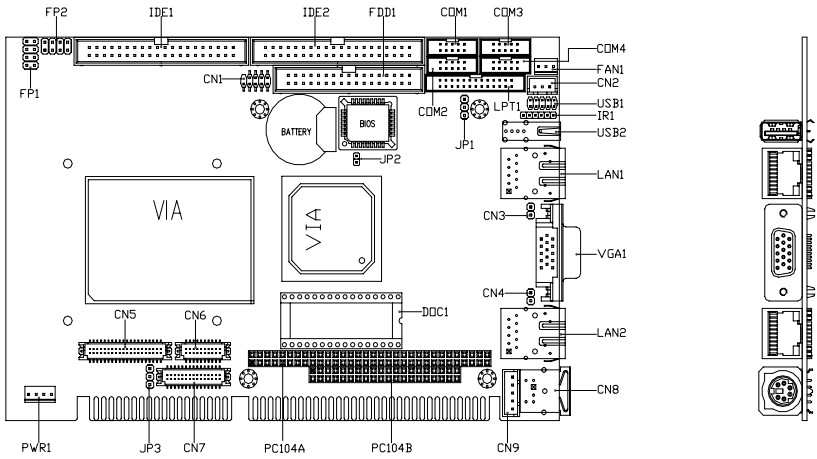


Solder Side

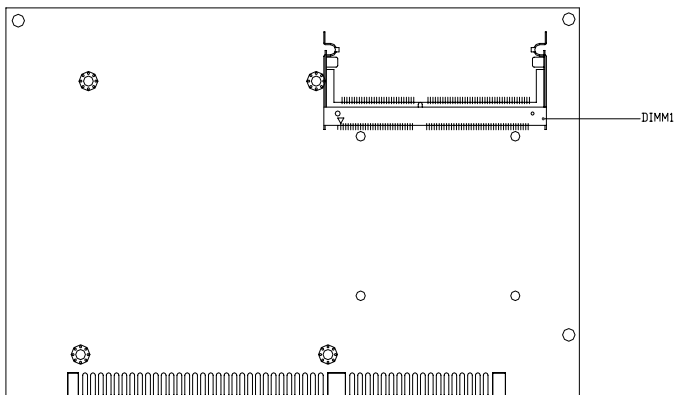


2.3 Mechanical Drawing

Component Side

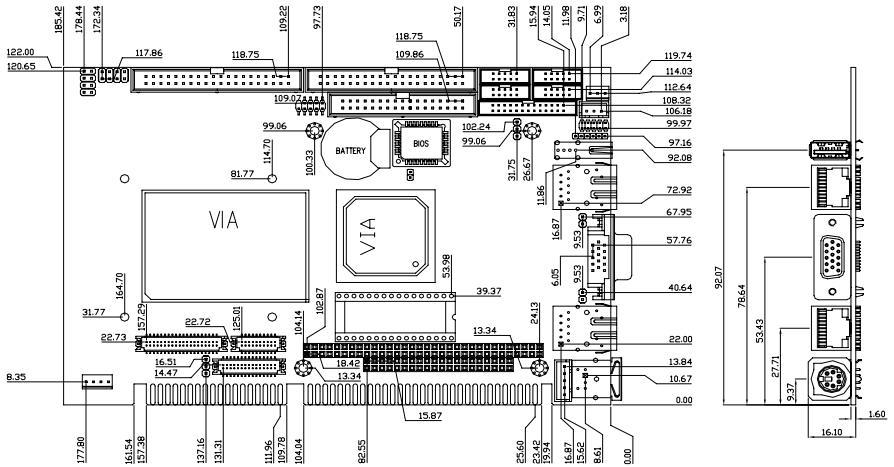

Solder Side

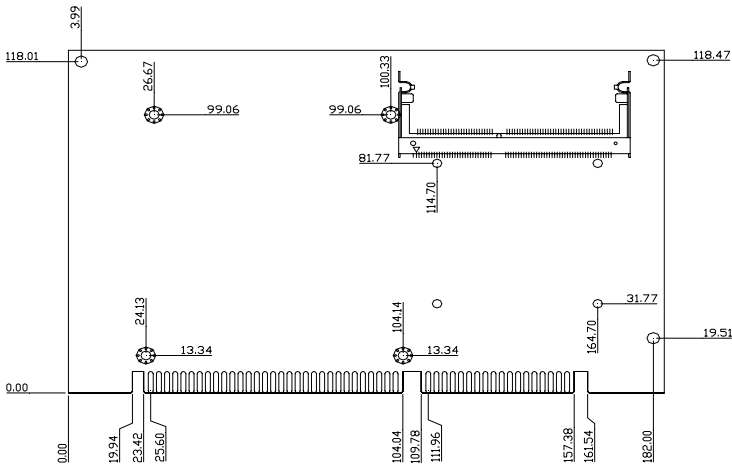

2.4 List of Jumpers

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

Jumpers

Label	Function
JP1	COM2 Pin 9 Function Selection
JP2	Clear CMOS
JP3	LCD Voltage Selection

2.5 List of Connectors

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:


Label	Function
FP1	Front Panel Connector 1
FP2	Front Panel Connector 2
PWR1	5V Connector
VGA1	VGA Display Connector
FDD1	Floppy Connector
IDE1~2	EIDE Connector
COM1	RS-232 Serial Port Connector
COM2	RS-232/422/485 Serial Port Connector
COM3	RS-232 Serial Port Connector
COM4	RS-232 Serial Port Connector
IR1	IrDA Connector
LPT1	LPT Port Connector
USB1	USB Connector
USB2	USB Connector
LAN1	10/100 or 100/1000 Base-TX Ethernet Connector
LAN2	10/100 or 100 Base-TX Ethernet Connector
DIMM1	DIMM Slot
FAN1	Fan Connector
CN1	AC97 Connector
CN2	ATX Power Control Connector
CN3	LAN 1 Active LED Connector
CN4	LAN 2 Active LED Connector

CN5	TTL 18/24BIT Channel Connector
CN6	TTL 36BIT Channel Connector
CN7	LVDS Channel Connector
CN8	PS2 Keyboard/Mouse Connector
CN9	Internal Keyboard Connector
DOC 1	Disk on Chip Socket

2.6 Setting Jumpers

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip.

To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.

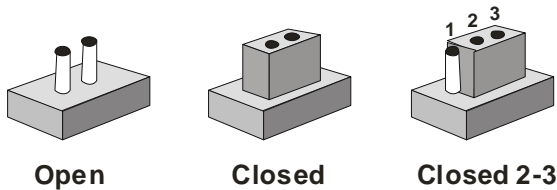

A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change.

Generally, you simply need a standard cable to make most connections.

2.7 COM2 Pin 9 Function (RIB or +5V) Selection (JP1)

JP1	Function
1-2	RIB (Default)
2-3	+5 V

2.8 Clear CMOS (JP2)

JP2	Function
1-2	Open (Default)
Clear	Protected

2.9 LCD Voltage Selection (JP3)

JP3	Function
1-2	+5 V
2-3	+3.3 V (Default)

2.10 DOC2000 Address (Selection By BIOS)

Function
Disable (Default)
DC00h
D800h
D400h

2.11 Front Panel Connector (FP1)

Pin	Signal	Pin	Signal
1	Power On Button(+)	2	Reset Switch(+)
3	Power On Button(-)	4	Reset Switch(-)
5	IDE LED(+)	6	Power LED(+)

7	IDE LED(-)	8	Power LED(-)
---	------------	---	--------------

2.12 Front Panel Connector (FP2)

Pin	Signal	Pin	Signal
1	External Speaker(+)	2	KeyBoard Lock (+)
3	N.C.	4	GND
5	Internal Buzzer(-) (Default)	6	I2C Bus SMB Clock
7	External Speaker(-) (Default)	8	I2C Bus SMB Data

2.13 RS-232 Serial Port Connector (COM1/COM3/COM4)

Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	N.C.

2.14 RS-232/422/485 Serial Port Connector (COM2)

Pin	Signal	Pin	Signal
1	DCD(422TXD-/485DATA-)	2	RXD(422RXD+)
3	TXD(422TXD+/485DATA+)	4	DTR(422RXD-)
5	GND	6	DSR
7	RTS	8	CTS
9	RIB / +5V	10	N.C.

2.15 IrDA Connector (IR1)

Pin	Signal
1	+5V
2	N.C.
3	IRRX
4	GND
5	IRTX
6	N.C.

2.16 LPT Port Connector (LPT1)

Pin	Signal	Pin	Signal
1	#STROBE	2	#AFD
3	DATA0	4	#ERROR
5	DATA1	6	#INIT
7	DATA2	8	#SLIN
9	DATA3	10	GND
11	DATA4	12	GND
13	DATA5	14	GND
15	DATA6	16	GND
17	DATA7	18	GND
19	#ACK	20	GND
21	BUSY	22	GND
23	PE	24	GND
25	SELECT	26	N.C.

2.17 USB Connector (USB1)

Pin	Signal	Pin	Signal
1	+5V	2	GND
3	USBD1-	4	GND

5	USBD1+	6	USBD2+
7	GND	8	USBD2-
9	GND	10	+5V

2.18 Fan Connector (FAN1)

Pin	Signal
1	GND
2	+5V
3	Speed Sense

2.19 AC97 Connector (CN1)

Pin	Signal	Pin	Signal
1	AC_RST-	2	AC_SYNC
3	AC_DAIN2	4	AC_DAOUT
5	GND	6	AC_BCLK
7	GND	8	+5V
9	Lock	10	+3.3V

2.20 ATX Power Control Connector (CN2)

Pin	Signal
1	PS-ON
2	+5V
3	+5VSB

AT Power Use: Close Pin 2,3

2.21 LAN LED Connector (CN3/CN4)

Pin	Signal	Pin	Signal
1	Link_LED(-)	2	Active_LED(+)

2.22 18/24-Bit TTL Channel Connector (CN5)

Pin	Signal	Pin	Signal
1	+5V	2	+5V
3	GND	4	GND
5	+3.3V	6	+3.3V
7	ENBKL	8	GND
9	BLUE0(24bit),NC(18bit)	10	BLUE1(24bit) ,NC(18bit)
11	BLUE2(24bit), BLUE0(18bit)	12	BLUE3(24bit), BLUE1(18bit)
13	BLUE4(24bit), BLUE2(18bit)	14	BLUE5(24bit), BLUE3(18bit)
15	BLUE6(24bit) ,BLUE4(18bit)	16	BLUE7(24bit), BLUE5(18bit)
17	GREEN0(24bit) ,NC(18bit)	18	GREEN1(24bit) ,NC(18bit)
19	GREEN2(24bit) ,GREEN0(18bit)	20	GREEN3(24bit), GREEN1(18bit)
21	GREEN4(24bit), GREEN2(18bit)	22	GREEN5(24bit) ,GREEN3(18bit)
23	GREEN6(24bit), GREEN4(18bit)	24	GREEN7(24bit), GREEN5(18bit)
25	RED0(24bit) ,NC(18bit)	26	RED1(24bit) ,NC(18bit)
27	RED2(24bit), RED0(18bit)	28	RED3(24bit) ,RED1(18bit)
29	RED4(24bit), RED2(18bit)	30	RED5(24bit), RED3(18bit)
31	RED6(24bit), RED4(18bit)	32	RED7(24bit), RED5(18bit)
33	GND	34	GND
35	DOT_CLOCK	36	VSYNC

37	DE	38	HSYNC
39	N.C.	40	ENAVEE

2.23 36-Bit TTL Channel Connector (CN6)

Pin	Signal	Pin	Signal
1	GND	2	GND
3	SBLUE0(36bit)	4	SBLUE1(36bit)
5	SBLUE2(36bit)	6	SBLUE3(36bit)
7	SBLUE4(36bit)	8	SBLUE5(36bit)
9	SGREEN0(36bit)	10	SGREEN1(36bit)
11	SGREEN2(36bit)	12	SGREEN3(36bit)
13	SGREEN4(36bit)	14	SGREEN5(36bit)
15	SRED0(36bit)	16	SRED1(36bit)
17	SRED2(36bit)	18	SRED3(36bit)
19	SRED4(36bit)	20	SRED5(36bit)

2.24 LVDS Channel Connector (CN7)

Pin	Signal	Pin	Signal
1	N.C.	2	N.C.
3	PPVCC	4	GND
5	CH1_CLK#	6	CH1_CLK
7	PPVCC	8	GND
9	CH1_TX0#	10	CH1_TX0
11	CH1_TX1#	12	CH1_TX1

13	CH1_TX2#	14	CH1_TX2
15	N.C.	16	N.C.
17	N.C.	18	N.C.
19	CH2_TX0#	20	CH2_TX0
21	CH2_TX1#	22	CH2_TX1
23	CH2_TX2#	24	CH2_TX2
25	N.C.	26	N.C.
27	PPVCC	28	GND
29	CH2_CLK#	30	CH2_CLK

2.25 PS/2 Keyboard/Mouse Connector (CN8)

Pin	Signal
1	KB_DATA
2	MS_DATA
3	GND
4	+5V
5	KB_CLK
6	MS_CLK

2.26 Internal Keyboard Connector (CN9)

Pin	Signal
1	KB_CLK
2	KB_DATA
3	N.C.
4	GND
5	+5V

Below Table for China RoHS Requirements

产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限, 系指在一般正常使用状况下。</p>						

Chapter

3

**Award
BIOS Setup**

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

Press <F1> to RESUME

Write down the message and press the F1 key to continue the boot up sequence.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The HSB-668I CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 Award BIOS Setup

Awards BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press immediately. This will allow you to enter Setup.

Standard CMOS Features

Use this menu for basic system configuration. (Date, time, IDE, etc.)

Advanced BIOS Features

Use this menu to set the advanced features available on your system.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system performance.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals. (Primary slave, secondary slave, keyboard, mouse etc.)

Power Management Setup

Use this menu to specify your settings for power management. (HDD power down, power on by ring, KB wake

up, etc.)

PnP/PCI Configurations

This entry appears if your system supports PnP/PCI.

PC Health Status

This menu allows you to set the shutdown temperature for your system.

Frequency/Voltage Control

Use this menu to specify your settings for auto detect DIMM/PCI clock and spread spectrum.

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While AWARD has designated the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

Set Supervisor/User Password

Use this menu to set Supervisor/User Passwords.

Save and Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

You can refer to the "AAEON BIOS Item Description.pdf" file in the CD for the meaning of each setting in this chapter.

Chapter

4

**Driver
Installation**

The HSB-6681 comes with a CD-ROM that contains all drivers and utilities that meet your needs.

Follow the sequence below to install the drivers:

Step 1 – Install VIA 4 in 1 Driver

Step 2 – Install VGA Driver

Step 3 – Install LAN Driver

Please read instructions below for further detailed installations.

4.1 Installation:

Insert the HSB-668I CD-ROM into the CD-ROM Drive. The Autorun program will run automatically. You also can choose the drivers to install from step 1 to step 3 in order as following instructions.

Step 1 – Install VIA 4 in 1 Driver

1. Click on the **VIA 4 IN 1** folder and double click on the **VIAHyperion4in1456v.exe**
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 2 – Install VGA Driver

1. Click on the **VGA** folder and select the OS your system is
2. Double click on the **Setup.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 3 –Install LAN Driver

1. Click on the **LAN** folder and the click on the **Windows** folder
2. Double click on the **Setup.exe**
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Note:

Under the Window OS environment, if the CRT connector is connected to display monitor by the data switch device, the user needs to set the color and resolution from Intel Graphic utility (VGA driver) instead of setting from the control panel in case of the wrong display appearance.

Appendix

A

Programming the Watchdog Timer

A.1 Programming

An onboard watchdog timer reduces the chance of disruptions which CPLD (Compact Programmable Logical Device) interface can cause. This is an invaluable protective device for standalone or unattended applications. When the watchdog timer activates (CPU processing has come to a halt), it can reset the system, or generate an interrupt on IRQ10, IRQ11, IRQ15, and NM1. This can be set via I/O Port 444, the function as following:

- 0: RESET
- 1: NM1
- 2: IRQ10
- 3: IRQ11
- 4: IRQ15

If you decide to program the watchdog timer, you must write data to I/O port 443 (hex). The output data is a value timer. You can write from 01 (hex) to FF (hex) while simultaneously setting it. When you want to disable the watchdog timer, your program should read a Hex value from I/O port 80 (hex).

The following procedure is a sample program for the watchdog timer:

- Type C:\DOS\Debug <ENTER>
- To start watchdog timer and set function "Reset" type; o 444 0<Enter>; out 444h data 0
- To input Watchdog timers time-out interval of 5 seconds type; o 443 05<Enter>; out 443h data 05
- To disable the watch timer type; i80 <Enter>

The time interval data of the watchdog timer is shown in binary code (8 bits).

Sample 2: 5 seconds





















































0	0	0	0	0	1	0	1
---	---	---	---	---	---	---	---

Appendix


























B

I/O Information


B.1 I/O Address Map

[-]	 AAEON-4706884E7
[+]	 Direct memory access (DMA)
[-]	 Input/output (IO)
	 [00000000 - 0000000F] Direct memory access controller
	 [00000020 - 00000021] Programmable interrupt controller
	 [00000022 - 0000003F] PCI bus
	 [00000040 - 00000043] System timer
	 [00000044 - 00000047] PCI bus
	 [0000004C - 0000006F] PCI bus
	 [00000060 - 00000060] PC/AT Enhanced PS/2 Keyboard (101/102-Key)
	 [00000061 - 00000061] System speaker
	 [00000064 - 00000064] PC/AT Enhanced PS/2 Keyboard (101/102-Key)
	 [00000070 - 00000071] System CMOS/real time clock
	 [00000072 - 0000007F] PCI bus
	 [00000081 - 00000083] Direct memory access controller
	 [00000087 - 00000087] Direct memory access controller
	 [00000089 - 0000008B] Direct memory access controller
	 [0000008F - 00000091] Direct memory access controller
	 [00000090 - 00000091] PCI bus
	 [00000093 - 0000009F] PCI bus
	 [000000A0 - 000000A1] Programmable interrupt controller
	 [000000A2 - 000000BF] PCI bus
	 [000000C0 - 000000DF] Direct memory access controller
	 [000000E0 - 000000EF] PCI bus
	 [000000F0 - 000000FF] Numeric data processor
	 [00000100 - 00000CF7] PCI bus
	 [00000170 - 00000177] Secondary IDE Channel
	 [000001F0 - 000001F7] Primary IDE Channel
	 [00000274 - 00000277] ISAPNP Read Data Port
	 [00000279 - 00000279] ISAPNP Read Data Port
	 [000002E8 - 000002EF] Communications Port (COM4)
	 [000002F8 - 000002FF] Communications Port (COM2)
	 [00000376 - 00000376] Secondary IDE Channel
	 [00000378 - 0000037F] Printer Port (LPT1)
	 [000003B0 - 000003BB] S3 Graphics Twister + S3Hotkey
	 [000003B0 - 000003BB] VIA CPU to AGP Controller
	 [000003C0 - 000003DF] S3 Graphics Twister + S3Hotkey
	 [000003C0 - 000003DF] VIA CPU to AGP Controller
	 [000003E8 - 000003EF] Communications Port (COM3)
	 [000003F0 - 000003F5] Standard floppy disk controller
	 [000003F6 - 000003F6] Primary IDE Channel
	 [000003F7 - 000003F7] Standard floppy disk controller
	 [000003F8 - 000003FF] Communications Port (COM1)
	 [00000A79 - 00000A79] ISAPNP Read Data Port
	 [00000D00 - 0000FFFF] PCI bus
	 [0000D400 - 0000D4FF] Realtek RTL8139/810x Family Fast Ethernet NIC #3
	 [0000D800 - 0000D8FF] Realtek RTL8139/810x Family Fast Ethernet NIC #4
	 [0000DC00 - 0000DC0F] VIA Bus Master IDE Controller
	 [0000DF00 - 0000DF1F] VIA Rev 5 or later USB Universal Host Controller
	 [0000E000 - 0000E01F] VIA Rev 5 or later USB Universal Host Controller
[+]	 Interrupt request (IRQ)
[+]	 Memory


B.2 1st MB Memory Address Map

[-]	 AAEON-4706884E7
[+]	 Direct memory access (DMA)
[+]	 Input/output (IO)
[+]	 Interrupt request (IRQ)
[+]	 Memory
	 [00000000 - 0009FFFF] System board
	 [0009F000 - 000BFFFF] PCI bus
	 [000A0000 - 000BFFFF] S3 Graphics Twister + S3Hotkey
	 [000A0000 - 000BFFFF] VIA CPU to AGP Controller
	 [000C8000 - 000EFFFF] PCI bus
	 [000F0000 - 000F3FFF] Motherboard resources
	 [000F4000 - 000F7FFF] Motherboard resources
	 [000F8000 - 000FBFFF] Motherboard resources
	 [000FC000 - 000FFFFF] Motherboard resources
	 [00100000 - 00FFFFFF] System board
	 [07000000 - FFFF7FFF] PCI bus
	 [E0000000 - E7FFFFFF] S3 Graphics Twister + S3Hotkey
	 [E0000000 - E7FFFFFF] VIA CPU to AGP Controller
	 [E8000000 - EBFFFFFF] VIA CPU to AGP Controller
	 [EC000000 - EC07FFFF] S3 Graphics Twister + S3Hotkey
	 [EC000000 - EC0FFFFFF] VIA CPU to AGP Controller
	 [EC100000 - EC1000FF] Realtek RTL8139/810x Family Fast Ethernet NIC #3
	 [EC101000 - EC1010FF] Realtek RTL8139/810x Family Fast Ethernet NIC #4
	 [FEE00000 - FEE0FFFF] System board
	 [FFFE0000 - FFFFFFFF] System board

B.3 IRQ Mapping Chart

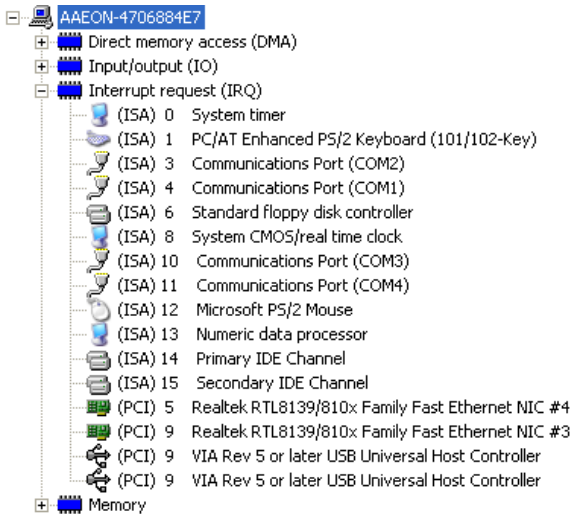

B.4 DMA Channel Assignments

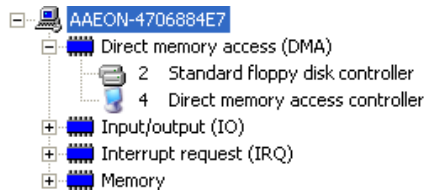

Appendix

C

Mating Connector

C.1 List of Mating Connectors and Cables

The table notes mating connectors and available cables.

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
IDE1	IDE Connector	Catch Electronics	1137-020-40SA	IDE Cable	1701400453
IDE2	IDE Connector	Catch Electronics	1137-020-40SA	IDE Cable	1701400453
FDD1	Floppy Connector	Catch Electronics	1137-000-34SA	Floppy Disk Drive Cable	1701340704
LPT1	Parallel Port Connector	Catch Electronics	1147-000-26S	LPT Cable	1701260307
FP1	Front Panel Connector	JIH VEI Electronics	21B22564-XXS1 0B-01G-6/3-VXX		N/A
FP2	Front Panel Connector	JIH VEI Electronics	21B22564-XXS1 0B-01G-6/3-VXX		N/A
USB1	USB Pin Header	JIH VEI Electronics	21B22050-XXS1 0B-01G-4/2.8	USB Cable	1709100201
USB2	USB Connector	HO-BASE	KS-001V-ANW		N/A
PWR1	4P Power Connector	HO-BASE	P201-04		N/A
LAN1 (1G)	Ethernet Connector	BOTHHAND	LA1T109D-A-D4 3 LF		N/A
LAN1 (10/100M)	Ethernet Connector	BOTHHAND	LU1T516-43 LF		N/A
LAN2 (10/100M)	Ethernet Connector	BOTHHAND	LU1T516- 43 LF		N/A
VGA1	CRT Display Connector	Catch Electronics	3125-000-15SB		N/A
IR1	IrDA Connector	JIH VEI Electronics	21B12050-XXS1 0B-01G-4/2.8		N/A

CN1	Audio Pin Header	JIH VEI Electronics	21N22050-10S1 0B-01G-4/2 .8-V 1-G	Audio cable	1703100302
CN2	PSON Connect	Catch Electronics	1191-700-03S	PSON cable	1703030501
CN3	LAN 1 Active LED Connector	JIH VEI Electronics			N/A
CN4	LAN 2 Active LED Connector	JIH VEI Electronics			N/A
CN5	40Pin LVDS Channel Connector	E-call Enterprise	0110-01-553-400		N/A
CN6	20Pin LVDS Channel Connector	E-call Enterprise	0110-01-553-200		N/A
CN7	30Pin LVDS Channel Connector	E-call Enterprise	0110-01-553-300		N/A
CN8	PS2 Keyboard/ Mouse Connector	CONTEK	MAN3061F1G40 1	KB/MS Cable	1700060192
CN9	KB Pin Header	HO-BASE	2503-WS-5		N/A
FAN1	FAN Connector	Catch Electronics	1190-700-042		N/A
COM1	Serial Port Box Header	Catch Electronics	1147-000-10S	Serial Port Cable	1701260307
COM2	Serial Port Box Header	Catch Electronics	1147-000-10S	Serial Port Cable	1701100305
COM3	Serial Port Box Header	Catch Electronics	1147-000-10S	Serial Port Cable	1701100305
COM4	Serial Port Box Header	Catch Electronics	1147-000-10S	Serial Port Cable	1701100305
PC104A;P C104B	PC104 Connector	Catch Electronics	1232-251-64 ; 1232-251-40		N/A