

BOXER-6647-MTH

Fanless Compact Embedded Computer

User's Manual 1st Ed

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other product name or trademarks are properties of their respective owners.

- Microsoft Windows® and Windows® 11 are registered trademarks of Microsoft Corp.
- Intel® is a registered trademark of Intel Corporation.
- Intel Core™ Ultra is a trademark of Intel Corporation.
- Linux® is a registered trademark of Linus Torvalds in the U.S. and other countries.
- Ubuntu and Canonical are registered trademarks of Canonical Ltd.

All other product names or trademarks are properties of their respective owners. The publisher of this document does not assume nor imply ownership of any trademarked product not listed herein.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● BOXER-6647-MTH	1
● Wall Mount Bracket	2
● 3 Pin Terminal Block Connector (for DC Input)	1
● Screw Pack	1
● Remote Power On/Off Cable	1
● Thermal Pad Set	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any power supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls.
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. Do not leave this device in an uncontrolled environment with temperatures beyond the device's permitted storage temperatures (see chapter 1) to prevent damage.
19. Do NOT disassemble the motherboard so as not to damage the system or void your warranty.
20. If the thermal pad had been damaged, please contact AAEON's salesperson to purchase a new one. Do NOT use those of other brands.
21. The Hex Cylinder Coppers on the front panel are not removable.
22. Repeatedly assemble and disassemble the system may cause damages to the exterior paint and surface and screw holes.
23. Use the right size screwdriver.
24. Use the screwdriver correctly to remove screws from the system.

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON System

QO4-381 Rev.A2

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
液晶模块	×	○	○	○	○	○
光驱	×	○	○	○	○	○
触控模块	×	○	○	○	○	○
电源	×	○	○	○	○	○
电池	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。
○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。
×：表示该有害物质的某一均质材料超出了 GB/T 26572 的限量要求，然而该部件仍符合欧盟指令 2011/65/EU 的规范。
环保使用期限(EFUP (Environmental Friendly Use Period))：10 年
备注：
一、此产品所标示之环保使用期限，系指在一般正常使用状况下。
二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。
三、上述部件物质液晶模块、触控模块仅一体机产品适用。

China RoHS Requirement (EN)

Name and content of hazardous substances in product

AAEON System

QO4-381 Rev.A2

Part Name	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB Assemblies	×	○	○	○	○	○
Connector and Cable	×	○	○	○	○	○
Chassis	○	○	○	○	○	○
CPU and Memory	×	○	○	○	○	○
Hard Disk	×	○	○	○	○	○
LCD Modules	×	○	○	○	○	○
CD-ROM/DVD-ROM	×	○	○	○	○	○
Touch Modules	×	○	○	○	○	○
Power	×	○	○	○	○	○
Battery	×	○	○	○	○	○

The table is prepared in accordance with the provisions of SJ/T 11364.

○ : Indicates that said hazardous substance contained in all of the homogenous materials for this product is below the limit requirement of GB/T 26572.

× : Indicates that said hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement of GB/T 26572. But this product still be compliance with 2011/65/EU Directive (allowed with 2011/65/EU Annex III of RoHS exemption with number 6(c),7(a),7(c)-1).

EFUP (Environment Friendly Use Period) value: 10 years.

Notes:

1. This product defined period of use is under normal condition.
2. In above part, CPU/Memory/ Hard Disk/CD-ROM/DVD-ROM/ Power are optional.
3. In above part, LCD Modules/ Touch Modules are for all-in-one product model.

Table of Contents

Chapter 1 - Product Specifications	1
1.1 Specifications.....	2
Chapter 2 – Hardware Information	5
2.1 Dimensions	6
2.2 Jumpers and Connectors	7
2.3 List of Jumpers	8
2.3.1 Setting Jumpers	8
2.3.2 Clear CMOS Jumper (JP1)	9
2.3.3 ATX/AT Mode Selection (JP2)	9
2.4 List of Connectors	10
2.4.1 1GbE LAN + USB 2.0 Stack Port (CN25)	11
2.4.2 Dual 2.5GbE LAN Port (CN2)	12
2.4.3 COM Port 1/2 (RS-232/422/485) (CN11)	13
2.4.4 Dual HDMI Port (CN1)	14
2.4.5 Reset Switch Wafer Box (CN4)	15
2.4.6 COM 3/COM 4 Wafer Box (RS-232/422/485) (CN12/CN13)	16
2.4.7 Phoenix Power Connector (CN23)	17
2.4.8 Digital I/O Wafer Box (CN10)	17
2.4.9 Digital I/O Port (Chassis Cable) (CN10)	18
2.4.10 2.5" SATA HDD Connector (CN9)	19
2.4.11 M.2 2230 E-Key Slot (CN15)	20
2.4.12 RTC Battery (BAT1)	22
2.4.13 Power Button (SW1)	22
2.4.14 Remote Button Connector (CN5)	23
2.4.15 Dual USB 2.0 Wafer Box (CN17/CN18)	24
2.4.16 M.2 3052 B-Key Slot (CN16)	25

2.4.17	M.2 2280 M-Key Slot (CN14).....	27
2.4.18	Dual USB 3.2 Port (CN19/CN20).....	29
2.4.19	Audio Connector (CN23).....	30
2.4.20	SPI Flash Header (CN6).....	31
2.4.21	Micro SIM Slot (SIM1).....	32
2.4.22	DDR5 SODIMM Slots (DIMM1/DIMM2)	33
2.5	Hardware Installation.....	34
2.5.1	2.5" HDD Installation.....	34
2.5.2	DDR5 SODIMM Installation	35
2.5.3	M.2 2280 Card Installation.....	36
2.5.4	M.2 2230/3052 Card Installation	37
Chapter 3 - AMI BIOS Setup.....		38
3.1	System Test and Initialization	39
3.2	AMI BIOS Setup.....	40
3.3	Setup Submenu: Main.....	41
3.4	Setup Submenu: Advanced	42
3.4.1	CPU Configuration	43
3.4.2	Memory Configuration	44
3.4.3	PCH-FW Configuration	45
3.4.3.1	Firmware Update Configuration.....	46
3.4.4	Hardware Monitor	47
3.4.5	Power Management.....	48
3.4.6	AAEON BIOS Robot.....	49
3.4.6.1	Device Detecting Configuration.....	51
3.5	Setup Submenu: System I/O.....	57
3.5.1	Storage Configuration.....	58
3.5.1.1	NVMe Configuration	59
3.5.1.2	NVMe Configuration (Cont.).....	60

3.5.2	HD Audio Configuration	61
3.5.3	Digital IO Port Configuration	62
3.5.4	SIO Configuration.....	64
3.5.4.1	Serial Port 1	65
3.5.4.2	Serial Port 2	66
3.5.4.3	Serial Port 3	67
3.5.4.4	Serial Port 4	68
3.5.5	Serial Port Console Redirection.....	69
3.5.5.1	Console Redirection Settings (COM0)	70
3.5.5.2	Console Redirection Settings (Out-of-Band Mgmt Port).....	72
3.6	Setup Submenu: Security	74
3.6.1	Trusted Computing.....	75
3.6.2	Secure Boot	77
3.6.2.1	Key Management	78
3.7	Setup Submenu: Boot.....	80
3.7.1	UEFI BBS Priorities	81
3.8	Setup Submenu: Save & Exit	82
3.9	Setup Submenu: MEBx.....	83
Chapter 4 – Drivers Installation		84
4.1	Drivers Download and Installation.....	85
Appendix A – I/O Information		86
A.1	I/O Address Map.....	87
A.2	Memory Address Map	88
A.3	IRQ Mapping Chart	89

Chapter 1

Product Specifications

1.1 Specifications

System	
CPU	Intel® Core™ Ultra 5 Processor 125H Intel® Core™ Ultra 7 Processor 155H
Chipset	Intel® SoC
System Memory	DDR5 5600 MT/s SODIMM Slot x 2, up to 64GB Note: One DIMM slot can be user-populated via rear chassis access. Second DIMM slot is not user-accessible, but module preinstallation is available upon request.
Display Interface	HDMI x 2 (4K @60Hz)
Storage Device	M.2 2280 M-Key x 1 (NVMe PCIe SSD, quick access tray design) 2.5" SATA HDD/SSD x 1 (quick access tray design)
Ethernet	RJ-45 x 2 for 2.5GbE LAN (Intel® Ethernet Controller I226) RJ-45 x 1 for GbE LAN (Intel® Ethernet Connection I219)
I/O	HDMI x 2 USB 3.2 Gen 2 (Type-A) x 4 USB 2.0 (Type-A) x 2 DB-9 Male x 2 for RS-232/422/485 3.5mm Jack x 1 for Mic-in/Line-out DB-15 male x 1 for 8-bit DIO Remote Power x 1 Power Button with LED x 1

System

Expansion	M.2 2280 M-Key x 1 (PCIe [x4] for NVMe Storage)
	M.2 2230 E-Key x 1 (for Wi-Fi)
	M.2 3052 B-Key x 1 (for 5G/LTE)
	SIM Slot x 1
Indicator	Sys LED Storage active LED
OS Support	Windows® 11 Pro
	Windows® 11 IoT Enterprise
	Linux Ubuntu 24.04.01 and above

Power Supply

Power Requirement	9V ~ 36V DC input via 3-pin Terminal Block Connector
-------------------	--

Mechanical

Mounting	Wall Mount
Dimensions (W x H x D)	Without Bracket:
	8.66" x 6.06" x 2.42" (220mm x 154mm x 62.1mm)
	With Bracket:
	10.7" x 6.1" x 3.0" (272mm x 154mm x 76.1mm)
Gross Weight	6.6 lbs. (3.2 kg)
Net Weight	4.9 lbs. (2.4 kg)

Environmental

Operating Temperature	-4°F ~140°F (-20°C ~ 60°C), IEC60068-2 with 0.7 m/s
	AirFlow, with wide temperature Memory/Storage
Storage Temperature	-40°F ~ 176°F (-40°C ~ 80°C)
Storage Humidity	5 ~ 95% @ 40°C, non-condensing
Anti-Vibration	2 Grms/ 5 ~ 500Hz/ operation (with SSD)


Environmental

Anti-Shock	30G, IEC60068-2, half sine, 11 ms duration (with SSD)
Certification	CE/FCC Class A


Chapter 2

Hardware Information

2.1 Dimensions

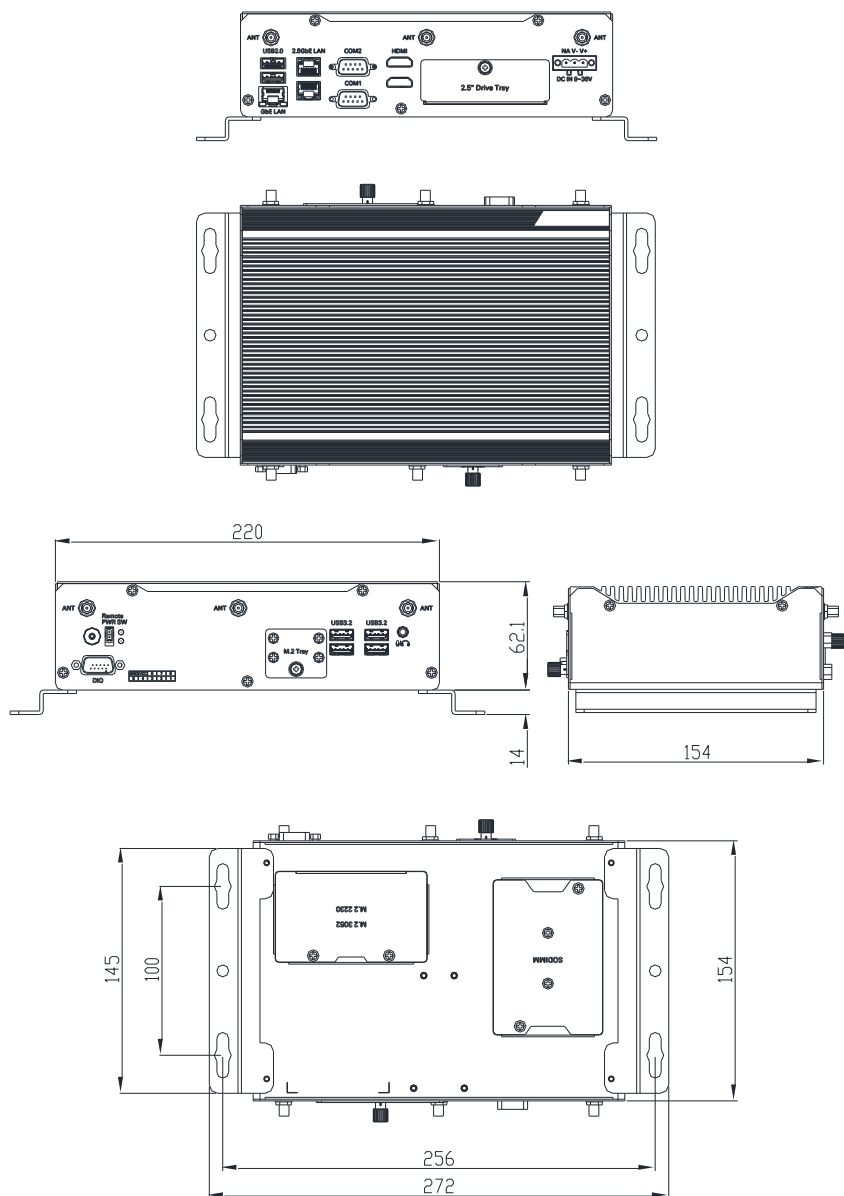

2.2 Jumpers and Connectors

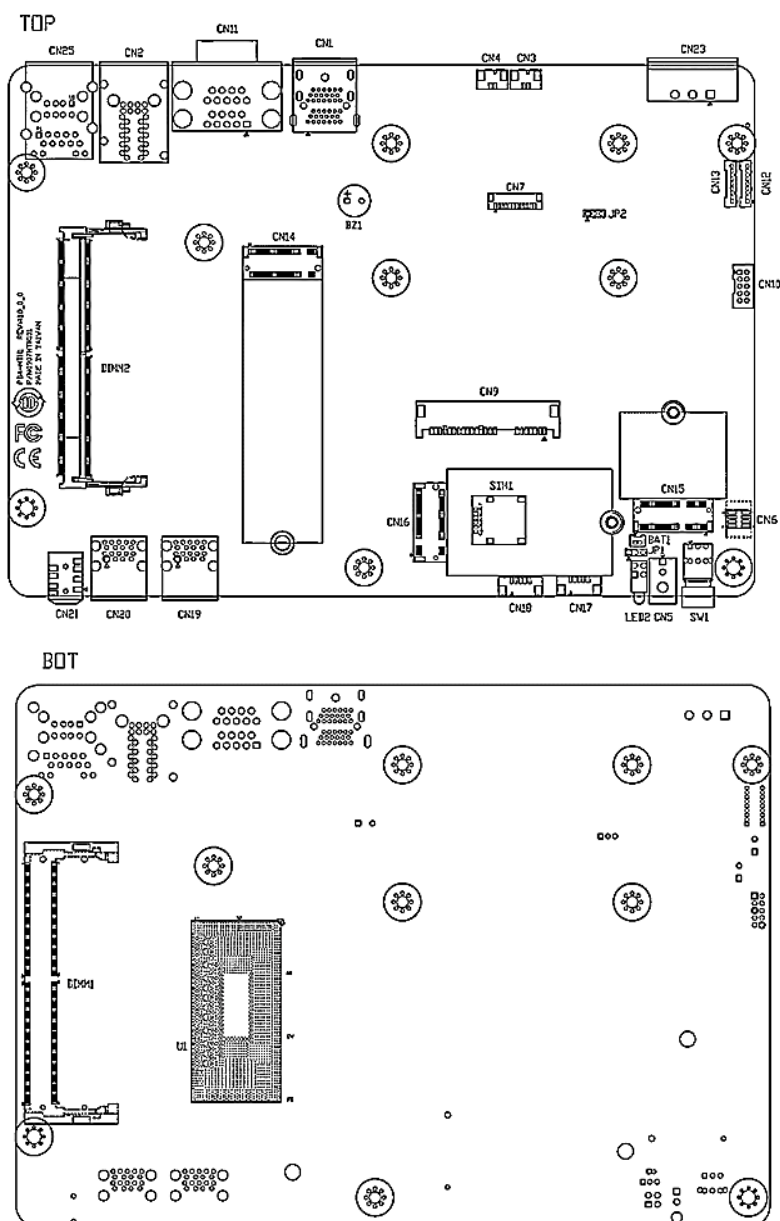

2.3 List of Jumpers


Please refer to the table below for all of the system's jumpers that you can configure for your application.

Label	Function
JP1	CMOS Control Selection
JP2	ATX/AT Mode Selection

2.3.1 Setting Jumpers

The BOXER-6647-MTH comes with several jumpers which allow you to configure the system by either setting the jumper to "open" or "closed"; or by selecting certain pins. A closed jumper has two pins connected with a jumper clip, while an open jumper has no pins connected.


For jumpers with multiple pins, this guide uses "pins A-B" to notate which pins should be connected by a jumper clip. For example, "pins 1-2" means you should connect pins 1 and 2, while "pins 2-3" means you should connect pins 2 and 3.

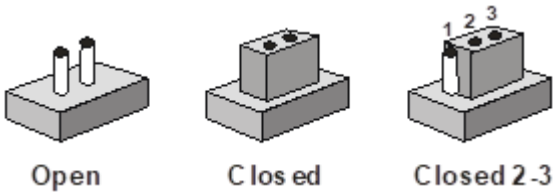


A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any questions about how best to configure the system for your application, contact your AAEON representative or visit our website to talk with our support team.

2.3.2 Clear CMOS Jumper (JP1)

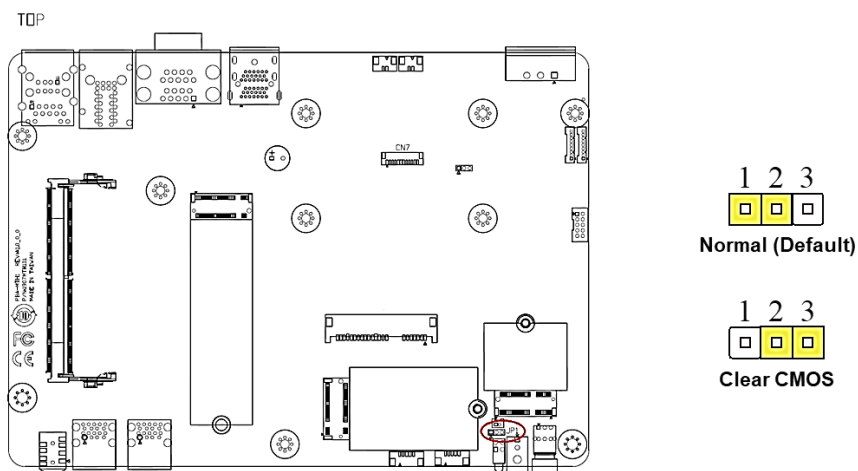

2.3.3 ATX/AT Mode Selection (JP2)


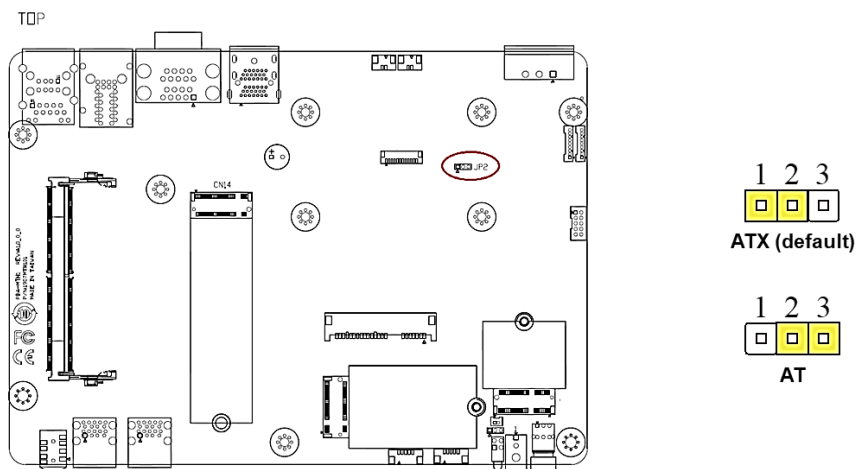


2.4 List of Connectors

Please refer to the table below for all of the system's connectors that you can configure for your application


Label	Function
CN25	1GbE LAN + USB 2.0 Stack Port
CN2	Dual 2.5GbE LAN Port
CN11	COM Port 1/2 (RS-232/422/485)
CN1	Dual HDMI Port
CN4	Reset Switch Wafer Box
CN13	COM 4 Wafer Box (RS-232/422/485)
CN12	COM 3 Wafer Box (RS-232/422/485)
CN23	Phoenix Power Connector
CN10	Digital I/O Wafer Box
CN9	2.5" SATA HDD Connector
CN15	M.2 2230 E-Key Slot
BAT1	RTC Battery
SW1	Power Button
CN5	Remote Button Connector
CN17/CN18	Dual USB 2.0 Wafer Box
CN16	M.2 3052 B-Key Slot
CN14	M.2 2280 M-Key Slot
CN19	Dual USB 3.2 Port
CN20	Dual USB 3.2 Port
CN21	Audio Connector
CN6	SPI Flash Header
SIM1	Micro SIM Slot
DIMM1	DDR5 SODIMM Slot
DIMM2	DDR5 SODIMM Slot

2.4.1 1GbE LAN + USB 2.0 Stack Port (CN25)

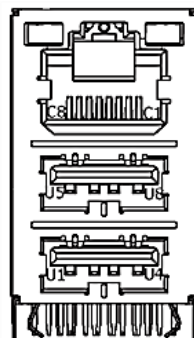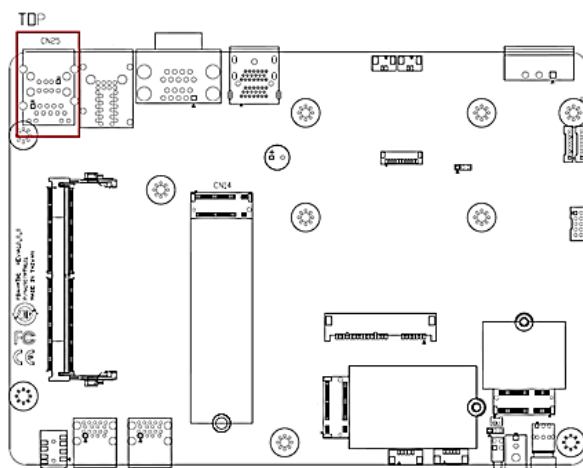

Pin	Pin Name	Signal Type	Signal level
C1	LAN1_MDI0P	DIFF	
C2	LAN1_MDI0N	DIFF	
C3	LAN1_MDI1P	DIFF	
C4	LAN1_MDI1N	DIFF	
C5	LAN1_MDI2P	DIFF	
C6	LAN1_MDI2N	DIFF	
C7	LAN1_MDI3P	DIFF	
C8	LAN1_MDI3N	DIFF	
U1	VCC_USB7	PWR	+5V
U2	USB6-	DIFF	
U3	USB6+	DIFF	
U4	GND	GND	
U5	VCC_USB8	PWR	+5V
U6	USB7-	DIFF	
U7	USB7+	DIFF	
U8	GND	GND	


2.4.2 Dual 2.5GbE LAN Port (CN2)

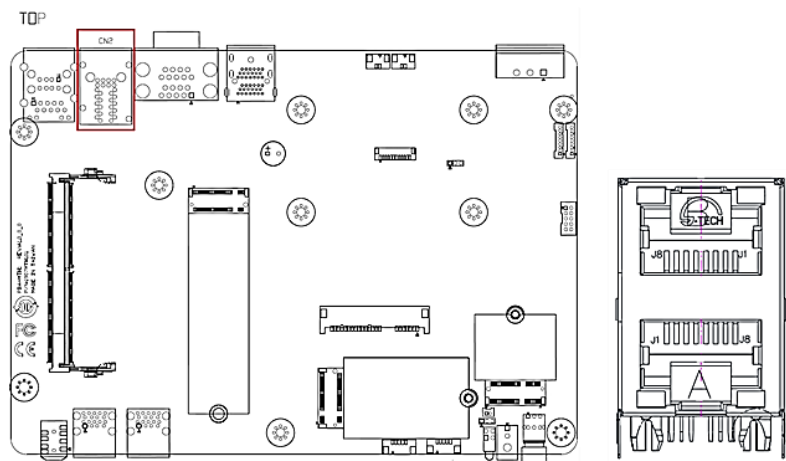

Down			
Pin	Signal	Signal Type	Signal Level
J1	LAN2_MD10P	DIFF	
J2	LAN2_MD10N	DIFF	
J3	LAN2_MD11P	DIFF	
J4	LAN2_MD11N	DIFF	
J5	LAN2_MD12P	DIFF	
J6	LAN2_MD12N	DIFF	
J7	LAN2_MD13P	DIFF	
J8	LAN2_MD13N	DIFF	


Up			
Pin	Signal	Signal Type	Signal Level
J1	LAN3_MD10P	DIFF	
J2	LAN3_MD10N	DIFF	
J3	LAN3_MD11P	DIFF	
J4	LAN3_MD11N	DIFF	
J5	LAN3_MD12P	DIFF	
J6	LAN3_MD12N	DIFF	
J7	LAN3_MD13P	DIFF	
J8	LAN3_MD13N	DIFF	

2.4.3 COM Port 1/2 (RS-232/422/485) (CN11)

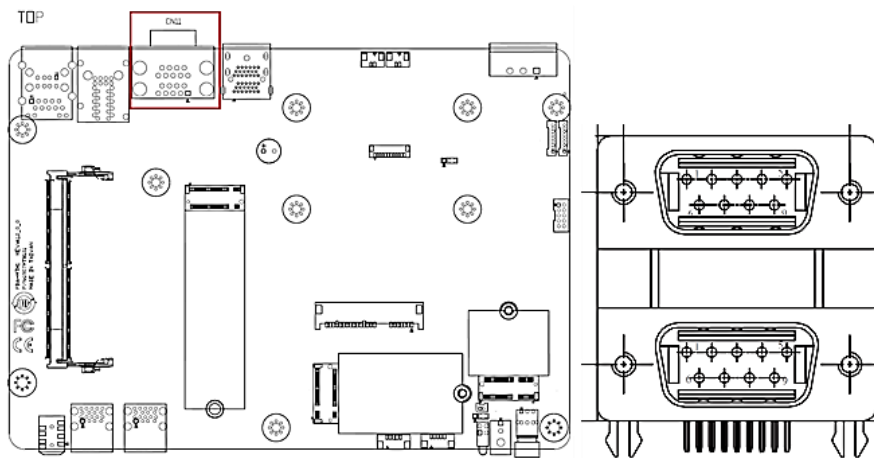

Pin	Pin Name	Signal Type	RS-422	RS-485
1	DCD	IN	RS422_TX-	RS485_D-
2	RX	IN	RS422_TX+	RS485_D+
3	TX	OUT	RS422_RX+	
4	DTR	OUT	RS422_RX-	
5	GND	GND		
6	DSR	IN		
7	RTS	OUT		
8	CTS	IN		
9	RI1	IN		


2.4.4 Dual HDMI Port (CN1)

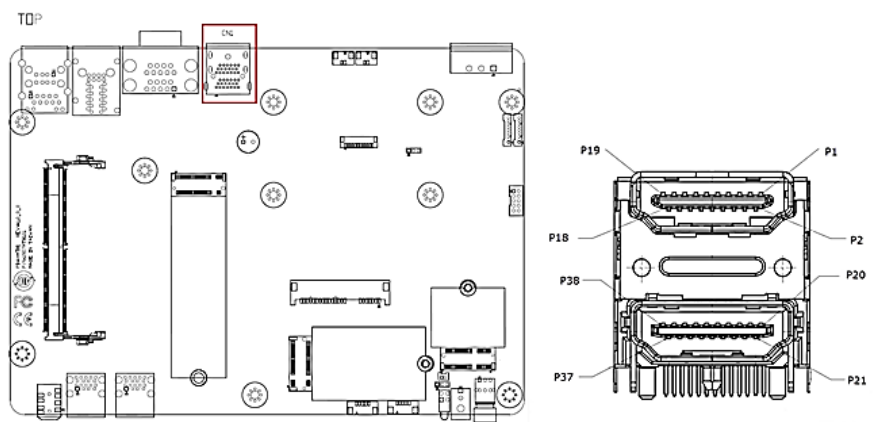

Pin	Pin Name	Signal Type	Signal level
P1	HDMI1_DATA2_P	DIFF	
P2	GND	GND	
P3	HDMI1_DATA2_N	DIFF	
P4	HDMI1_DATA1_P	DIFF	
P5	GND	GND	
P6	HDMI1_DATA1_N	DIFF	
P7	HDMI1_DATA0_P		
P8	GND	GND	
P9	HDMI1_DATA0_n		
P10	HDMI1_CLK_P	DIFF	
P11	GND	GND	
P12	HDMI1_CLK_N	DIFF	
P13	CEC		3.3V
P14	NC		
P15	HDMI1_SCL		
P16	HDMI1_SDA		
P17	GND	GND	
P18	+V5S_HDMI_CON	PWR	5V
P19	HDMI1_HPD		5V
P20	HDMI2_DATA2_P		
P21	GND	GND	
P22	HDMI2_DATA2_N		
P23	HDMI2_DATA1_P		
P24	GND	GND	


Pin	Pin Name	Signal Type	Signal level
P25	HDMI2_DATA1_N		
P26	HDMI2_DATA0_P		
P27	GND	GND	
P28	HDMI2_DATA0_N		
P29	HDMI2_CLK_P		
P30	GND	GND	
P31	HDMI2_CLK_N		
P32	CEC		3.3V
P33	NC		
P34	HDMI2_SCL		
P35	HDMI2_SDA		
P36	GND	GND	
P37	+V5S_HDMI_CON		5V
P38	HDMI2_HPD		5V

2.4.5 Reset Switch Wafer Box (CN4)

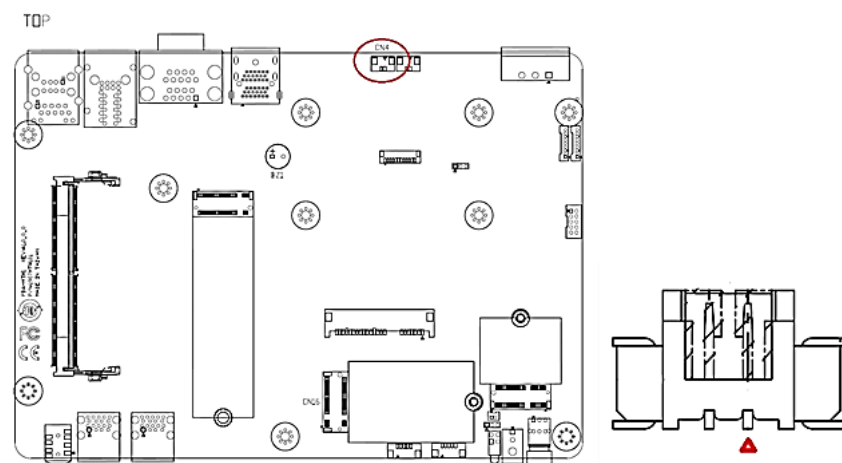


Pin	Pin Name	Signal Type	Signal level
1	HWRST#	IN	
2	GND		

2.4.6 COM 3/COM 4 Wafer Box (RS-232/422/485) (CN12/CN13)

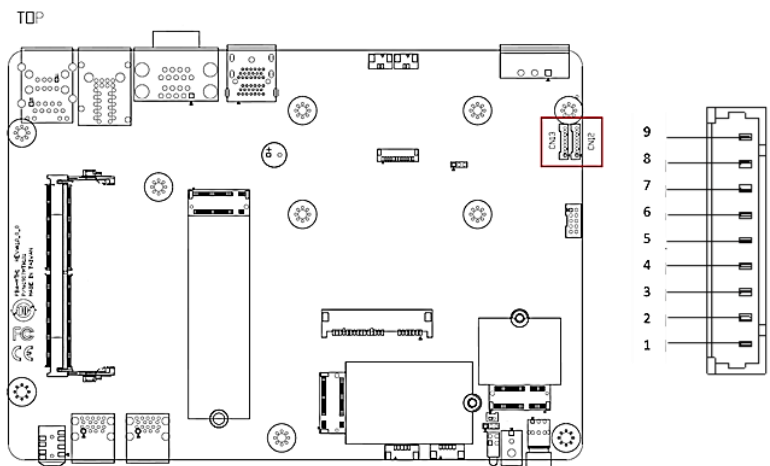


Pin	Pin Name	Signal Type	RS-422	RS-485
1	DCD	IN	RS422_TX-	RS485_D-
2	DSR	IN		
3	RX	IN	RS422_TX+	RS485_D+
4	RTS	OUT		
5	TX	OUT	RS422_RX+	
6	CTS	IN		
7	DTR	OUT	RS422_RX-	
8	RI (Default: Disable)	IN		
9	GND	GND		

2.4.7 Phoenix Power Connector (CN23)

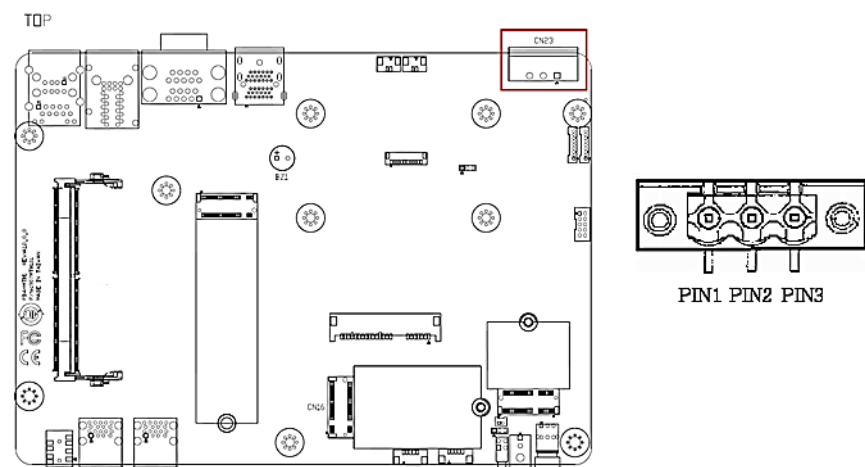



Pin	Pin Name	Signal Type	Signal level
1	VIN	PWR	+9V ~ +36V
2	GND	GND	
3	NA	NA	

2.4.8 Digital I/O Wafer Box (CN10)

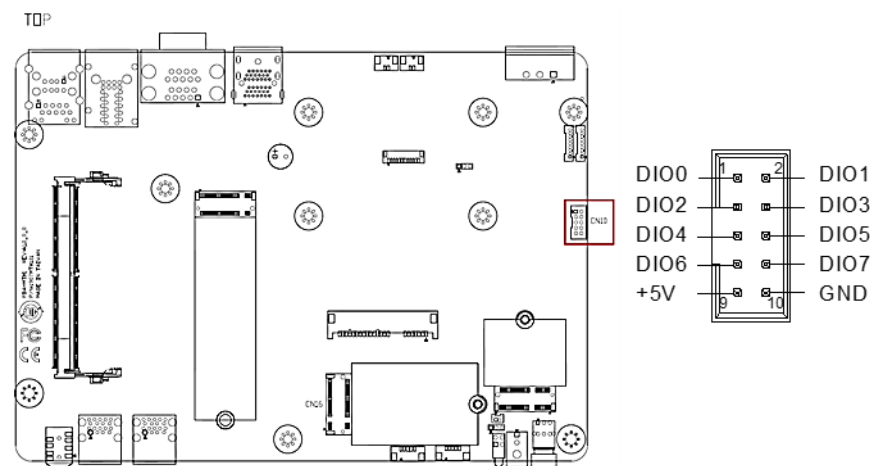


Pin	Pin Name	Signal Type	Signal level
1	DIO0	I/O	+5V
2	DIO1	I/O	+5V
3	DIO2	I/O	+5V
4	DIO3	I/O	+5V
5	DIO4	I/O	+5V
6	DIO5	I/O	+5V
7	DIO6	I/O	+5V
8	DIO7	I/O	+5V
9	+5V	PWR	+5V
10	GND	GND	

2.4.9 Digital I/O Port (Chassis Cable) (CN10)

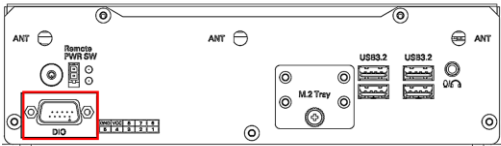

Pin	Pin Name	Signal Type	Signal level
1	DIO0	I/O	+5V
2	DIO1	I/O	+5V
3	DIO2	I/O	+5V
4	DIO3	I/O	+5V
5	DIO4	I/O	+5V
6	DIO5	I/O	+5V
7	DIO6	I/O	+5V
8	DIO7	I/O	+5V
9	+5V	PWR	+5V
10	GND	GND	


2.4.10 2.5" SATA HDD Connector (CN9)

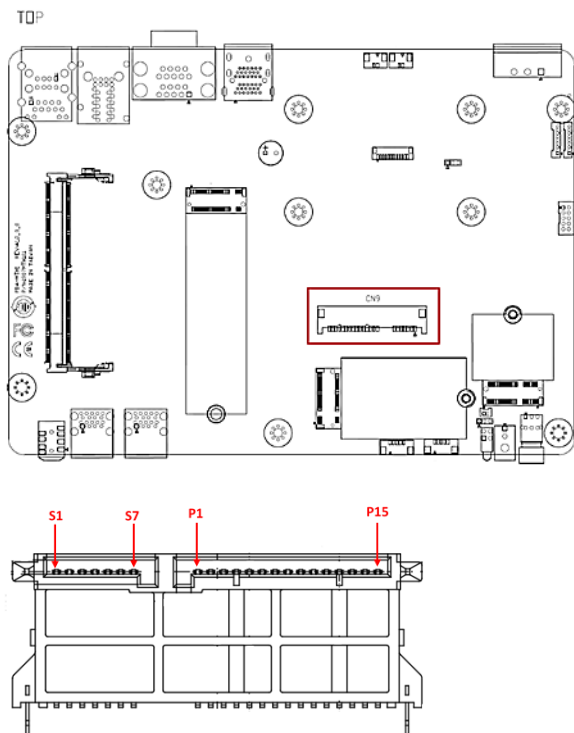

Pin	Pin Name	Signal Type	Signal level
S1	GND	GND	
S2	SATA0_TXP	DIFF	
S3	SATA0_TXN	DIFF	
S4	GND	GND	
S5	SATA0_RXN	DIFF	
S6	SATA0_RXP	DIFF	
S7	GND	GND	
P1	+V3P3S	PWR	+3.3V
P2	+V3P3S	PWR	+3.3V
P3	+V3P3S	PWR	+3.3V
P4	GND	GND	
P5	GND	GND	
P6	GND	GND	
P7	+V5S	PWR	+5V
P8	+V5S	PWR	+5V

Pin	Pin Name	Signal Type	Signal level
P9	+V5S	PWR	+5V
P10	GND	GND	
P11	NA	NA	
P12	GND	GND	
P13	+V12S	PWR	+12V
P14	+V12S	PWR	+12V
P15	+V12S	PWR	+12V


2.4.11 M.2 2230 E-Key Slot (CN15)

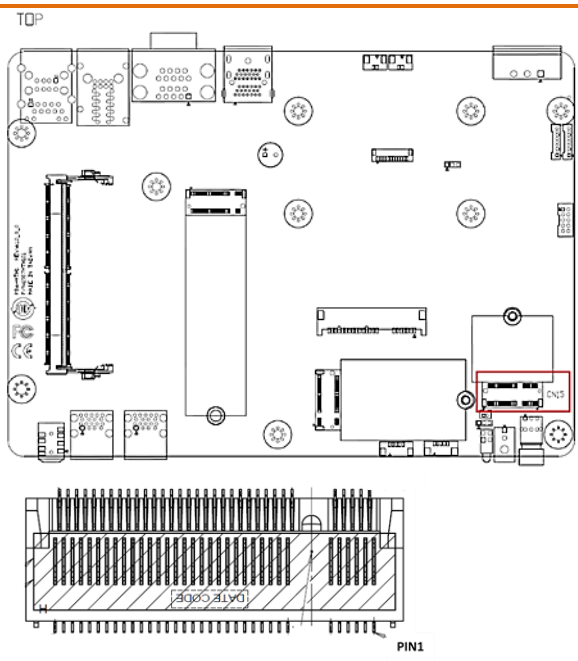

Pin	Pin Name	Signal Type	Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	2	+V3P3_NGFF_E	PWR	+3.3V
3	USB_PP4	DIFF	4	+V3P3_NGFF_E	PWR	+3.3V
5	USB_PN4	DIFF	6	NC		
7	GND	GND	8	M.2_BT_PCMCLK_C	IN	+3.3V
9	NC		10	M.2_BT_PCMFRM_C	IN	+3.3V
11	NC		12	M.2_BT_PCMIN_C	OUT	+3.3V
13	NC		14	M.2_BT_PCMOUT_C	IN	+3.3V
15	NC		16	NC		


Pin	Pin Name	Signal Type	Pin	Pin Name	Signal Type	Signal Level
17	NC		18	GND	GND	
19	NC		20	KEYE_UART_WAKE_N_3V3	OUT	+3.3V
21	NC		22	NC		
23	NC					
			32	NC		
33	GND	GND	34	NC		
35	PCIE7_TXP	DIFF	36	NC		
37	PCIE7_TXN	DIFF	38	CL_RST#	IN	+3.3V
39	GND	GND	40	CL_DATA		+3.3V
41	PCIE7_RXP	DIFF	42	CL_CLK	IN	+3.3V
43	PCIE7_RXN	DIFF	44	GPPC_F6_CNV_PA_BLANKING	OUT	+3.3V
45	GND	GND	46	CNV_MFUART2_TXD	IN	+3.3V
47	CLKOUT_PCIE_P5	DIFF	48	CNV_MFUART2_RXD	OUT	+3.3V
49	CLKOUT_PCIE_N5	DIFF	50	SUSCLK	IN	+3.3V
51	GND	GND	52	BUF_PLT_RST#_3V3	IN	+3.3V
53	PCIE_CLKREQ#5_3V3	OUT	54	GPP_B18_ISH_I2C2_SDA_3V3	IN	+3.3V
55	KEYE_WAKE#_3V3	OUT	56	GPP_E3_PROC_GP0_3V3	IN	+3.3V
57	GND	GND	58	SMB_DATA_3V3		
59	NC		60	SMB_CLK_3V3	IN	
61	NC		62	SMB_ALERT_3V3	IN	
63	GND	GND	64	NC		
65	NC		66	NC		
67	NC		68	NC		
69	GND	GND	70	NC		
71	NC		72	+V3P3_NGFF_E	PWR	+3.3V
73	NC		74	+V3P3_NGFF_E	PWR	+3.3V
75	GND	GND				

2.4.12 RTC Battery (BAT1)

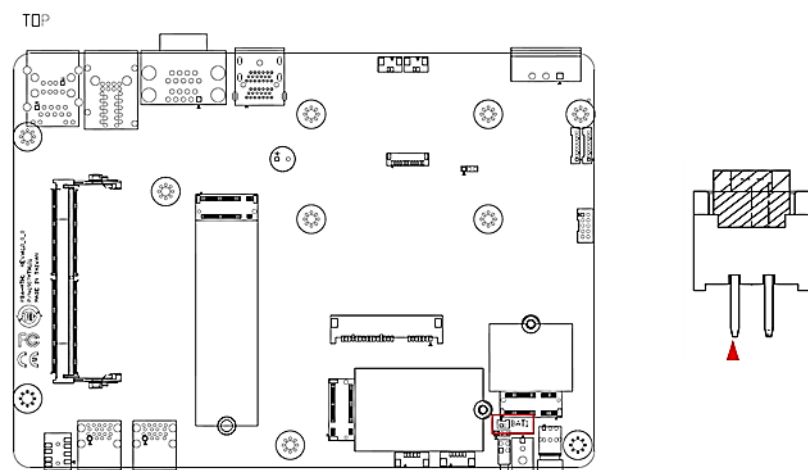


Pin	Pin Name	Signal Type	Signal Level
1	+V3P3A_RTC	PWR	+3.3V
2	GND	GND	

2.4.13 Power Button (SW1)

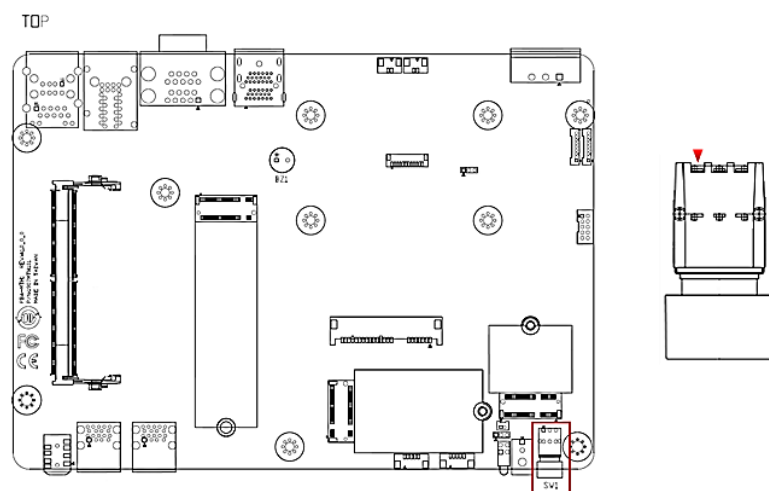


Pin	Pin Name	Signal Type	Signal Level
1	NC		
2	GND	GND	
3	PANSWH#	OUT	
4	PANSWH#	OUT	
5	PWB_LED_G		+5V
6	PWB_LED_B		+5V

2.4.14 Remote Button Connector (CN5)

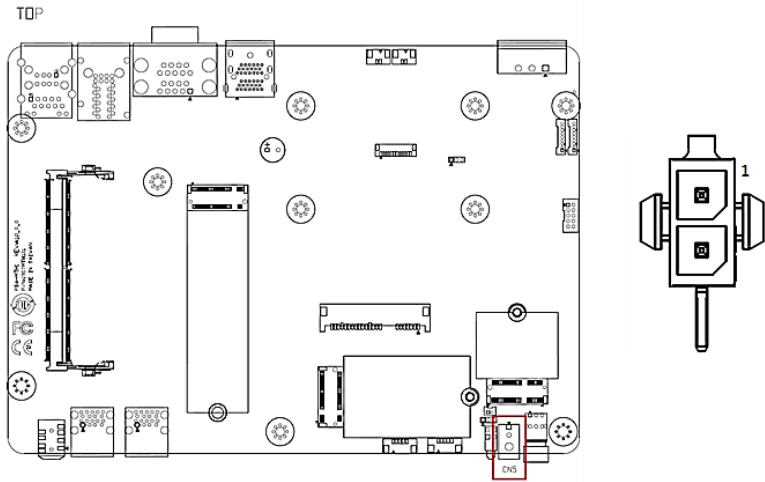


Pin	Pin Name	Signal Type	Signal Level
1	PWR_BUTTON#	IN	
2	GND		

2.4.15 Dual USB 2.0 Wafer Box (CN17/CN18)

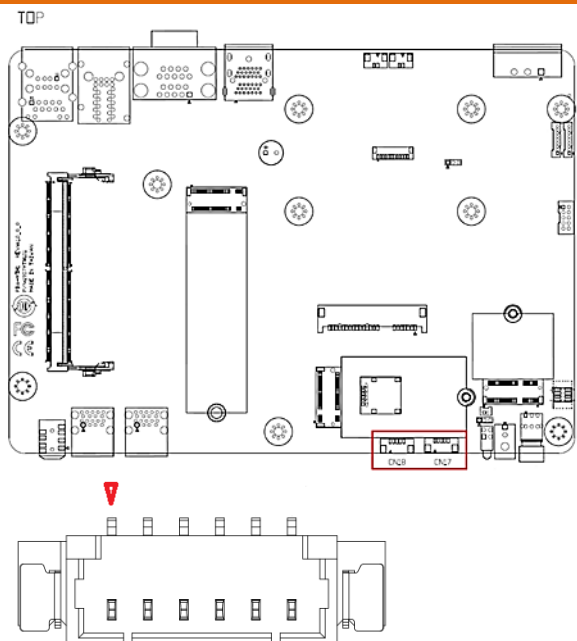

Pin	Pin Name	Signal Type	Signal Level
1	+5V	GND	+5V
2	USBD-	DIFF	
3	USBD+	DIFF	
4	GND	GND	
5	GND	GND	


2.4.16 M.2 3052 B-Key Slot (CN16)

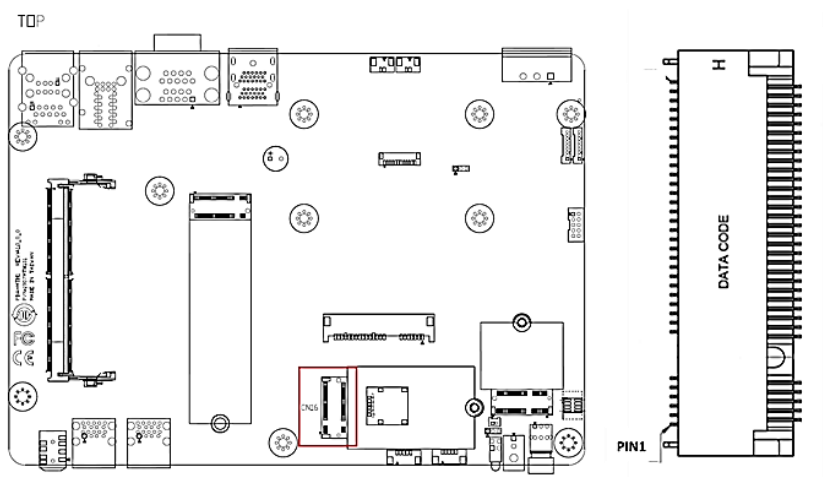

Pin	Pin Name	Signal Type	Pin	Pin Name	Signal Type	Signal Level
1	NC		2	+3P3V_NGFF_3052	PWR	+3.3V
3	GND	GND	4	+3P3V_NGFF_3052	PWR	+3.3V
5	GND	GND	6	FULL_CARD_POWER	OUT	+3.3V
7	USB_PP5		8	3GPW_EN	IN	+3.3V
9	USB_PN5		10	NC		
11	GND	GND	12			
			20	NC		
21	NC		22	NC		
23	NC		24	NC		
25	NC		26	NC		
27	GND	GND	28	NC		
29	USB3_RX2_N		30	UIM_RESET		
31	USB3_RX2_P		32	UIM_CLK		
33	GND	GND	34	UIM_DATA		
35	USB3_TX2_N		36	UIM_PWR1		
37	USB3_TX2_P		38	NC		
39	GND	GND	40	NC		
41	PCIE8_R-_SATA_R-		42	NC		
43	PCIE8_R+_SATA_R+		44	NC		

Pin	Pin Name	Signal Type	Pin	Pin Name	Signal Type	Signal Level
45	GND	GND	46	NC		
47	PCIE8_T-_SATA_T-		48	NC		
49	PCIE8_T+_SATA_T+		50	BUF_PLT_3052_RST#	IN	+3.3V
51	GND	GND	52	PCIE_CLKREQ#1	OUT	+3.3V
53	CLKOUT_PCIE_N1	OUT	54	KEYB_WAKE#_3V3	OUT	+3.3V
55	CLKOUT_PCIE_P1	OUT	56	NC		
57	GND	GND	58	NC		
59	NC		60	NC		
61	NC		62	NC		
63	NC		64	NC		
65	NC		66	NC		
67	BUF_PLT_3052_RST#		68	SUSCLK_3052		
69	NC		70	+3P3V_NGFF_3052	PWR	+3.3V
71	GND	GND	72	+3P3V_NGFF_3052	PWR	+3.3V
73	GND	GND	74	+3P3V_NGFF_3052	PWR	+3.3V
75	GND	GND				


2.4.17 M.2 2280 M-Key Slot (CN14)

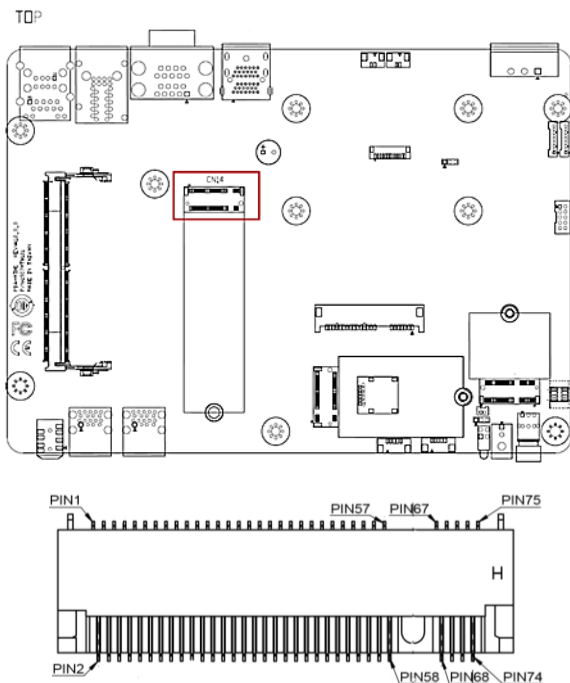

Pin	Pin Name	Signal Type	Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	2	+V3P3_NGFF	PWR	+3.3V
3	GND	GND	4	+V3P3_NGFF	PWR	+3.3V
5	PCIE16_RXN	IN	6	CARD_PWR_OFF_N	OUT	+3.3V
7	PCIE16_RXP	IN	8	NC		
9	GND	GND	10	NC		
11	PCIE16_TXN	OUT	12	+V3P3_NGFF	PWR	+3.3V
13	PCIE16_TXP	OUT	14	+V3P3_NGFF	PWR	+3.3V
15	GND	PWR	16	+V3P3_NGFF	PWR	+3.3V
17	PCIE15_RXN	IN	18	+V3P3_NGFF	PWR	+3.3V
19	PCIE15_RXP	IN	20	NC		
21	GND	PWR	22	NC		
23	PCIE15_TXN	OUT	24	NC		
25	PCIE15_TXP	OUT	26	NC		
27	GND	PWR	28	NC		
29	PCIE14_RXN	IN	30	NC		


Pin	Pin Name	Signal Type	Pin	Pin Name	Signal Type	Signal Level
31	PCIE14_RXP	IN	32	NC		
33	GND	GND	34	NC		
35	PCIE14_TXN	OUT	36	NC		
37	PCIE14_TXP	OUT	38	DEV_SLP	IN	+3.3V
39	GND	GND	40	SMB_CLK_M2		+1.8V
41	PCIE13_RXP	IN	42	SMB_DATA_M2		+1.8V
43	PCIE13_RXN	IN	44	NC		
45	GND	GND	46	NC		
47	PCIE13_TXN	OUT	48	NC		
49	PCIE13_TXP	OUT	50	BUF_PLT_RST_R	IN	+3.3V
51	GND	PWR	52	PCIE_CLKREQ#8_3V3	OUT	+3.3V
53	CLKOUT_PCIE_N8	OUT	54	M2_WAKE#_3V3	OUT	+3.3V
55	CLKOUT_PCIE_P8	OUT	56	NC		
57	GND	GND	58	NC		
67	NC		68	NC		
69	NC		70	+V3P3_NGFF	PWR	+3.3V
71	GND	GND	72	+V3P3_NGFF	PWR	+3.3V
73	GND	GND	74	+V3P3_NGFF	PWR	+3.3V
75	GND	GND				

2.4.18 Dual USB 3.2 Port (CN19/CN20)

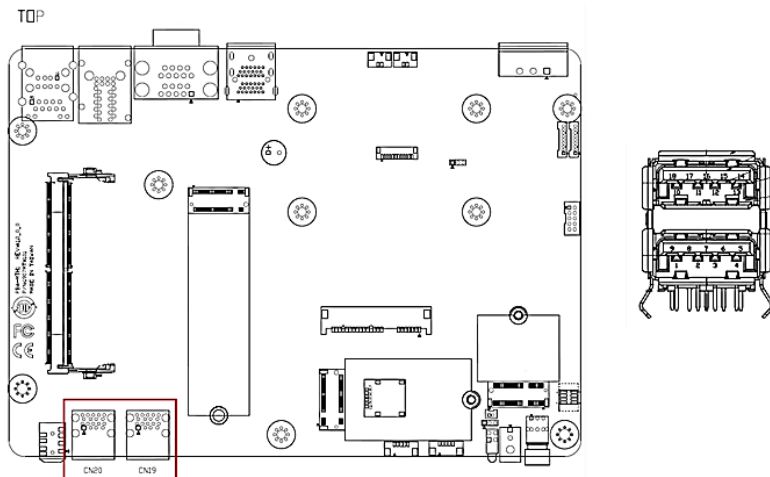



Pin	Pin Name	Signal Type	Signal Level
1	VCC_USB1	PWR	+5V
2	USB1-	DIFF	
3	USB1+	DIFF	
4	GND	GND	
5	USB3_RX1_N_C	DIFF	
6	USB3_RX1_P_C	DIFF	
7	GND	GND	
8	USB3_TX1_N_C	DIFF	
9	USB3_TX1_P_C	DIFF	
10	VCC_USB2	PWR	+5V
11	USB2-	DIFF	
12	USB2+	DIFF	
13	GND	GND	
14	USB3_RX2_N_C	DIFF	
15	USB3_RX2_P_C	DIFF	
16	GND	GND	
17	USB3_TX2_N_C	DIFF	
18	USB3_TX2_P_C	DIFF	

2.4.19 Audio Connector (CN23)

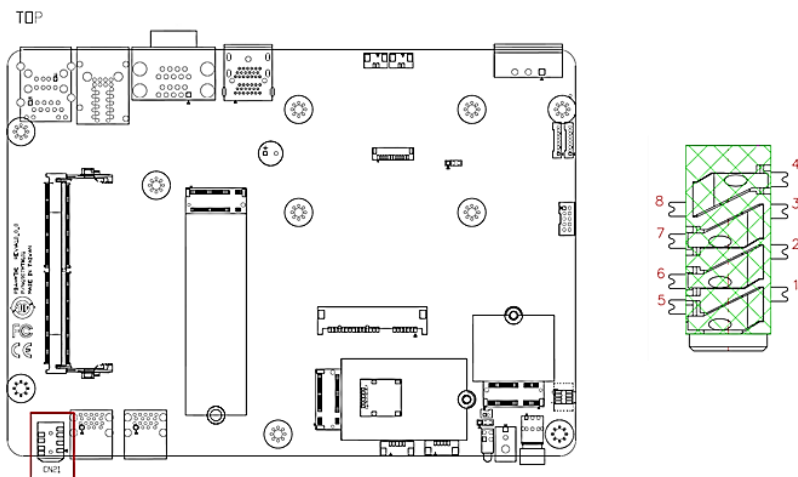


Pin	Signal	Signal Type	Signal Level
1	MIC_R	IN	
2	AUD_GND	AUD_GND	
3	LOUT_R	OUT	
4	NC		
5	NC		
6	HP_DET_3	IN	
7	NC		
8	LOUT_L	OUT	

2.4.20 SPI Flash Header (CN6)

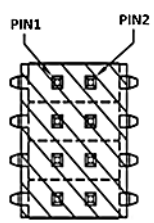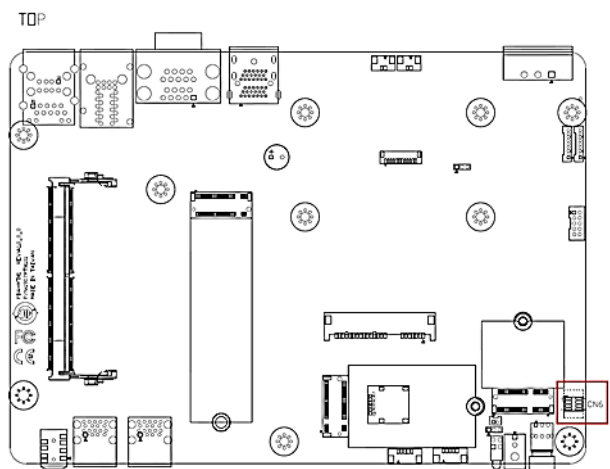


Pin	Signal	Signal Type	Signal Level
1	+V1P8M_SPI	PWR	+1.8V
2	GND	GND	
3	SPI_CE0#_CON	IN	
4	SPI_CLK_CON	IN	
5	SPI_SO_CON	IN	
6	SPI_SI_CON	IN	
7	NC		
8	NC		

2.4.21 Micro SIM Slot (SIM1)

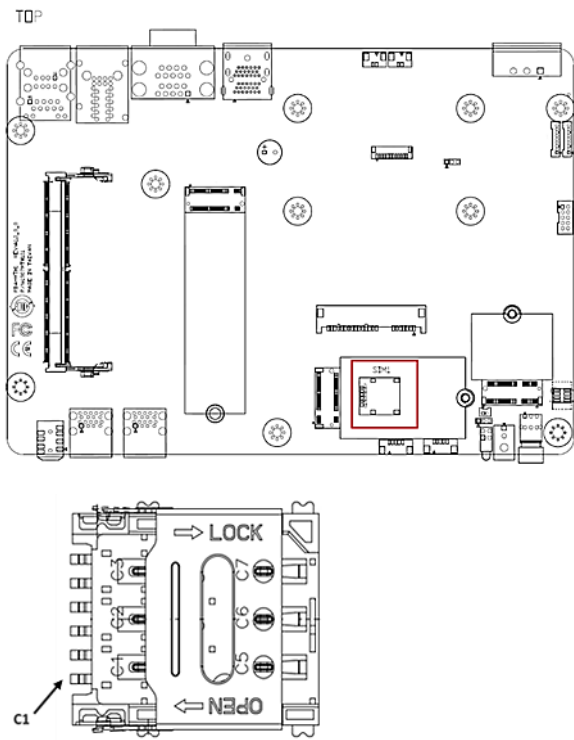

Pin	Signal	Signal Type	Signal Level
C1	UIM_PWR	PWR	
C2	UIM_RESET	IN	
C3	UIM_CLK	IN	
C5	GND	GND	
C6	NA	NA	
C7	UIM_DATA	I/O	

2.4.22 DDR5 SODIMM Slots (DIMM1/DIMM2)

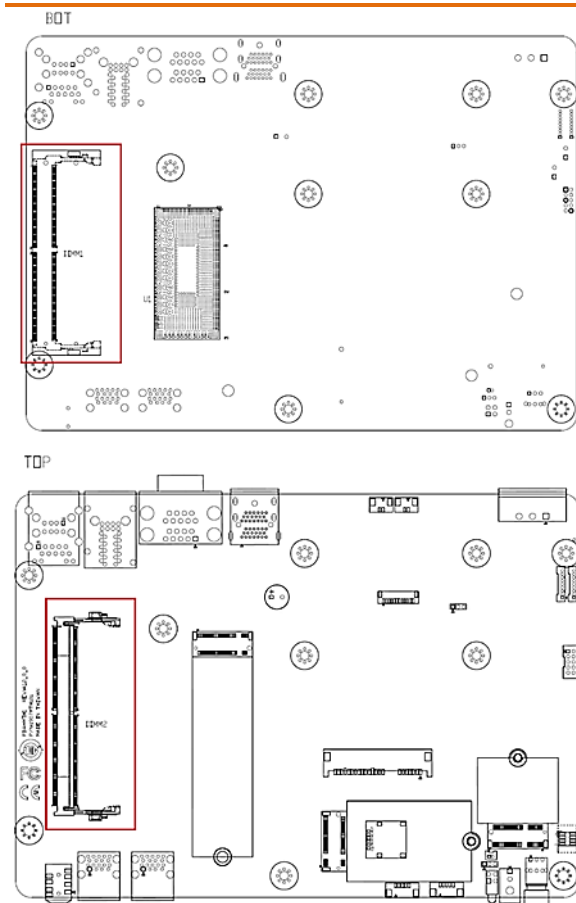

Note: Standard specification.

2.5 Hardware Installation

2.5.1 2.5" HDD Installation


Step 1: Locate the removable 2.5" SATA Drive Bay on the front I/O side of the chassis.

Step 2: Unscrew the outer pins and remove the 2.5" SATA Drive Bay from the chassis.

Step 3: Unscrew the four (4) screws at each corner of the 2.5" SATA Drive Bay, and insert the 2.5" HDD into the 2.5" SATA Drive Bay.

Step 4: Secure the HDD by reassembling the four (4) screws as shown.

Step 5: Reinsert the 2.5" SATA Drive Bay into the chassis, securing the outer pins once inserted.

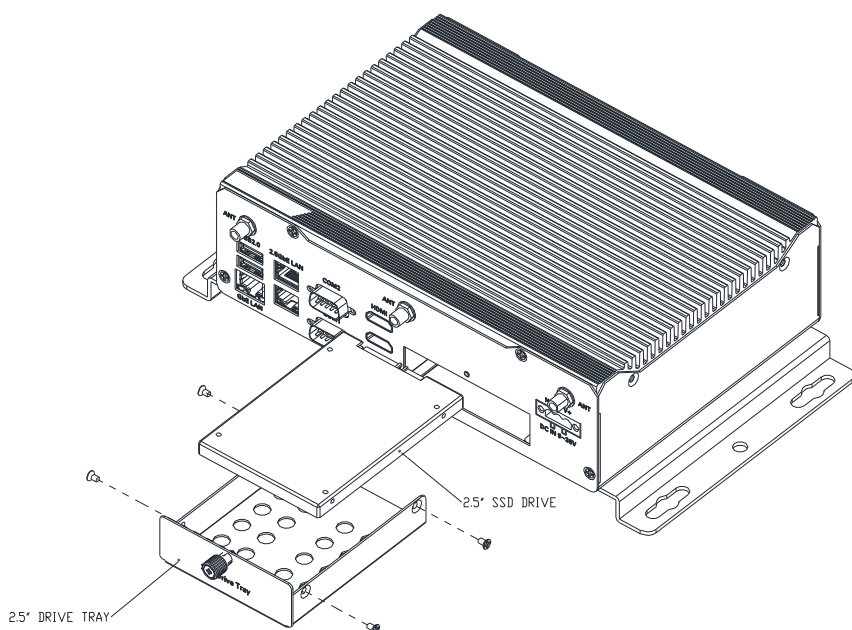


2.5.2 DDR5 SODIMM Installation

Step 1: Access the DDR5 SODIMM slots by removing the two (2) screws on the panel marked 'SODIMM' on the bottom-side of the chassis as shown below.


Step 2: Insert two (2) thermal pads followed by DDR5 SODIMM(s).

Step 3: Insert third thermal pad prior to replacing the bottom cover and reaffixing the two (2) screws removed during step 1.

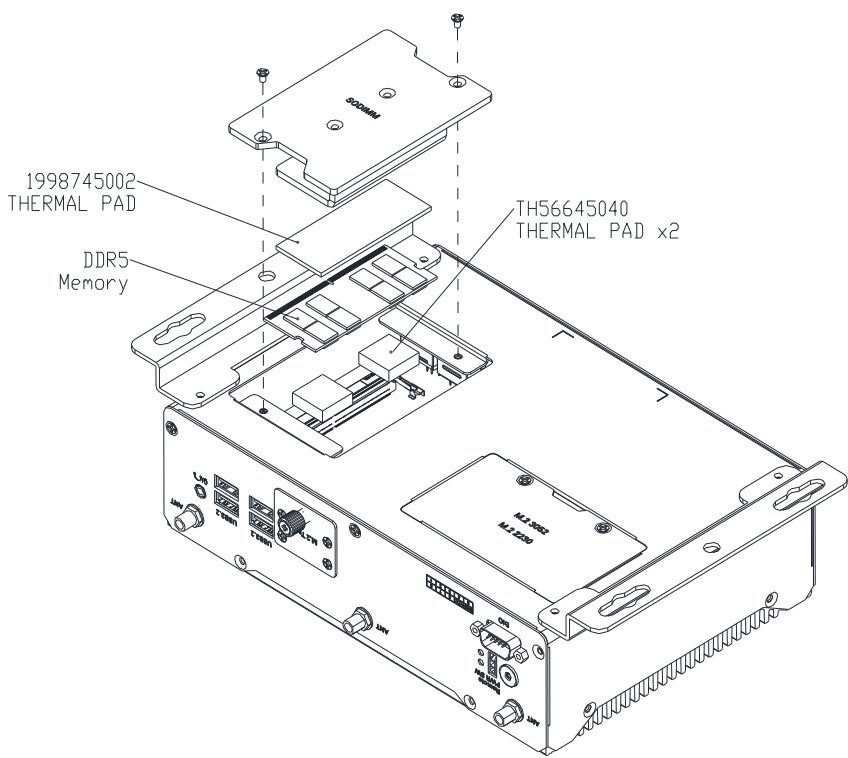


2.5.3 M.2 2280 Card Installation

Note the location of the M.2 2280 tray on the frontside of the chassis.

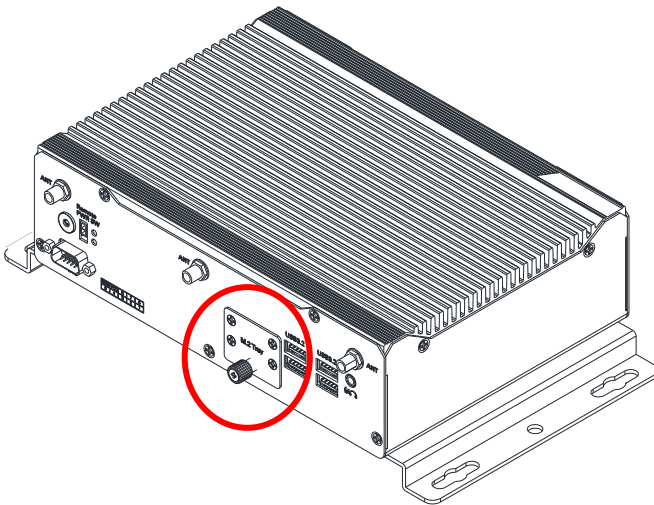

Affix the M.2 2280 card to the tray using four (4) M3 Flat Screws, followed by a thermal pad using one (1) M3 screw. Complete assembly with the addition of the module heatsink.

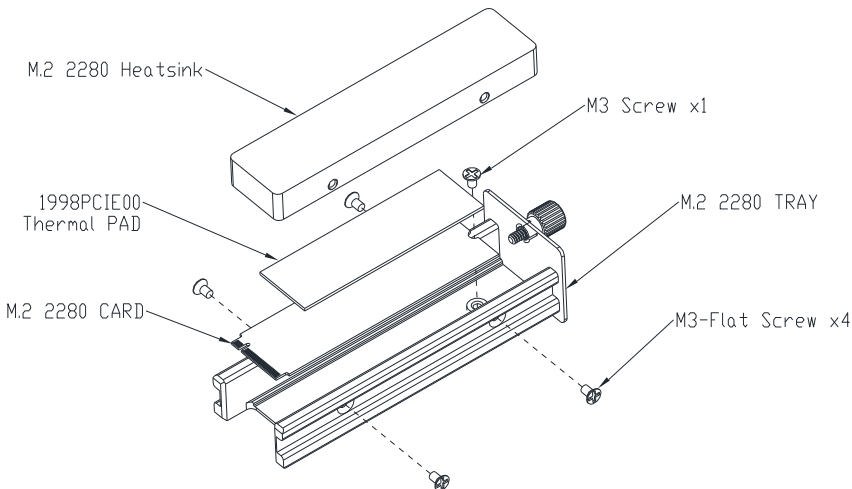


2.5.4 M.2 2230/3052 Card Installation

Step 1: Access the M.2 Key slots by removing the two (2) screws on the panel marked 'M.2 2230/M.2 3052' on the bottom-side of the chassis as shown below.

Step 2: Insert modules as required.

Step 3: Reaffix the screw removed during step 1.

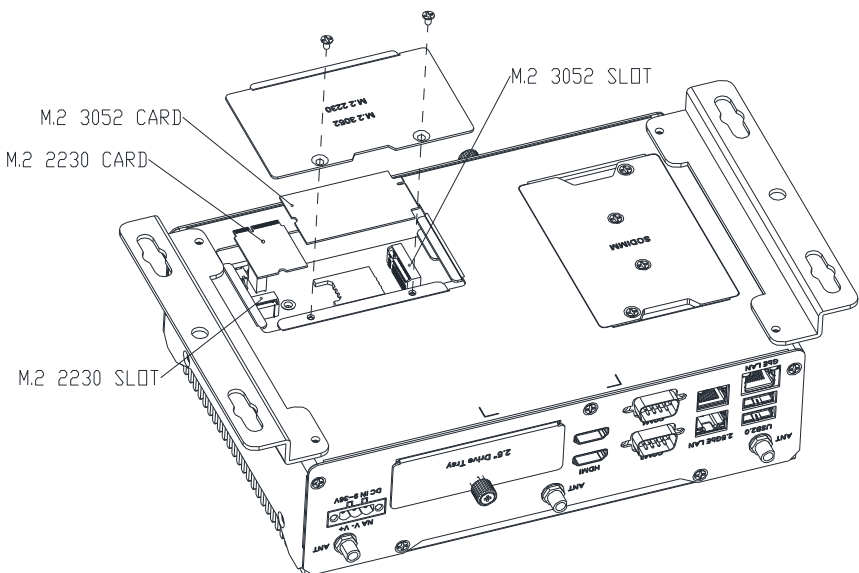

S

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization. If an error, fatal or non-fatal, is encountered, a few short beeps or an error message will be outputted. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be outputted, in which case you will need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- You are starting your system for the first time
- You have changed your system's hardware
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention, which is to be replaced once emptied.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Enable/ Disable boot option for legacy network devices

System I/O – Enable/ Disable system I/O device

Security – The setup administrator password can be set here

Boot – Enable/ Disable quiet Boot Option


Save & Exit – Save your changes and exit the program

MEBx – Intel® Management Engine BIOS Extension

3.3 Setup Submenu: Main



3.4 Setup Submenu: Advanced

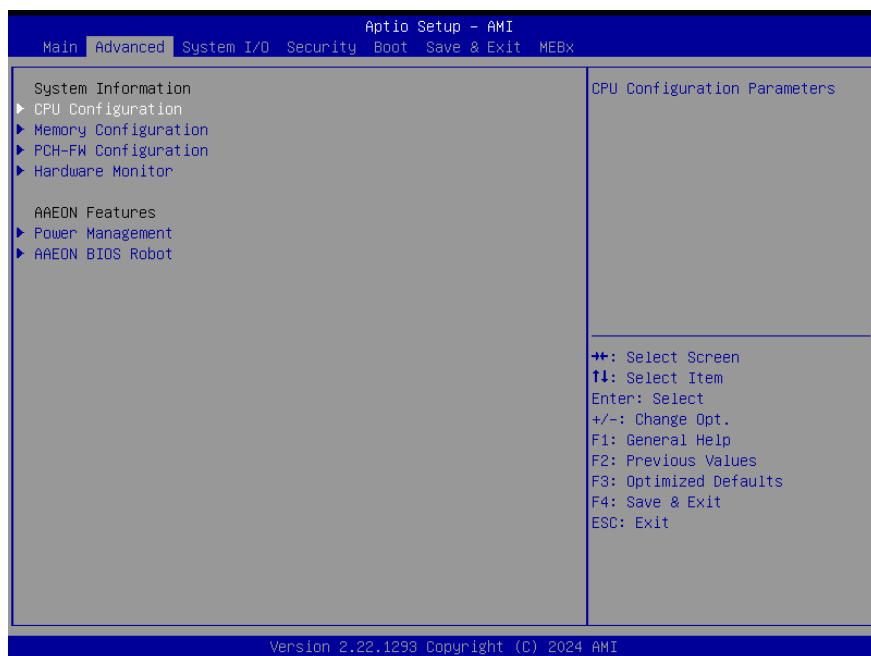

3.4.1 CPU Configuration

Aptio Setup - AMI		
Advanced		
CPU Configuration		When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Brand String	Intel(R) Core(TM) Ultra	
Stepping	5 125H	++: Select Screen F1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
ID	C0	
Microcode Revision	0xA06A4	
VMX	Supported	
SMX/TXT	Supported	
Intel (VMX) Virtualization Technology	[Enabled]	
Hyper-Threading	[Enabled]	
Intel(R) SpeedStep(tm)	[Enabled]	
Turbo Mode	[Enabled]	
C states	[Enabled]	
Active Low Power E-core(s)	[All]	
NPU Device	[Enabled]	
Version 2.22.1293 Copyright (C) 2024 AMI		


Options Summary		
Intel (VMX) Virtualization Technology	Disabled	
	Enabled	Optimal Default, Failsafe Default
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.		
Hyper-Threading	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Hyper-Threading Technology		
Intel® SpeedStep™	Disabled	
	Enabled	Optimal Default, Failsafe Default
Allows more than two frequency ranges to be supported		
Turbo Mode	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable processor Turbo Mode (requires EMTTM enabled too). AUTO means enabled.		
C states	Disabled	
	Enabled	Optimal Default, Failsafe Default

Options Summary		
Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.		
Active Low Power E-Core(s)	All	Optimal Default, Failsafe Default
	1	
	0	
Enables low-power efficiency cores to optimize energy usage while maintaining performance for less demanding tasks.		
NPU Device	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable the Neural Processing Unit (NPU) to accelerate AI workloads and improve performance for machine learning tasks.		


3.4.2 Memory Configuration

Aptio Setup - AMI		
Advanced		
Memory Configuration		
Total Memory	32768 MB	
Memory Frequency	4800 MHz	
tCL-tRCD-tRP-tRAS	40-39-39-77	
MC 0 Ch 0 DIMM 0	Not Populated / Disabled	
MC 1 Ch 0 DIMM 0	Populated & Enabled	
Size	32768 MB (DDR5)	
		++: Select Screen t1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.22.1293 Copyright (C) 2024 AMI		

3.4.3 PCH-FW Configuration

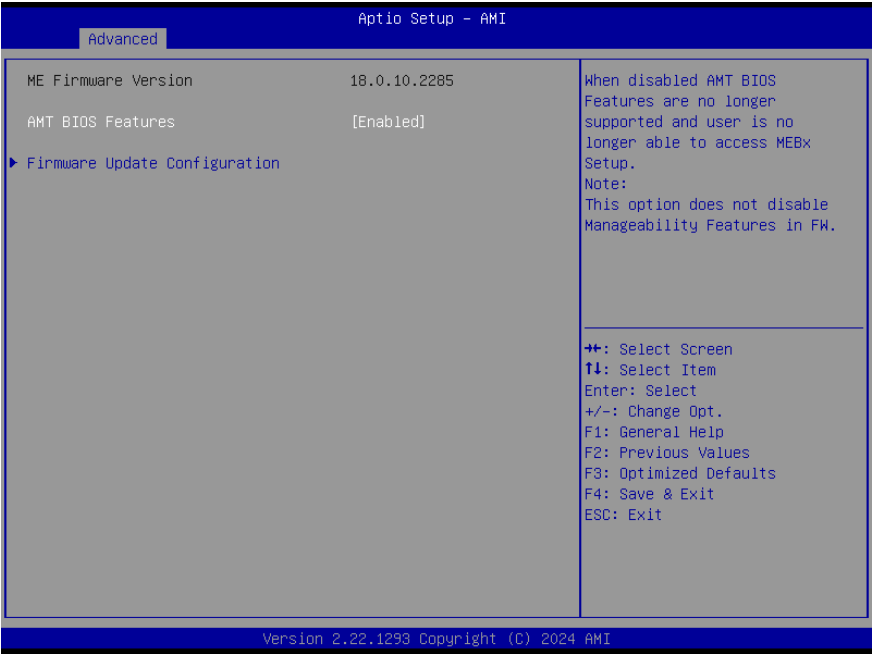


3.4.3.1 Firmware Update Configuration

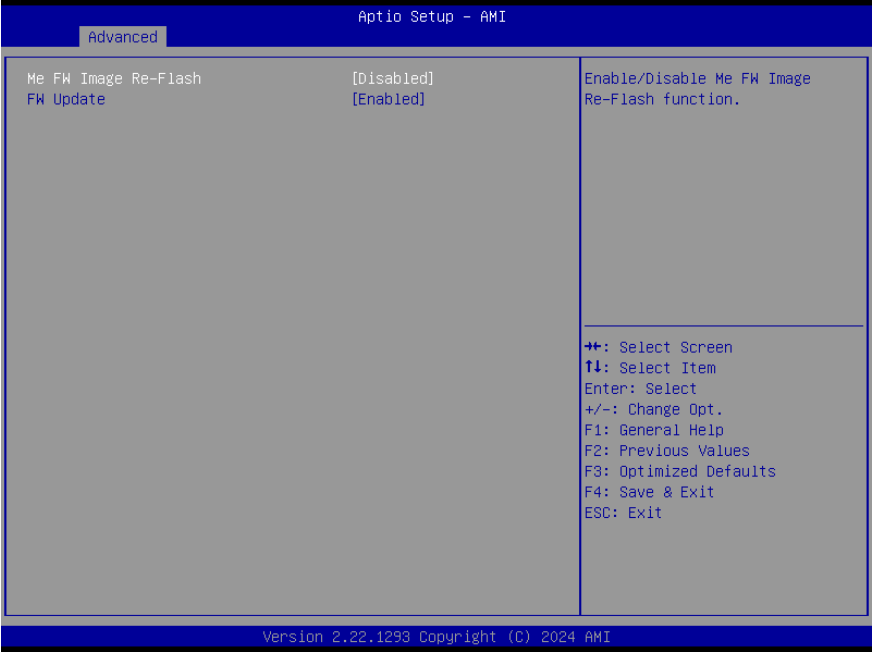


Options Summary		
Me FW Image Re-Flash	Enabled	
	Disabled	Optimal Default, Failsafe Default
Enable/ Disable Me FW Image Re-Flash function.		
FW Update	Enabled	
	Disabled	Optimal Default, Failsafe Default
Enable/ Disable Me FW Update function.		

3.4.4 Hardware Monitor

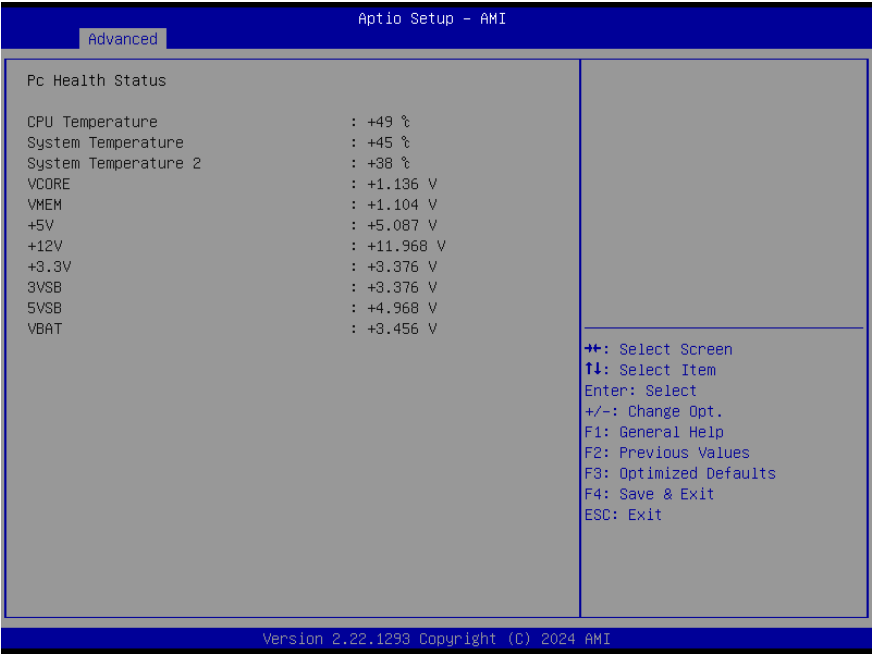

3.4.5 Power Management

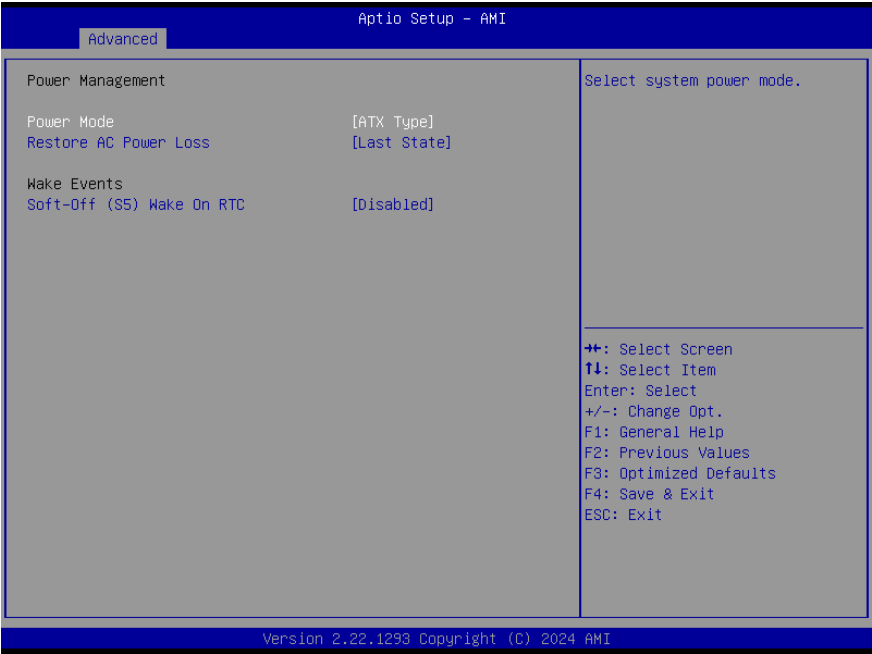

Options Summary		
Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select system power mode		
Restore AC Power Loss	Last State	Optimal Default, Failsafe Default
	Always On	
	Always Off	
SIO Restore AC Power Loss: To decide the behavior after system power cut then resupply. Note: The CMOS battery must be present.		
System Wake On RTC	Disabled	Optimal Default, Failsafe Default
	By Date	
	By Weekday	
	Bypass	
By Date: System will wake on the day with hr::min::sec specified.		
By Weekday: System will wake on the enabled weekday with hr::min::sec specified.		
Bypass: BIOS will not control RTC wake function		


3.4.6 AAEON BIOS Robot



Options Summary		
Sends watch dog before BIOS POST	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled – Robot set Watch Dog Timer (WDT) right after power on, before BIOS start POST process. And then Robot will clear WDT on completion of POST. WDT on completion of POST. WDT will reset system automatically if it is not cleared before its timer counts down to zero.		
Sends watch dog before booting OS	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled – Robot set Watch Dog Timer (WDT) after POST completion, before BIOS transfer control to OS. WARNING: Before enabling this function, a program in OS must be in responsible for clearing WDT. Also, this function should be disabled if OS I going to update itself.		
Delayed POST (PEI phase)	Disabled	Optimal Default, Failsafe Default
	Enabled	


Options Summary		
Enabled -Robot holds BIOS from starting POST, right after power on. This allows BIOS POST to start with stable power or start after system is physically warmed-up. Note: Robot does this before 'Sends watch dog'.		
Delayed POST (DXE phase)	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled -Robot holds BIOS before POST completion. This allows BIOS POST to start with stable power or start after system is physically warmed-up. Note: Robot does this after 'Sends watch dog before BIOS POST'.		
Reset system once	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled – Robot resets system for one time on each boot. This will send a soft or hard reset to onboard devices, thus puts device to more stable state.		

3.4.6.1 Device Detecting Configuration

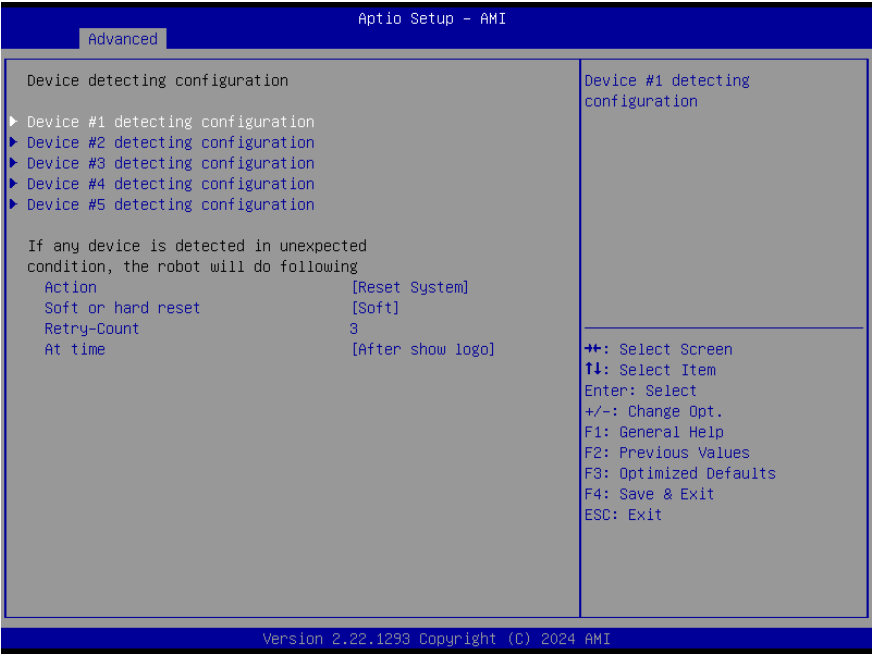


Options Summary		
Action	Reset System	Optimal Default, Failsafe Default
	Hold System	
Select action that robot should do.		
Soft or hard reset	Soft	Optimal Default, Failsafe Default
	Hard	
Select reset type robot should send on each boot.		
Retry-Count	3	Optimal Default, Failsafe Default
Fill retry counter here.		
Robot will reset system at most counter times, and then let system continue its POST.		
At time	After show logo	Optimal Default, Failsafe Default
	Before show logo	
Select robot action time: After show logo -Robot will do action after logo is displayed. System devices are almost ready. Before show logo - Robot will do action earlier before logo, but some devices may not be ready.		

3.4.6.1.1 Device #1 Detecting Configuration

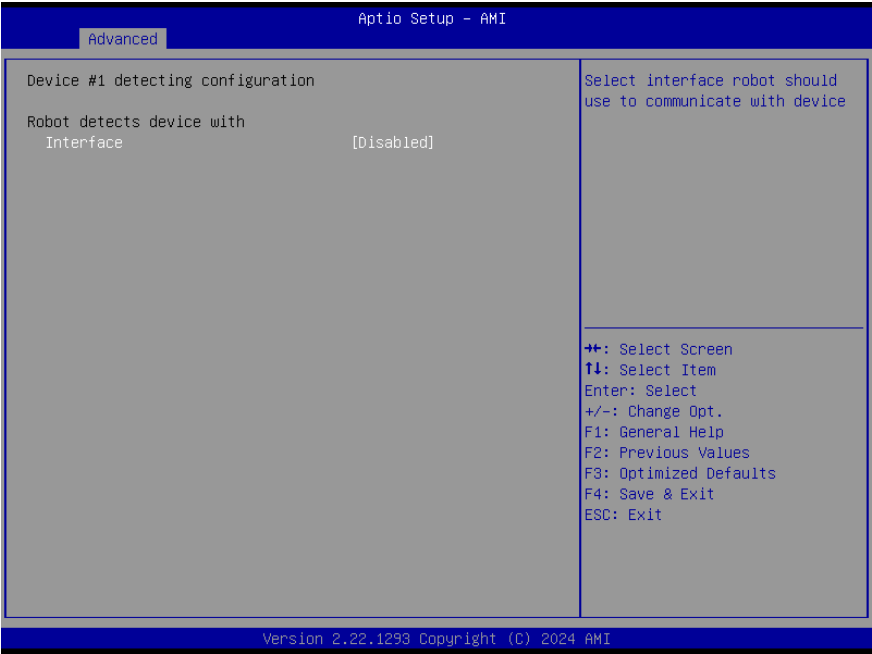


Options Summary		
Interface	Disabled	Optimal Default, Failsafe Default
	PCI	
	DIO	
	SMBUS	
	Legacy I/O	
	Super I/O	
	MMIO	
Select interface robot should use to communicate with device		

3.4.6.1.2 Device #2 Detecting Configuration

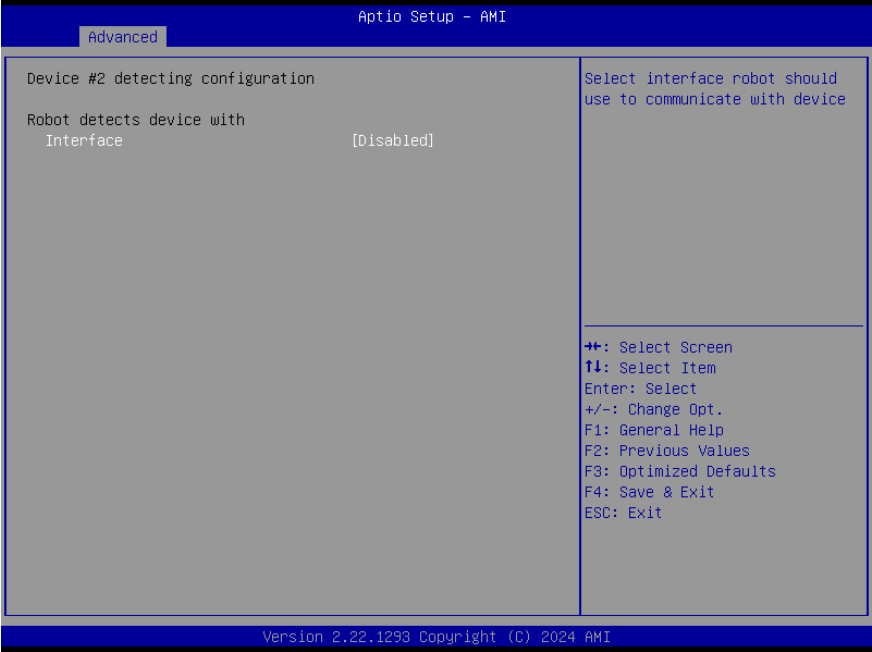


Options Summary		
Interface	Disabled	Optimal Default, Failsafe Default
	PCI	
	DIO	
	SMBUS	
	Legacy I/O	
	Super I/O	
	MMIO	
Select interface robot should use to communicate with device		

3.4.6.1.3 Device #3 Detecting Configuration

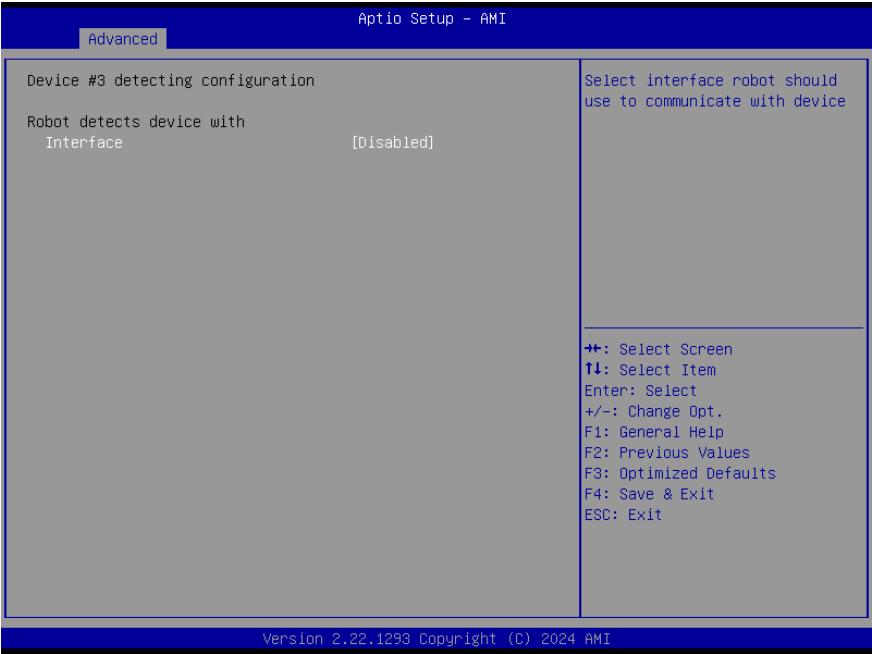


Options Summary		
Interface	Disabled	Optimal Default, Failsafe Default
	PCI	
	DIO	
	SMBUS	
	Legacy I/O	
	Super I/O	
	MMIO	
Select interface robot should use to communicate with device		

3.4.6.1.4 Device #4 Detecting Configuration

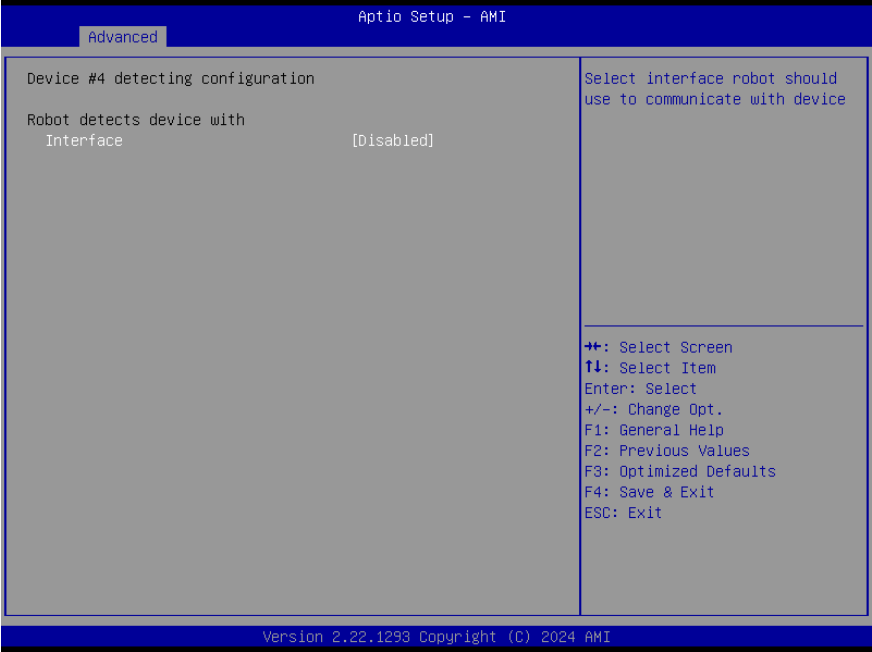

Options Summary		
Interface	Disabled	Optimal Default, Failsafe Default
	PCI	
	DIO	
	SMBUS	
	Legacy I/O	
	Super I/O	
	MMIO	
Select interface robot should use to communicate with device		

3.4.6.1.5 Device #5 Detecting Configuration

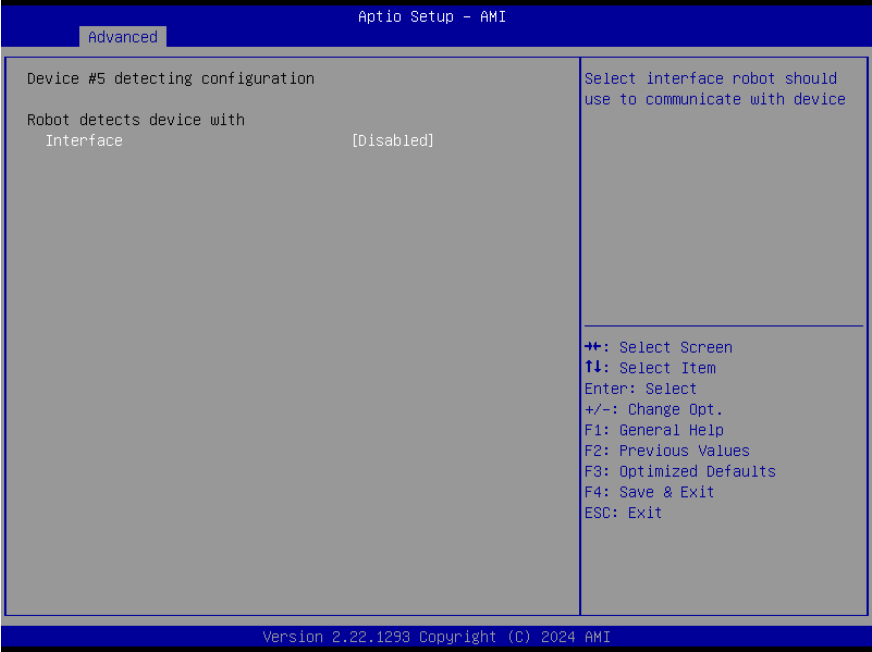


Options Summary		
Interface	Disabled	Optimal Default, Failsafe Default
	PCI	
	DIO	
	SMBUS	
	Legacy I/O	
	Super I/O	
	MMIO	
Select interface robot should use to communicate with device		

3.5 Setup Submenu: System I/O




3.5.1 Storage Configuration

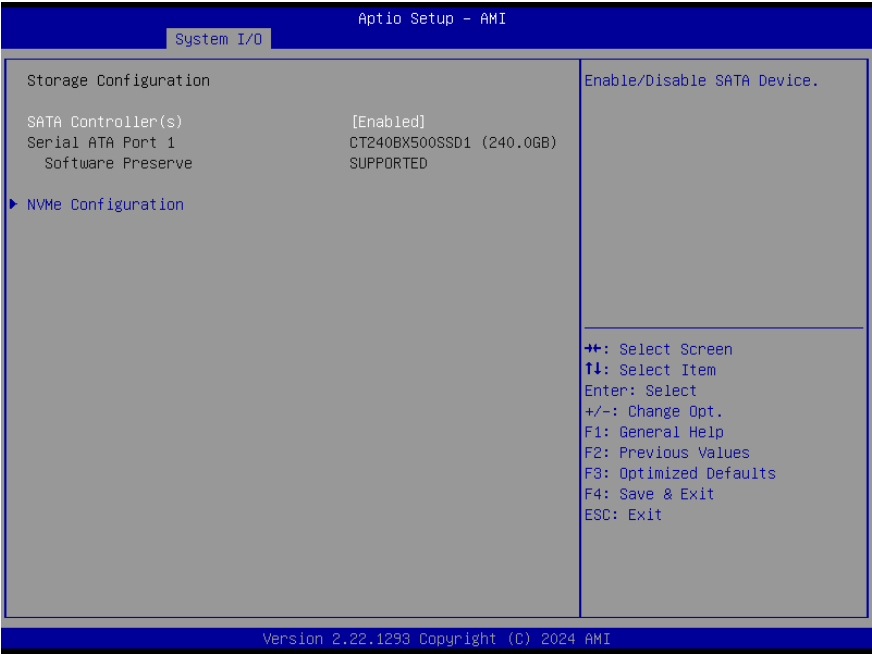

Options Summary		
SATA Controller(s)	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable to SATA Device		

3.5.1.1 NVMe Configuration

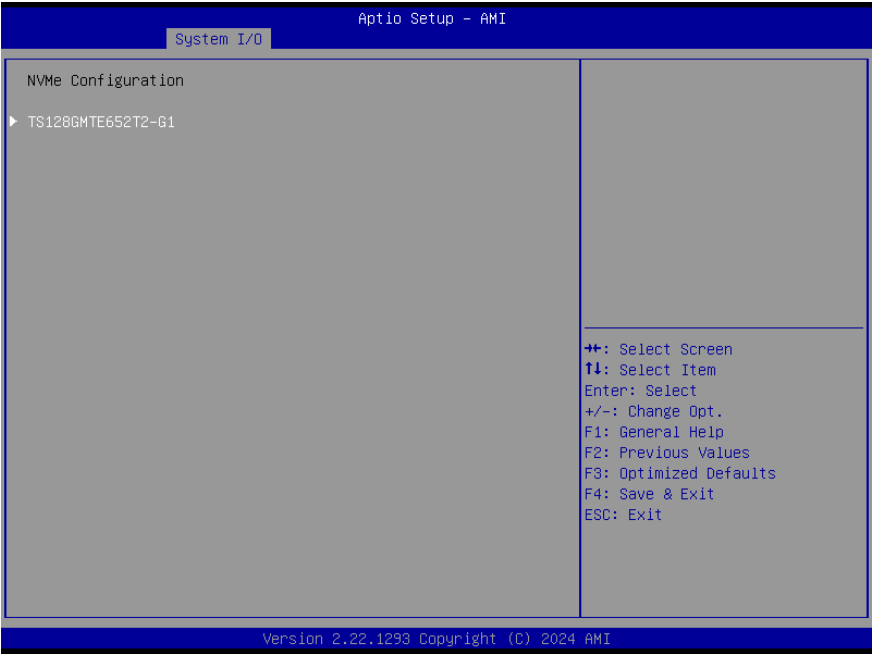


3.5.1.2 NVMe Configuration (Cont.)



Options Summary		
Self Test Option	Short	Optimal Default, Failsafe Default
	Extended	
The Short option takes a few minutes, while the Extended option takes several minutes to complete.		
Self Test Action	Controller Only Test	Optimal Default, Failsafe Default
	Controller and NameSpace Test	
Choose to test the Controller alone or both the Controller and NameSpace; the latter option extends test duration significantly.		
Run Device Self Test		
Perform a device self-test based on the user's selection; press 'Esc' to abort. The result displayed is the most recent logged in the device.		

3.5.2 HD Audio Configuration

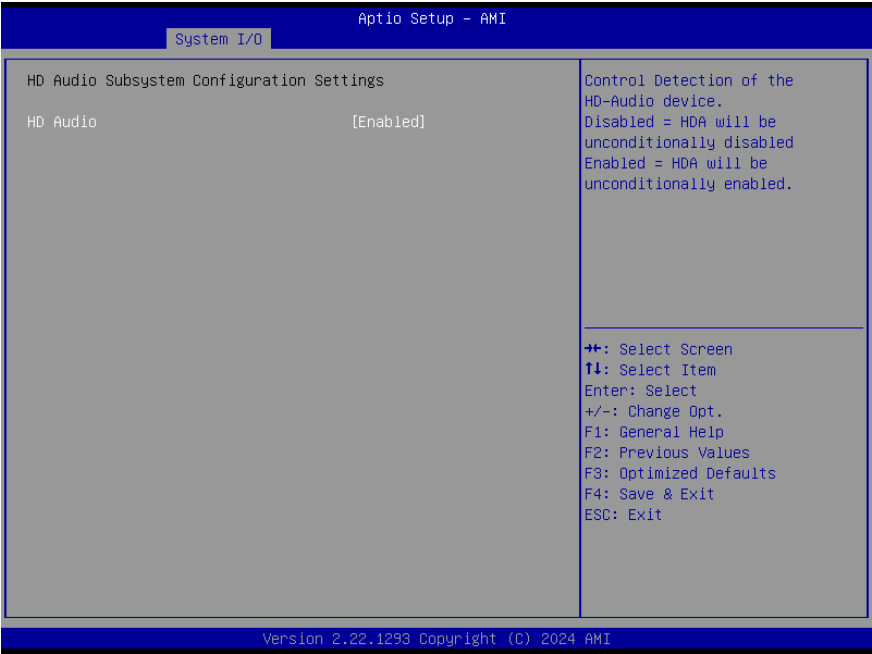

Options Summary		
HD Audio	Disabled	
	Enabled	Optimal Default, Failsafe Default
Control Detection of the HD-Audio device. Disabled = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.		


3.5.3 Digital IO Port Configuration




Options Summary		
DIO1	Input	
	Output	Optimal Default, Failsafe Default
Set DIO as Input or Output		
Output Level	Low	
	High	Optimal Default, Failsafe Default
Set output level when DIO pin is output		
DIO2	Input	
	Output	Optimal Default, Failsafe Default
Set DIO as Input or Output		
Output Level	Low	
	High	Optimal Default, Failsafe Default
Set output level when DIO pin is output		
DIO3	Input	
	Output	Optimal Default, Failsafe Default
Set DIO as Input or Output		

Options Summary		
Output Level	Low	
	High	Optimal Default, Failsafe Default
Set output level when DIO pin is output		
DIO4	Input	
	Output	Optimal Default, Failsafe Default
Set DIO as Input or Output		
Output Level	Low	
	High	Optimal Default, Failsafe Default
Set output level when DIO pin is output		
DIO5	Input	Optimal Default, Failsafe Default
	Output	
Set DIO as Input or Output		
DIO6	Input	Optimal Default, Failsafe Default
	Output	
Set DIO as Input or Output		
DIO7	Input	Optimal Default, Failsafe Default
	Output	
Set DIO as Input or Output		
DIO8	Input	Optimal Default, Failsafe Default
	Output	
Set DIO as Input or Output		

3.5.4 SIO Configuration

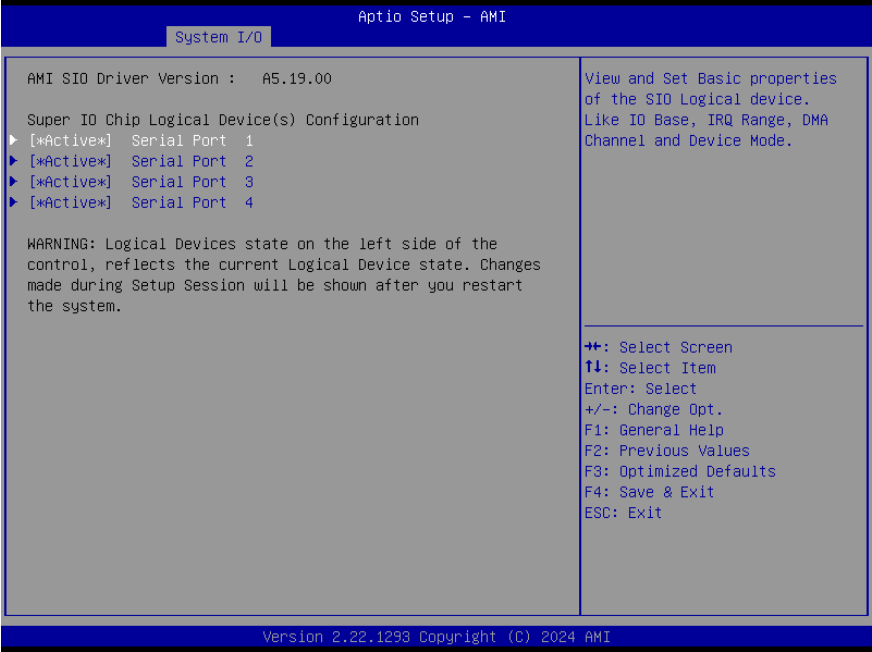


3.5.4.1 Serial Port 1

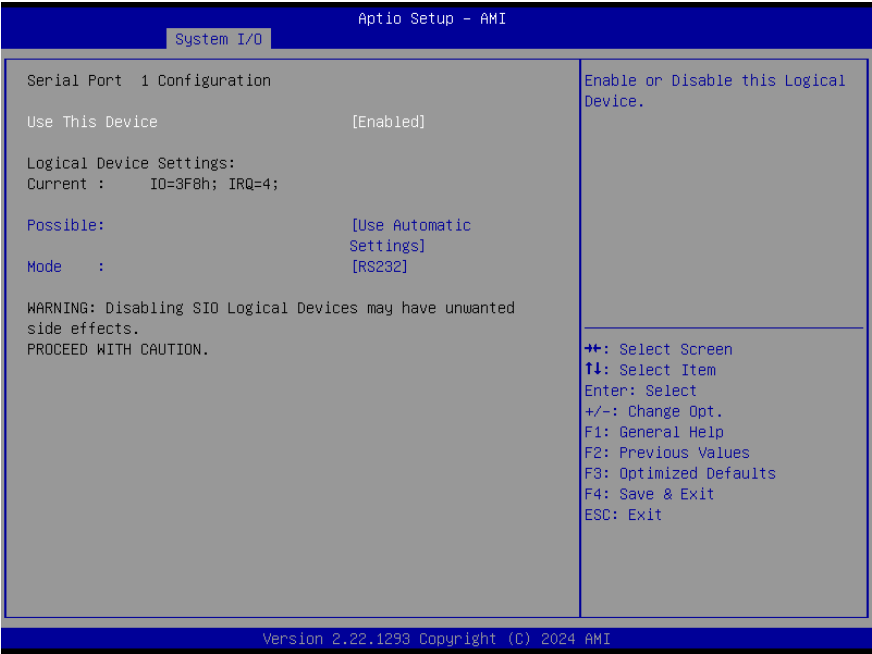


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3F8; IRQ=4;	
	IO=2F8; IRQ=3;	
Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts.		
Mode	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485, selection		

3.5.4.2 Serial Port 2

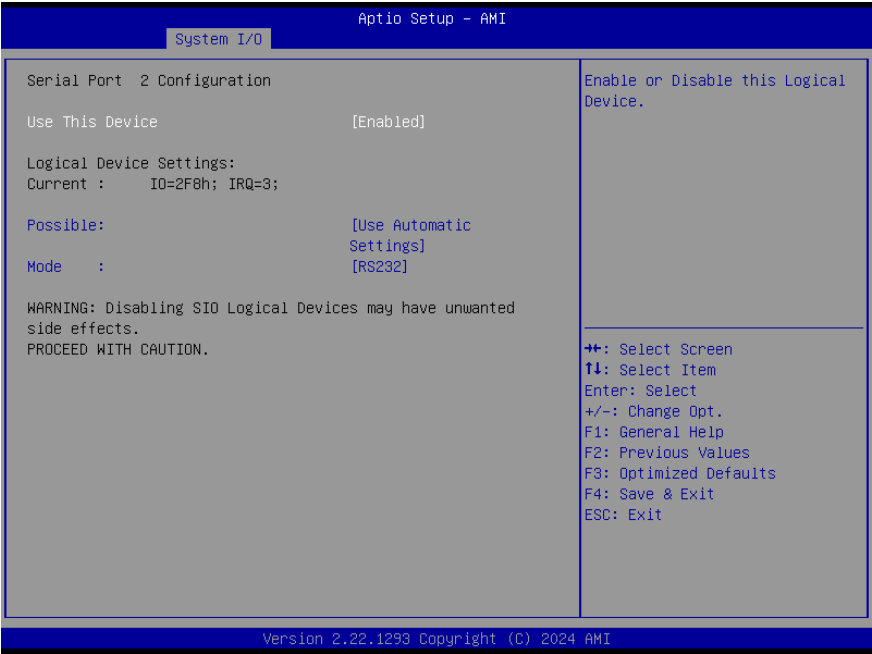


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2F8; IRQ=3;	
	IO=3F8; IRQ=4;	
Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts.		
Mode	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485, selection		

3.5.4.3 Serial Port 3

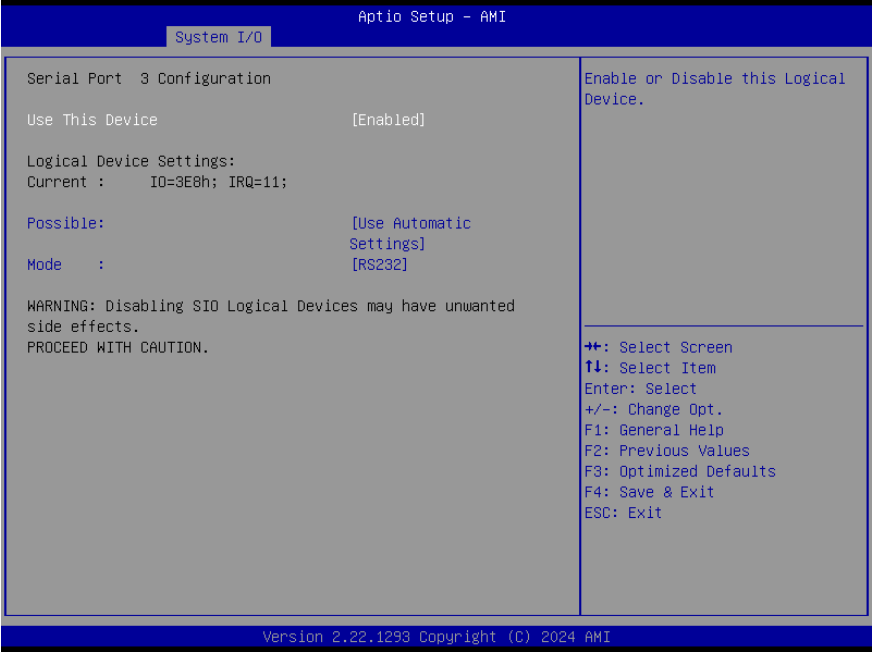


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3E8; IRQ=11;	
	IO=2E8; IRQ=11;	
Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts.		
Mode	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485, selection		

3.5.4.4 Serial Port 4

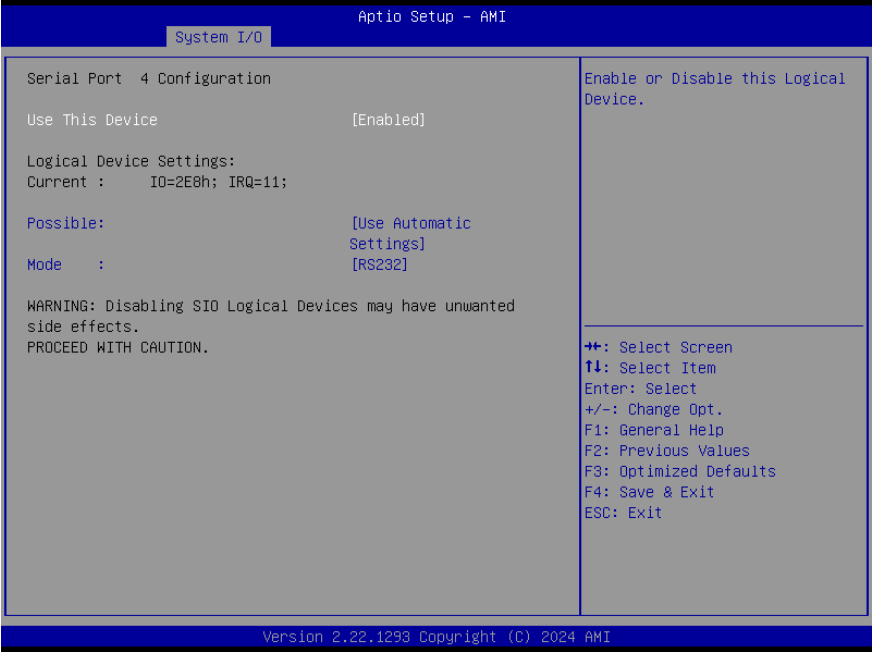


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2E8; IRQ=11;	
	IO=3E8; IRQ=11;	
Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts.		
Mode	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485, selection		

3.5.5 Serial Port Console Redirection

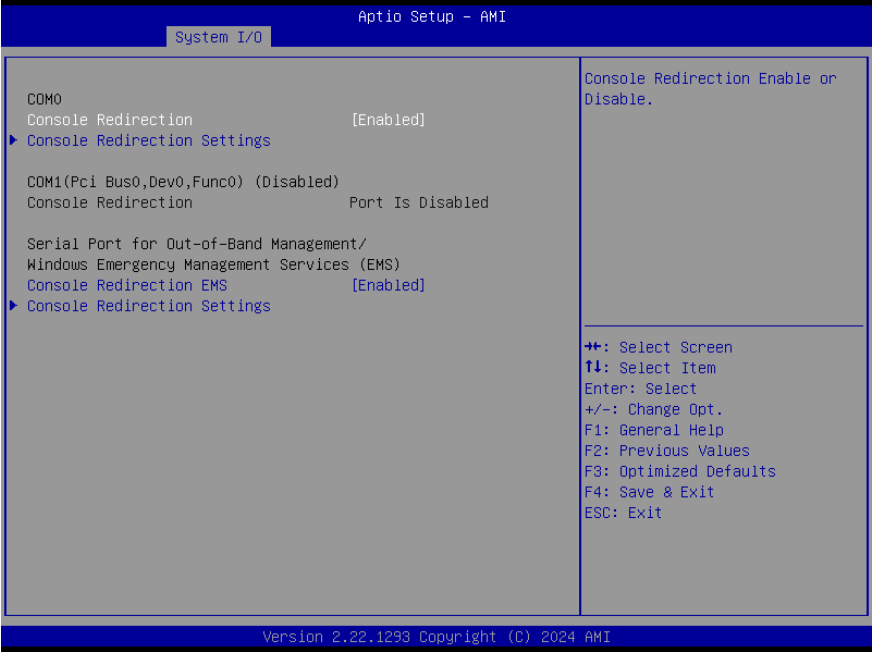

Options Summary		
Console Redirection	Disabled	
	Enabled	Optimal Default, Failsafe Default
Console Redirection Enable or Disable		
Console Redirection EMS	Disabled	
	Enabled	Optimal Default, Failsafe Default
Console Redirection Enable or Disable		


3.5.5.1 Console Redirection Settings (COM0)

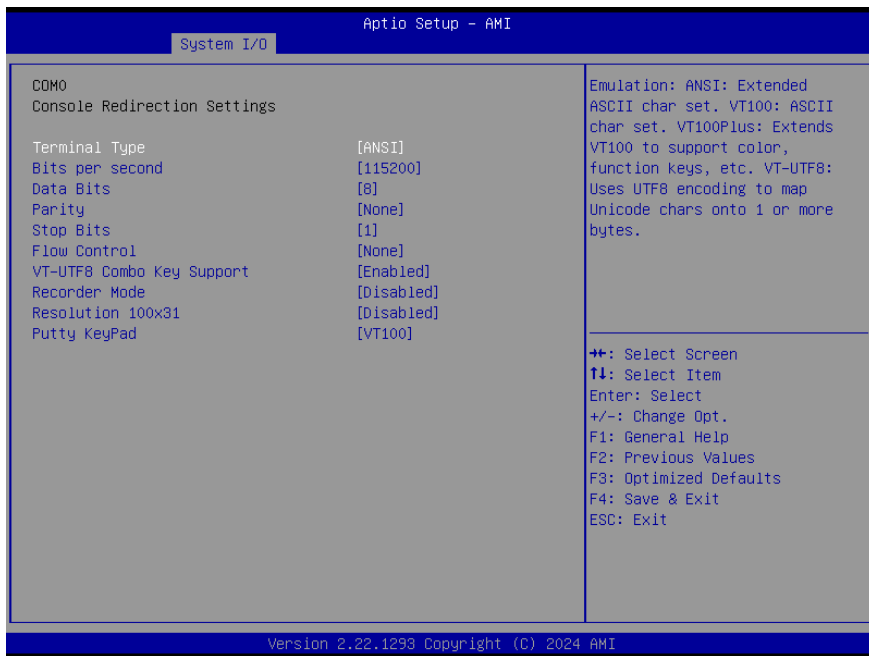

Options Summary		
Terminal Type	VT100	
	VT100Plus	
	VT-UTF8	
	ANSI	Optimal Default, Failsafe Default
Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100Plus: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.		
Bits per second	9600	
	19200	
	38400	
	57600	
	115200	Optimal Default, Failsafe Default
Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.		
Data Bits	7	
	8	Optimal Default, Failsafe Default

Options Summary		
Data Bits		
Parity	None	Optimal Default, Failsafe Default
	Even	
	Odd	
	Mark	
	Space	
A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.		
Stop Bits	1	Optimal Default, Failsafe Default
	2	
Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.		
Flow Control	None	Optimal Default, Failsafe Default
	Hardware RTS/CTS	
Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.		
VT-UTF8 Combo Key Support	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals		
Recorder Mode	Disabled	Optimal Default, Failsafe Default
	Enabled	
With this mode enabled only text will be sent. This is to capture Terminal data.		
Resolution 100x31	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enables or disables extended terminal resolution		
Putty KeyPad	VT100	Optimal Default, Failsafe Default
	LINUX	
	XTERMR6	
	SCO	
	ESCN	
	VT400	
Select FunctionKey and KeyPad on Putty.		


3.5.5.2 Console Redirection Settings (Out-of-Band Mgmt Port)

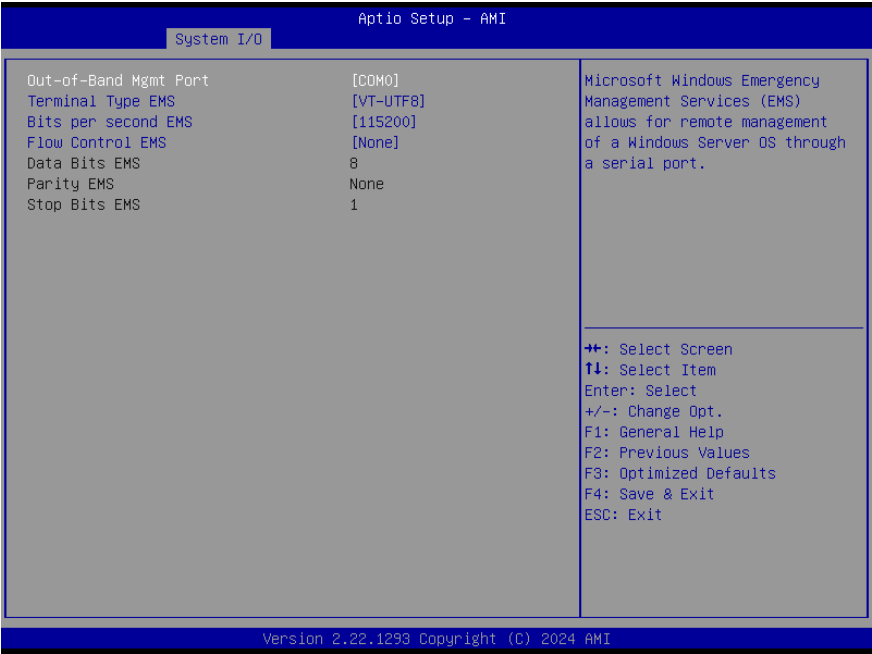

Options Summary		
Out-of-Band Mgmt Port	COM0	Optimal Default, Failsafe Default
	COM1(Pci Bus0, Dev0, Func0) (Disabled)	
Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.		
Terminal Type EMS	VT100	
	VT100Plus	
	VT-UTF8	Optimal Default, Failsafe Default
	ANSI	
VT-UTF8 is the preferred terminal type for out-of-band management. The next best choice is VT100+ and then VT100. See above, in Console Redirection Settings page, for more Help with Terminal Type/Emulation.		

Options Summary		
Bits per second EMS	9600	
	19200	
	57600	
	115200	Optimal Default, Failsafe Default
Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.		
Flow Control EMS	None	Optimal Default, Failsafe Default
	Hardware RTS/CTS	
	Software Xon/Xoff	
Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.		

3.6 Setup Submenu: Security

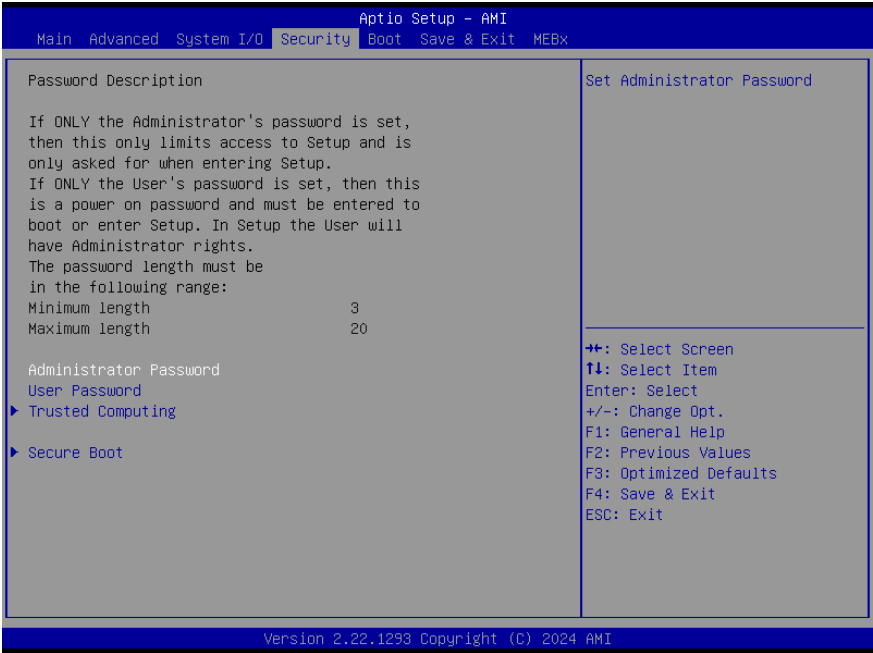

Change User/Administrator Password

You can set a User Password once an Administrator Password. The password will be required during boot up, or when the user enters the Setup utility. Please Note that a User Password does not provide access to many of the features in the Setup utility. Select the password you wish to set, press Enter to open a dialog box to enter your password (you can enter no more than six letters or numbers). Press Enter to confirm your entry, after which you will be prompted to retype your password for a final confirmation. Press Enter again after you have retyped it correctly.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.6.1 Trusted Computing



Options Summary		
Security Device Support	Enable	Optimal Default, Failsafe Default
	Disable	
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.		
SHA256 PCR Bank	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SHA256 PCR Bank		
SHA384 PCR Bank	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable or Disable SHA384 PCR Bank		
Pending operation	None	Optimal Default, Failsafe Default
	TPM Clear	
Schedule an Operation for the Security Device.		
NOTE: Your Computer will reboot during restart in order to change State of Security Device.		


Options Summary		
Platform Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Platform Hierarchy		
Storage Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Storage Hierarchy		
Endorsement Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Endorsement Hierarchy		
Physical Presence Spec Version	1.2	
	1.3	Optimal Default, Failsafe Default
Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3.		
Device Select	TPM 1.2	
	TPM 2.0	
	Auto	Optimal Default, Failsafe Default
TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found. TPM 1.2 devices will be enumerated.		

3.6.2 Secure Boot



Options Summary		
Secure Boot	Disabled	Optimal Default, Failsafe Default
	Enabled	
Secure Boot feature is Active if Secure Boot is Enabled, Platform Key (PK) is enrolled and the System is in User mode. The mode change requires platform reset		
Secure Boot Mode	Standard	
	Custom	Optimal Default, Failsafe Default
Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication		
Restore Factory Keys	Yes	
	No	
Force System to User Mode. Install factory default Secure Boot key databases		


3.6.2.1 Key Management

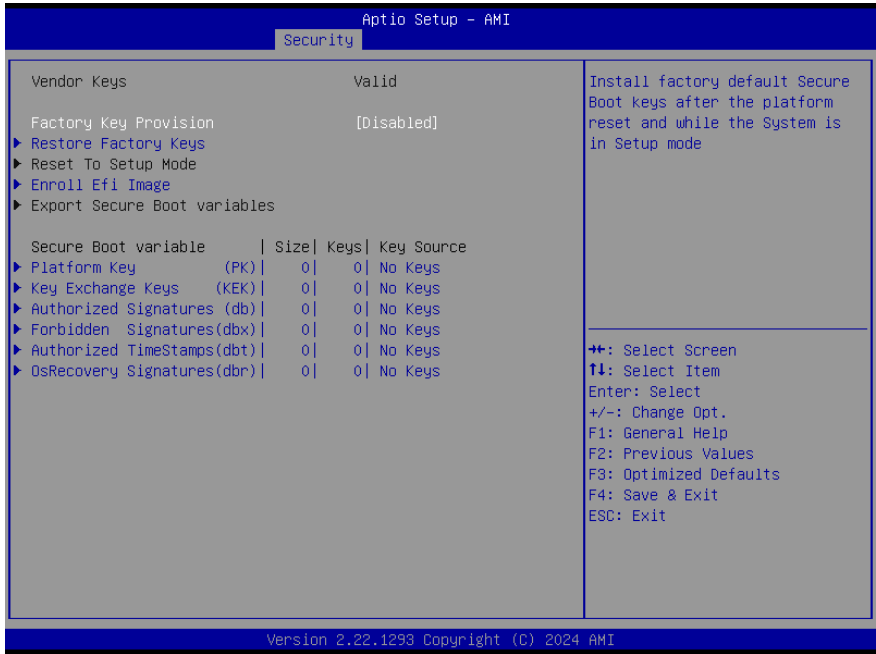

Options Summary		
Factory Key Provision	Disabled	Optimal Default, Failsafe Default
	Enabled	
Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode		
Restore Factory Keys	Yes	
	No	
Force System to User Mode. Install factory default Secure Boot key databases.		
Enroll Efi Image		
Allow Efi image to run in Secure Boot mode.		
Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).		
Platform Key (PK)	Update	
Key Exchange Keys (KEK)	Update	
	Append	
Authorized Signatures (db)	Update	
	Append	


Options Summary		
Forbidden Signatures (dbx)	Update	
	Append	
Authorized TimeStamps (dbt)	Update	
	Append	
OsRecovery Signatures (dbr)	Update	
	Append	
Enroll Factory Defaults or load certificates from a file:		
1. Public Key Certificate:		
a) EFI_SIGNATURE_LIST		
b) EFI_CERT_X509 (DER)		
c) EFI_CERT_RSA2048 (bin)		
d) EFI_CERT_SHAXXX		
2.Authenticated UEFI Variable		
3.EFI PE/COFF Image (SHA256)		
Key Source: Factory, External, Mixed		

3.7 Setup Submenu: Boot

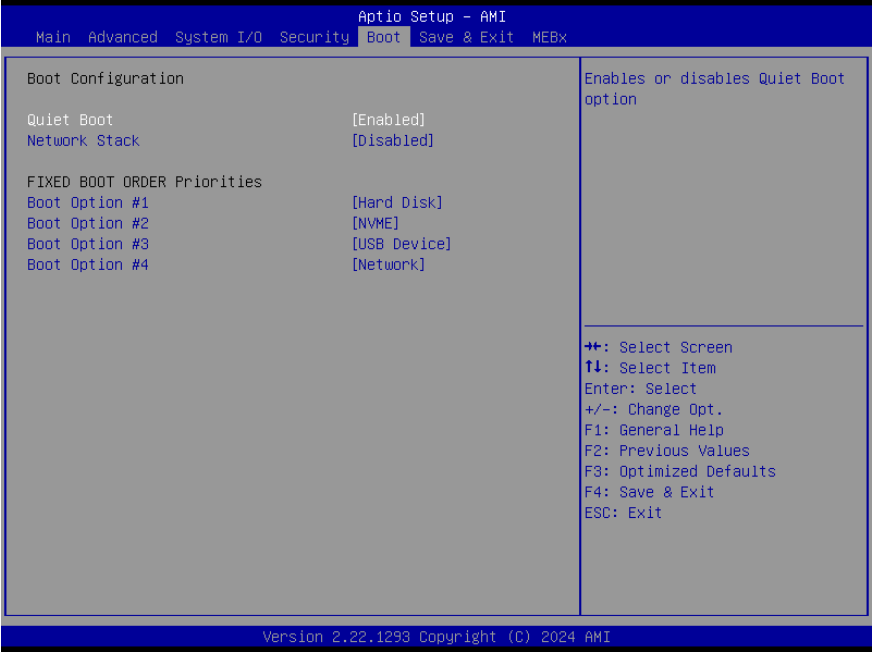


Options Summary		
Quiet Boot	Disabled	
	Enabled	Default
Enables/disables Quiet Boot option.		
Network Stack	Disabled	Default
	Enabled	
Enable/Disable UEFI Network Stack.		
Boot Option #1	Hard Disk	
Boot Option #2	NVME	
Boot Option #3	USB Device	
Boot Option #4	Network	
Sets the system boot order		

3.7.1 UEFI BBS Priorities

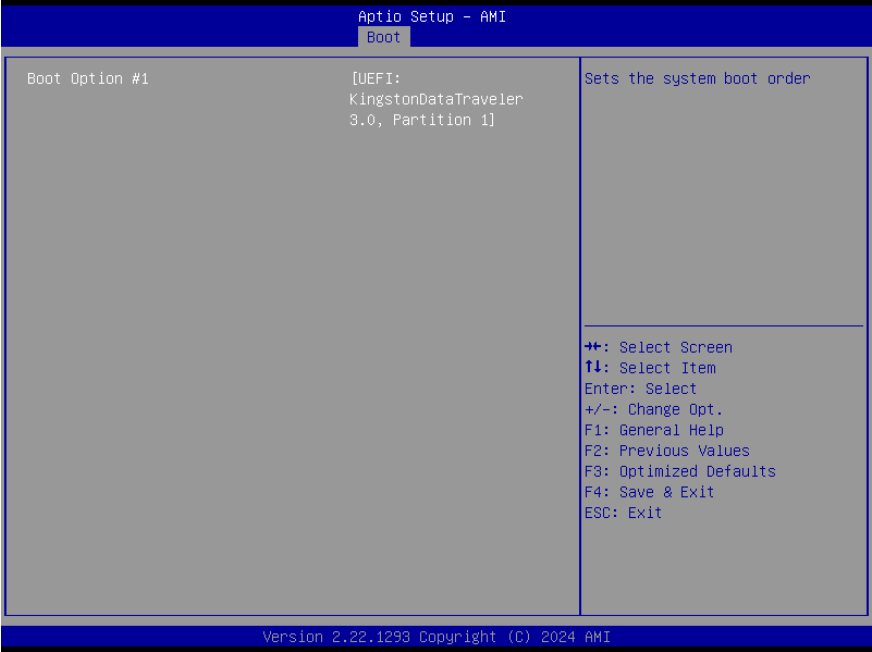

3.8 Setup Submenu: Save & Exit

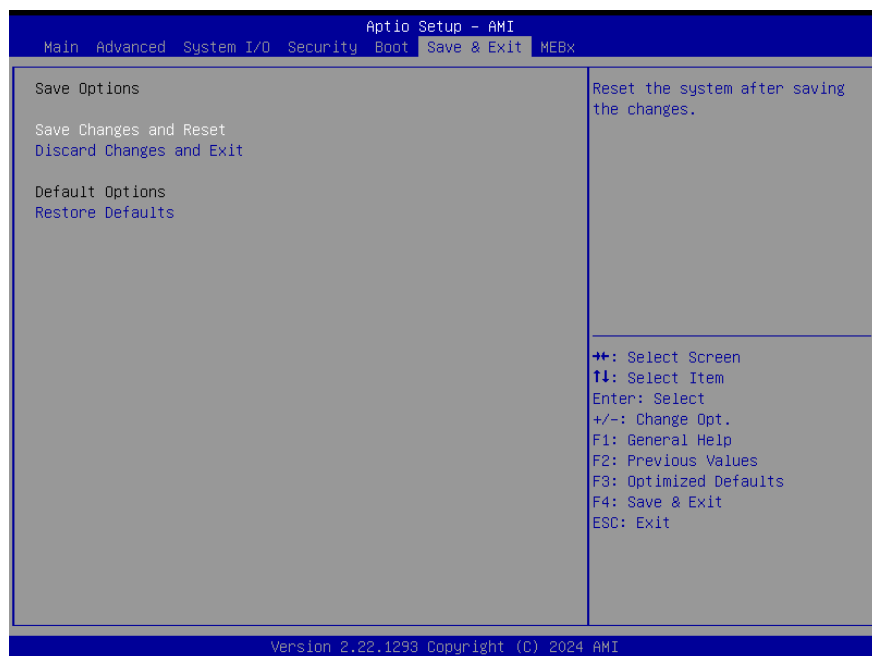

3.9 Setup Submenu: MEBx



Chapter 4

Drivers Installation

4.1 Drivers Download and Installation

Drivers for the BOXER-6647-MTH can be downloaded from the product page on the AAEON website by following this link:

<https://www.aaeon.com/en/product/detail/compact-fanless-box-pc-boxer-6647-mth/download>

Appendix A

I/O Information

A.1 I/O Address Map

DESKTOP-JV01KUU	
Input/output (IO)	
[0000000000000000 - 000000000000CF7]	PCI Express Root Complex
[0000000000000020 - 0000000000000021]	Programmable interrupt controller
[0000000000000024 - 0000000000000025]	Programmable interrupt controller
[0000000000000028 - 0000000000000029]	Programmable interrupt controller
[000000000000002C - 000000000000002D]	Programmable interrupt controller
[000000000000002E - 000000000000002F]	Motherboard resources
[0000000000000030 - 0000000000000031]	Programmable interrupt controller
[0000000000000034 - 0000000000000035]	Programmable interrupt controller
[0000000000000038 - 0000000000000039]	Programmable interrupt controller
[000000000000003C - 000000000000003D]	Programmable interrupt controller
[0000000000000040 - 0000000000000043]	System timer
[000000000000004E - 000000000000004F]	Motherboard resources
[0000000000000050 - 0000000000000053]	System timer
[0000000000000061 - 0000000000000061]	Motherboard resources
[0000000000000063 - 0000000000000063]	Motherboard resources
[0000000000000065 - 0000000000000065]	Motherboard resources
[0000000000000067 - 0000000000000067]	Motherboard resources
[0000000000000070 - 0000000000000070]	Motherboard resources
[0000000000000080 - 0000000000000080]	Motherboard resources
[0000000000000092 - 0000000000000092]	Motherboard resources
[00000000000000A0 - 00000000000000A1]	Programmable interrupt controller
[00000000000000A4 - 00000000000000A5]	Programmable interrupt controller
[00000000000000A8 - 00000000000000A9]	Programmable interrupt controller
[00000000000000AC - 00000000000000AD]	Programmable interrupt controller
[00000000000000B0 - 00000000000000B1]	Programmable interrupt controller
[00000000000000B2 - 00000000000000B3]	Motherboard resources
[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
[00000000000000B8 - 00000000000000B9]	Programmable interrupt controller
[00000000000000BC - 00000000000000BD]	Programmable interrupt controller
[000000000000002E8 - 000000000000002EF]	Fintek Communications Port (COM4)
[000000000000002F8 - 000000000000002FF]	Fintek Communications Port (COM2)
[000000000000003E8 - 000000000000003EF]	Fintek Communications Port (COM3)
[000000000000003F8 - 000000000000003FF]	Fintek Communications Port (COM1)
[000000000000004D0 - 000000000000004D1]	Programmable interrupt controller
[00000000000000680 - 0000000000000069F]	Motherboard resources
[00000000000000A00 - 00000000000000A0F]	Motherboard resources
[00000000000000A10 - 00000000000000A1F]	Motherboard resources
[00000000000000A20 - 00000000000000A2F]	Motherboard resources
[00000000000000D00 - 00000000000000FFFF]	PCI Express Root Complex
[0000000000000164E - 0000000000000164F]	Motherboard resources
[00000000000001854 - 00000000000001857]	Motherboard resources
[00000000000002000 - 000000000000020FE]	Motherboard resources
[00000000000003020 - 0000000000000303F]	Standard SATA AHCI Controller
[00000000000003040 - 00000000000003043]	Standard SATA AHCI Controller
[00000000000003050 - 00000000000003057]	Standard SATA AHCI Controller
[0000000000000EFA0 - 0000000000000EFBF]	Intel(R) SMBus - 7E22
Interrupt request (IRQ)	
Large Memory	
Memory	

A.2 Memory Address Map

▼		Large Memory	
		[0000004000000000 - 000003FFBFFFFFFF]	PCI Express Root Complex
▼		Memory	
		[0000000000000000 - 0000000000000FFF]	Motherboard resources
		[0000000000000000 - 0000000000000FFF]	Motherboard resources
		[000000000000A0000 - 000000000000BFFFFF]	PCI Express Root Complex
		[0000000080000000 - 000000008000FFFFF]	Intel(R) Ethernet Controller I226-LM
		[0000000080000000 - 00000000801FFFFF]	PCI Express Root Port
		[0000000080000000 - 00000000BFFFFFFF]	PCI Express Root Complex
		[0000000080100000 - 0000000080103FFF]	Intel(R) Ethernet Controller I226-LM
		[0000000080200000 - 00000000802FFFFF]	Intel(R) Ethernet Controller I226-LM #2
		[0000000080200000 - 00000000803FFFFF]	PCI Express Root Port
		[0000000080300000 - 0000000080303FFF]	Intel(R) Ethernet Controller I226-LM #2
		[0000000080420000 - 0000000080421FFF]	Standard SATA AHCI Controller
		[0000000080422000 - 00000000804227FF]	Standard SATA AHCI Controller
		[0000000080423000 - 00000000804230FF]	Standard SATA AHCI Controller
		[00000000BFFE0000 - 00000000BFFFFFFF]	Intel(R) Ethernet Connection (18) I219-LM
		[00000000C0000000 - 00000000CFFFFFFF]	Motherboard resources
		[00000000E0D10000 - 00000000E0D1FFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1083
		[00000000E0D20000 - 00000000E0D2FFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1083
		[00000000E0D30000 - 00000000E0D3FFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1083
		[00000000E0D40000 - 00000000E0D4FFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1083
		[00000000E0D50000 - 00000000E0D5FFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1083
		[00000000FC800000 - 00000000FC81FFFF]	Motherboard resources
		[00000000FE010000 - 00000000FE010FFF]	Intel(R) SPI - 7E23
		[00000000FED00000 - 00000000FED003FF]	High precision event timer
		[00000000FED20000 - 00000000FED2FFFF]	Motherboard resources
		[00000000FED40000 - 00000000FED44FFF]	Trusted Platform Module 2.0
		[00000000FED45000 - 00000000FED8FFFF]	Motherboard resources
		[00000000FEDC0000 - 00000000FEDC7FFF]	Motherboard resources
		[00000000FEE00000 - 00000000FEEFFFFF]	Motherboard resources
		[0000004000000000 - 000000400FFFFF]	Intel(R) Graphics
		[0000004017000000 - 0000004017FFFFF]	Intel(R) Graphics
		[0000004020240000 - 000000402024FFFF]	Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft)
		[0000004020258000 - 00000040202580FF]	Intel(R) SMBus - 7E22
		[0000004020259000 - 0000004020259FFF]	Intel(R) Management Engine Interface #1
		[000003FFB0000000 - 000003FFB7FFFFF]	Intel(R) AI Boost
		[000003FFBFC00000 - 000003FFBFDFFFFF]	High Definition Audio Controller
		[000003FFBFB80000 - 000003FFBFB8BFFF]	Intel(R) AI Boost
		[000003FFBFBFC000 - 000003FFBFBFBFFF]	High Definition Audio Controller
		[000003FFBFBFC000 - 000003FFBFBFBFFF]	Intel(R) Platform Monitoring Technology (PMT) Driver

A.3 IRQ Mapping Chart

Interrupt request (IRQ)	
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000003 (03)	Fintek Communications Port (COM2)
(ISA) 0x00000004 (04)	Fintek Communications Port (COM1)
(ISA) 0x0000000B (11)	Fintek Communications Port (COM3)
(ISA) 0x0000000B (11)	Fintek Communications Port (COM4)
(ISA) 0x0000000E (14)	Intel(R) Serial IO GPIO Host Controller - INTC1083
(ISA) 0x00000037 (55)	Microsoft ACPI-Compliant System
(ISA) 0x00000038 (56)	Microsoft ACPI-Compliant System
(ISA) 0x00000039 (57)	Microsoft ACPI-Compliant System
(ISA) 0x0000003A (58)	Microsoft ACPI-Compliant System
(ISA) 0x0000003B (59)	Microsoft ACPI-Compliant System
(ISA) 0x0000003C (60)	Microsoft ACPI-Compliant System
(ISA) 0x0000003D (61)	Microsoft ACPI-Compliant System
(ISA) 0x0000003E (62)	Microsoft ACPI-Compliant System
(ISA) 0x0000003F (63)	Microsoft ACPI-Compliant System
(ISA) 0x00000040 (64)	Microsoft ACPI-Compliant System
(ISA) 0x00000041 (65)	Microsoft ACPI-Compliant System
(ISA) 0x00000042 (66)	Microsoft ACPI-Compliant System
(ISA) 0x00000043 (67)	Microsoft ACPI-Compliant System
(ISA) 0x00000044 (68)	Microsoft ACPI-Compliant System
(ISA) 0x00000045 (69)	Microsoft ACPI-Compliant System
(ISA) 0x00000046 (70)	Microsoft ACPI-Compliant System
(ISA) 0x00000047 (71)	Microsoft ACPI-Compliant System
(ISA) 0x00000048 (72)	Microsoft ACPI-Compliant System
(ISA) 0x00000049 (73)	Microsoft ACPI-Compliant System
(ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System
(ISA) 0x0000004B (75)	Microsoft ACPI-Compliant System
(ISA) 0x0000004C (76)	Microsoft ACPI-Compliant System
(ISA) 0x0000004D (77)	Microsoft ACPI-Compliant System
(ISA) 0x0000004E (78)	Microsoft ACPI-Compliant System
(ISA) 0x0000004F (79)	Microsoft ACPI-Compliant System
(ISA) 0x00000050 (80)	Microsoft ACPI-Compliant System
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System

	(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
	(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
	(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
	(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
	(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
	(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
	(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
	(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
	(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
	(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
	(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
	(ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
	(ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
	(ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
	(ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
	(ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
	(ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
	(ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
	(ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
	(ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
	(ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
	(ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
	(ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
	(ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
	(ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
	(ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
	(ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
	(ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
	(ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
	(ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
	(ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
	(ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
	(ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System

	(ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
	(ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
	(ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
	(ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BF (191)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C0 (192)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C1 (193)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C2 (194)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C3 (195)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C4 (196)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C5 (197)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C6 (198)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C7 (199)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C8 (200)	Microsoft ACPI-Compliant System

	(ISA) 0x000000C9 (201)	Microsoft ACPI-Compliant System
	(ISA) 0x000000CA (202)	Microsoft ACPI-Compliant System
	(ISA) 0x000000CB (203)	Microsoft ACPI-Compliant System
	(ISA) 0x000000CC (204)	Microsoft ACPI-Compliant System
	(ISA) 0x00000100 (256)	Microsoft ACPI-Compliant System
	(ISA) 0x00000101 (257)	Microsoft ACPI-Compliant System
	(ISA) 0x00000102 (258)	Microsoft ACPI-Compliant System
	(ISA) 0x00000103 (259)	Microsoft ACPI-Compliant System
	(ISA) 0x00000104 (260)	Microsoft ACPI-Compliant System
	(ISA) 0x00000105 (261)	Microsoft ACPI-Compliant System
	(ISA) 0x00000106 (262)	Microsoft ACPI-Compliant System
	(ISA) 0x00000107 (263)	Microsoft ACPI-Compliant System
	(ISA) 0x00000108 (264)	Microsoft ACPI-Compliant System
	(ISA) 0x00000109 (265)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010A (266)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010B (267)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010C (268)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010D (269)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010E (270)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010F (271)	Microsoft ACPI-Compliant System
	(ISA) 0x00000110 (272)	Microsoft ACPI-Compliant System
	(ISA) 0x00000111 (273)	Microsoft ACPI-Compliant System
	(ISA) 0x00000112 (274)	Microsoft ACPI-Compliant System
	(ISA) 0x00000113 (275)	Microsoft ACPI-Compliant System
	(ISA) 0x00000114 (276)	Microsoft ACPI-Compliant System
	(ISA) 0x00000115 (277)	Microsoft ACPI-Compliant System
	(ISA) 0x00000116 (278)	Microsoft ACPI-Compliant System
	(ISA) 0x00000117 (279)	Microsoft ACPI-Compliant System
	(ISA) 0x00000118 (280)	Microsoft ACPI-Compliant System
	(ISA) 0x00000119 (281)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011A (282)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011B (283)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011C (284)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011D (285)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011E (286)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011F (287)	Microsoft ACPI-Compliant System
	(ISA) 0x00000120 (288)	Microsoft ACPI-Compliant System
	(ISA) 0x00000121 (289)	Microsoft ACPI-Compliant System
	(ISA) 0x00000122 (290)	Microsoft ACPI-Compliant System
	(ISA) 0x00000123 (291)	Microsoft ACPI-Compliant System
	(ISA) 0x00000124 (292)	Microsoft ACPI-Compliant System
	(ISA) 0x00000125 (293)	Microsoft ACPI-Compliant System
	(ISA) 0x00000126 (294)	Microsoft ACPI-Compliant System
	(ISA) 0x00000127 (295)	Microsoft ACPI-Compliant System
	(ISA) 0x00000128 (296)	Microsoft ACPI-Compliant System
	(ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012A (298)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012B (299)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012C (300)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012D (301)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012E (302)	Microsoft ACPI-Compliant System

	(ISA) 0x0000012F (303)	Microsoft ACPI-Compliant System
	(ISA) 0x00000130 (304)	Microsoft ACPI-Compliant System
	(ISA) 0x00000131 (305)	Microsoft ACPI-Compliant System
	(ISA) 0x00000132 (306)	Microsoft ACPI-Compliant System
	(ISA) 0x00000133 (307)	Microsoft ACPI-Compliant System
	(ISA) 0x00000134 (308)	Microsoft ACPI-Compliant System
	(ISA) 0x00000135 (309)	Microsoft ACPI-Compliant System
	(ISA) 0x00000136 (310)	Microsoft ACPI-Compliant System
	(ISA) 0x00000137 (311)	Microsoft ACPI-Compliant System
	(ISA) 0x00000138 (312)	Microsoft ACPI-Compliant System
	(ISA) 0x00000139 (313)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013A (314)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013B (315)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013C (316)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013D (317)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013E (318)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013F (319)	Microsoft ACPI-Compliant System
	(ISA) 0x00000140 (320)	Microsoft ACPI-Compliant System
	(ISA) 0x00000141 (321)	Microsoft ACPI-Compliant System
	(ISA) 0x00000142 (322)	Microsoft ACPI-Compliant System
	(ISA) 0x00000143 (323)	Microsoft ACPI-Compliant System
	(ISA) 0x00000144 (324)	Microsoft ACPI-Compliant System
	(ISA) 0x00000145 (325)	Microsoft ACPI-Compliant System
	(ISA) 0x00000146 (326)	Microsoft ACPI-Compliant System
	(ISA) 0x00000147 (327)	Microsoft ACPI-Compliant System
	(ISA) 0x00000148 (328)	Microsoft ACPI-Compliant System
	(ISA) 0x00000149 (329)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014B (331)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014C (332)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014D (333)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014E (334)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014F (335)	Microsoft ACPI-Compliant System
	(ISA) 0x00000150 (336)	Microsoft ACPI-Compliant System
	(ISA) 0x00000151 (337)	Microsoft ACPI-Compliant System
	(ISA) 0x00000152 (338)	Microsoft ACPI-Compliant System
	(ISA) 0x00000153 (339)	Microsoft ACPI-Compliant System
	(ISA) 0x00000154 (340)	Microsoft ACPI-Compliant System
	(ISA) 0x00000155 (341)	Microsoft ACPI-Compliant System
	(ISA) 0x00000156 (342)	Microsoft ACPI-Compliant System
	(ISA) 0x00000157 (343)	Microsoft ACPI-Compliant System
	(ISA) 0x00000158 (344)	Microsoft ACPI-Compliant System
	(ISA) 0x00000159 (345)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015A (346)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015B (347)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015C (348)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015D (349)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015E (350)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015F (351)	Microsoft ACPI-Compliant System
	(ISA) 0x00000160 (352)	Microsoft ACPI-Compliant System
	(ISA) 0x00000161 (353)	Microsoft ACPI-Compliant System

	(ISA) 0x00000162 (354)	Microsoft ACPI-Compliant System
	(ISA) 0x00000163 (355)	Microsoft ACPI-Compliant System
	(ISA) 0x00000164 (356)	Microsoft ACPI-Compliant System
	(ISA) 0x00000165 (357)	Microsoft ACPI-Compliant System
	(ISA) 0x00000166 (358)	Microsoft ACPI-Compliant System
	(ISA) 0x00000167 (359)	Microsoft ACPI-Compliant System
	(ISA) 0x00000168 (360)	Microsoft ACPI-Compliant System
	(ISA) 0x00000169 (361)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016A (362)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016B (363)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016C (364)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016D (365)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016E (366)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016F (367)	Microsoft ACPI-Compliant System
	(ISA) 0x00000170 (368)	Microsoft ACPI-Compliant System
	(ISA) 0x00000171 (369)	Microsoft ACPI-Compliant System
	(ISA) 0x00000172 (370)	Microsoft ACPI-Compliant System
	(ISA) 0x00000173 (371)	Microsoft ACPI-Compliant System
	(ISA) 0x00000174 (372)	Microsoft ACPI-Compliant System
	(ISA) 0x00000175 (373)	Microsoft ACPI-Compliant System
	(ISA) 0x00000176 (374)	Microsoft ACPI-Compliant System
	(ISA) 0x00000177 (375)	Microsoft ACPI-Compliant System
	(ISA) 0x00000178 (376)	Microsoft ACPI-Compliant System
	(ISA) 0x00000179 (377)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017A (378)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017B (379)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017C (380)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017D (381)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017E (382)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017F (383)	Microsoft ACPI-Compliant System
	(ISA) 0x00000180 (384)	Microsoft ACPI-Compliant System
	(ISA) 0x00000181 (385)	Microsoft ACPI-Compliant System
	(ISA) 0x00000182 (386)	Microsoft ACPI-Compliant System
	(ISA) 0x00000183 (387)	Microsoft ACPI-Compliant System
	(ISA) 0x00000184 (388)	Microsoft ACPI-Compliant System
	(ISA) 0x00000185 (389)	Microsoft ACPI-Compliant System
	(ISA) 0x00000186 (390)	Microsoft ACPI-Compliant System
	(ISA) 0x00000187 (391)	Microsoft ACPI-Compliant System
	(ISA) 0x00000188 (392)	Microsoft ACPI-Compliant System
	(ISA) 0x00000189 (393)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018A (394)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018B (395)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018C (396)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018D (397)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018E (398)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018F (399)	Microsoft ACPI-Compliant System
	(ISA) 0x00000190 (400)	Microsoft ACPI-Compliant System
	(ISA) 0x00000191 (401)	Microsoft ACPI-Compliant System
	(ISA) 0x00000192 (402)	Microsoft ACPI-Compliant System
	(ISA) 0x00000193 (403)	Microsoft ACPI-Compliant System
	(ISA) 0x00000194 (404)	Microsoft ACPI-Compliant System

 (ISA) 0x00000195 (405)	Microsoft ACPI-Compliant System
 (ISA) 0x00000196 (406)	Microsoft ACPI-Compliant System
 (ISA) 0x00000197 (407)	Microsoft ACPI-Compliant System
 (ISA) 0x00000198 (408)	Microsoft ACPI-Compliant System
 (ISA) 0x00000199 (409)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019A (410)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019B (411)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019C (412)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019D (413)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019E (414)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019F (415)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A0 (416)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A1 (417)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A2 (418)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A3 (419)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A4 (420)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A5 (421)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A6 (422)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A7 (423)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A8 (424)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A9 (425)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AA (426)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AB (427)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AC (428)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AD (429)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AE (430)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AF (431)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B0 (432)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B1 (433)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B2 (434)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B3 (435)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B4 (436)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B5 (437)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B6 (438)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B7 (439)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B8 (440)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B9 (441)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BA (442)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BB (443)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BC (444)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BD (445)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BE (446)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BF (447)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C0 (448)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C1 (449)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C2 (450)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C3 (451)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C4 (452)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C5 (453)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C6 (454)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C7 (455)	Microsoft ACPI-Compliant System

 (ISA) 0x000001C8 (456)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C9 (457)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CA (458)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CB (459)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CC (460)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CD (461)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CF (463)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D0 (464)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D1 (465)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D2 (466)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D3 (467)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D4 (468)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D5 (469)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D6 (470)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D7 (471)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D8 (472)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D9 (473)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DA (474)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DB (475)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DC (476)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DD (477)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DE (478)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DF (479)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E0 (480)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E1 (481)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E2 (482)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E3 (483)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E4 (484)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E5 (485)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E6 (486)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E7 (487)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E8 (488)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E9 (489)	Microsoft ACPI-Compliant System
 (ISA) 0x000001EA (490)	Microsoft ACPI-Compliant System
 (ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
 (ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
 (ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
 (ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
 (ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
 (ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
 (ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System

	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x00000010 (16)	High Definition Audio Controller
	(PCI) 0xFFFFFFFED (-19)	Intel(R) Ethernet Controller I226-LM #2
	(PCI) 0xFFFFFFFEE (-18)	Intel(R) Ethernet Controller I226-LM #2
	(PCI) 0xFFFFFFFEF (-17)	Intel(R) Ethernet Controller I226-LM #2
	(PCI) 0xFFFFFFF0 (-16)	Intel(R) Ethernet Controller I226-LM #2
	(PCI) 0xFFFFFFF1 (-15)	Intel(R) Ethernet Controller I226-LM #2
	(PCI) 0xFFFFFFF2 (-14)	Intel(R) Ethernet Controller I226-LM
	(PCI) 0xFFFFFFF3 (-13)	Intel(R) Ethernet Controller I226-LM
	(PCI) 0xFFFFFFF4 (-12)	Intel(R) Ethernet Controller I226-LM
	(PCI) 0xFFFFFFF5 (-11)	Intel(R) Ethernet Controller I226-LM
	(PCI) 0xFFFFFFF6 (-10)	Intel(R) Ethernet Controller I226-LM
	(PCI) 0xFFFFFFF7 (-9)	Intel(R) Ethernet Connection (18) I219-LM
	(PCI) 0xFFFFFFF8 (-8)	Intel(R) AI Boost
	(PCI) 0xFFFFFFF9 (-7)	Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft)
	(PCI) 0xFFFFFFFA (-6)	Intel(R) Graphics
	(PCI) 0xFFFFFFFB (-5)	Intel(R) Management Engine Interface #1
	(PCI) 0xFFFFFFFC (-4)	Standard SATA AHCI Controller
	(PCI) 0xFFFFFFFD (-3)	PCI Express Root Port
	(PCI) 0xFFFFFFF0 (-2)	PCI Express Root Port
> 	Large Memory	
> 	Memory	