

OMNI-Monitor Series

OMNI-310M, OMNI-312M, OMNI-315M, OMNI-317M, OMNI-319M, OMNI-215M, OMNI-221M

Industrial Touch Display

User's Manual 1st Ed

Copyright Notice

This document is copyrighted, 2018. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Preface II

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- AMD® is trademark of Advanced Micro Devices.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Preface III

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item		Quantity
•	OMNI Monitor	1
•	VGA Cable	1
•	USB Cable for Touch	1
•	Touch Driver CD	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

Preface IV

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the AAEON.com for the latest version of this document.

Preface V

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

- 1. All cautions and warnings on the device should be noted.
- 2. Make sure the power source matches the power rating of the device.
- 3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- Always completely disconnect the power before working on the system's hardware.
- 5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
- 6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
- 7. Always disconnect this device from any AC supply before cleaning.
- 8. While cleaning, use a damp cloth instead of liquid or spray detergents.
- 9. Make sure the device is installed near a power outlet and is easily accessible.
- 10. Keep this device away from humidity.
- 11. Place the device on a solid surface during installation to prevent falls
- 12. Do not cover the openings on the device to ensure optimal heat dissipation.
- 13. Watch out for high temperatures when the system is running.
- 14. Do not touch the heat sink or heat spreader when the system is running
- 15. Never pour any liquid into the openings. This could cause fire or electric shock.
- 16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

Preface VI

- 17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
- 18. DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20° C (-4°F) OR ABOVE 60°C (140°F) TO PREVENT DAMAGE.

Preface VII



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

Preface VIII

产品中有毒有害物质或元素名称及含量

AAFON Panel PC/ Workstation

	有毒有害物质或元素					
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
印刷电路板	×	0	0		0	0
及其电子组件	_ ^			0	U	
外部信号		0	0	0	0	0
连接器及线材	×		0	0	0	0
外壳	×	0	0	0	0	0
中央处理器			0	0	0	0
与内存	×	0	0	0	0	0
硬盘	×	0	0	0	0	0
液晶模块	×	0	0	0	0	0
光驱	×	0	0	0	0	0
触控模块	×	0	0	0	0	0
电源	×	0	0	0	0	0

- O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。
- X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。

备注:

- 一、此产品所标示之环保使用期限,系指在一般正常使用状况下。
- 二、上述部件物质中央处理器、内存、硬盘、光驱、触控模块为选购品。

Preface IX

China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products AAEON Panel PC/ Workstation

	Poisonous or Hazardous Substances or Elements						
Component	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	
PCB & Other Components	Χ	0	0	0	0	0	
Wires & Connectors for External Connections	X	0	0	0	0	0	
Chassis	Χ	0	0	0	0	0	
CPU & RAM	Χ	0	0	0	0	0	
Hard Disk	Χ	0	0	0	0	0	
LCD	Χ	0	0	0	0	0	
Optical Drive	Χ	0	0	0	0	0	
Touchscreen	Χ	0	0	0	0	0	
PSU	Χ	0	0	0	0	0	

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

Preface X

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

Chapter 1 -	- Produ	ct Specifications		1
1.1	Speci	fications		2
	1.1.1	OMNI-310M		2
	1.1.2	OMNI-312M		4
	1.1.3	OMNI-315M		6
	1.1.4	OMNI-317M		8
	1.1.5	OMNI-319M		10
	1.1.6	OMNI-215M		12
	1.1.7	OMNI-221M		14
Chapter 2	– Hardv	vare Information		16
2.1	Dime	nsions		17
	2.1.1	OMNI-310M		17
	2.1.2	OMNI-312M		18
	2.1.3	OMNI-315M		19
	2.1.4	OMNI-317M		20
	2.1.5	OMNI-319M		21
	2.1.6	OMNI-215M		22
	2.1.7	OMNI-221M		23
2.2	I/O Po	orts		24
2.3	Pin D	efinitions		25
	2.3.1	VGA Port Connector	-	25
	2.3.2	HDMI Port Connec	tor	26
2.4	Wate	proof Sponge		27
2.5	Mour	nting		28
	2.5.1	Panel Mounting		28
	2.5.2	Stand Mounting		30

		2.5.2 VESA Mounting	31
Chapte	r 3 - (Onscreen Display Control3	32
3	3.1	Functional Buttons	33
3	3.2	OSD Menu - PICTURE	34
3	3.3	OSD Menu - DISPLAY	35
3	3.4	OSD Menu - COLOR	36
3	3.5	OSD Menu - ADVANCE	37
3	3.6	OSD Menu - INPUT	38
3	3.7	OSD Menu - AUDIO (working with optional internal speaker)	39
3	8.8	OSD Menu - OTHER	40
3	3.9	OSD Menu - EXIT	41
Chapte	r 4 –	Touchscreen and Driver Installation4	12
4	1.1	Introduction	43
4	1.2	Touchscreen Driver Installation (5-Wire Resistive)	44
4	1.3	Installing Driver for Windows® and Linux	45
Append	A xib	- Support Timing List5	52
A	٨.1	Support Timing List Table	53

Chapter 1

Product Specifications

1.1 Specifications

1.1.1 OMNI-310M

П		\sim	\neg	
	ш			

•	Size	10.4"

• Display Type Color TFT

• Active Area 211.2 (H) x 158.4 (V)

• Color 16.2 M

• Pixel Pitch 0.264 (H) x 0.264 (V)

• Resolution 800 x 600

Input Signal
 VGA

HDMI

• Control 5 Keys OSD (Onscreen Display)

Brightness
 230 cd/m2 (TYP.)

• Viewing Angle 170° (H), 160° (V)

• MTBF 30,000

Touchscreen

• Type 5-wire resistive / Projected Capacitive Touch

• Light Transmission $80 \pm 2\% / 88 \pm 2\%$

Controller
 USB

•	Power Supply	External power adapter
---	--------------	------------------------

• DC Input DC 12 ~ 30 V

Mechanical

 Constru 	ction	IP65 Aluminum	die cast front bezel
-----------------------------	-------	---------------	----------------------

• Mounting VESA mounted

Panel mounted

• **Dimension (W x H x D)** 280 x 239 x 59mm (OMNI-310M)

• Cutout Size (W x H) 256 x 207mm (OMNI-310M)

• Gross Weight 3.6 kg (OMNI-310M)

Environmental

 Operating Temperature 	-10 ~ 55°C with air flow (14~ 131°F)
---	--------------------------------------

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation

• Transit Drop 1 Corner, 3 Edge, 6 Surface

● EMC CE/FCC Class A

• Size 12.1

• Control 5 Keys OSD (Onscreen Display)

Brightness
 500 cd/m2 (TYP.)

• Viewing Angle 160° (H), 160° (V)

• MTBF 50,000

Touchscreen

Type	5-wire resistive / Projected Capacitive Touch

• Light Transmission $80 \pm 2\% / 88 \pm 2\%$

Controller
 USB

•	Power Supply	External power adapter
---	--------------	------------------------

• DC Input DC 12 ~ 30 V

Mechanical

•	Construction	IP65 Aluminum die cast front bezel

Mounting
 VESA mounted

Panel mounted

Dimension (W x H x D) 329 x 288 x 56mm

• Cutout Size (W x H) 305 x 243mm

• Gross Weight 5.0 kg

Environmental

 Operating Temperature 	-10 ~ 55°C with air flow (14~ 131°F)
---	--------------------------------------

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation

Transit Drop 1 Corner, 3 Edge, 6 Surface

● EMC CE/FCC Class A

•	Size	15	"

• Control 5 Keys OSD (Onscreen Display)

Brightness 450 cd/m2 (TYP.)

• Viewing Angle 160° (H), 140° (V)

• MTBF 100,000

Touchscreen

Type	5-wire resistive,	/ Projected	Capacitive	Louch
------------------------	-------------------	-------------	------------	-------

■ Light Transmission 80 ± 2% / 88 ± 2%

Controller
 USB

•	Power Supply	External power adapter
---	--------------	------------------------

• DC Input DC 12 ~ 30 V

Mechanical

Mounting
 VESA mounted

Panel mounted

• **Dimension (W x H x D)** 369 x 314 x 58mm

• Cutout Size (W x H) 355 x 290mm

• Gross Weight 6.4 kg

Environmental

 Operating Temperature 	-10 ~ 55°C with air flow (14~ 131°F)
---	--------------------------------------

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation

• Transit Drop 1 Corner, 3 Edge, 6 Surface

EMC
 CE/FCC Class A

•	Size	17"

Display Type
 Color TFT

• Active Area 337.920 (H) x 270.336 (V)

• Color 16.7 M

• Pixel Pitch 0.264 (H) x 0.264 (V)

• Resolution 1280 x 1024

• Input Signal VGA

HDMI

• Control 5 Keys OSD (Onscreen Display)

• Brightness 350 cd/m2 (TYP.)

• Viewing Angle 160° (H), 140° (V)

• MTBF 50,000

Touchscreen

■ Type 5-wire resistive / Projected Capacitive Touch

• Light Transmission $80 \pm 2\% / 88 \pm 2\%$

• Controller USB

 Power Supply 	External power adapter
----------------------------------	------------------------

• DC Input DC 12 ~ 30 V

Mechanical

Mounting
 VESA mounted

Panel mounted

• **Dimension (W x H x D)** 410 x 370 x 59mm

• Cutout Size (W x H) 385 x 323mm

• Gross Weight 7.2 kg

Environmental

 Operating Temperature 	-10 ~ 55°C with air flow (14~ 131°F)
---	--------------------------------------

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation

• Transit Drop 1 Corner, 3 Edge, 6 Surface

EMC
 CE/FCC Class A

•	Size	19"

• Control 5 Keys OSD (Onscreen Display)

• Brightness 350 cd/m2 (TYP.)

• Viewing Angle 170° (H), 160° (V)

• MTBF 70,000

Touchscreen

• Type	-wire resistive / Pr	ojected Capacitive	Touch
--------	----------------------	--------------------	-------

• Light Transmission $80 \pm 2\% / 88 \pm 2\%$

Controller
 USB

Power Supply
 External power adapter

• DC Input DC 12 ~ 30 V

Mechanical

• Construction IP65 Aluminum die cast front bezel

• Mounting VESA mounted

Panel mounted

• **Dimension (W x H x D)** 461 x 410 x 59mm

• Cutout Size (W x H) 429 x 359mm

• Gross Weight 8.8 kg

Environmental

• Operating Temperature -10 ~ 55°C with air flow (14~ 131°F)

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation

Transit Drop 1 Corner, 3 Edge, 6 Surface

● EMC CE/FCC Class A

•	Size	15.6"

• Control 5 Keys OSD (Onscreen Display)

• Brightness 400 cd/m2 (TYP.)

• Viewing Angle 170° (H), 170° (V)

• MTBF 50,000

Touchscreen

● Type 5	-wire resistive / Projected Capacitive Tol	uch
-----------------	--	-----

● Light Transmission 80 ± 2% / 88 ± 2%

Controller
 USB

Pov	ver Supply	External	power adapter
-----------------------	------------	----------	---------------

• DC Input DC 12 ~ 30 V

Mechanical

Con:	struction	IP65 Aluminum	n die cast front bezel
------------------------	-----------	---------------	------------------------

• Mounting VESA mounted

Panel mounted

• Dimension (W x H x D) 420 x 265 x 60mm

• Cutout Size (W x H) 390 x 240mm

• Gross Weight 6.4 kg

Environmental

 Operating Temperature 	-10 ~ 55°C with air flow (14~ 131°F)
---	--------------------------------------

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation

• Transit Drop 1 Corner, 3 Edge, 6 Surface

● EMC CE/FCC Class A

•	Size	21.5"

• Active Area 476.64 (H) x 268.11 (V)

• Color 16.7 M

• Pixel Pitch 0.24825 (H) x 0.24825 (V)

• Resolution 1920 x 1080

• Input Signal VGA

HDMI

• Control 5 Keys OSD (Onscreen Display)

• Brightness 250 cd/m2 (TYP.)

• Viewing Angle 178° (H), 178° (V)

• MTBF 30,000

Touchscreen

• Type 5-wire resistive / Projected Capacitive Touch

• Light Transmission $80 \pm 2\% / 88 \pm 2\%$

• Controller USB

 Power Supply 	External power adapter
----------------------------------	------------------------

• DC Input DC 12 ~ 30 V

Mechanical

• Construction IP65 Aluminum die cast front bezel

Mounting
 VESA mounted

Panel mounted

• **Dimension (W x H x D)** 550 x 373 x 53mm

• Cutout Size (W x H) 525 x 350mm

• Gross Weight 8.9 kg

Environmental

• Operating Temperature -10 ~ 55°C with air flow (14~ 131°F)

• Storage Temperature -20 ~ 60°C with air flow (-4~ 140°F)

• Operating Humidity 5 ~ 90% @ 40°C, non-condensing

• Anti-Vibration 1 Grms / 5-500Hz/ random operation


Transit Drop 1 Corner, 3 Edge, 6 Surface

● EMC CE/FCC Class A


Chapter 2


Hardware Information

2.1.1 OMNI-310M

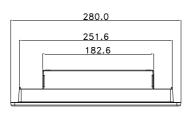



OMNI-310M

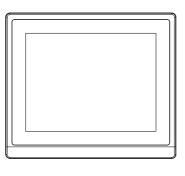







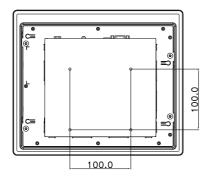





□MNI-312M

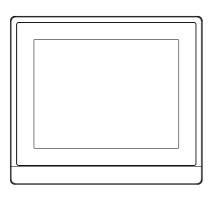







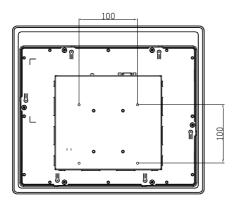





□MNI-315M

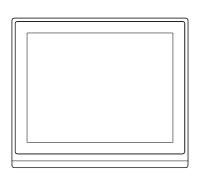







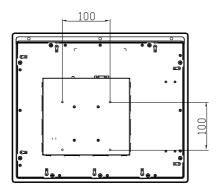





OMNI- 317M

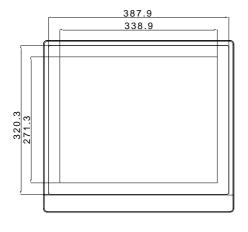







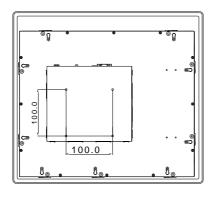





□MNI-319M

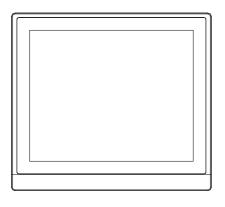







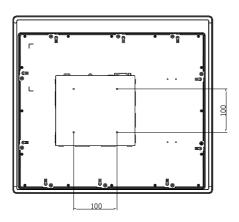





□MNI-215M

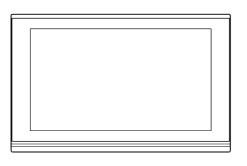




SCALE 3:5

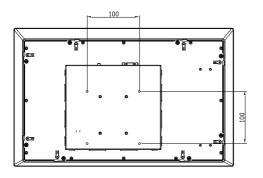




□MNI-221M

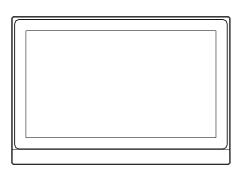





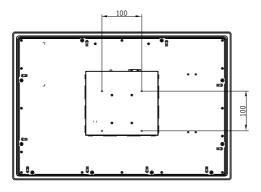



No.	I/O Description	Remark
1	USB A Type for Touch Screen	
2	VGA input	
3	HDMI input	
4	Audio in (Line in)	Optional Function
5	DC in (Terminal Bock 3pin)	Default Connector
6	DC in (Jack)	Optional Connector

2.3 Pin Definitions


This section details all the pins definition of all the connectors associating with the OMNI-Monitor Series to aid your setup.

2.3.1 VGA Port Connector



Pin	Signal	Pin	Signal
1	Red	2	Green
3	Blue	4	GND
5	GND	6	R-GND
7	G-GND	8	B-GND
9	PC 5V	10	DET
11	GND	12	SDA DDC
13	SYNC.H	14	SYNC.V
15	SCL DDC		

2.3.2 HDMI Port Connector




Pin	Signal	Pin	Signal	
1	TMDS2+	2	GND	
3	TMDS2-	4	TMDS1+	
5	GND	ND 6 TMDS1-		
7	TMDS0+	8	GND	
9	TMDS0-	10	TMDSC+	
11	GND	12	TMDSC-	
13	NC	14	NC	
15	HDMI_SCL	16	HDMI_SDA	
17	GND	18	HD_5V	
19	H_HPD			

Waterproof Sponge 2.4

Inside sponge:

Bezel

- Tear off the protection paper on the self-adhesive side of the inside sponge.
- Stick the sponge on the recessed area of the Aluminum bezel or 2 customer's own bezel.

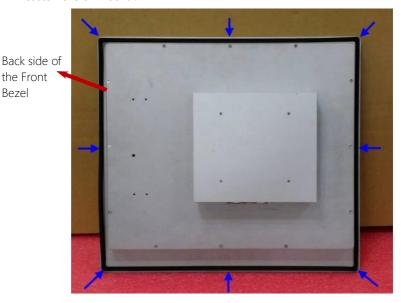


2.5 Mounting

This section details the steps you need to follow when fitting the various mounting brackets onto the OMNI-Monitor Series.

2.5.1 Panel Mounting

To mount this panel onto a wall, refer to the diagram below.

Step 1-Glue the waterproof rubber along the back side of the panel

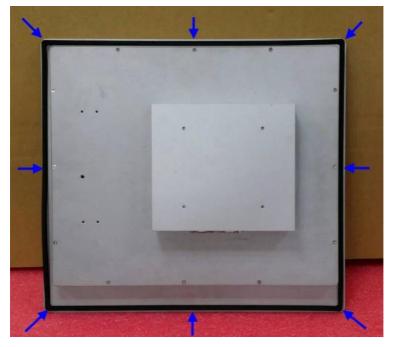

Step 2-Pull out the panel mount brackets along the edge of frame



Step 3- Use screws to secure the panel onto the wall with the wallmount brackets



2.5.2 Stand Mounting

Use AAEON's optional Monitor Stand (Part Number: AP-OT9789LA1000)

Attach the stand to the monitor via the VESA holes (100x100mm) on the back of OMNI-Monitor.



AP-OT9789LA1000

2.5.2 VESA Mounting


Mounting the OMNI-Monitor with UL Listed Wallmount Bracket only. The Monitor can be mounted on a monitor arm or wallmount plate.

Caution:

When mounting the monitor, take care to tighten the retention screws or bolts until fully secured, but do not over tighten. Overtightening the retention screws or bolts may cause them to become stripped, rendering them useless.

Monitor Arm or Wallmount Plate Installation

The Monitor has Video Electronics Standards Association (VESA) standard mounting holes tapped into the rear panel. The standard holes are M4 set at 100mm x 100mm apart.

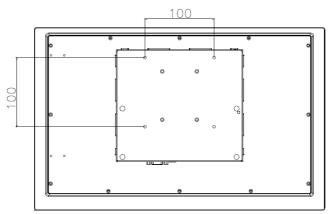

VESA Mounting Holes

To mount the Monitor onto a monitor arm or wallmount plate, please follow the steps below.

Step 1: Line up the threaded holes on the monitor's rear panel with the screw holes on the monitor arm or wallmount plate.

Step 2: Secure the monitor to the arm or stand with the retention screws supplied with the monitor arm or stand.

Chapter 3

Onscreen Display Control

3.1 **Functional Buttons**



Button	Function (Outside Menu)	Function (Inside Menu)
	Turn the Monitor on or off	Turn the Monitor on or off
AUTO	Auto adjustment (VGA only)	Return to last menu
MENU	Activate the OSD menu	Confirm the selected option.
	Increase backlight brightness	Move up
	(Default: 50, range: 0 ~ 100)	Increase the gauge value of the
	Backlight + 50	selected option.
	Decrease backlight brightness	Move down



Decrease backlight brightness (Default: 50, range: 0 ~ 100)



Move down

Decrease the gauge value of the selected option.



Item	Function
Brightness	Adjust the brightness (0-100)
Contrast	Adjust the contrast (0-100)
Sharpness	Adjust the image sharpness (0-4)
Exit	Exit the menu



Item	Function
Auto Adjust	Perform the auto adjust (VGA Mode only)
H Position	Adjust the image to the left or right on the screen (0-100)
V Position	Adjust the image to the up or down on the screen (0-100)
Pixel Clock	Adjust the value of horizontal image (0-100)
Phase	Adjust the phase control (Phase adjustment may be required to optimize the display quality) (0-100)
Exit	Exit the menu



Item	Function
Gamma	Adjust the value of gamma (off/1.8/2.2/2.4)
Color Temp	Adjust the color temperature (5800K/6500K/7500K9300K/sRGB/User)
Auto Color	Perform auto color function
Exit	Exit the menu



Item	Functionas
Aspect Ratio	Change the aspect ratio mode (4:3/16:9/5:4/Full/Original)
Exit	Exit the menu



Item	Function
Auto Select	Auto detect the valid input image signal source
VGA	Set to VGA input mode
HDMI	Set to HDMI input mode
Exit	Exit the menu

3.7 OSD Menu - AUDIO (working with optional internal speaker)



ltam	Function
Volume	Adjust the level of audio volume (0-100)
Mute	Set the speaker work or mute (off/on)
Exit	Exit the menu



Item	Function
Reset	Reset all settings to the default
Menu Time	Adjust how long the OSD shown on the screen while active (1-30 sec)
OSD H Position	Adjust the OSD to the left or right on the screen (0-100)
OSD V Position	Adjust the OSD to the up or down on the screen (0-100)
Transparency	Adjust the transparency of OSD menu (0-7)
Language	Select the language of OSD menu (English/Deutsch/French/Spanish/Traditional Chinese/ Simplified Chinese/Japanese)
Exit	Exit the menu



Item	Function
Exit	Showing the information of current input image signal Perform to quit the OSD

Chapter 4

Touchscreen and Driver Installation

4.1 Introduction

The OMNI-Monitor Series touch monitor uses 5-wire resistive technology or Projected Capacitive technology to provide more accurate sensing capacity than other technologies. The touch screen is specially designed for tough industrial environments and has been approved by CE/FCC Class A standards.

Touch Screen

5-Wire Resistive

- USB interface
- · Single touch point
- Light transparency 80±3%
- Surface Hardness ≥3H

Projected Capacitive

- USB interface
- Multi Touch (max. support to 10 points)
- Light Transparency ≥85%
- Surface Hardness ≥7H

4.2 Touchscreen Driver Installation (5-Wire Resistive)

Introduction

Please install the touch driver on your PC device after connecting the USB cable from the monitor to the PC device.

Note: There is no need to install a driver for Projected Capacitive touch; it's only necessary for 5-Wire Resistive touch. Please make sure what type of monitor you have.

4.3 Installing Driver for Windows® and Linux


The touch screen has drivers for Windows® and Linux. You should read the instructions in this chapter carefully before installation.

Note 1: The following windows illustrations are examples only. You must follow the flow chart instructions and pay attention to the instructions which appear on your screen.

For Windows®,

Find the folder "PenMount Windows Universal Driver V2.4.5.350 WHQL" inside of driver CD and open the folder to find "setup.exe" and execute it.


 Find the folder "PenMount Windows Universal Driver V2.4.5.350 WHQL" inside of driver CD and open the folder to find "setup.exe" and execute it.

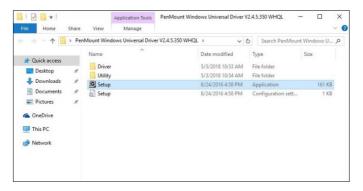


2. Click the "Next" button on the screen




3. Click on the "I Agree" button and restart your system

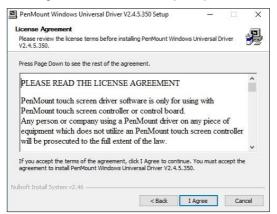


4. Confirm the path for driver install and click "Install" button.

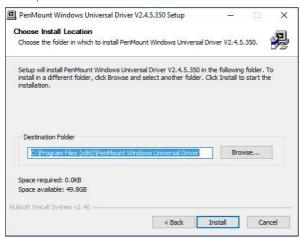

5. Click "Yes" button.

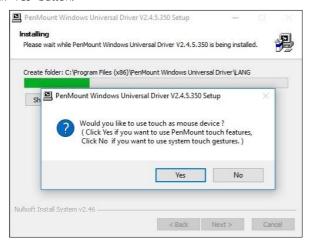

6. Installation finished.

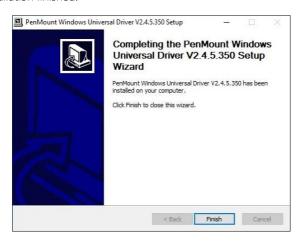


Touch Calibration

After the touch driver installed, you should run calibration immediately to make sure the touch accuracy.

1. Find the icon and execute it.




2. Click the "Configure" button.

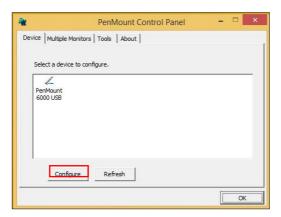

3. Standard Calibration




4. Follow the instruction on the screen to calibrate the touch.

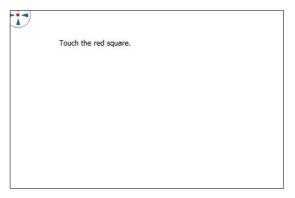

Draw Test

1. Go to "Tools" tab and click "Draw" button

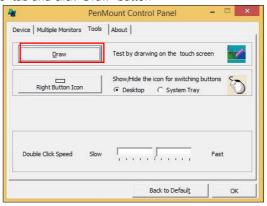

For Linux Ubuntu, please find the compressed file "pmLinux-Ubuntu_12.04-18.04_32_64bit_Driver_V4.5.6.tar.bz2" in the Touch Driver CD.

Find the "README" file inside the compressed file and follow the instruction to install the touch driver

- 1). Login as user in Ubuntu login prompt
- 2). Open terminal [Dash Home] -> Applications -> Accessories -> Terminal
- 3). Change directory to where the device driver is extracted to \$ cd pmlinux-Ubuntu
- 4). Change the settings in PenMount.ini or just use the default configurations.
- 5). Run install script with root permission \$ sudo ./install.sh
- 6). Restart X window system to apply changes

Touch Calibration

- 1). Start the PenMount Utility.
 - In [Dash Home] -> Applications -> Customization -> PenMount Utility
 The PenMount utility will be launched.
- 2). Select calibrate type and press the 'Calibrate' button.
- 3). Follow the instuctions on screen and finish calibration.
 - * gCal is the calibration utility can be run directly in terminal. $\label{eq:gCal} gCal~[4|9|16|25]~-~advanced~calibration~(4~points, 9~points...)$

Appendix A

Support Timing List

A.1 Support Timing List Table

Item	Description	Hz	3105	3125	3155	3175	3195	2155	2215
1	640 x 480	60	V	V	V	V	V	V	V
2	640 x 480	63	V						
3	640 x 480	67	V	V	V	V	V	V	
4	640 x 480	72	V	V	V	V	V	V	
5	640 x 480	75	V	V	V	V	V	V	
6	720 x 400	70	V	V	V	V	V	V	V
7	800 x 600	56	V	V	V	V	V	V	V
8	800 x 600	60	V	V	V	V	V	V	V
9	800 x 600	72	V	V	V	V	V	V	V
10	800 x 600	75	V	V	V	V	V	V	V
11	1024 x 768	60		V	V	V	V	V	V
12	1024 x 768	70		V	V	V	V	V	
13	1024 x 768	75		V	V	V	V	V	
14	1152 x 864	60				V	V	V	V
15	1152 x864	75				V	V		
16	1280 x 768	59				V	V	V	V
17	1280 x 800	60				V	V	V	V
18	1280 x 960	60				V	V	V	V
19	1280 x 1024	60				V	V	V	V
20	1280 x 1024	75				V	V	V	V
21	1360 x 765	60							V
22	1360 x 768	60						V	
23	1366 x 768	59						V	V
24	1600 x 900	60							V

25	1600 x 1200	60	V
26	1680 x 1050	60	V
27	1920 x 1080	60	V