



# BP-205SP-P4

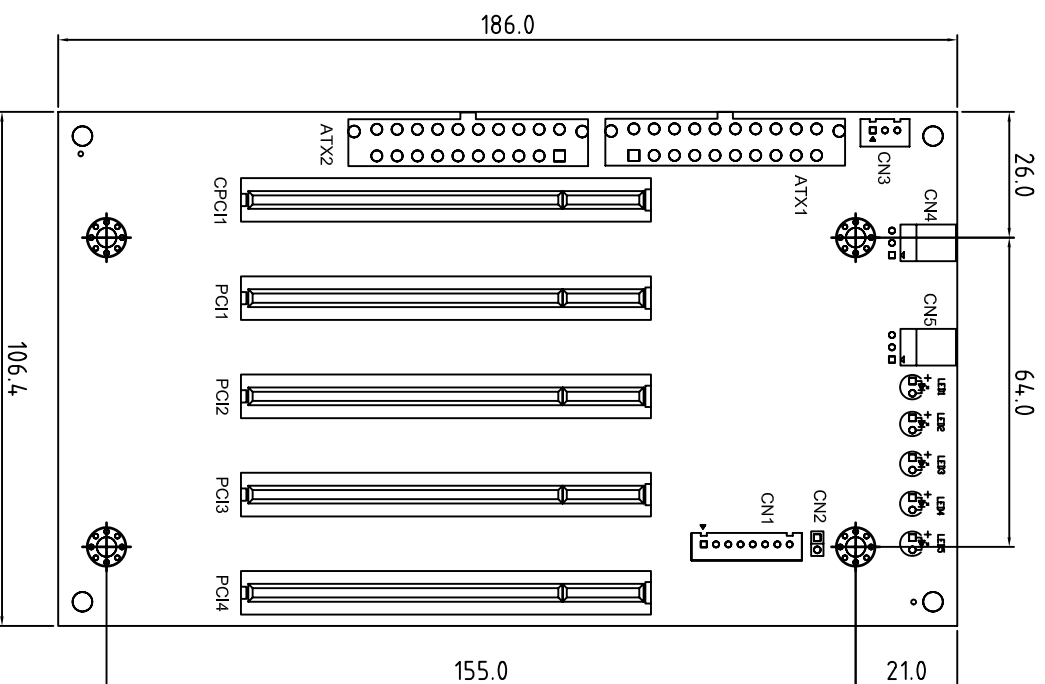

## Alarm (CN1)



Pin1 : +5VSB  
 Pin2 : +12V  
 Pin3 : +3.3V  
 Pin4 : -12V  
 Pin5 : +5V  
 Pin6 : SMB\_CLK  
 Pin7 : SMB\_DATA  
 Pin8 : GND

## SMBus (CN2)



Pin1 : SMB\_CLK  
 Pin2 : SMB\_DATA

## PS-ON (CN3)



Pin1 : PS-ON  
 Pin2 : GND  
 Pin3 : +5VSB

## Fan (CN4,5)



Pin1 : GND  
 Pin2 : +12V  
 Pin3 : NC

PCI Rounting Table

Slot	IDSEL	Interrupt pin route	REQ
PCI1	AD31	INTB  INTC INTD  INTA	REQA
PCI2	AD30	INTC  INTD INTA  INTB	REQB
PCI3	AD29	INTD  INTA INTB  INTC	REQC
PCI4	AD28	INTA  INTB INTC  INTD	REQD

### Note:

- A. CPCI Slot only can use for PICMG\_PCI CPU card, another CPCI Slot can't use for standard PCI card in the meantime.
- B. PICMG\_PCI CPU card must install on CPCI Slot.