

NanoCOM-U15 A2.0

Intel® Atom™ Z530/Z510 Processor

24-bit Single Channel LVDS

Onboard DDRII 533 Memory

High Definition Audio

Onboard Solid State Disk

1 SATA II, 8 USB2.0

Copyright Notice

This document is copyrighted, 2010. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- Award is a trademark of Award Software International, Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- Intel®, Atom™ are trademarks of Intel® Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- SoundBlaster is a trademark of Creative Labs, Inc.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 NanoCOM-U15 A2.0 CPU module
- 1 CD-ROM for manual (in PDF format) and drivers
- 4 M2.5 screws

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

Application Notes

1. Wake-On-LAN and PXE function

For saving the battery power, the standby power in the ECB-951D (COM Express carrier board) has been removed. Therefore, the NanoCOM-U15 cannot support Wake-On-LAN and PXE function when the ECB-951D has been using.

If you need the function of Wake-On-LAN or PXE, AAEON can provide the custom BIOS to you.

2. USB Client Port

The NanoCOM-U15 supports 8 USB ports. Port 7 can be the host or client port. It can be chosen via BIOS.

3. Legacy and legacy-free BIOS

The NanoCOM-U15 equips with legacy-free BIOS in default. If you test the functions on ECB-951D accompanied with the NanoCOM-U15, please use the legacy BIOS instead of legacy-free BIOS. You can find the legacy BIOS in the utility CD and get the latest one on AAEON website.

4. Display Support

If you want to get the display(s) not only from LVDS LCD, but also from DVI monitor for debugging, please purchase the ECB-951D. It is a COM Express carrier board and equips with SDVO to DVI daughter board to provide the DVI connector.

5. Touch Screen Controller with USB Interface

If you implement a touch screen controller with USB interface in the carrier board and use Windows CE, please use USB#0, 1 and 3 of NanoCOM-U15. There is a driver support issue of Windows CE.

6. DVI display issue in Windows OS

If you only connect DVI panel, it will display normally when installing OS. After installing the graphic driver, you will need to reboot the system. After booting, the display may disappear. It is Intel's driver issue. The display may change to LVDS panel even you do not connect LVDS panel and choose "DVI only" item in BIOS. You can use the below hot key to change the display from LVDS panel to DVI

panel:
Ctrl+Alt+F4

7. DVI display issue in DOS

If you connect DVI panel and LVDS panel both, only DVI panel shows the display in DOS even you choose "LVDS+DVI" item in BIOS. Display signals that come from SDVO will be the "first" and "only" display in DOS.

8. Installation of Fedora 10

(1) If you want to install Fedora 10 into on-board SSD, it may be an issue.

Standard Fedora 10 can not be installed into the 4GB SSD because its capacity is not enough.

(2) When installing Fedora 10, on-board SSD and SATA storage device can not exist at the same time.

You need to buy the versions without onboard SSD or with higher capacity of SSD.

Contents

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features	1-3
1.3 Specifications	1-4

Chapter 2 Quick Installation Guide

2.1 Safety Precautions	2-2
2.2 Location of Connectors/Jumpers & Mechanical Drawings	2-3
2.3 List of Jumpers/ Connectors/ Switches	2-4
2.4 CPLD Writing Programming Connector (JP1)	2-4
2.5 AT/ATX and SSD Writing Protection Function Setting Switch (S1)	2-4
2.6 SCI & SMI Connector (CN2)	2-5
2.7 SDVO Connector (CN3)	2-5
2.8 COM Express Row A/B Connector (CN4).....	2-6
2.9 Storage Support Matrix	2-11

Chapter 3 Award BIOS Setup

3.1 System Test and Initialization.	3-2
3.2 Award BIOS Setup	3-3

Chapter 4 Driver Installation

4.1 Installation	4-3
------------------------	-----

Appendix A Programming The Watchdog Timer

A.1 Programming	A-2
-----------------------	-----

Appendix B I/O Information

B.1 I/O Address Map	B-2
B.2 Memory Address Map.....	B-3
B.3 IRQ Mapping Chart.....	B-4
B.4 DMA Channel Assignments.....	B-4

Chapter

1

**General
Information**

1.1 Introduction

To accommodate fast growing marketing segments, AAEON has developed a brand new COM Express CPU module. The NanoCOM-U15 A2.0, and its accompanying carrier board-ECB-951D, adopts Intel® Atom™ Z530/Z510 processor and Intel® System Controller Hub US15W chipset, offering high speed PCI-Express bus interface and serial ATA for your high performance applications requiring high-speed and greater stability. The COM Express CPU module offers flexibility and time-to-market advantages over a fully customized platform.

AAEON's NanoCOM-U15 A2.0 supports up to 24-bit single channel LVDS interface and supports onboard DDRII 533 memory chip up to 1GB. A high definition audio interface is available to connect to an audio codec on the carrier board. Moreover, one onboard PATA SSD (Master device) and one SATAII interfaces are featured giving the user flexibility in storage choices.

To satisfy the requirements of leading-edge applications in gaming, entertainment, industrial automation, medical, and POS, etc, COM Express carrier boards can be designed with features and technologies specifically targeting the needs of the different market segments. AAEON can design your COM Express carrier board to meet your specific project requirements.

1.2 Features

- Onboard Intel® Atom™ Z530/Z510 Processor
- Intel® System Controller Hub US15W
- Onboard DDRII 533 Memory Chip, Max. 1GB
- Gigabit Ethernet
- Up to 24-bit LVDS LCD, SDVO Connector x 1
- High Definition Audio Interface
- PATA SSD (Up to 4GB) x 1, SATA II x 1
- USB2.0 x 8
- PCI-Express [x1] x 1
- Wide DC Input Range, +4.75V to +14.7V
- COM Express Pin-out Type I
- Compact Module Size, 84mm x 55mm

1.3 Specifications

System

- Processor Intel® Atom™ Z530/Z510 Processor
Z530: 1.6GHz/ FSB 533MHz
Z510: 1.1GHz/ FSB 400MHz
- System Memory Non-ECC Onboard DDRII 533 memory chip, Max. 1GB
- Chipset Intel® System Controller Hub US15W
- I/O Chipset Intel® System Controller Hub US15W
- Ethernet Intel® 82574L for 10/100/1000Base-TX Ethernet x 1
- BIOS Award BIOS v8.0, TSOP type, 1MB ROM
- H/W status monitoring CPU Temperature Monitoring
- Watchdog Timer Fintek F75111
- Expansion Interface 4-bit SDIO: Multiplexed with GPIO pins
PCI-Express [x1] x 1
LPC bus x 1
SMBus x 1
- BBS Yes

- Power Requirement Wide DC Input Range,
+4.75V to +14.7V
2-pin wafer for RTC battery
- Board Size 3.31" (L) x 2.17" (W)
(84mm x 55mm)
- Gross Weight 0.44 lb (0.2kg)
- Operating Temperature 32°F~140°F (0°C~60°C)
- Storage Temperature -40°F~176°F (-40°C~80°C)
- Operating Humidity 0%~90% relative humidity,
non-condensing
- OS Support Windows 32-bit XP Pro, Windows
XP Embedded, WinCE 6.0,
Linux-Fedora 10

Display: Supports LCD/DVI or LCD/LCD (via SDVO)

Simultaneous/ Dual View Displays

- Chipset Intel® System Controller Hub
US15W integrated
- Memory Shared system memory up to
256MB
- Resolution Up to 1366 x 768 @ 85Hz (Max.
pixel clock of 112MHz) for LVDS;
Up to 1280 x 1024 @ 85Hz (Max.
pixel clock of 160MHz) for
SDVO

- LCD Interface Up to 24-bit single channel LVDS
- SDVO SDVO connector x 1

I/O

- Storage
 1. PATA SSD onboard (Master device), Max. 4GB (Optional)
 2. SATA II x 1
- USB USB2.0 x 8
- Audio High Definition Audio
- Parallel Port From LPC interface on the carrier board
- Serial Port From LPC interface on the carrier board
- GPIO Up to 4 in or 4 out: Multiplexed with 4-bit SDIO

Chapter

2

Quick Installation Guide

Notice:

The Quick Installation Guide is derived from Chapter 2 of user manual. For other chapters and further installation instructions, please refer to the user manual CD-ROM that came with the product.



2.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.


Caution!




Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis

2.2 Location of Connectors/ Jumpers & Mechanical Drawings

Component Side

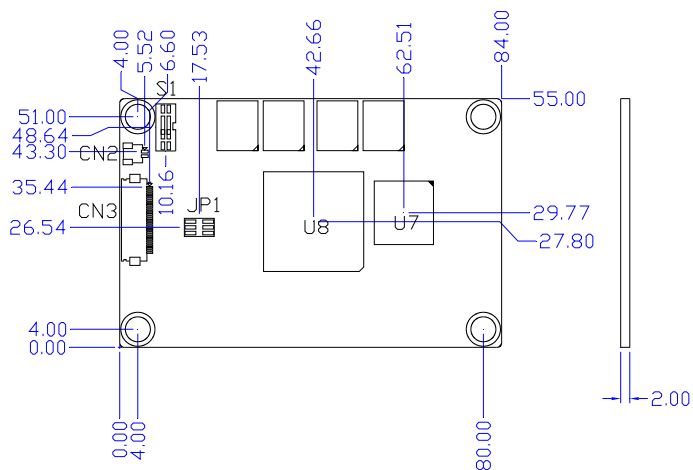

Solder Side

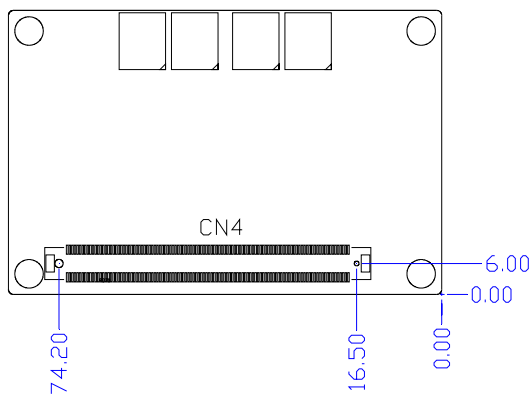

2.3 List of Jumpers/ Connectors/ Switches

The board has a number of jumpers, connectors and switches that allow you to configure your system to suit your application.


The table below shows the function of them:

Label	Function
JP1	CPLD Writing Programming Connector
S1	AT/ATX and SSD Writing Protection Function Setting Switch
CN2	SCI & SMI Connector
CN3	SDVO Connector
CN4	COM Express Connector

2.4 CPLD Writing Programming Connector (JP1)

Pin	Signal	Pin	Signal
1	TMS	2	TDI
3	TDO	4	TCK
5	GND	6	+3.3V_DUAL

2.5 AT/ATX and SSD Writing Protection Function Setting Switch (S1)

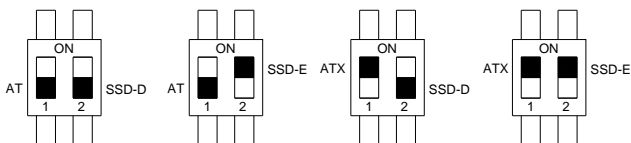

Label	Function
1 (On)	ATX (Default)

1 (Off)	AT
2 (On)	SSD Writing Protection Function Enable (SSD-E)
2 (Off)	SSD Writing Protection Function Disable (SSD-D) (Default)

2.6 SCI & SMI Connector (CN2)

Pin	Signal
1	EC_SCI
2	SMI#

2.7 SDVO Connector (CN3)

Pin	Signal	Pin	Signal
1	GND	2	SDVO_CLK#
3	SDVO_CLK	4	GND
5	SDVO_GREEN#	6	SDVO_GREEN
7	GND	8	SDVO_INT#
9	SDVO_INT	10	GND
11	SDVO_BLUE#	12	SDVO_BLUE
13	GND	14	SDVO_RED#
15	SDVO_RED	16	GND
17	SDVO_STALL#	18	SDVO_STALL
19	GND	20	SDVO_CTRLCLK_R
21	SDVO_CTRLDATA_R	22	SDVO_RST#
23	+3.3V	24	+2.5V
25	+5V	26	GND
27	TVCLKIN#	28	TVCLKIN
29	+3.3V	30	+5V

2.8 COM Express Row A/B Connector (CN4)

Row A		Row B	
A1	GND (FIXED)	B1	GND (FIXED)
A2	GBE0_MDI3-	B2	GBE0_ACT#
A3	GBE0_MDI3+	B3	LPC_FRAME#
A4	GBE0_LINK100#	B4	LPC_AD0
A5	GBE0_LINK1000#	B5	LPC_AD1
A6	GBE0_MDI2-	B6	LPC_AD2
A7	GBE0_MDI2+	B7	LPC_AD3
A8	GBE0_LINK#	B8	LPC_DRQ0#
A9	GBE0_MDI1-	B9	N.C.
A10	GBE0_MDI1+	B10	LPC_CLK
A11	GND (FIXED)	B11	GND (FIXED)
A12	GBE0_MDI0-	B12	PWRBTN#
A13	GBE0_MDI0+	B13	SMB_CK
A14	GBE0_CTREF	B14	SMB_DAT
A15	SUS_S3#	B15	SMB_ALERT#
A16	SATA0_TX+	B16	N.C.
A17	SATA0_TX-	B17	N.C.
A18	SUS_S5#	B18	N.C.
A19	SATA0_RX+	B19	N.C.
A20	SATA0_RX-	B20	N.C.
A21	GND (FIXED)	B21	GND (FIXED)

A22	N.C.	B22	N.C.
A23	N.C.	B23	N.C.
A24	SUS_S5#	B24	PWR_OK
A25	N.C.	B25	N.C.
A26	N.C.	B26	N.C.
A27	N.C.	B27	WDT
A28	IDELED#	B28	N.C.
A29	AC_SYNC	B29	AC_SDIN1
A30	AC_RST#	B30	AC_SDIN0
A31	GND (FIXED)	B31	GND (FIXED)
A32	AC_BITCLK	B32	SPKR
A33	AC_SDOUT	B33	I2C_CK
A34	BIOS_DISABLE#	B34	I2C_DAT
A35	THRMTRIP#	B35	THRM#
A36	USB3-	B36	USB2-
A37	USB3+	B37	USB2+
A38	USB_6_7_OC#	B38	USB_4_5_OC#
A39	USB6-	B39	USB7-
A40	USB6+	B40	USB7+
A41	GND (FIXED)	B41	GND (FIXED)
A42	USB4-	B42	USB5-
A43	USB4+	B43	USB5+
A44	USB_2_3_OC#	B44	USB_0_1_OC#
A45	USB0-	B45	USB1-

A46	USB0+	B46	USB1+
A47	VCC_RTC	B47	N.C.
A48	EXCD0_PERST#	B48	N.C.
A49	N.C.	B49	SYS_RESET#
A50	LPC_SERIRQ	B50	CB_RESET#
A51	GND (FIXED)	B51	GND (FIXED)
A52	N.C.	B52	N.C.
A53	N.C.	B53	N.C.
A54	GPI0 D54	B54	GPO1
A55	N.C.	B55	N.C.
A56	N.C.	B56	N.C.
A57	GND	B57	GPO2
A58	N.C.	B58	N.C.
A59	N.C.	B59	N.C.
A60	GND (FIXED)	B60	GND (FIXED)
A61	N.C.	B61	N.C.
A62	N.C.	B62	N.C.
A63	GPI1	B63	GPO3
A64	N.C.	B64	N.C.
A65	N.C.	B65	N.C.
A66	GND	B66	WAKE0#
A67	GPI2	B67	WAKE1#
A68	PCIE_TX0+	B68	PCIE_RX0+
A69	PCIE_TX0-	B69	PCIE_RX0-

A70	GND (FIXED)	B70	GND (FIXED)
A71	LVDS_A0+	B71	N.C.
A72	LVDS_A0-	B72	N.C.
A73	LVDS_A1+	B73	N.C.
A74	LVDS_A1-	B74	N.C.
A75	LVDS_A2+	B75	N.C.
A76	LVDS_A2-	B76	N.C.
A77	LVDS_VDD_EN	B77	N.C.
A78	LVDS_A3+	B78	N.C.
A79	LVDS_A3-	B79	LVDS_BKLT_EN
A80	GND (FIXED)	B80	GND (FIXED)
A81	LVDS_A_CK+	B81	N.C.
A82	LVDS_A_CK-	B82	N.C.
A83	LVDS_I2C_CK	B83	LVDS_BKLT_CTRL
A84	LVDS_I2C_DAT	B84	VCC_5V_SBY
A85	GPI3	B85	VCC_5V_SBY
A86	KBD_RST#	B86	VCC_5V_SBY
A87	N.C.	B87	VCC_5V_SBY
A88	PCIE0_CK_REF+	B88	RSVD
A89	PCIE0_CK_REF-	B89	N.C.
A90	GND (FIXED)	B90	GND (FIXED)
A91	RSVD (EC_SCI)	B91	N.C.
A92	RSVD (SMI#)	B92	N.C.
A93	GPO0	B93	N.C.

A94	RSVD	B94	N.C.
A95	RSVD	B95	N.C.
A96	GND	B96	N.C.
A97	VCC_12V	B97	N.C.
A98	VCC_12V	B98	N.C.
A99	VCC_12V	B99	N.C.
A100	GND (FIXED)	B100	GND (FIXED)
A101	VCC_12V	B101	VCC_12V
A102	VCC_12V	B102	VCC_12V
A103	VCC_12V	B103	VCC_12V
A104	VCC_12V	B104	VCC_12V
A105	VCC_12V	B105	VCC_12V
A106	VCC_12V	B106	VCC_12V
A107	VCC_12V	B107	VCC_12V
A108	VCC_12V	B108	VCC_12V
A109	VCC_12V	B109	VCC_12V
A110	GND (FIXED)	B110	GND (FIXED)

Note: Multi-function pins for 4-bit SDIO

Pin	GPIO	SDIO	Pin	GPIO	SDIO
A54	GPIO0	DATA0	B54	GPO1	CMD
A63	GPI1	DATA1	B57	GPO2	WP
A67	GPI2	DATA2	B63	GPO3	CD#
A85	GPI3	DATA3			
A93	GPO0	CLK			

2.9 Storage Support Matrix

Model Name	Storage	CPU Module	ECB-951D (Function availability)				Description
		SSD (Master)	PATA (IDE) (Master)	SATA (Slave)	CF (Slave)	SDIO	
TF-NanoCOM-U15-A20-01	4GB SSD x 1 SATA II x 1 SDIO x 1	Yes	No	Yes	No	Yes	NanoCOM Express CPU Module. Intel Atom Z510. US15W. DDRII 1GB. Gigabit Ethernet. 4GB SSD. USB2.0. Rev.A2.0
TF-NanoCOM-U15-A20-03	4GB SSD x 1 SATA II x 1 SDIO x 1	Yes	No	Yes	No	Yes	NanoCOM Express CPU Module. Intel Atom Z530. US15W. DDRII 1GB. Gigabit Ethernet. 4GB SSD. USB2.0. Rev.A2.0

Below Table for China RoHS Requirements

产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注：此产品所标示之环保使用期限，系指在一般正常使用状况下。</p>						

Chapter

3

**Award
BIOS Setup**

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

Press <F1> to RESUME

Write down the message and press the F1 key to continue the boot up sequence.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

3.2 Award BIOS Setup

Awards BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press immediately. This will allow you to enter Setup.

Standard CMOS Features

Use this menu for basic system configuration. (Date, time, IDE, etc.)

Advanced BIOS Features

Use this menu to set the advanced features available on your system.

Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system performance.

Integrated Peripherals

Use this menu to specify your settings for integrated peripherals. (Primary slave, secondary slave, keyboard, mouse etc.)

Power Management Setup

Use this menu to specify your settings for power management. (HDD power down, power on by ring, KB wake up, etc.)

PnP/PCI Configurations

This entry appears if your system supports PnP/PCI.

PC Health Status

This menu allows you to set the shutdown temperature for your system.

Frequency/Voltage Control

Use this menu to specify your settings for auto detect DIMM/PCI clock and spread spectrum.

Load Fail-Safe Defaults

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

Load Optimized Defaults

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While AWARD has designated the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

Set Supervisor/User Password

Use this menu to set Supervisor/User Passwords.

Save and Exit Setup

Save CMOS value changes to CMOS and exit setup.

Exit Without Saving

Abandon all CMOS value changes and exit setup.

You can refer to the "AAEON BIOS Item Description.pdf" file in the CD for the meaning of each setting in this chapter.

Chapter

4

**Driver
Installation**

The NanoCOM-U15 A2.0 comes with an AutoRun CD-ROM that contains all drivers and utilities that can help you to install the driver automatically.

Insert the driver CD, the driver CD-title will auto start and show the installation guide. If not, please follow the sequence below to install the drivers.

Follow the sequence below to install the drivers:

- Step 1 – Install INF Driver
- Step 2 – Install VGA Driver
- Step 3 – Install LAN Driver
- Step 4 – Install Audio Driver
- Step 5 – Install Touch Panel Driver

USB 2.0 Drivers are available for download using Windows[®] Update for both Windows[®] XP and Windows[®] 2000. For additional information regarding USB 2.0 support in Windows[®] XP and Windows[®] 2000, please visit www.microsoft.com/hwdev/usb/.

Please read instructions below for further detailed installations.

4.1 Installation:

Insert the NanoCOM-U15 A2.0 CD-ROM into the CD-ROM drive. And install the drivers from Step 1 to Step 5 in order.

Step 1 – Install INF Driver

1. Click on the **Step 1 – INF** folder and double click on the ***Infinst_autol.exe***
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 2 – Install VGA Driver

1. Click on the **Step 2 – VGA** folder and double click on the ***Setup.exe***
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 3 –Install LAN Driver

1. Click on the **Step 3 – LAN** folder and double click on the ***pro2kxp_v13_1_2.exe*** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 4 –Install Audio Driver

1. Click on the **Step 4 –Audio** folder and double click on

Setup.exe file

2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 5 –Install Touch Panel Driver

1. Click on the **Step 5 –Touch Panel** folder and double click on the **Setup.exe**
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Appendix

A

Programming the Watchdog Timer

A.1 Programming

```
#include <stdio.h>

#include <conio.h>

void functionA();

void functionB();

void functionC();

void functionD();

void functionE();

void Chk_Ready();

#define SMBus_Port 0x500

    int i;

    int j;

    int inputbuffer;

    int index;

void main (void)

{
```

```
char option_var='x';

//device ID(smbus):6Eh,index:03h data:03h

    outportb(SMBus_Port+0x04,0x6E);

        delay(5);

    outportb(SMBus_Port+0x02,0x54);

        delay(5) ;

    outportb(SMBus_Port+0x03,0x00);

        delay(5) ;

    outportb(SMBus_Port+0x05,0x03);

        delay(5) ;

    outportb(SMBus_Port+0x06,0x03);

        delay(5) ;

    outportb(SMBus_Port+0x00,0x08);

        delay(5) ;

    outportb(SMBus_Port+0x01,0x0F);

        delay(5) ;

    outportb(SMBus_Port+0x00,0x12);

        delay(5) ;
```

```
Chk_Ready();
```

```
while(option_var!='0')
{
    printf("0.quit\n");
    printf("1. 5 sec \n");
    printf("2. 10 sec \n");
    printf("3. 60 sec \n");
    printf("4. 256 sec \n");
    printf("Please Select One option\n");
    option_var = getchar();
    getchar();
    printf("input = %c ,pls wait\n",option_var);

    switch(option_var)
    {
```

```
        case '0':  
            printf("exit program \n");  
            break;  
  
        case '1':  
            functionA();  
            break;  
  
        case '2':  
            functionB();  
            break;  
  
        case '3':  
            functionC();  
            break;  
  
        case '4':  
            functionD();  
            break;  
  
    }  
}  
exit(0);
```

```
}
```

```
void functionA()
```

```
{
```

```
    outportb(SMBus_Port+0x05,0x37);
```

```
        delay(5) ;
```

```
    outportb(SMBus_Port+0x06,0x05);
```

```
        delay(5) ;
```

```
    outportb(SMBus_Port+0x00,0x08);
```

```
        delay(5) ;
```

```
    outportb(SMBus_Port+0x01,0x0F);
```

```
        delay(5) ;
```

```
    outportb(SMBus_Port+0x00,0x12);
```

```
        delay(5) ;
```

```
    Chk_Ready();
```

```
    outportb(SMBus_Port+0x05,0x36);
```

```
        delay(5) ;
```

```
    outportb(SMBus_Port+0x06,0x73);
```



```
        delay(5) ;
    outportb(SMBus_Port+0x00,0x08);
        delay(5) ;
    outportb(SMBus_Port+0x01,0x0F);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x12);
        delay(5) ;
    Chk_Ready();

}

void functionB()
{
    outportb(SMBus_Port+0x05,0x37);
        delay(5) ;
    outportb(SMBus_Port+0x06,0x0A);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x08);
        delay(5) ;
```

```
    outportb(SMBus_Port+0x01,0x0F);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x12);
        delay(5) ;
    Chk_Ready();

    outportb(SMBus_Port+0x05,0x36);
        delay(5) ;
    outportb(SMBus_Port+0x06,0x73);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x08);
        delay(5) ;
    outportb(SMBus_Port+0x01,0x0F);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x12);
        delay(5) ;
    Chk_Ready();
}
```

```
void functionC()
{
    outportb(SMBus_Port+0x05,0x37);
        delay(5) ;
    outportb(SMBus_Port+0x06,0x3C);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x08);
        delay(5) ;
    outportb(SMBus_Port+0x01,0x0F);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x12);
        delay(5) ;
    Chk_Ready();

    outportb(SMBus_Port+0x05,0x36);
        delay(5) ;
    outportb(SMBus_Port+0x06,0x73);
        delay(5) ;
    outportb(SMBus_Port+0x00,0x08);
```

```
        delay(5) ;  
        outputb(SMBus_Port+0x01,0x0F);  
        delay(5) ;  
        outputb(SMBus_Port+0x00,0x12);  
        delay(5) ;  
        Chk_Ready();  
    }
```

```
void functionD()
```

```
{  
    outputb(SMBus_Port+0x05,0x37);  
        delay(5) ;  
    outputb(SMBus_Port+0x06,0xFF);  
        delay(5) ;  
    outputb(SMBus_Port+0x00,0x08);  
        delay(5) ;  
    outputb(SMBus_Port+0x01,0x0F);  
        delay(5) ;  
    outputb(SMBus_Port+0x00,0x12);
```

```
        delay(5) ;  
    Chk_Ready();  
  
    outportb(SMBus_Port+0x05,0x36);  
        delay(5) ;  
    outportb(SMBus_Port+0x06,0x73);  
        delay(5) ;  
    outportb(SMBus_Port+0x00,0x08);  
        delay(5) ;  
    outportb(SMBus_Port+0x01,0x0F);  
        delay(5) ;  
    outportb(SMBus_Port+0x00,0x12);  
        delay(5) ;  
    Chk_Ready();  
}  
  
void Chk_Ready()  
  
{
```

```
index=0;
while(index<0x800)
{
    inputbuffer=inportb(SMBus_Port+0x01);
    delay(5);

    if((inputbuffer&0x08)==0)
        return;
    index++;

}
outportb(SMBus_Port+0x00,0x08);
delay(5);
}
```

Appendix

B

I/O Information




















B.1 I/O Address Map

Input/output (IO)	
[00000000 - 0000000F]	Direct memory access controller
[00000000 - 00000CF7]	PCI bus
[00000010 - 0000001F]	Motherboard resources
[00000020 - 00000021]	Programmable interrupt controller
[00000022 - 0000002D]	Motherboard resources
[00000030 - 0000003F]	Motherboard resources
[00000040 - 00000043]	System timer
[00000044 - 0000005F]	Motherboard resources
[00000061 - 00000061]	System speaker
[00000062 - 00000063]	Motherboard resources
[00000065 - 0000006F]	Motherboard resources
[00000070 - 00000073]	System CMOS/real time clock
[00000074 - 0000007F]	Motherboard resources
[00000080 - 00000090]	Direct memory access controller
[00000091 - 00000093]	Motherboard resources
[00000094 - 0000009F]	Direct memory access controller
[000000A0 - 000000A1]	Programmable interrupt controller
[000000A2 - 000000BF]	Motherboard resources
[000000C0 - 000000DF]	Direct memory access controller
[000000E0 - 000000EF]	Motherboard resources
[000000F0 - 000000FF]	Numeric data processor
[00000170 - 00000177]	Secondary IDE Channel
[000001F0 - 000001F7]	Primary IDE Channel
[00000274 - 00000277]	ISAPNP Read Data Port
[00000279 - 00000279]	ISAPNP Read Data Port
[00000376 - 00000376]	Secondary IDE Channel
[000003B0 - 000003BB]	Intel(R) Graphics Media Accelerator 500
[000003C0 - 000003DF]	Intel(R) Graphics Media Accelerator 500
[000003F6 - 000003F6]	Primary IDE Channel
[000004D0 - 000004D1]	Motherboard resources
[00000880 - 0000088F]	Motherboard resources
[00000900 - 000009BF]	Motherboard resources
[00000A79 - 00000A79]	ISAPNP Read Data Port
[00000D00 - 0000FFFF]	PCI bus
[00000D00 - 0000DFFF]	Intel(R) SCH Family PCI Express Root Port 3 - 8112
[0000DF00 - 0000DF1F]	Intel(R) 82574L Gigabit Network Connection
[0000E000 - 0000EFFF]	Intel(R) SCH Family PCI Express Root Port 1 - 8110
[0000FB00 - 0000FB0F]	Standard Dual Channel PCI IDE Controller
[0000FC00 - 0000FC1F]	Intel(R) SCH Family USB Universal Host Controller - 8116
[0000FD00 - 0000FD1F]	Intel(R) SCH Family USB Universal Host Controller - 8115
[0000FE00 - 0000FE1F]	Intel(R) SCH Family USB Universal Host Controller - 8114
[0000FF00 - 0000FF07]	Intel(R) Graphics Media Accelerator 500




B.2 Memory Address Map

Memory Address Range	Device Name
[00000000 - 0009FFFF]	System board
[000A0000 - 000BFFFF]	Intel(R) Graphics Media Accelerator 500
[000A0000 - 000BFFFF]	PCI bus
[000C0000 - 000DFFFF]	PCI bus
[000E0000 - 000EFFFF]	PCI bus
[000E0000 - 000EFFFF]	System board
[000F0000 - 000FFFFF]	PCI bus
[000F0000 - 000FFFFF]	System board
[00100000 - 0F6DFFFF]	System board
[0F6E0000 - 0F6FFFFF]	System board
[0F700000 - 0F7FFFFF]	System board
[0F800000 - FEBFFFFF]	PCI bus
[D0000000 - DFFFFFFF]	Intel(R) Graphics Media Accelerator 500
[E0000000 - EFFFFFFF]	Motherboard resources
[FDB00000 - FDBFFFFF]	Intel(R) SCH Family PCI Express Root Port 3 - 8112
[FDC00000 - FDCFFFFF]	Intel(R) SCH Family PCI Express Root Port 3 - 8112
[FDCC0000 - FDCDFFFF]	Intel(R) 82574L Gigabit Network Connection
[FDCFC000 - FDCFFFFF]	Intel(R) 82574L Gigabit Network Connection
[FDD00000 - FDDFFFFF]	Intel(R) SCH Family PCI Express Root Port 1 - 8110
[FDE00000 - FDEFFFFF]	Intel(R) SCH Family PCI Express Root Port 1 - 8110
[FDF00000 - FDF7FFFF]	Intel(R) Graphics Media Accelerator 500
[FDF80000 - FDFBFFFF]	Intel(R) Graphics Media Accelerator 500
[FDF80000 - FDFBFFFF]	Microsoft UAA Bus Driver for High Definition Audio
[FDFFC000 - FDFFC0FF]	SDA Standard Compliant SD Host Controller
[FDFFD000 - FDFFD0FF]	SDA Standard Compliant SD Host Controller
[FDFFE000 - FDFFE0FF]	SDA Standard Compliant SD Host Controller
[FDFFF000 - FDFFF3FF]	Intel(R) SCH Family USB2 Enhanced Host Controller - 8117
[FEC00000 - FEC00FFF]	System board
[FED00000 - FED000FF]	System board
[FED00000 - FED003FF]	High precision event timer
[FED13000 - FED1DFFF]	System board
[FED20000 - FED8FFFF]	System board
[FEE00000 - FEE00FFF]	System board
[FFB00000 - FFB7FFFF]	System board
[FFB80000 - FFBFFFFF]	Intel(R) 82802 Firmware Hub Device
[FFF00000 - FFFFFFFF]	System board

B.3 IRQ Mapping Chart

		Interrupt request (IRQ)
		(ISA) 0 High precision event timer
		(ISA) 8 High precision event timer
		(ISA) 9 Microsoft ACPI-Compliant System
		(ISA) 13 Numeric data processor
		(ISA) 14 Primary IDE Channel
		(PCI) 16 Intel(R) Graphics Media Accelerator 500
		(PCI) 16 Intel(R) SCH Family PCI Express Root Port 1 - 8110
		(PCI) 16 Intel(R) SCH Family USB Universal Host Controller - 8114
		(PCI) 16 Microsoft UAA Bus Driver for High Definition Audio
		(PCI) 16 SDA Standard Compliant SD Host Controller
		(PCI) 17 Intel(R) 82574L Gigabit Network Connection
		(PCI) 17 Intel(R) SCH Family PCI Express Root Port 3 - 8112
		(PCI) 17 Intel(R) SCH Family USB Universal Host Controller - 8115
		(PCI) 17 SDA Standard Compliant SD Host Controller
		(PCI) 18 Intel(R) SCH Family USB Universal Host Controller - 8116
		(PCI) 18 SDA Standard Compliant SD Host Controller
		(PCI) 19 Intel(R) SCH Family USB2 Enhanced Host Controller - 8117

B.4 DMA Channel Assignments

		Direct memory access (DMA)
		4 Direct memory access controller