


BP-214SA-P516

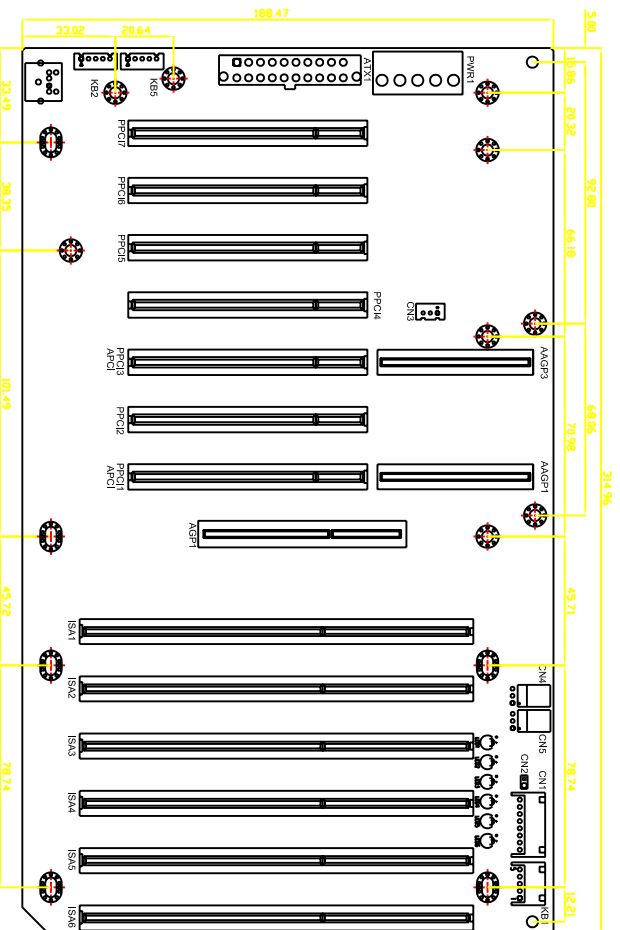

Note:
 A. AP/PCI Slot can use for AP/PCI CPU card, another one can use for standard PCI card in the meantime.
 B. AGP slot can support standard 4X , 8X AGP card.

Alarm (CN1)

- Pin1 : +5VSB
- Pin2 : +12V
- Pin3 : +3.3V
- Pin4 : -12V
- Pin5 : +5V
- Pin6 : SMB_CLK
- Pin7 : SMB_DATA
- Pin8 : GND

SMBus (CN2)

- Pin1 : SMB_CLK
- Pin2 : SMB_DATA

PS-ON (CN3)

- Pin1 : PS-ON
- Pin2 : GND
- Pin3 : +5VSB

Fan (CN4,5)

- Pin1 : GND
- Pin2 : +12V
- Pin3 : NC

Keyboard (KB1,2,5)

- Pin1 : KB_CLOCK
- Pin2 : KB_DATA
- Pin3 : NC
- Pin4 : GND
- Pin5 : VCC

PCI Routing Table

Slot	ID Select	Interrupt Routing Table	REQ
PPCI1	AD30	INTC INTD INTA INTB	REQ_B APCI
PPCI2	AD31	INTB INTC INTD INTA	REQ_A
PPCI3	AD26	INTC INTD INTA INTB	REQ_B APCI
PPCI4	AD29	INTD INTA INTB INTC	REQ_C
PPCI5	AD28	INTA INTB INTC INTD	REQ_D
PPCI6	AD27	INTB INTC INTD INTA	REQ_E
PPCI7	AD25	INTD INTA INTB INTC	REQ_F