



BP-206SG-P4

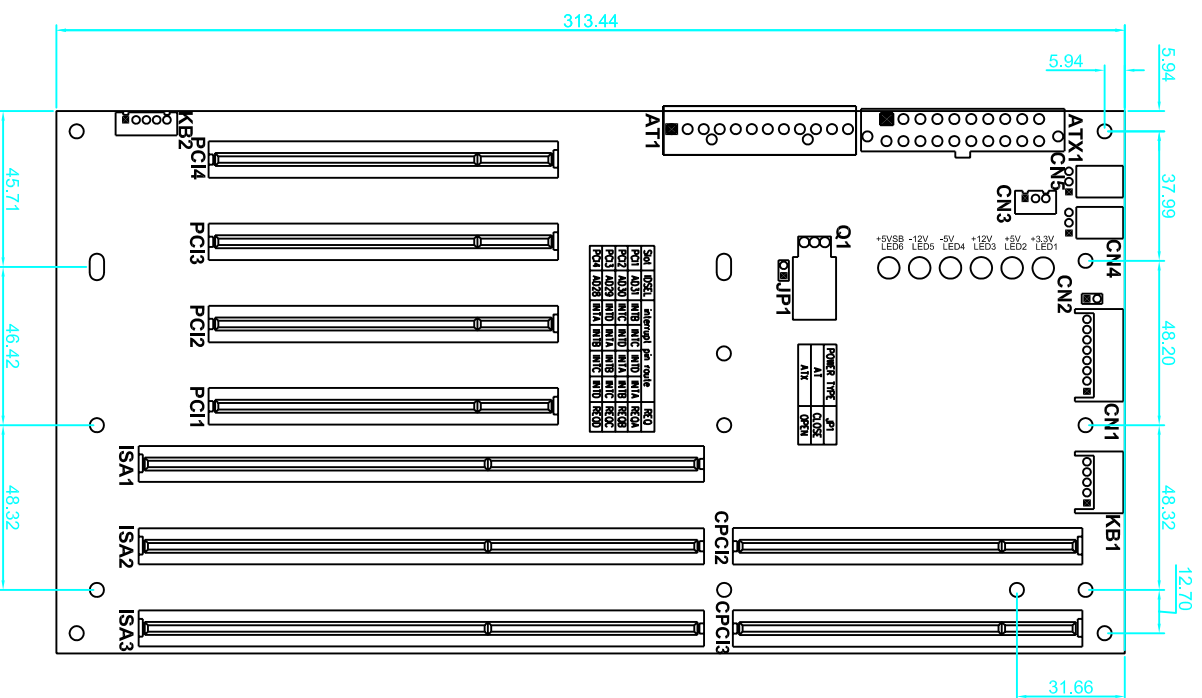

Alarm(CN1)



- Pin1:+5VSB
- Pin2:+12V
- Pin3:+3.3V
- Pin4:-12V
- Pin5:+5V
- Pin6:SMB_CLK
- Pin7:SMB_DATA
- Pin8: GND

SMBus(CN2)



- Pin1:SMB_CLK
- Pin2:SMB_DATA

PS-ON(CN3)



- Pin1:PS-ON
- Pin2:GND
- Pin3:+5VSB

Fan(CN4,5)



- Pin1:GND
- Pin2:+12V
- Pin3:NC

Keyboard (KB1,2)



- Pin1:KB_CLOCK
- Pin2:KB_DATA
- Pin3:NC
- Pin4:GND
- Pin5:VCC

PCI Rounting Table

Slot	IDSEL	Interrupt pin route	REQ
PCI1	AD31	INTB INTB INTB INTB	REQA
PCI2	AD30	INTC INTD INTA INTA	REQB
PCI3	AD29	INTD INTA INTB INTB	REQC
PCI4	AD28	INTA INTB INTB INTD	REQD

Note:

ATX Power Used:

1. PCI Slot 3.3V Power is Available
2. PICMG Slot 3.3V Power is AvailablePICMG
3. 3V Pin : A21,A27,A33,A39,A45,A53,B25,B31,B36,B41,B43,B54

AT Power Used:

1. No support for 3.3V PCI card when AT power supplys used
2. No support 3.3V Power for PICMG
3. If need 3.3V power , Must option JP1 Function