

# **SBC-492**

Full-size 486 PCI/ISA-bus CPU Card  
with SVGA interface



## **Copyright Notice**

This document is copyrighted, 1998 by AAEON Technology Inc. All rights are reserved. AAEON Technology Inc. reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of AAEON Technology Inc. Information provided in this manual is intended to be accurate and reliable. However, AAEON Technology Inc. assumes no responsibility for its use, nor for any infringements upon the rights of third parties which may result from its use.

## **Acknowledgements**

ALI is a trademark of Acer Laboratories, Inc.

AMD is a trademark of Advanced Micro Devices, Inc.

AMI is a trademark of American Megatrends, Inc.

IBM, PC/AT, PS/2, OS/2 and VGA are trademarks of International Business Machines Corporation.

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows® is a registered trademark of Microsoft Corp.

SMC is a trademark of Standard Microsystems Corporation.

TGUI9440GUI is a trademark of Trident Microsystems, Inc.

All other product names or trademarks are properties of their respective owners.

## Packing list

---

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 SBC-492 CPU card
- 1 6-pin mini-DIN dual outlet adapter for keyboard and PS/2 mouse
- 2 hard disk drive (IDE) interface cables (40 pin)
- 1 floppy disk drive interface cable (34 pin)
- 1 parallel port adapter (26 pin) and COM2 adapter (9 pin) kit
- 1 utility disk (Flash BIOS program, Watchdog for Windows Library, and Demo Program)
- 4 utility disks with SVGA utility programs
- PC/104 expansion connector converter (pin headers)
- PC/104 module mounting supports

If any of these items are missing or damaged, contact your distributor or sales representative immediately.

# Contents

<b>Chapter 1: General Information .....</b>	<b>1</b>
<b>Introduction .....</b>	<b>2</b>
<b>Features .....</b>	<b>3</b>
<b>Specifications .....</b>	<b>4</b>
Board layout .....	6
<b>Card dimensions .....</b>	<b>7</b>
<b>Chapter 2: Installation .....</b>	<b>9</b>
<b>Jumpers and connectors .....</b>	<b>10</b>
<b>Locating jumpers and connectors .....</b>	<b>11</b>
<b>Setting jumpers .....</b>	<b>12</b>
<b>Safety precautions .....</b>	<b>13</b>
<b>Installing the CPU .....</b>	<b>14</b>
Installing the CPU .....	14
Removing a CPU .....	14
<b>SIMM Module Installation Table .....</b>	<b>15</b>
<b>IDE hard drive connections .....</b>	<b>16</b>
Connecting the hard drive .....	16
IDE LED (JP2, JP3) .....	17
<b>Floppy drive connections .....</b>	<b>18</b>
Connecting the floppy drive .....	18
<b>Parallel port .....</b>	<b>19</b>
Installing the retaining bracket .....	19
<b>Power supply connections .....</b>	<b>20</b>
Power supply connector .....	20
CPU fan power connector .....	20
<b>Display connections .....</b>	<b>21</b>
<b>On-Board VGA Settings .....</b>	<b>22</b>
<b>CPU Vcc select (JP1, JP7) .....</b>	<b>22</b>
<b>Keyboard and PS/2 mouse connectors .....</b>	<b>23</b>
<b>Serial ports .....</b>	<b>24</b>

RS-232 connections (COM-A, COM-B) .....	24
Serial ports IRQ select (JP18) .....	25
<b>Flash BIOS Protect (JP11) .....</b>	<b>26</b>
<b>Clear CMOS (JP15) .....</b>	<b>26</b>
<b>External Switches and LEDs .....</b>	<b>27</b>
Power LED and keylock .....	27
External speaker .....	27
Reset switch .....	28
Turbo LED .....	28
Turbo switch .....	28
<b>DOC address setting (J100) .....</b>	<b>29</b>
<b>DiskOnChip socket (U330) .....</b>	<b>30</b>
<b>Chapter 3: AMI WinBIOS Setup .....</b>	<b>31</b>
<b>General information .....</b>	<b>32</b>
Starting WinBIOS setup .....	32
WinBIOS main menu .....	32
Using a mouse with WinBIOS setup .....	33
Using the keyboard with WinBIOS setup .....	33
<b>Setup .....</b>	<b>34</b>
Standard Setup .....	36
Advanced Setup .....	37
Chipset Setup .....	42
Power Management Setup .....	44
<b>PCI/PnP Setup .....</b>	<b>45</b>
Peripheral Setup .....	49
<b>Utility .....</b>	<b>52</b>
Security .....	53
Two Levels of Passwords .....	53
Setting a Password .....	54
Changing a password .....	55
Anti-virus .....	55
<b>Default .....</b>	<b>56</b>
Original .....	56
Optimal .....	56

Fail-Safe .....	56
<b>Exiting WinBIOS .....</b>	<b>57</b>
<b>Chapter 4: SVGA Setup .....</b>	<b>59</b>
<b>SVGA driver installation .....</b>	<b>60</b>
Installing from Windows .....	60
<b>Screen Control.....</b>	<b>62</b>
Advanced features (Virtual Screen Control) .....	64
<b>DPMS (Display Power Management Signaling) .....</b>	<b>67</b>
Delay Time .....	68
Activity Select .....	68
Clock.....	68
Password Option .....	69
Startup On/Off.....	69
Default .....	69
Test .....	69
Save .....	69
<b>Display driver Uninstallation .....</b>	<b>70</b>
<b>Microsoft Windows NT .....</b>	<b>71</b>
Installation .....	71
Microsoft Windows NT 3.5 Installation .....	71
Microsoft Windows NT4.0 .....	72
Procedure to install display drivers: .....	72
Microsoft Windows 95.....	73
Procedure to install display drivers: .....	73
OS/2 .....	74
Procedure to install display drivers: .....	74
Display Drivers Setting Procedure .....	75
<b>Utilities installation .....</b>	<b>77</b>
Utilities summary .....	78
SMONITOR.....	80
TVGACRTC .....	81
<b>Software drivers installation .....</b>	<b>83</b>

**Appendix A: Watchdog Timer Demo Program ..... 85**  
    Programming the watchdog timer ..... 86

**Appendix B: Installing PC/104 Modules ..... 89**  
    Installing PC/104 modules ..... 90



## **General Information**

This chapter gives background information on the SBC-492.

Sections include:

- Card specifications
- Board layout

# Introduction

---

The SBC-492 is an all-in-one single board 486 computer that includes an **on-board SVGA controller, with PCI-bus and ISA-bus support**. It packs all the functions of an industrial computer with display capabilities on a single full-size card. The SBC-492 is fully PC/AT compatible, so your software will run without modifications.

The SBC-492 is excellent for display-intensive applications. The on-board PCI-bus SVGA controller uses the Trident TGUI9440GUi chipset with the local PCI-bus to enable 32-bit graphic throughput at up to 33 MHz. Also built in is a **standard Feature Connector**.

The SBC-492 supports the M-Systems DiskOnChip 2000 (optional) which is a new generation of high performance single-chip Flash Disk. It provides a Flash Disk (as a BIOS expansion) which does not require any bus, slots, or connectors. It is also the optimal solution for Single Board Computers because of its small size, easy integration, plug-and-play functionality, and its low power consumption. The DiskOnChip is available in capacities from 2MB to 72MB and fits in a standard 32-pin DIP socket.

Another feature of the SBC-492 is the inclusion of a high speed, local bus IDE controller. This controller supports (through ATA PIO) mode 3 and mode 4 hard disks, enabling data transfer rates in excess of 11 MB/second. Up to four IDE devices can be connected, including large hard disks, CD-ROM drives, tape backup drives, or other IDE devices. The built-in, enhanced IDE controller provides a 4-layer, 32-bit, posted write buffer and a 4-layer, 32-bit read-prefetch buffer to boost IDE performance.

Onboard features include two high speed RS-232 serial ports with 16C550 UARTs, one bidirectional SPP/EPP/ECP parallel port and a floppy drive controller. In addition to the 486's 16 KB of onchip cache memory, the SBC-492 includes an extra 128 KB of L2 onboard cache memory.

If program execution is halted by a program bug or EMI, the board's watchdog timer can automatically reset the CPU or generate an interrupt. This ensures reliability in unmanned or standalone systems.

The SBC-492 **supports 5 V EDO DRAM**. It also provides four 72-pin SIMM (Single In-line Memory Module) sockets for its onboard system DRAM. These sockets give you the flexibility to configure your system from 4 MB to 128 MB of DRAM using the most economical combination of SIMMs.

## Features

---

- Onboard AMD DX5-133 SQFP type CPU
- Fully PC/AT-compatible PCI/ISA-bus CPU card
- On-board 32-bit PCI-bus SVGA controller
- Built-in fast PCI enhanced IDE controller; supports four IDE devices (large hard disks, CD-ROM, tape backup, etc.)
- Up to 128 MB of on-board DRAM
- Supports 5 V EDO DRAM
- Two high-speed serial RS-232 ports (16C550 UARTs with 16-byte FIFO); IRQ3, 4, 10, 11 can be individually selected
- One enhanced bidirectional parallel port; supports SPP/EPP/ECP
- Watchdog timer (2 sec ~ 128 min, 1 sec/step)
- On-board keyboard and PS/2 mouse connector
- Connectors for PC/104 module expansion
- "Green" function; supports power management
- On-board feature connector
- Supports Flash BIOS, and BIOS can be upgraded easily


# Specifications

---


- **CPU:** AMD DX5-133 (SQFP Type)
- **BIOS:** AMI Flash BIOS
- **Chipset:** ALiM1487/M1489
- **Bus Interface:** PCI/ISA bus, PICMG 2.0 standard
- **Level 2 Cache:** 128 KB L2 cache memory
- **System memory:** 4MB to 128MB. Four 72-pin SIMM sockets onboard. Supports EDO and FP DRAM
- **Shadow RAM memory:** Supports system and video BIOS shadow memory.
- **DMA channels:** 7
- **Interrupt levels:** 15
- **Enhanced IDE:** Supports up to four enhanced IDE devices (ATA-2).
- **FDD interface:** Supports up to two floppy disk drives
- **Parallel port:** One bi-directional parallel port. Supports SPP, ECP, and EPP.
- **Serial Ports:** Two RS-232 ports, using 16C550 UARTs with 16-byte FIFO buffer. Supports speeds up to 115KB/sec. Ports can be individually configured from COM1 to COM4 or disabled.
- **Keyboard / mouse connector:** One 6-pin mini-DIN connector is located on the mounting bracket for easy access. An onboard keyboard 5-pin header connector is also available.
- **Watchdog timer:** Can generate a system reset, IRQ15 or NMI. Software selectable timeout interval (2 sec~128min, 1 sec/step).
- **Power management:** I/O peripheral devices support power saving and soze/standby/suspend modes. APM1.1 compliant.
- **VGA Controller:** Trident TGUI9440
- **Display memory:** 1MB onboard, upgradable to 2MB.
- **Display type:** Supports CRT displays
- **Resolution:** Supports up to 1024 x 768 @ 64K colors.
- **Feature connector:** 26-pin header

- **PC/104 connector:** 104-pin connector for a 16-bit bus
- **Power supply voltage:** +5 V (4.75 V to 5.25 V)
- **Max. power requirement:** +5V @ 3A
- **Operating temperature:** 32 to 140° F (0 to 60° C)
- **Board size:** 13.3" (L) x 4.8" (W) (338 mm x 122 mm)
- **Board weight:** 0.4 kg

# Board layout

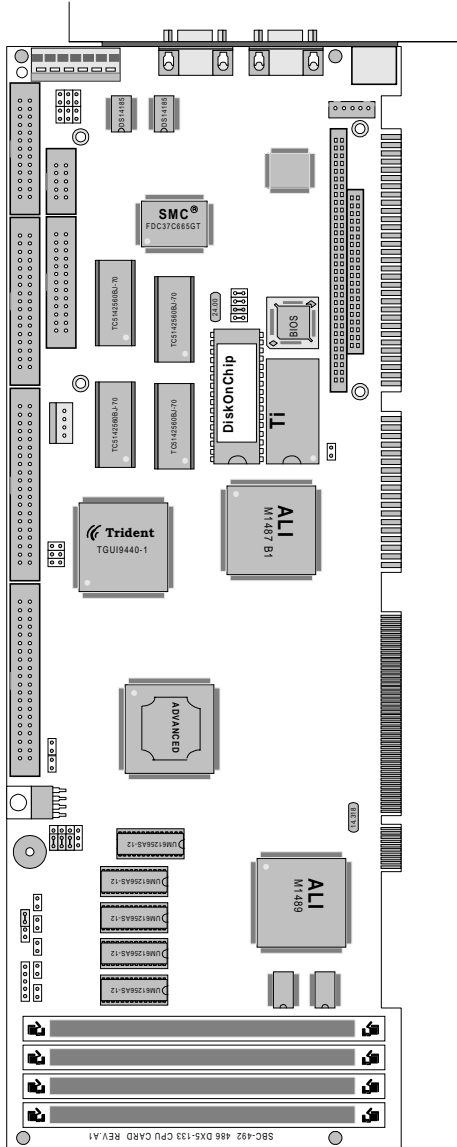

# Card dimensions

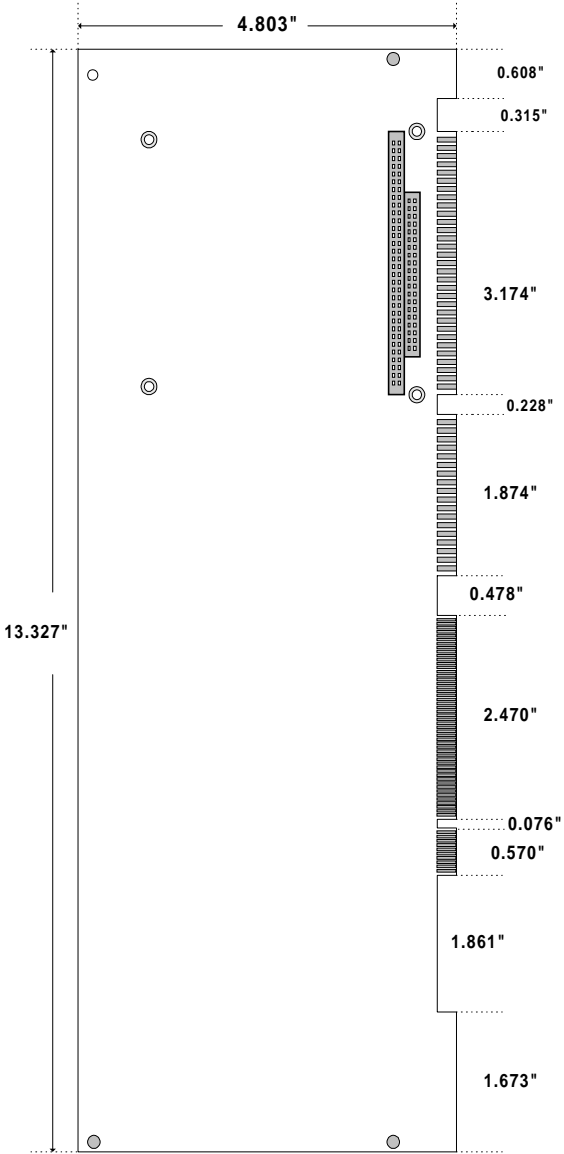





## Installation

This chapter describes how to set up the SBC-492 hardware, including instructions on setting jumpers and connecting peripherals, switches and indicators. Be sure to read all safety precautions before you begin the installation procedure.

## Jumpers and connectors

---

Connectors on the board link it to external devices such as hard disk drives, keyboard or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your applications.


The table below lists the function of each of the board jumpers and connectors.

---

Jumpers and connectors	
Label	Function
JP1,7	CPU voltage select (Reserved for future use)
JP2	Secondary IDE LED
JP3	Primary IDE LED
JP4, 5, 6	On-board VGA enabled/disabled
JP11	Flash BIOS protect
JP15	Clear CMOS
JP17	Reserve for IR CON
JP18	RS-232 port IRQ select
Primary IDE	1st enhanced IDE connector
JP100	DOC address
Secondary IDE	2nd enhanced IDE connector
Floppy Disk	FDD connector
Printer	Parallel port connector
Feature Connector	VGA feature connector
Power CON	Power connector
KB CON	External keyboard connector
VGA	VGA connector
KB/PS2 Mouse	Keyboard and/or PS/2 mouse connector
COM-A	Serial port 1 connector
COM-B	Serial port 2 connector

---


# Locating jumpers and connectors

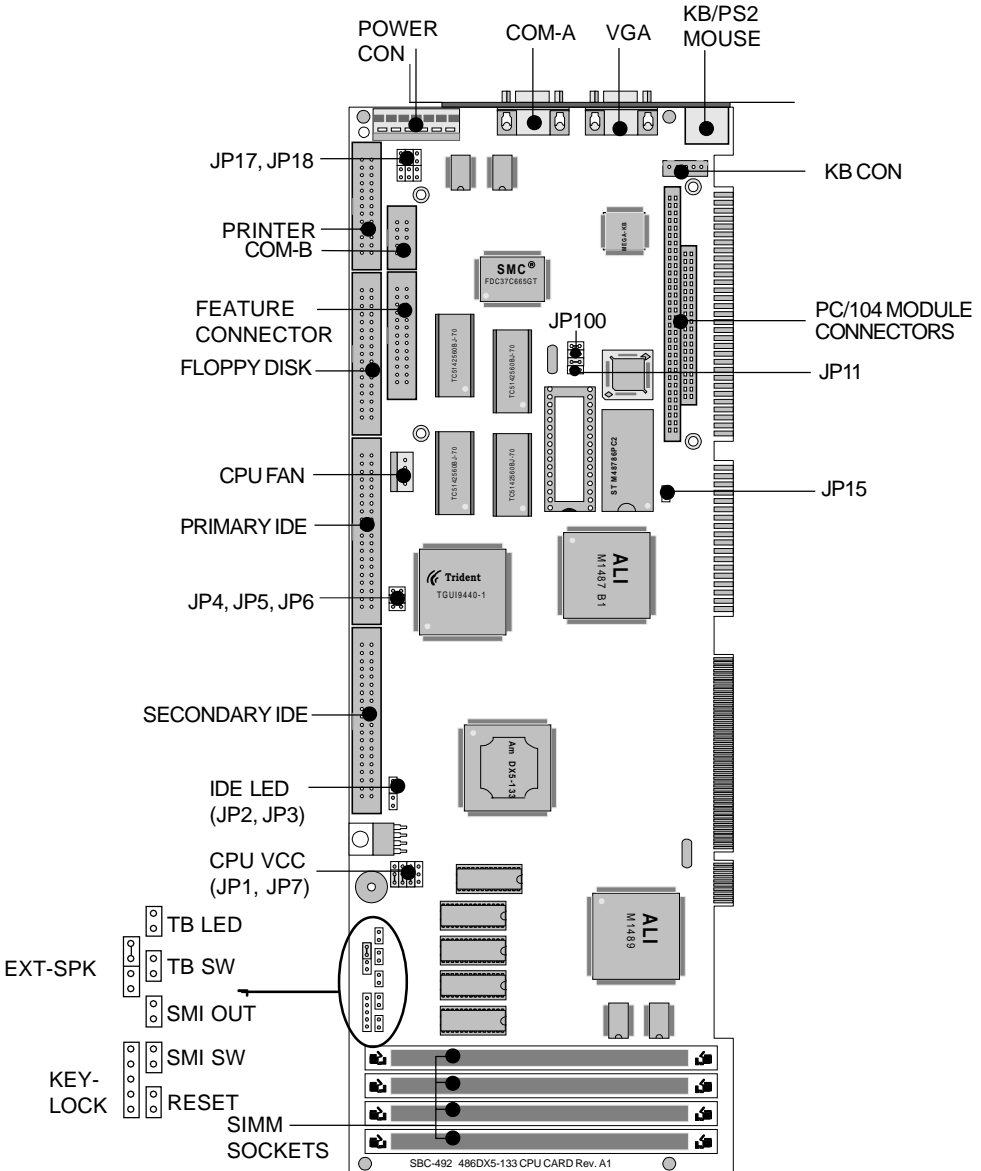

## Setting jumpers

---

You configure your card to match the needs of your applications by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you may connect either pins 1 and 2 or 2 and 3.

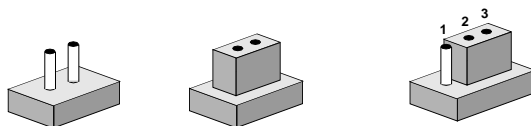

**Open**

**Closed**

**Closed 2-3**

The jumper settings are schematically depicted in this manual as follows:



**Open**

**Closed**


**Closed 2-3**


A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your applications, contact your local distributor or sales representative before you make any changes.

## Safety precautions

---

**Warning!**  Always completely disconnect the power cord from your chassis whenever you are working on it. Do not make connections while the power is on, sensitive electronic components can be damaged by the sudden rush of power. Only experienced electronics personnel should open the PC chassis.

**Caution!**  Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis.

## Installing DRAM (SIMMs)

---

The SBC-492 CPU card provides four 72-pin SIMM (Single In-line Memory Module) sockets and supports between 4 MB to 128 MB of FP RAM or EDO RAM.

### Installing SIMMs

*Note that the modules can only fit into a socket one way.*

1. Insert the memory module into the socket at a moderate angle.
2. Push the module toward the vertical posts at both ends of the socket until the module is upright, and the retaining clips at both ends of the module click into place. When positioned correctly, the pins on top of the vertical posts should correspond to the circular holes on the ends of the module.
3. Repeat steps 1 and 2 for each module you install.

### Removing SIMMs

If you need to remove a SIMM, follow the procedures below:

1. Supporting the SIMM with a finger, use a pen or a similarly shaped object and press one retaining clip straight down.
2. Repeat for the other side. When released, the retaining clips will push the SIMM up and out of its upright position.
3. Carefully pull the SIMM out of the socket with your fingers.
4. Repeat the above steps for each module you remove.

# SIMM Module Installation Table

Modules Type	Total Modules	SIMM 1	SIMM 2	SIMM 3	SIMM 4
Single Bank SIMM Module	1	S			
	1		S		
	1			S	
	1				S
	2	S	S		
	2	S		S	
	2	S			S
	2		S	S	
	2		S		S
	2			S	S
	3	S	S	S	
	3	S	S		S
	3	S		S	S
	3		S	S	S
	4	S	S	S	S
Double Bank SIMM Module	1	D			
	1		D		
	1			D	
	1				D
	2	D	D		
2			D	D	
Mixed Single Bank and Double Bank SIMM Modules	2	D	S		
	2	D			S
	2	S	D		
	2		D	S	
	3	D	S		S
	3	S	D	S	

**S : Single Banks SIMM Module**

**D : Double Banks SIMM Module**

# IDE hard drive connections

---

You can attach four Enhanced Integrated Device Electronics (IDE) hard disk drives to the SBC-492's internal controller. The card comes with a 40-pin flat-cable piggyback cable. This cable has three identical 40-pin flat-cable connectors.

## Connecting the hard drive

Wire number 1 on the cable is red or blue, and the other wires are gray.

1. Connect one end of the cable to PRIMARY IDE or SECONDARY IDE connector on the CPU card. Make sure that the red (or blue) wire corresponds to pin 1 on the connector, which is labeled on the board (on the right side).
2. Plug the other end of the cable to the Enhanced IDE hard drive, with pin 1 on the cable corresponding to pin 1 on the hard drive. (See your hard drive's documentation for the location of the connector.)

Unlike floppy drives, you can make the connections with any of the connectors on the cable. If you install two drives, you need to set one as the master and another as the slave. You do this using jumpers on the drives. If you install just one drive, set it as the master. (See your hard drive's documentation for the setting of master/slave mode.)



## Pin assignments

The following table lists the pin numbers and their respective signals:

IDE Connector			
Pin	Signal	Pin	Signal
1	Reset	2	GND
3	D7	4	D8
5	D6	6	D9
7	D5	8	D10
9	D4	10	D11
11	D3	12	D12
13	D2	14	D13
15	D1	16	D14
17	D0	18	D15
19	GND	20	N.C.
21	N.C.	22	GND
23	IOW	24	GND
25	IOR	26	GND
27	IORDY	28	BALE
29	N.C.	30	GND
31	IRQ	32	-I/O CS16
33	A1	34	N.C.
35	A0	36	A2
37	CS0	38	CS1
39	-ACT	40	GND

## IDE LED (JP2, JP3)

You can connect an LED to indicate that an IDE device is in use. The pin assignments for both jumpers are as follows:

IDE LED pin assignments (JP2, JP3)	
Pin	Function
1	-R/W IDE
2	Pull high

## Floppy drive connections

---

You can attach up to two floppy disks to the SBC-492's on-board controller. You can use any combination of 5.25" (360 KB and 1.2 MB) and/or 3.5" (720 KB, 1.44 MB, and 2.88 MB) drives.

The SBC-492 CPU card comes with a 34-pin daisy-chain drive connector cable. On one end of the cable is a 34-pin flat-cable connector. There are two sets of floppy disk drive connectors, one in the middle, and one on the other end. Each set consists of a 34-pin flat-cable connector (usually used for 3.5" drives) and a printed-circuit board connector (usually used for 5.25" drives).

### Connecting the floppy drive

1. Plug the 34-pin flat-cable connector into FLOPPY DISK connector on the CPU card.
2. Attach the appropriate connector on the other end of the cable to the floppy drive(s). You can use only one connector in the set. The set on the end (after the twist in the cable) connects to the A: floppy. The set in the middle connects to the B: floppy.

### Pin assignments

The following table lists the pin assignments for FLOPPY DISK connector:

FLOPPY DISK Connector			
Pin	Signal	Pin	Signal
1~33 (odd)	GND	2	High density
4, 6	Unused	8	Index
10	Motor enable A	12	Driver select B
14	Driver select A	16	Motor enable B
18	Direction	20	Step pulse
22	Write data	24	Write enable
26	Track 0	28	Write protect
30	Read data	32	Select head
34	Disk change		

## Parallel port

---

Normally, the parallel port is used to connect the card to a printer. The SBC-492 includes an on-board parallel port, accessed through a 26-pin flat-cable connector, PRINTER connector. The CPU card comes with an adapter cable, which lets you use a traditional DB-25 connector. The cable has a 26-pin connector on one end and a DB-25 connector on the other, mounted on a retaining bracket.

### Installing the retaining bracket

The retaining bracket installs at an empty slot in your system's chassis. It provides an external port that allows your parallel peripheral to access to the card's parallel port connector.

1. Find an empty slot in your chassis.
2. Unscrew the plate that covers the end of the slot.
3. Screw in the bracket in place of the plate.
4. Next, attach the flat-cable connector to the PRINTER connector on the CPU card. Wire 1 of the cable is red or blue, and the other wires are gray. Make sure that Wire 1 connects to Pin 1 of the PRINTER connector. Pin 1 is on the right side of PRINTER connector.

### Pin assignments

---

#### PRINTER Connector

Pin	Signal	Pin	Signal
1	Strobe	2	Data 0
3	Data 1	4	Data 2
5	Data 3	6	Data 4
7	Data 5	8	Data 6
9	Data 7	10	-Acknowledge
11	Busy	12	Paper empty
13	+ Select	14	- Auto feed
15	- Error	16	- Init printer
17	- Select input	18~25	GND

---

# Power supply connections

---

## Power supply connector

In single-board-computer (non-passive-backplane) applications you will need to connect power directly to the SBC-492 board using the connector labeled POWER CON. This connector is fully compatible with the standard PC power supply connector. See the following table for its pin assignments:

---

Power supply connector	
Pin	Function
1	N.C.
2	+5 V <sub>DC</sub>
3	+12 V <sub>DC</sub>
4	-12 V <sub>DC</sub>
5	GND
6	GND

---

## CPU fan power connector

For some harsh environments or demanding applications, you need to install a CPU cooling fan on the CPU to keep it from overheating. The SBC-492 provides a cooling fan connector labeled CPU FAN. The following table lists the pin assignments.

---

CPU fan power connector	
Pin	Function
1	+12 V
2	GND
3	GND
4	+5 V

---

## Display connections




The SBC-492 CPU card's SVGA connector (labeled VGA) with PCI bus supports monochrome display as well as high resolution color displays. In addition, the card also features a Feature connector, which allows you to plug in other external display devices. The following table lists their pin assignments.

Feature connector		VGA connector	
Pin	Function	Pin	Function
1	C0	1	Red video
2	C1 (Blue)	2	Green video
3	C2 (Green)	3	Blue video
4	C3 (Red)	4	Not used
5	C4 (2nd Green)	5	GND
6	C5 (2nd Blue)	6	Red return (GND)
7	C6 (2nd Red)	7	Green return GND)
8	C7	8	Blue return (GND)
9	DAC clock	9	Key (no pin)
10	Blank	10	Sync return (GND)
11	Horizontal sync	11	Monitor ID(not used)
12	Vertical sync	12	Monitor ID
13	Ground	13	Horizontal sync
14	Ground	14	Vertical sync
15	Ground	15	Not used
16	Ground		
17	SIV (Select Internal Video)		
18	SIS (Select Internal Sync)		
19	SICLK (Select Internal Clock)		
20	N.C.		
21	Ground		
22	Ground		
23	Ground		
24	Ground		
25	N.C.		
26	N.C.		

## On-Board VGA Settings (JP4, JP5, JP6)

You can disable the on-board VGA by setting JP4, JP5 and JP6.










JP4, JP5, JP6: On-board VGA Settings

	DISABLE VGA	ENABLED VGA
JP4	<input type="radio"/> <input type="radio"/>	
JP5	<input type="radio"/> <input type="radio"/>	
JP6	<input type="radio"/> <input type="radio"/>	

## CPU Vcc select (JP1, JP7)

JP1 and JP7 must be set to match the CPU type. The chart below shows the proper jumper settings for their respective  $V_{cc}$ .

CPU Vcc select (JP1, JP7)

	5.0 V	3.3 V	3.45 V	3.6 V	4.0 V
JP1	<input type="radio"/> 	 <input type="radio"/>	 <input type="radio"/>	 <input type="radio"/>	 <input type="radio"/>
JP7	<input type="radio"/> <input type="radio"/> <input type="radio"/>	 <input type="radio"/> <input type="radio"/>	 <input type="radio"/> <input type="radio"/>	<input type="radio"/>  <input type="radio"/> <input type="radio"/>	<input type="radio"/> <input type="radio"/> 

## Keyboard and PS/2 mouse connectors

---

The SBC-492 board provides two keyboard connectors. A 5-pin connector (KB CON) supports passive backplane applications. A second 6-pin mini-DIN connector (KB/PS2 MOUSE) on the card mounting bracket supports single-board-computer applications. The card comes with an adapter to convert the 6-pin mini-DIN connector, used for the mouse, and the standard DIN connector for the keyboard.

---

### Keyboard connector

---

Pin	Function
1	K.B. clock
2	K.B. data
3	N.C.
4	GND
5	+5 V <sub>DC</sub>

---

### Keyboard and/or PS/2 mouse connector (6-pin mini-DIN)

---

Pin	Function
1	K.B. data
2	PS/2 mouse data
3	GND
4	+5 V <sub>DC</sub>
5	K.B. clock
6	PS/2 mouse clock

---

## Serial ports

---

The SBC-492 offers two RS-232 serial ports. You can select the address for each port or disable it, using the BIOS Peripheral Setup program.

The card mounting bracket holds the serial port connector for one port, and the parallel port and serial port adapter kit (supplied with the card) holds the connector for the other port. This lets you connect and disconnect cable after you install the card. The DB-9 connector on the top of the bracket is the first RS-232 port, COM-A. The DB-9 connector on the adapter kit is the second serial port, COM-B. The following sections tell how to make RS-232 connections.

### RS-232 connections (COM-A, COM-B)

The following table shows the pin assignments for the card's RS-232 ports:

---

RS-232 connector pin assignment

---

Pin no.	Signal
---------	--------

---

1	DCD
---	-----

---

2	RX
---	----

---

3	TX
---	----

---

4	DTR
---	-----

---

5	GND
---	-----

---

6	DSR
---	-----

---

7	RTS
---	-----

---

8	CTS
---	-----

---

9	RI
---	----

---



## Serial ports IRQ select (JP18)

You can select the serial ports' IRQs by setting JP18 as follows:


---

JP18: RS-232 PORT IRQ SELECT:

---


COMA	COMB	JP18 setting
IRQ3	IRQ4	
IRQ4*	IRQ3	
IRQ11	IRQ10	
IRQ10	IRQ11	
IRQ4	IRQ10	
IRQ4	IRQ11	
IRQ3	IRQ10	
IRQ3	IRQ11	
IRQ11	IRQ3	
IRQ11	IRQ4	

\* default

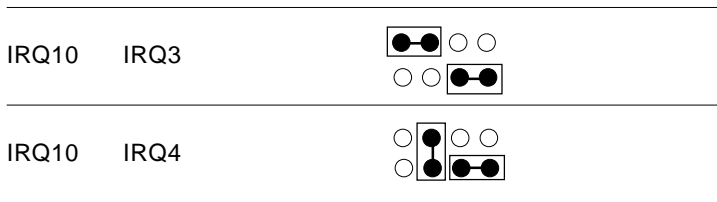


## Flash BIOS Protect (JP11)

You can set the JP11 to protect BIOS write-enable. The configuration is as follows:

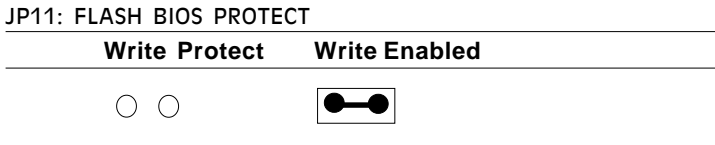

## Clear CMOS (JP15)

You can clear the CMOS data by setting JP15. To clear CMOS, make sure power is off, make JP15 from open to short by a jumper cap or external switch for a few seconds, then move the jumper cap or external switch away from the JP15, Back to the default (open).

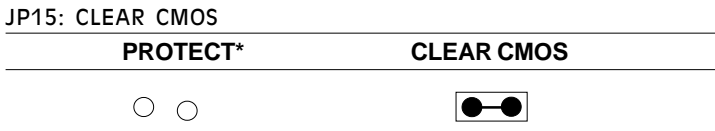

\* default

## External Switches and LEDs

---

### Power LED and keylock

You can connect an LED to indicate when the CPU card is on. Pin 1 of connector labeled KEYLOCK supplies power to the LED and Pin 3 is the ground.

You can use a switch (or a lock) to disable the keyboard. In this state the PC will not respond to any input. This is useful if you don't want anyone to change or stop a running program. Simply connect the switch between Pins 4 and 5. The pin assignments appear in the following table:

---

Power LED and keylock

---

Pin	Function
1	LED Power (+5 V)
2	No Connector
3	Ground
4	Keyboard lock
5	Ground

---

### External speaker

The CPU card has its own buzzer. You can disable the internal buzzer and connect an external speaker to the EXT-SPK connector. Enabling the external speaker automatically disables the internal buzzer.

---

External speaker

---

Pin	Function
1	Vcc
2	Speaker output
3	Buzzer in
4	Speaker output

---

## Reset switch

You can connect an external switch to easily reset your computer. This switch restarts your computer as if you had turned off the power then turned it back on. The following table shows the pin assignments for the RESET connector.

Reset switch	
Pin	Function
1	Ground
2	Reset



## Turbo LED

You can connect an LED indicator across the jumper labeled TB LED to indicate when the CPU is in Turbo mode. Marks on the circuit board indicate LED polarity (the pin on the left is positive). When the CPU powers down upon switching to green mode, the Turbo LED begins to blink.

Turbo LED	
Pin	Function
1	Turbo
2	Ground

## Turbo switch









You can connect a switch across the pins of jumper labeled TB SW to change the CPU speed between Turbo and non-Turbo mode. When you leave the pins open, the CPU card operates at full speed. When you close the pins, the card operates at slow speed for compatibility with older software.

Turbo switch pin assignments			
Pin	Function	Low Speed	High Speed
1	- Deturbo		
2	Pull low		

# DOC address setting (JP100)

The DiskOnChip 2000 occupies a 8 KB window in the upper memory address range of C800 to E000. You should ensure this does not conflict with any other device's memory address. JP3 controls the memory address of the Flash disk.

## DOC address setting (JP100)

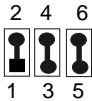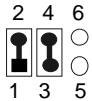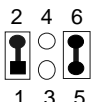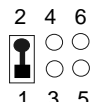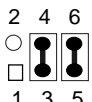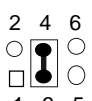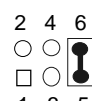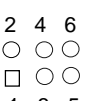Address	Disable	C800
	2 4 6  1 3 5	2 4 6  1 3 5
CC00	D000*	D400
2 4 6  1 3 5	2 4 6  1 3 5	2 4 6  1 3 5
D800	DC00	E000
2 4 6  1 3 5	2 4 6  1 3 5	2 4 6  1 3 5

\* default

# DiskOnChip socket (U330)

The DiskOnChip 2000 family of products provides a single chip solid-state flash disk in a standard 32-pin DIP package. The DiskOnChip 2000 is a solid-state disk with no moving parts, resulting in a significant reduction in power consumption and an increase in reliability. The DiskOnChip is a small, plug and play Flash disk. It is easy to use and saves integration overhead.

The DiskOnChip 2000 family of products is available in capacities ranging from 2MB up to 72 MB, unformatted. In order to manage the disk, the DiskOnChip 2000 includes the TrueFFS, M-Systems' Flash File System proprietary software. The DiskOnChip 2000 package is pin-to-pin compatible with standard 32-pin EPROM devices.

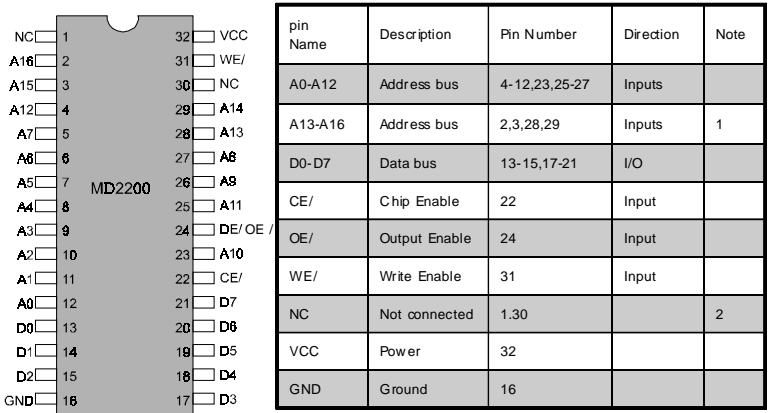


Figure1-MD2200 Pin-out

Note 1: Pins A13 through A16 are not used by the MD2200. They are kept for socket backward compatibility with ED 1100 (DiskOnChip 1000)

Note 2: Pins 1 and 30 are not used by MD2200

## **AMI WinBIOS Setup**

This chapter describes the card's diagnostic tests and how to set BIOS configuration data in a Windows environment.

# General information

WinBIOS Setup configures system information that is stored in CMOS RAM. Unlike conventional BIOS setup programs, WinBIOS features a graphical user interface that is easy to use.

## Starting WinBIOS setup

As POST executes, the following appears;

Hit <DEL> if you want to run SETUP

Press <DEL> to run WinBIOS setup.

## WinBIOS main menu

The WinBIOS setup screen appears as follows:





## Using a mouse with WinBIOS setup

WinBIOS Setup can be accessed via keyboard, mouse, or pen. The mouse click functions are:

- single click to change or select both global and current fields
- double click to perform an operation in the selected field

## Using the keyboard with WinBIOS setup

WinBIOS Setup has a built-in keyboard driver that uses simple keystroke combinations:

<b>Keystroke</b>	<b>Function</b>
<tab>	Move to the next window or field.
→, ←, ↑, ↓	Move to the next field to the right, left, above, or below.
<ENTER>	Select in the current field.
+	Increments a value.
-	Decrements a value.
<ESC>	Close the current operation and return to previous level.
<PgUp>	Return to the previous page.
<PgDn>	Advance to the next page.
<Home>	Return to the beginning of the text.
<End>	Advance to the end of the text.
<ALT>+H	Access a help window.
<ALT>+<Spacebar>	Exit WinBIOS Setup.
Alphabetic keys	A to Z are used in the Virtual keyboard, and are not case sensitive.
Numeric keys	0 to 9 are in the Virtual keyboard and Numeric keypad.


# Setup

---

## Standard Setup

The WinBIOS Setup options described in this section are selected by choosing the Standard icon from the WinBIOS Setup main menu selection screen, as shown below.

The Standard Setup screen appears:

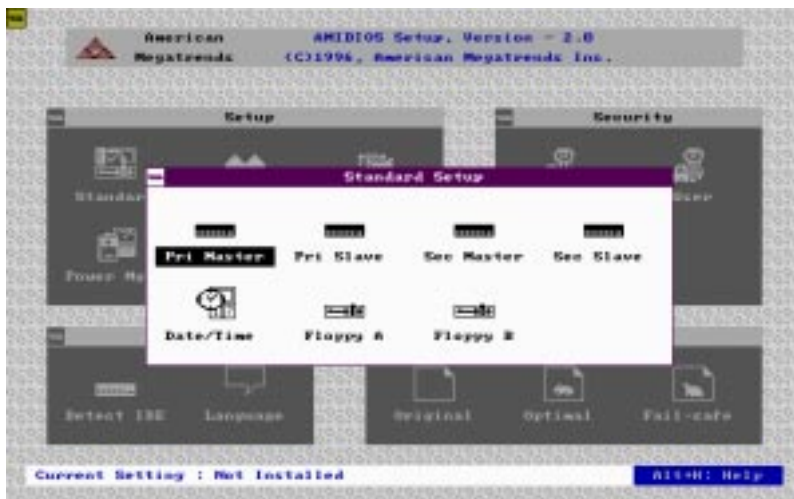

### Pri Master, Pri Slave, Sec Master and Sec Slave

Choose these icons to configure the hard disk drive named in the option. When you click on an icon, the following parameters are listed: Type, LBA/Large Mode, Block Mode, 32Bit Mode, and PIO Mode. All parameters relate to IDE drives except **Type**.

### Date, Day and Time Configuration

Select the Date and Time icon in the Standard Setup. The current values for each category are displayed. Enter new values through the keyboard.

### **Floppy A, Floppy B**

Select these icons to configure the type of floppy drive that is attached to the system: 360 KB 5¼", 1.2 MB 5¼", 720 KB 3½", 1.44 MB 3½", and/or 2.88 MB 3½". The settings have not been pre-installed.

### **User-Defined Drive**


If you are configuring a SCSI drive or an MFM, RLL, ARLL, or ESDI drive with drive parameters that do not match drive types 1-46, you can select the *User* in the **Type** field. You must then enter the drive parameters on the screen that appears. The drive parameters include:

- Cylinder (number of cylinders),
- Hd (number of heads),
- WP(starting write precompensation cylinder),
- Sec (number of sectors),
- Size (drive capacity).

# Advanced Setup

Select the Advanced icon from the WinBIOS Setup main menu to enter Advanced Setup.

The Advanced Setup options described in this section are the standard options as shown on the following screen.

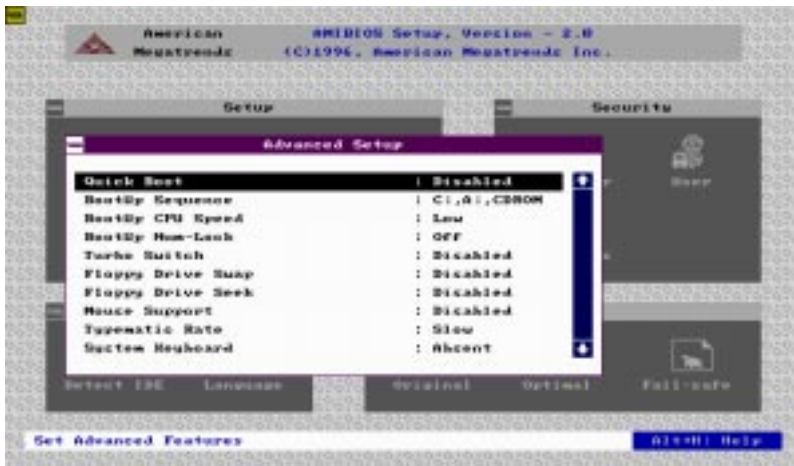

### Quick Boot:

Set this option to Enabled to instruct AMIBIOS to boot quickly when the computer is powered on. This option replaces the old Above 1 MB Memory Test Advanced Setup option.

Setting	Description
<i>Disabled</i>	AMIBIOS test all system memory. AMIBIOS waits up to 40 seconds for a READY signal from the IDE hard disk drive. AMIBIOS waits for .5 seconds after sending a RESET signal to the IDE drive to allow the IDE drive time to get ready again. AMIBIOS checks for a <Del> key press and runs WINBIOS Setup if the key has been pressed.
<i>Enabled</i>	AMIBIOS does not test system memory above 1 MB.  AMIBIOS does not wait up to 40 seconds for a READY signal from the IDE hard disk drive. If a READY signal is not received immediately from the IDE drive, AMIBIOS does not configure that drive. AMIBIOS does not wait for .5 seconds after sending a RESET signal to the IDE drive to allow the IDE drive time to get ready again.  You cannot run WINBIOS Setup at system boot, because there is no delay for the <i>Hit &lt;Del&gt; to run Setup</i> message.

### Boot Up Sequence:

This option sets the sequence of boot drives (floppy drive A:, hard disk drive C:, or CD-ROM drive) that the AMIBIOS attempts to boot from after AMIBIOS POST completes. The setting is C:,A:,CDROM; CDROM,A:,C:; or A:,C:,CDROM. The default setting is A:,C:,**CDROM**.

### Boot Up Num Lock:

Set this option to *Off* to turn the Num Lock key off when the computer is booted so you can use the arrow keys on both the numeric keypad and the keyboard. The setting is *On* or *Off*. The default setting is on.

**Turbo Switch:**

Set this option to *Enabled* to permit AMIBIOS to control the hardware turbo (speed) switch. The setting is *Enabled* or *Disabled*.

**Floppy Drive Swap:**

Set this option to *Enabled* to permit drives A: or B: to be swapped. The setting is *Enabled* or *Disabled*. The default setting is *Disabled*.

**Floppy Drive Seek:**

Set this option to *Enabled* to specify that floppy drive A: will perform a Seek operation at system boot. The setting is *Enabled* or *Disabled*. The Optimal and Fail-Safe default setting is *Disabled*.

**Mouse Support:**

When this option is set to *Enabled*, AMIBIOS supports a PS/2-type mouse. The setting is *Enabled* or *Disabled*. The default setting is *Enabled*.

**System Keyboard:**

This option specifies that a keyboard is attached to the computer. The setting is *Present* or *Absent*. The Optimal and Fail-Safe default setting is *Present*.

**Primary Display:**

This option specifies the type of display monitor and adapter in the computer. The setting is *Mono*, *CGA40*, *CGA80*, *EGA/VGA*, or *Absent*. The Optimal and Fail-Safe default setting is *EGA/VGA*.

**Password Check:**

This option enables password checking every time the computer is powered on or every time WINBIOS Setup is executed. If *Always* is chosen, a user password prompt appears every time the computer is turned on. If *Setup* is chosen, the password prompt appears if WINBIOS is executed. The Optimal and Power-On default is *Setup*.

**Parity Check:**

Set this option to Enabled to check the parity of all system memory. The setting is *Enabled* or *Disabled*. The Optimal and Fail-Safe default setting is *Disabled*.

**OS/2 Compatible Mode:**

Set this option to Enabled to permit AMIBIOS to run with IBM OS/2. The setting is *Enabled* or *Disabled*. The default setting is *Disabled*.

**Wait for F1 if Error:**

AMIBIOS POST error messages are followed by:

```
Press <F1> to continue
```

If this option is set to Disabled, AMIBIOS does not wait for you to press the <F1> key after an error message. The setting is *Enabled* or *Disabled*. The Optimal and Fail-Safe default setting is *Enabled*.

**Hit Del Message Display:**

Set this option to Disabled to prevent :

```
Hit <DEL> if you want to run Setup
```

from appearing on the first AMIBIOS screen when the computer boots. The setting is *Enabled* or *Disabled*. The Optimal and Fail-Safe default setting is *Enabled*.

### **Internal Cache:**

This option specifies the caching algorithm used for L1 internal cache memory. The settings are:

<b>Setting</b>	<b>Description</b>
<i>Disabled</i>	Neither L1 internal cache memory on the CPU nor L2 secondary cache memory is enabled.
<i>WriteBack</i>	Use the write-back caching algorithm.
<i>WriteThru</i>	Use the write-through caching algorithm.

### **External Cache**

This option specifies the caching algorithm used for L2 secondary (external) cache memory. The settings are:

<b>Setting</b>	<b>Description</b>
<i>Disabled</i>	Neither L1 internal cache memory on the CPU nor L2 secondary cache memory is enabled.
<i>WriteBack</i>	Use the write-back caching algorithm.
<i>WriteThru</i>	Use the write-through caching algorithm.

### **System BIOS Cacheable**

When this option is set to *Enabled*, the contents of the F0000h system memory segment can be read from or written to L2 secondary cache memory. The contents of the F0000h memory segment are always copied from the BIOS ROM to system RAM for faster execution.

The settings are *Enabled* or *Disabled*. The Fail-Safe default setting is *Disabled*.

### **Numeric Processor Test**

Set this option to *Ebable* to permit numeric processor to be tested. The default setting is *Disabled*.

### **Hard Disk Delay**

This option allows you to select hard disk delay time from 5 Sec to 15 Sec. The default setting is *Disabled*.




**C000,16 KB Shadow**      **D000,16KB Shadow**  
**C400,16 KB Shadow**      **D400,16KB Shadow**  
**C800,16 KB Shadow**      **D800,16KB Shadow**  
**CC00,16 KB Shadow**      **DC00,16KB Shadow**  
                                  **E000,64KB Shadow**

These options control the location of the contents of the 16KB of ROM beginning at the specified memory location. If no adapter ROM is using the named ROM area, this area is made available to the local usb. The settings are:

<b>Setting</b>	<b>Description</b>
<i>Shadow</i>	The contents of C0000h - C3FFFh are written to the same address in system memory (RAM) for faster execution.
<i>Enabled</i>	The contents of the named ROM area are written to the same address in system memory (RAM) for faster execution, if an adapter ROM will be using the named ROM area. Also, the contents of the RAM area can be read from and written to cache memory.
<i>Disabled</i>	The video ROM is not copied to RAM. The contents of the video ROM cannot be read from or written to cache memory.

# Chipset Setup

The WinBIOS Setup options described in this section are selected by choosing the Chipset icon from the WinBIOS setup main menu, shown below.

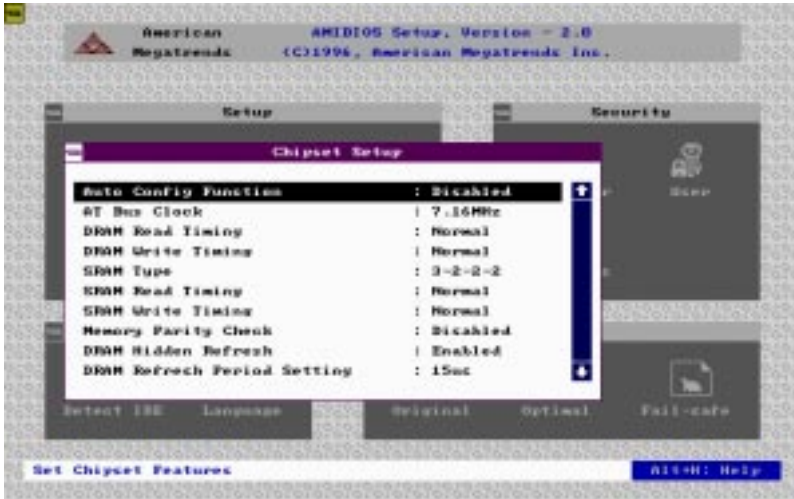

The following is an option list offered by Chipset Setup

---

## Chipset setup options

---

Function	Options
Auto Configuration Function	Disabled/Enabled
AT Bus Clock	7.16 CLK/3 CLK/4 CLK/5 CLK/6 CLK/8
DRAM Read Timing	Slow Normal Faster Fastest

---

<b>Function</b>	<b>Options</b>
DRAM Write Timing	Slow Normal Faster Fastest
SRAM Type	2-1-1-1 3-1-1-1 3-2-2-2 4-2-2-2
SRAM Read Timing	Fast Normal
SRAM Write Timing	FAST Normal
Memory Parity Check	Disabled Enabled
DRAM Hidden Refresh	Disabled Enabled
DRAM Refresh Period Setting	15 mS 30 mS 60 mS 120 mS
Memory Hole at 15-16M	Disabled Enabled
ISA I/O Recovery	Disabled Enabled
ISA I/O Recovery Time	0.5 mS 1.0 mS 1.5 mS 2.0 mS 2.5 mS 3.0 mS 3.5 mS
Cx5x86 Linear Wrapped Mode	Disabled Enabled


# Power Management Setup

As part of the "Green" function, the Power Management Setup offers options to help reduce power consumption. To see the options in this group, choose the Power Management Setup icon from the WinBIOS Setup main menu.

## Power Management Mode/APM Function


Set this option to *Enabled* to enable the power management and APM (Advanced Power Management) features.

The settings are *Enabled* or *Disabled*. The default setting is *disabled*.

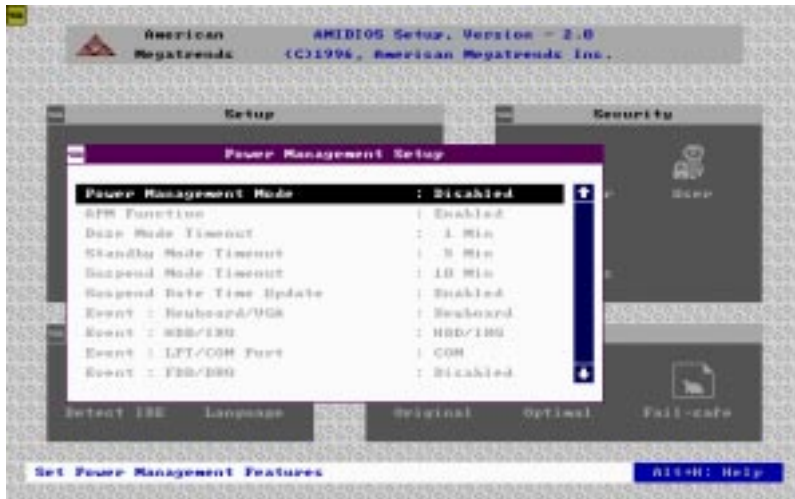

## PCI/PnP Setup

PCI/PnP Setup options are displayed by choosing the PCI/PnP Setup icon from the WINBIOS Setup main menu. All PCI/PnP Setup options are described in this section.

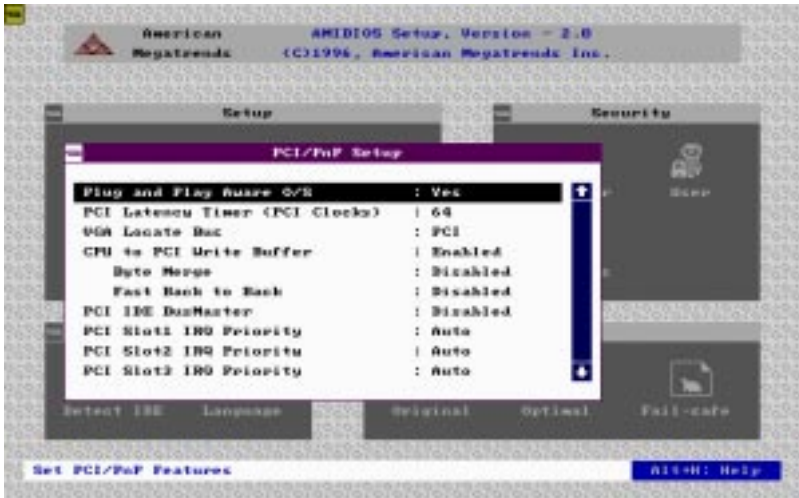

### Plug and Play Aware OS

Set this option to *Yes* if the operating system installed in the computer is Plug and Play-aware. AMIBIOS only detects and enables PnP ISA adapter cards that are required for system boot. The Windows 95 operating system detects and enables all other PnP-aware adapter cards. Windows 95 is PnP-aware. Set this option to *No* if the operating system (such as DOS, OS/2, Windows 3.x) does not use PnP.

*You must set this option correctly or PnP-aware adapter cards installed in your computer will not be configured properly.*

The settings are *No* or *Yes*. The Optimal and Fail-Safe default setting is *Yes*.

**PCI Latency Timer (in PCI Clocks)**

This option sets latency of all PCI devices on the PCI bus. The settings are in units equal to PCI clocks. The settings are *32*, *64*, *96*, *128*, *160*, *192*, *224*, or *248*. The Optimal and Fail-Safe default settings are *64*.

**VGA Locate Bus**

This option allows you to select VGA bus. The default setting is *PCI* and *ISA*.

**CPU to PCI Write Buffer**

This option sets the write buffer between CPU and PCI bus. The default setting is *Enabled*.

**PCI IDE BusMaster**

Set this option to *Enabled* to specify that the IDE controller on the PCI local bus has bus mastering capability. The settings are *Disabled* or *Enabled*. The Optimal and Fail-safe default setting is *Disabled*.

**Offboard PCI IDE Card**

This option specifies if an offboard PCI IDE controller adapter card is used in the computer. You must also specify the PCI expansion slot on the motherboard where the offboard PCI IDE controller card is installed. If an offboard PCI IDE controller is used, the onboard IDE controller on the motherboard is automatically disabled. The settings are *Disabled*, *Auto*, *Slot1*, *Slot2*, *Slot3*, or *Slot4*.

If *Auto* is selected, AMIBIOS automatically determines the correct setting for this option. The Optionnal and Fail-Safe default setting is *Auto*.

**PCI Slot1 IRQ Priority**  
**PCI Slot2 IRQ Priority**  
**PCI Slot3 IRQ Priority**  
**PCI Slot4 IRQ Priority**

This option sets PCI slot IRQ priority.

The settings are *Auto,3,4,5,7,9,10,11*. The default setting is *Auto*.

**IRQ3**  
**IRQ4**  
**IRQ5**  
**IRQ7**  
**IRQ9**  
**IRQ10**  
**IRQ11**  
**IRQ12**  
**IRQ14**  
**IRQ15**

These options specify the bus that the named interrupt request lines (IRQs) are used on. These options allow you to specify IRQs for use by legacy ISA adapter cards.

These options determine if AMIBIOS should remove an IRQ from the pool of available IRQs passed to BIOS configurable devices. The available IRQ pool is determined by reading the ESCD NVRAM. If more IRQs must be removed from the pool, the end user can use these PCI/PnP Setup options to remove the IRQ by assigning the option to the *ISA/EISA* setting. Onboard I/O is configurable by AMIBIOS. The IRQs used by onboard I/O are configured as *PCI/PnP*.

The settings are *PCI/PnP* or *ISA/EISA*. The Optimal and Fail-Safe default setting is *PCI/PnP*.

**Reserved Memory Size**

This option specifies the size of the memory area reserved for legacy ISA adapter cards.

The settings are *Disabled*, *16K*, *32K*, or *64K* and Fail-Safe default setting is *Disabled*.

**Reserved Memory Address**


This option specifies the beginning address (in hex) of the reserved memory area. The specified ROM memory area is reserved for use by legacy ISA adapter cards.

The settings are *C0000*, *C4000*, *C8000*, *CC000*, *D0000*, *D4000*, *D8000*, or *DC000*.



## Peripheral Setup

Peripheral Setup options are displayed by choosing the Peripheral Setup icon from the WINBIOS Setup main menu. All Peripheral Setup options are described in this section:

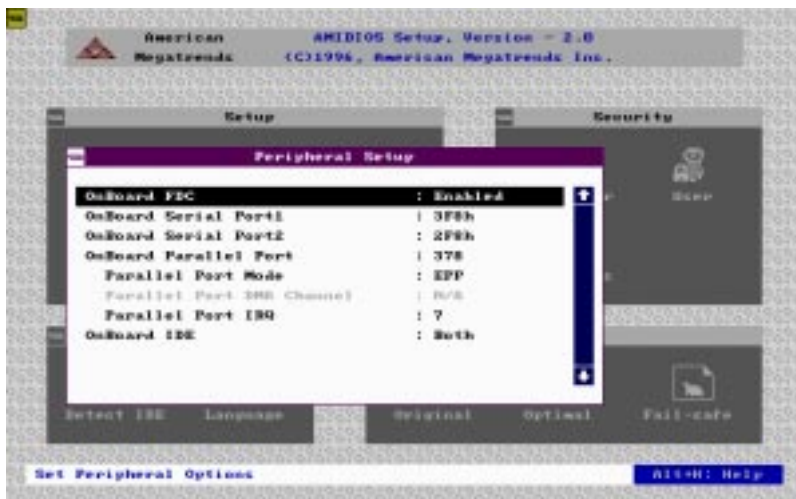

### Onboard FDC

This option enables the floppy drive controller on the motherboard. The settings are *Auto*, *Enabled* or *Disabled*.

### Onboard Serial Port 1

This option enables serial port 1 on the motherboard and specifies the base I/O port address for serial port 1.

The settings are *Auto*, *Disabled*, *3F8h*, *3E8h*, *2E8h*, *2F8h*. The Fail-Safe default setting is *Auto*.

## Onboard Serial Port2

This option enables serial port 2 on the motherboard and specifies the base I/O port address for serial port 2. The settings are *Auto*, *Disabled*, *3F8h*, *2F8h*, *3E8h*, *2E8h*. The Fail-Safe default setting is *Auto*.

## Onboard Parallel Port

This option enables the parallel port on the motherboard and specifies the parallel port base I/O port address. The settings are *Auto*, *disabled*, *278*, *378*, *3BC*. The Fail-Safe default setting is *Auto*.

### Parallel Port Mode

This option specifies the parallel port mode. ECP and Epp are both bidirectional data transfer schemes that adhere to the IEEE P1284 specification. The settings are:

Setting	Description
<i>Normal</i>	The normal parallel port mode is used. This is the default setting.
<i>EPP</i>	The parallel port can be used with devices that adhere to the Enhanced Parallel Port (EPP) specification. EPP uses the existing parallel port signals to provide asymmetric bidirectional data transfer driven by the host device.
<i>ECP</i>	The parallel port can be used with devices that adhere to the Extended Capabilities Port (ECP) specification. ECP uses the DMA protocol to achieve transfer rates of approximately 2.5 Mbs. ECP provides symmetric bidirectional communications.

**Parallel Port DMA Channel**

This option is only available if the setting for the **Parallel Port Mode** option is *ECP*.

The settings are *Disabled*, *DMA*, *CH (channel) 0*, *DMA CH 1*, or *DMA CH3*.

**Parallel Port IRQ**

IRQ7 is used for the Parallel Port(LPT 1). The IRQ can be changed to IRQ5.

**Onboard IDE**

This option specifies the onboard IDE controller channels that will be used. The settings are *Primary*, *Both*, or *Disabled*.

# Utility

The following icons appear in this section:



## Detect IDE:


If drive C: is an IDE drive, the hard disk drive parameters for drive C: are automatically detected and reported to the Hard Disk Drive C: screen in Standard Setup, so you can easily configure drive C:. Drive D and CD-ROM could also be automatically detected and reported to screen if drive D and CD-ROM are IDE drives.

## Language:

If this feature is enabled, you can select WINBIOS Setup message is in different languages. The default setting is *English*.

# Security

The following icons appear in this section:

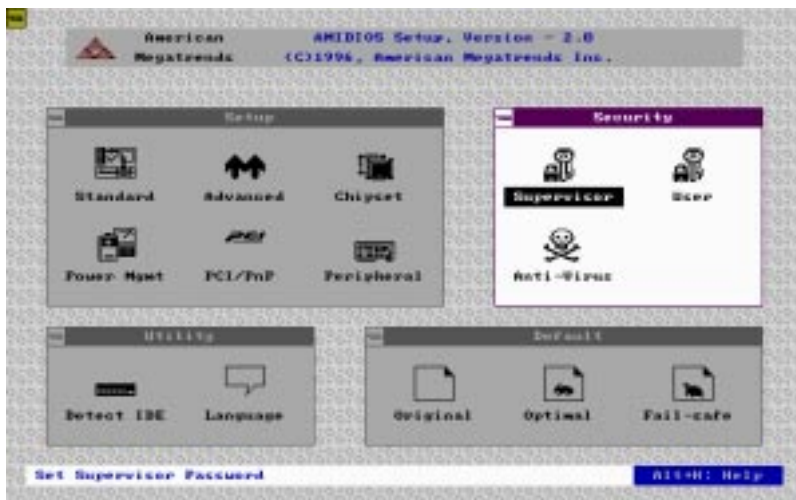


## Two Levels of Passwords

Both the Supervisor and the User icons configure password support. If you use both, the Supervisor password must be set.

The system can be configured so that all users must enter a password every time the system boots or when WINBIOS Setup is executed, using either or both the Supervisor or User Password.

The following screen appears when you select the password icon

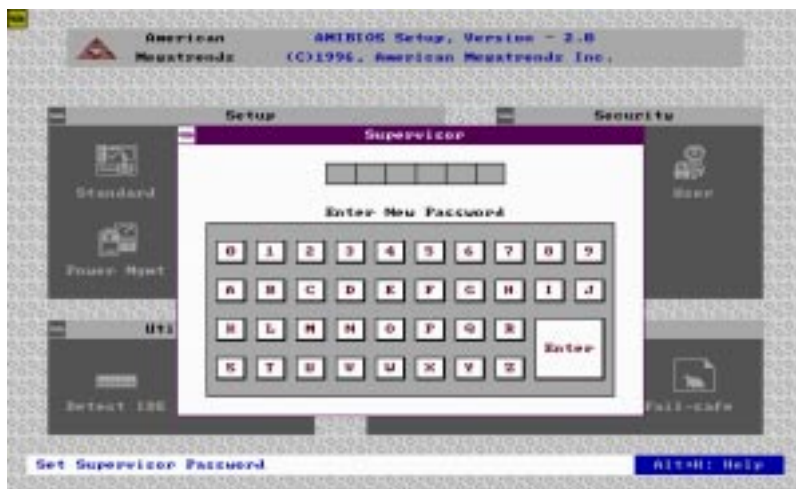

You can enter a password by:

- typing the password on the keyboard
- selecting each letter via the mouse
- selecting each letter via the pen stylus (pen access must be customized for each specific hardware platform.)

## Setting a Password

The password check option is enabled in Advanced Setup by choosing either *Always* or *Setup*. Here, you determine the password to be used. The password is stored in CMOS RAM.

### To assign a password,

1. Enter a 1-6 character password. The password does not appear on the screen when typed.
2. Retype the password when prompted by WinBIOS.

A message box will appear when the password is confirmed.

Keep a record of the password. If you forget the password, you must drain CMOS RAM and reconfigure the system.

## Changing a password

1. Select the Supervisor or User icon from the Security section of the WinBIOS Setup main menu.
2. Enter the password and press <ENTER>. The screen does not display the characters entered.
3. After the new password is entered, retype the new password as prompted and press <ENTER>.

If the password confirmation is incorrect, an error message appears. If the new password is entered without error, press <ESC> to return to the WinBIOS setup Main Menu. The password is stored in CMOS RAM after WinBIOS Setup completes. The next time the system boots, you are prompted for the password if the password function is present and is enabled.

## Anti-virus

Select the Anti-virus icon from the Security section of the WinBIOS Setup main menu. WinBIOS issues a warning when any program (or virus) issues a Disk format command or attempts to write to the boot sector of the hard disk drive. The settings are Enabled or Disabled.

If enabled, the following appears when a write is attempted to the boot sector. You may have to type N several times to prevent the boot sector write.

```
          Boot Sector Write !!!  
Possible VIRUS: Continue (Y/N)? _
```

The following is displayed after any attempt to format any cylinder, head, or sector of any hard disk drive via the BIOS INT 13 Hard Disk Drive Service:

```
          Format!!!  
Possible VIRUS: Continue (Y/N)? _
```

# Default

---

The icons in this section permit you to select a group of settings for all WinBIOS Setup options. Not only can you use these icons to quickly set system configuration parameters, you can also choose a group of settings that have a better chance of working when the system is having configuration-related problems.



## Original

Choose the Original icon to return to the system configuration values present in WinBIOS Setup when you first begin this WinBIOS Setup session.

## Optimal

You can load the optimal default settings for the WinBIOS Setup options by selecting the Optimal icon. The Optimal default settings are the best-case values that could optimize system performance. If CMOS RAM is corrupted, the Optimal settings are loaded automatically.

## Fail-Safe

You can load the Fail-Safe WinBIOS Setup options settings by selecting the Fail-Safe icon.

The Fail-Safe settings provide the most stable settings, though they do not provide optimal performance. Use this option as a diagnostic aid if the system is behaving erratically.




## Exiting WinBIOS

---

You can exit WinBIOS by pressing the <ESC> key while in the WinBIOS main menu screen.

The following screen appears:

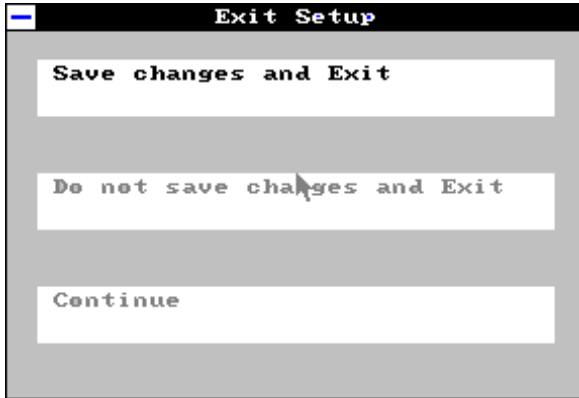

Select the option you desire, and the system will continue its boot up sequence.



## SVGA Setup

The SBC-492 features an on-board VGA interface. This chapter provides information about:

- SVGA installation
- Display utilities and drivers
- Software installation

# SVGA driver installation


---

## Installing from Windows 3.1

The graphic installation program (TINSTALL) supports a simple 6 step installation procedure for the display driver setup program, the power management program and the UNinstall program.

To use TINSTALL, follow the 6 steps below:

1. Ensure that MS Windows 3.1 is up and running properly, using the standard VGA driver.
2. Select the Program Manager.
3. Select RUN from the FILE menu on the menu bar.
5. Insert the Windows 3.1 driver disk and type A:TINSTALL (if the display driver disk is in the B drive, type in B:TINSTALL instead), as shown below, and then press <ENTER>.

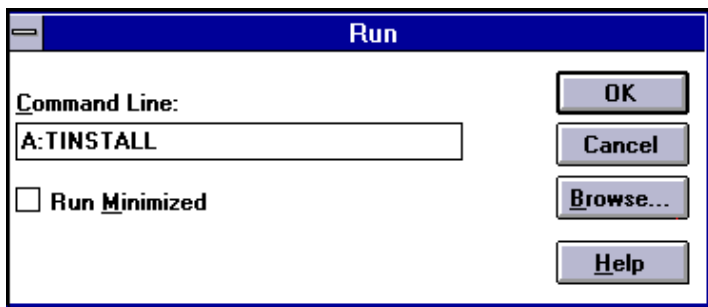

6. A menu will appear, presenting a choice of **Express** or **Custom Installation**.

## **Express Installation**

Express Installation automatically copies the display drivers into the TRIDENT.AGI directory and the Utility files into the TRIDENT.UTL directory. Once all files are copied, a program group called DISPLAY DRIVER AND UTILITIES will be created.

## **Custom Installation**

Custom Installation allows control over where files are stored and in what program group the icons are placed. The first dialog box shows the default directory to which the display drivers will be copied.

To change the directory name:

1. Delete the default name.
2. Enter the desired directory name.
3. Once the desired directory name is selected, continue the installation procedure by selecting **Continue**, or by pressing <ENTER>.

The next dialog box displays a summary of where files are stored.

4. Select **Continue** to copy the driver and utility files.

When all files are copied, the program will present a choice of program groups where the icons will be created. Create a new group to place the utility icons or select from pre-existing groups (e.g. Main, Applications, Accessories, etc.).

## **Tinstall icons**

The Tinstall program creates three icons:

- a. Screen Control (Used to configure display drivers)
- b. DPMS (Used for power management configurations)
- c. UNinstall (Used to delete the installed TRIDENT drivers)

*NOTE: Different "display driver set" versions cannot be installed to the same directory name.*

"Display driver sets" of the same version number ( e.g. UA6.0 ) will replace the existing one.

## Screen Control

---


The Screen Control panel contains controls for setting screen resolution, color depth, font size, refresh rates. Not all combinations of screen resolution, color depth, font size and refresh rate are attainable.

Color depths of 16, 256, 64K, or 16.7M colors can be selected by clicking next to the desired option. Color depth determines the number of colors that may be simultaneously displayed on the screen. The selected color depth determines the possible resolutions.

Screen resolutions of 640x480, 800x600, 1024x768, 1280x1024, or 1600x1200 can be selected by clicking next to the available options. The virtual screen size is automatically adjusted to be at least as large as the selected screen resolution.

Available refresh rates are dependent on the selected color depth and resolution. The “Back to Default” option is used to reset the refresh rate to the factory default value.

To open Screen Control, double click on its icon. The following figure shows the Screen Control interface:

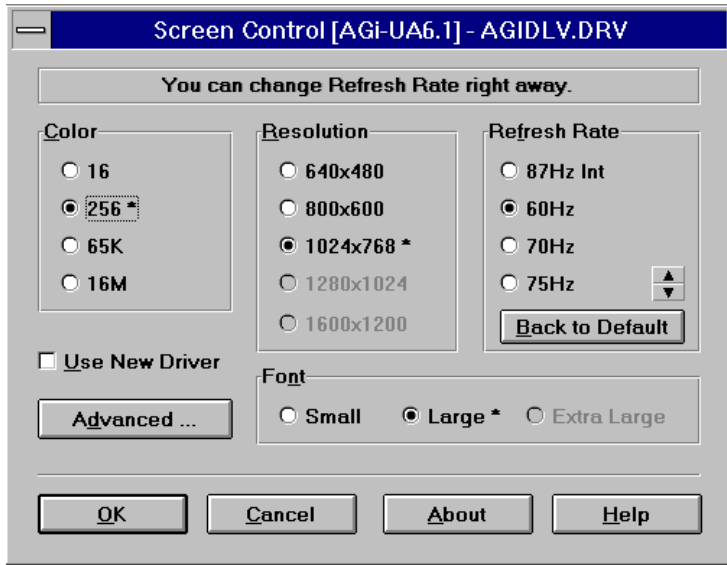

### Configuring the Display Driver

1. Select the color depth first. If the current driver does not support the selected color depth, then Windows will have to be restarted.
2. Select the resolution.
3. Select the font size (if available as an option).
4. Select the refresh rate.
5. Click on OK. If the current driver does not support the selected configuration, Windows will have to be restarted.

*Note:* Hot Key Control should be enabled before going into advanced setup. There is no virtual screen support for 16 colors. 1280x1024 is only available for 16 colors.

## Advanced features (Virtual Screen Control)

### Virtual Screen Control

Standard display resolutions are 640x480, 800x600, 1024x768, 1280x1024. The amount of display memory used depends on the selected resolution and color depth. A substantial amount of display memory is left unused for lower resolutions. The Virtual Screen features take advantage of this unused memory by “expanding” the display area into the off-screen area.

Virtual Screen Control allows the user to make effective use of a display screen larger than the standard 640x480, 800x600 or 1024x768, and the standard resolution is the center of the screen. The user can “pan” around the larger Virtual Screen area by the use of a standard mouse or a set of “HOT KEYS.” For example, it is possible to select a resolution of 640x480 and set the Virtual Screen size to 800 x 600. Thus, the 640 x 480 screen sits at the center of a 800 x 600 matrix, and the user can “pan” through the entire 800x600 matrix in a 640x480 window, as shown below.



Panning allows traversing a larger screen through a smaller window.


■ VIRTUAL SCREEN AREA

■ ACTUAL DISPLAY AREA




The advanced features can be accessed by pressing <ALT> + D or by clicking on the **Advanced...** button on the Screen Control interface. This opens up an extension of the Main Panel that presents the following features:

1. **Hot Key** selection, which allows you to set up predefined key strokes for specific virtual screen related actions.
2. **Turn On** virtual screen, which allows the use of the predefined virtual screen sizes. The predefined virtual screen sizes are selected by clicking next to available options. The sizes of the available predefined virtual screens are dependent on the selected color depth and resolution.
3. **Customize** virtual screen area, which opens up a new screen titled Virtual Screen Advanced Settings:

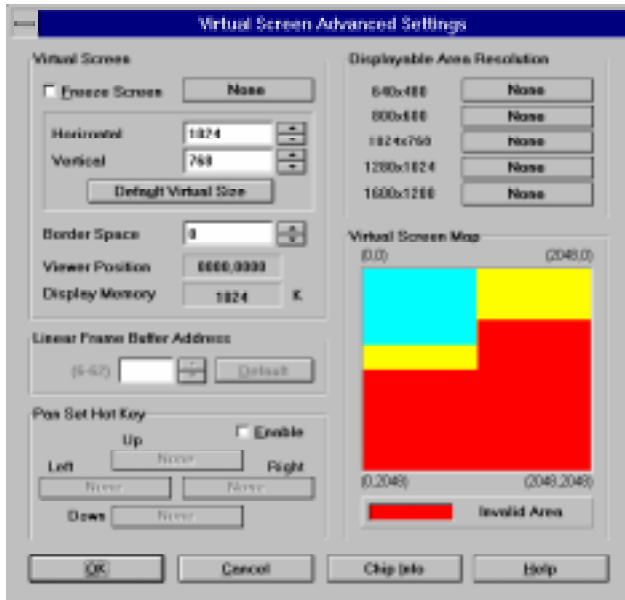

## Virtual Screen Advanced Settings

- **Freeze Screen:** Disables the panning feature, giving the illusion of a frozen screen but keeping other virtual screen functions available. Hot key functions are available for this feature.
- **Linear Frame Buffer Address:** The Linear Addressing driver automatically detects the system's memory size and sets the frame buffer to an unused area above the system memory. The Linear Frame Buffer Address setting is useful in avoiding conflicts with Windows applications, which use the same linear frame buffer address as the Display Driver. Addresses between 18 and 63 MB can be selected. If there is no conflict, the default setting is highly recommended.
- **Border Space:** The Border Space option is used to set up a border (thickness measured in pixels) within the displayable area. The border is used as a marker for panning the screen, i.e. when the cursor hits against this border, screen panning occurs as shown below:

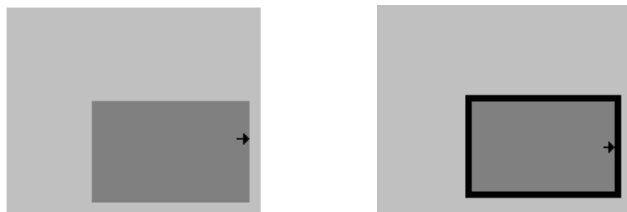

→ mouse cursor

■ border

- **Pan Set Hot Key:** Hot keys can be set up to pan the virtual screen left, right, up and down. The feature has to be enabled by clicking on the **Enable** box before hot keys can be selected.

Once all selections are made, click on **OK** or press <ALT> + O to exit the advanced setup.


# DPMS (Display Power Management Signaling)

The POWER MANAGEMENT program is designed for energy-saving monitors that conform to the VESA Display Power Management Signaling (DPMS) standard.

**WARNING:** THE USE OF THIS PROGRAM IS NOT RECOMMENDED FOR MONITORS THAT DO NOT SUPPORT THE VESA DPMS STANDARD.

The program offers three power-down modes:

1. Standby (minimum power savings)
2. Suspend (substantial power savings)
3. Off state (maximum power savings)

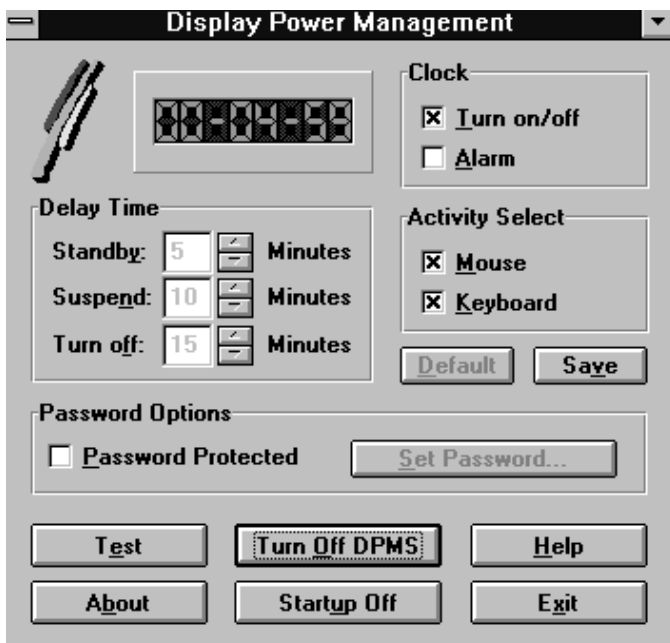


The program monitors for mouse and/or keyboard activity. When activity is not detected for a specified delay period (controlled by the Delay Time parameter), the program signals the TGUI9440AGi to enter the selected power-down modes.

The Display Power Management program offers several options to customize the DPMS operation.

## Delay Time

The delay time to enter each mode can be set by entering the value (in minutes) in the Delay Time parameters. Values can be entered by either clicking on the count-up or count-down button, or by clicking on the number, deleting it, and typing in the desired time in minutes, as shown below.

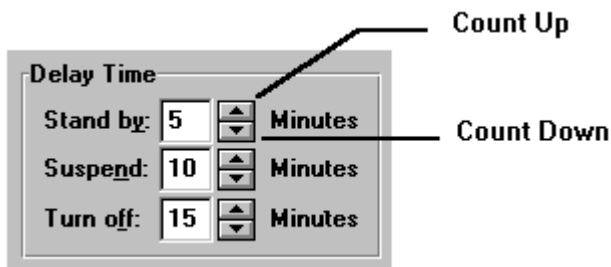

## Activity Select

The Activity Select option selects which activity the program senses in order to restore the display to the monitor. For example, if both mouse and keyboard are selected, then either activity will re-establish the powered down signals.

## Clock

Turning on the clock enables the digital count down display. If the Alarm option is enabled, then the last 5 seconds of countdown to Standby mode is synchronized with beeps from the PC speaker.

## Password Option

The Password Option sets up a password to get back onto the screen.

- A password is set up by first clicking on the box marked **PASSWORD PROTECTED** or by pressing <ALT> + P (this is confirmed by the presence of an “X” in the box).
- Press <ALT> + S or click on the box marked **SET PASSWORD**.
- Type in the selected password (twice) and select **OK**, or press <ENTER>.

## Startup On/Off

This option installs the Display Power Management program onto the Windows Startup file, so that DPMS is active upon entering Windows.

## Default

The default button sets all parameters back to the factory default values.

## Test

The test feature is used to give a demonstration of the DPMS power down function.

## Save

This feature is used to save all the current settings. Once all settings are selected, the program is activated by pressing <ALT> + O or by clicking on the box marked **Turn On DPMS**.

## Display driver Uninstallation

---

The UNinstall program enables the user to safely delete specific display drivers or an entire display driver set.

To remove an entire Display Driver Set, complete the following steps:

1. Using the arrow keys or mouse, select the Display Driver Set that is to be removed (the set to be deleted should be highlighted).
2. Once the desired Driver Set is selected, simply select the **Delete** button or press <ENTER>.

**NOTE:** *The UNinstall program will not permit the deletion of a Display Driver set that is currently being used.*

To remove an individual driver from a Display Driver Set, complete the following steps:

1. Using the arrow keys or mouse, select the Display Driver Set that is to be removed (the set to be deleted should be highlighted).
2. Once the desired Driver Set is selected, click on the **Enter** button. This will pull up a list of available display drivers.
3. Select the display driver to be deleted by using the mouse or the up/down arrow keys to scroll through the list.
4. Click on the **Delete** button or press <ALT> + D to delete the selected display driver.

# Microsoft Windows NT

---

## Installation

1. Run the Microsoft Windows NT Setup program located in the Main group of Program Manager.
2. Select **Change System Settings** from the Options pulldown menu.
3. Select **Other** from the display options.
4. Microsoft Windows NT 3.1 will prompt you for the correct path where the Trident drivers are located. Enter the path “**X**: \TVGAUTIL\NTDRV\NT31\” where **X** is the drive where Microsoft Windows NT 3.1 drivers have been installed.
5. A list of all Trident drivers will appear. Select the resolution and color depth desired.
6. Restart Microsoft Windows NT. The desired Trident driver will then be in effect.

*NOTE: If you select a color depth or resolution that is not supported by your card, NT will substitute 640x480 in 256 colors for the display.*

## Microsoft Windows NT 3.5 Installation

1. Run the Microsoft Windows NT display Setup program located in the Control Panel of the Main group.
2. Select **Change Display Type...** button from the Display Settings options.
3. Select **Change...** button from the Display Type options.
4. Select **Other...** button from the Select Device options.

5. Microsoft Windows NT 3.5 will prompt you for the correct path where the Trident drivers are located. Enter the path “**X**: \TVGAUTIL\NTDRV\NT3.5\” where **X** is the drive where Microsoft Windows NT 3.5 drivers have been installed.
6. A list of all Trident drivers will appear. Select the resolution and color depth desired.
7. Restart Microsoft Windows NT. The desired Trident driver will then be in effect.

*NOTE: If you select a color depth or resolution that is not supported by your card, NT will substitute 640x480 in 256 colors for the display.*

## **Microsoft Windows NT4.0**

### **Procedure to install display drivers:**

1. Open Windows NT 4.0.
2. Click the START button (lower left hand corner of the screen).
3. Click on SETTINGS.
4. Click on CONTROL PANEL.
5. Double click on the DISPLAY icon.
6. Click the SETTINGS tab.
7. Click DISPLAY TYPE.
8. Click the CHANGE button under ADAPTER TYPE.
9. Click the button HAVE DISK.
10. Type the path to where the drivers are located (example A:\).
11. Click OK.
12. You will see one driver listed “Trident Video Accelerator” .  
Click OK to select it.



13. Click YES to continue.
14. Click OK to continue.
15. Click the CLOSE buttons.
16. Click YES when prompted to restart NT 4.0.

## **Microsoft Windows 95**

### **Procedure to install display drivers:**

1. Go to Windows 95.
2. Click the Windows 95 Start button.
3. Select Settings.
4. Select Control Panel.
5. Double click the Display Icon.
6. Click the Settings tab.
7. Click on Change Display Type...
8. Under "Adapter Type", click Change.
9. Click Have Disk...
10. Type the path to where the drivers are located, and click O.K.  
(example: A:\ if the driver files are located in the A drive)
11. Click O.K. There should only be one compatible driver listed.  
If you see more than one driver listed, select "Trident 9440  
Linear Accelerated for PCI".
12. Click Close.
13. Click Apply.
14. Click Yes to restart your Windows 95.

## **OS/2**

### **Procedure to install display drivers:**

This Trident OS/2 Display Drivers utility supports the following resolutions with OS/2:

640x480x256  
800x600x256  
1024x768x256  
1280x1024x256 (2M)  
640x480x65K  
800x600x65K (2M)  
1024x768x65k (2M,)  
640x480x16.7M

This utility includes Trident OS/2 Display Drivers installation and Trident OS/2 Display Drivers setting.

### **Installation Procedure**

1. Insert Trident OS/2 Display Drivers diskette in Drive A.

From the OS/2 Desktop: Open the OS/2 System folder, double-click on the Drives object, and then double-click on drive A. When the drive A folder opens, double-click on INSTALL.EXE. You can also click on the floppy drive object from Launch Pad, and then double-click on INSTALL.EXE.

From the OS/2 Command Line: Open OS/2 System folder, double-click on Command Prompts, and double-click on either OS/2 Window or OS/2 Full Screen. Then, at the command line, go to drive A and type: INSTALL.EXE and press Enter.

2. The first page of the installation program's window is Screen Resolution selection page.
  - Select the resolution and color depth.
3. The second page is Monitor Model selection page.
  - Click on Monitor tab to go to this page.
  - Point to and click on the down arrow button to show a list of monitor models.
  - Select the monitor model. If you cannot find your monitor's model, select "Default".

4. The third page is Refresh Rate selection page.
  - Click on Refresh tab to go to this page.
  - The refresh rates displayed are the recommended refresh rate for each resolution by your monitor manufacturer.
  - You can change the refresh rates by clicking on down arrow button to select the refresh rates for corresponding resolution.
5. The fourth page is Frame Buffer Address selection page (Vesa Local Bus Adapter only).
  - Click Desktop tab to go to this page.
  - Point to and click the down arrow button to show a list of available frame buffer address (in unit of MBytes).
6. After the selections, click on the Install button to complete the installation.
7. Reboot OS/2 to have this installation take effect.

## **Display Drivers Setting Procedure**

1. Double-click on the Trident folder, and then double-click Display Setting object.
2. To change resolution and/or color depth
  - Click Screen tab.
  - Select the resolution and color depth.
  - Click Set button.
3. To change refresh rate
  - Click Refresh tab.
  - Point to and click down arrow button.
  - Select the refresh rate.
  - Click Set button to take effect.
  - If you don't want the selected refresh rate, click Undo button or press 'U' key to return to previous refresh rate.
4. To change frame buffer address (Vesa Local Bus Adapter only)
  - Click Desktop tab.
  - Point to and click the down arrow button to show a list of available frame buffer address (in unit of MBytes).
  - Click Set button.

## 5. Virtual Screen Support

- Click Screen tab
- Click Virtual Screen On button to enable Virtual Screen.
- Click again to disable Virtual Screen.
- Select the resolution and color depth.
- Click Set button.
- If Virtual Screen is on, the selected width and height are smaller than current screen width and height, and the selected color depth is same as current color depth, it will dynamically change the resolution.

If you have selected to change resolution and/or frame buffer address, you must reboot OS/2 to have the changes take effect.

**Note:** If you decide to change your hardware system configuration, such as upgrading video memory or system memory, you should

- Change resolution to 640x480x16(VGA).
- Change hardware configuration.
- Reinstall Trident OS/2 Display Drivers.

You can add or delete monitor models by modifying TMONITOR.INF file in this utility diskette.

The format of each line in this file is:

- The monitor model and company name inside two double quote marks.
- Four recommended refresh rates data for 640x480, 800x600, 1024x768, and 1280x1024 resolutions.
- Four maximum supported refresh rates data for 640x480, 800x600, 1024x768, and 1280x1024 resolutions. If some resolutions are not supported, put "0" in it.

If you add a line

```
FrameBufferAddress=xxx
```

where xxx is frame buffer address in unit of MBytes into TR\_AGI.INF file, display drivers will set frame buffer to this address.

## Utilities installation

---

The Utility Installation program is used to install and retrieve instructions on:


- a) Utility programs.
- b) Non-Windows applications display drivers.

The Utility installation program is run by executing the following steps:

1. Insert the DOS utility driver disk in the floppy drive.
2. Type `C:\DOS\README` at the floppy drive prompt.
3. A numbered list of available destination drives will be displayed on the screen. Select the destination drive by typing in the corresponding number, e.g. to select drive C, type in 1, as shown below.



4. Files and subdirectories will be expanded into the newly created directory **TVGAUTIL**. A new menu will then be displayed on the screen, showing a list of on-line instructions:

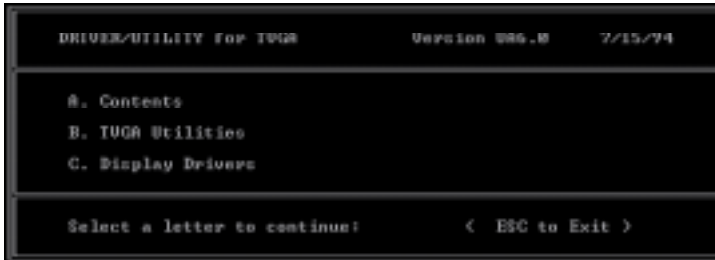

5. Selecting **A** will display the contents of all drivers in the list.
6. Selecting **B** will display instructions on the available utility programs.
7. Selecting **C** will display instructions on how to install display drivers for non-Windows applications.

## Utilities summary

### **SVM. EXE**


SVM is a menu-driven program designed to select and test all video modes available to the adapter.

### **How To Use SVM**

The SVM program can be executed in either of two ways: by calling up the menu and selecting from the menu choices, or by entering the desired mode directly with a specific command line.

### **How To Use SVM From The Menu**

1. Switch directory to "X:\TVGAUTIL\UTILITY" where **X** is the drive where the Trident Utility and DOS Application drivers have been installed .
2. Type `SVM` to pull up the menu. You will see the screen on the following page.

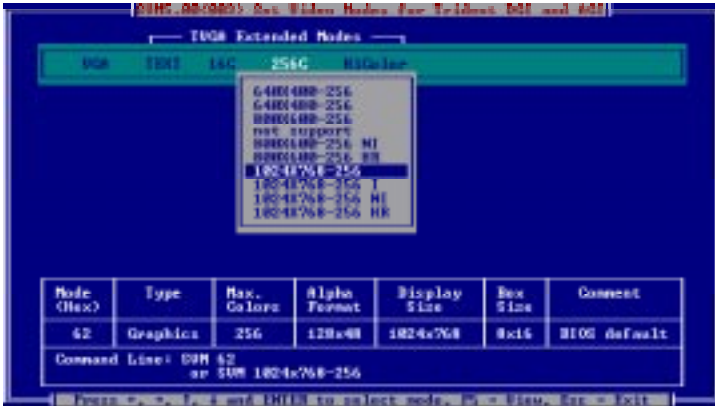

The top bar shows the available color depths. Move through the options with the right/left arrow keys.

The program provides all the different resolutions supported by the chip under each color depth. These resolutions are traversed by the up/down arrow keys.

The graphics adapter can be tested for each resolution/mode by first highlighting the selection by use of the arrow keys, then pressing the F5 key.

The graphics adapter can be run at a selected mode by first selecting the mode, and then pressing <ENTER>.

### How to Use SVM From The Command Line

The SVM program may be used to select a mode directly from the command line following two simple steps:

1. Switch directory to "X:\TVGAUTIL\UTILITY" where X is the drive where the Trident Utility and DOS Application drivers have been installed.
2. Type in: SVM [mode number] <ENTER>.

For example, to run the graphics adapter in mode 62H, the command for item 2 above would be:

```
SVM 62 <ENTER>
```

## **SMONITOR**

SMONITOR is designed to set the monitor group and the monitor type:

```
Usage: SMONITOR <GROUP | OPTION>
```

### **Set Monitor Group**

The graphics extended modes set by the graphics card's BIOS are sorted into six groups categorized by the monitor's refresh rate. The group setting as below:

Resolution	Group							
	0	1	2	3	4	5	6	7
640X400	70	70	70	70	70	70	70	70
640x480	60	60	75	85	95	95	95	95
800x600	56	60	75	75	85	85	95	95
1024x768	87i	87i	60	70	75	85	95	95
1280x1024	87i	87i	87i	87i	60	60	60	60
1600x1200	87i	87i	87i	87i	87i	87i	87i	87i

OPTION:

```
C    SET COLOR MONITOR  
M    SET MONOCHROME MONITOR
```

The default group number is 4.

If you want set the monitor group, type:

```
SMONITOR GROUP
```

where GROUP is one of the group number listed above.



## Set Monitor Color

Switches between color and monochrome display. Some monitors (most notably Samsung monitors manufactured before 2/8/91) do not adhere to the standard IBM pinout definitions, which causes the VGA card to boot up in monochrome instead of color. This utility may be used to correct the problem.

To set the monitor as color, type: `SMONITOR C`

or type: `SMONITOR M`

to set monochrome monitor.


## Tmonitor

The Tmonitor program allows the adjustment of CRTC display parameters so that images are optimally sized and centered on the screen. Adjustable parameters include:

- Horizontal size and position.
- Vertical size and position.
- Pixel frequency.

The program is started from the DOS prompt by typing `Tmonitor` from the `C:\TVGAUTIL\UTILITY` directory.

The first section of the program is used to define a given name for the adjustments to be made.

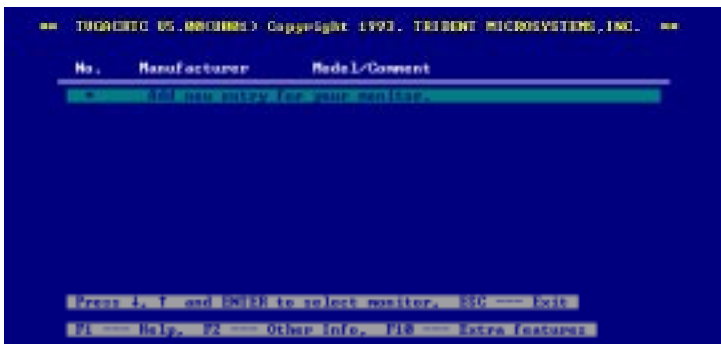

1. Press <ENTER> to add a new monitor entry and type in the name of the manufacturer, followed by <ENTER> keystroke. The program will allow any name to be typed in.
2. Type in the associated comments for the monitor settings and press <ENTER>.
3. A mode table will be displayed, presenting all the adjustable modes as shown below:

```

== TUGATEC UC.000000 Copyright 1991, TEBENT MICROSYSTEMS, INC. ==
MONITOR:
Mode  Type  Col.  Row  Resolution  Colors  Interlace  Loaded  Support  Adjust
-----
5b  Graph  180  75  800x400    16     NO         YES    YES
5c  Graph  180  77  800x400    256    NO         YES    YES
5f  Graph  128  48  1024x768   16     YES        YES    YES
5f  Graph  128  48  1024x768   16     NO         YES    YES
62  Graph  128  48  1024x768   256    YES        YES    YES
62  Graph  128  48  1024x768   16     NO         YES    YES
63  Graph  160  64  1280x1024  16     YES        YES    YES
63  Graph  160  64  1280x1024  16     NO         YES    YES
6a  Graph  80   30  640x400    168    NO         YES    YES
6b  Graph  80   30  640x400    328    NO         YES    YES
71  Graph  80   30  640x400    648    NO         YES    YES
74  Graph  80   30  640x400    328    NO         YES    YES
75  Graph  80   30  640x400    648    NO         YES    YES

```

[arrow keys] and ENTER to select mode  
 ESC --- Return to previous menu, H --- Help

4. This table is traversed through the use of the up/down arrow keys. The mode highlighted is the selected mode for adjustment.
5. Select the mode to be adjusted and press <ENTER>.
6. Select the desired pixel rate by scrolling the list using the up/down arrow keys, followed by pressing <ENTER> twice.
7. The screen alignment test pattern will then be displayed. The up/down arrow keys are used to adjust the vertical positioning of the screen. The left/right arrow keys are used for horizontal alignment of the screen. The Home/End keys are used for horizontal screen sizing and the Page Up/Down keys are used for vertical screen sizing. Once the screen position and size is adjusted, press <ENTER>, followed by the <ESC> keystroke.

8. To save the settings, type Y and press <ENTER>. The program will then modify the **Config.sys** file.
9. At this point press <ESC> and reboot the system to enable the parameter changes.

## Software drivers installation

---

After selecting Drivers from the Main Menu in Program Manager, you will be presented with a list of possible drivers to install. Select the driver(s) you wish to install. A version list will be given for the given application. Choose the appropriate version for the application. Once you have selected the driver, the installation program will provide you with further instructions. For details on installing each available driver, refer to the README.TXT file on the provided Utility disk.

The following is a list of drivers supported by the SBC-492.

AutoCAD	Autoshade
VersaCAD	GEM Desktop
Lotus	MS Windows™
MS Word	OS/2 Presentation Manager
Symphony	Ventura
WordPerfect	SCO
Quattro Pro	VESA BIOS Extension (for VESA standard SVGA drivers)



## **Watchdog Timer Demo Program**

The following demo program illustrates the programming steps required to enable, set, and disable the watchdog timer.

# Programming the watchdog timer

---

## How to program the WATCHDOG TIMER

1. To set the time-out interval of watchdog timer:
  - output the desired value to port **0x443**. Since the data is of 1 byte, the maximum value will be 255. In our design 1 ~ 127 will denote 1sec ~ 127sec, though 129 ~ 255 will denote lmin ~ 127min. e.g.  
*outportb(0x443, 30); // set interval to 30 seconds*  
*outportb(0x443, 0x85); // set interval to 5 minutes*
2. To set the time-out event:
  - output data to **prot 0x444**,
    - 0: reset system
    - 1, 2, 3: IRQ 10, 15, 11 respectively
    - 4: NMI
  - e.g.  
*outportb(0x444, 0); // set time-out event to reset-system*
3. To disable watchdog timer:
  - output any value to port 0x80, e.g.  
*outportb(0x80, data); // disable watchdog timer*
4. To enable or refresh watchdog timer(the watchdog timer will return to its initial value, then count down):
  - access the I/O port **0x443**, e.g.  
*outportb(0x80, 0); // disable watchdog timer*  
*inportb(0x443); // refresh watchdog timer*
  - \* note: if you want to refresh the watchdog timer, you have to disable it first.

## Demo program

```
outportb(0x444, 0);           // set time-out event to reset-system
outportb(0x443x 10);        // set time-out interval to 10 seconds
iutportb(0x443);           // enable watchdog timer
customer_job();            // execute your job here, be sure your
                             // job will finished within 10 seconds
outportb(0x80, 0);         // refresh watchdog timer, otherwise
                             // the system will reset after time-out
outputb(0x443, 20);        // set time-out interval to 20 seconds
inportb(0x443);           // enable watchdog timer
another_job();            // another job finished in 20 seconds
outportb(0x80, 0)         // disable watchdog timer
...
...
```





APPENDIX

# B

## **Installing PC/104 Modules**

This appendix gives instructions for installing PC/104 module.

## Installing PC/104 modules

---

The SBC-492's PC/104 connectors give you the flexibility to attach PC/104 expansion modules. These modules perform the functions of traditional plug-in expansion cards, but save space and valuable slots. Modules include:


- **PCM-3110B** PCMCIA Module (one-slot)
- **PCM-3115B** PCMCIA Module (two-slot)
- **PCM-3200** PC/104 Sound Module
- **PCM-3420** PC/104 Fast SCSI Module
- **PCM-3521** Advanced Flat-Panel/CRT VGA Module
- **PCM-3522** LCD Panel Adapter
- **PCM-3600** PC/104 Fax/Modem Module
- **PCM-3610** Isolated RS-232 and RS-422/485 Module
- **PCM-3640** PC/104 4-port RS-232 Module
- **PCM-P50** PC/104 Vehicle Power Supply
- **PCM-3660** Ethernet Module
- **PCM-3718** 30 KHz A/D Module
- **PCM-3724** 48-channel DIO Module

To install these modules on the SBC-492 is a quick and simple operation. The following steps show how to mount the PC/104 modules:


**Step1** Remove the SBC-492 from your system. Pay particular attention to the safety instructions already mentioned above.

**Step2** Make any jumper or link changes required to the CPU card now. Once the PC/104 module is mounted you may have difficulty in accessing these.

- Step3 Normal PC/104 modules have "male" connectors and can be mounted directly onto the main card. However, for reasons that ensure better bus matching, the connectors on the SBC-492 and the PC/104 module are both "female". For this reason you need to plug-in a "male-male" adapter (included with the SBC-492). Please refer to the following PC/104 module mounting diagram on the following page. After this is in place you then have the correct mounting connector to accept your PC/104 module.
- Step4 Mount the PC/104 module onto the CPU card. Do this by pressing the module firmly but carefully onto the mounting connectors.
- Step5 Secure the PC/104 module onto the CPU card using the four mounting spacers and screws.

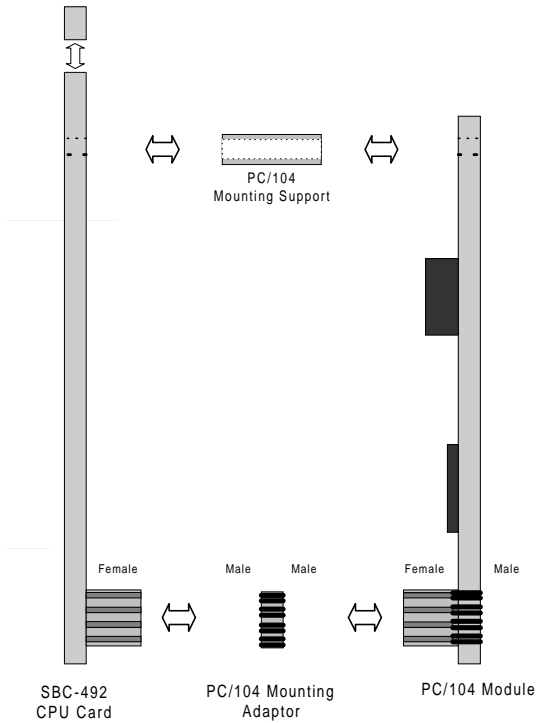

**PC/104 Module Mounting Diagram**

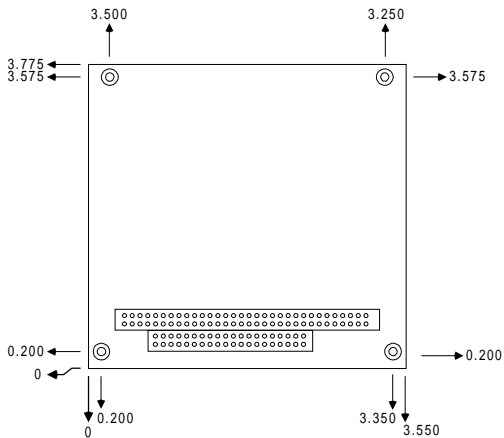

**PC/104 Module dimensions (inches ±5%)**

OZONE SAFE



RECYCLABLE