

**AEC-6911**

Fanless Embedded Controller

Intel® Atom™ N270 1.6GHz

Processor

2 PCI slots/ PCMCIA

4 COM/ Audio/ CompactFlash™

## Copyright Notice

This document is copyrighted, 2012. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

## Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- Award is a trademark of Award Software International, Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- Intel®, Atom™ are trademarks of Intel® Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

**All other product names or trademarks are properties of their respective owners.**

## Packing List

Before you begin operating your PC, please make sure that the following materials are enclosed:

- 1 AEC-6911 Embedded Controller
- 1 Phoenix Power Connector
- 2 Wallmount Brackets
- 1 Audio Cable
- 1 Screw Package
- 1 CD-ROM for manual (in PDF format) and drivers

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

## Safety & Warranty

1. Read these safety instructions carefully.
2. Keep this user's manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
4. For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a firm surface during installation. Dropping it or letting it fall could cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
12. Never pour any liquid into an opening. This could cause fire or electrical shock.
13. Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
14. If any of the following situations arises, get the equipment checked by service personnel:
  - a. The power cord or plug is damaged.

- b. Liquid has penetrated into the equipment.
  - c. The equipment has been exposed to moisture.
  - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
  - e. The equipment has been dropped and damaged.
  - f. The equipment has obvious signs of breakage.
15. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -15°C (5°F) OR ABOVE 55°C (131°F). IT MAY DAMAGE THE EQUIPMENT.

## FCC

### **Warning!**



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Below Table for China RoHS Requirements  
 产品中有毒有害物质或元素名称及含量

AAEON Boxer/ Industrial System

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	×	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
电源	×	○	○	○	○	○

**O:** 表示该有毒有害物质在该部件所有均质材料中的含量均在  
**SJ/T 11363-2006** 标准规定的限量要求以下。

**X:** 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出  
**SJ/T 11363-2006** 标准规定的限量要求。

**备注:**  
 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。  
 二、上述部件物质中央处理器、内存、硬盘、电源为选购品。

# Contents

## Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features .....	1-4
1.3 Specifications .....	1-5

## Chapter 2 Hardware Installation

2.1 Jumper and Connector.....	2-2
2.2 Dimension .....	2-5
2.3 USB1,2 (J1) & USB3,4 (J2) Power Selection .....	2-7
2.4 FAN Power Selection (JP1) (For special usage) .....	2-7
2.5 PS2 Keyboard/ Mouse Power Selection (JP2) .....	2-7
2.6 RTC Battery Selection (JP3) .....	2-7
2.7 COM1, COM3, COM4 Pin 9 Selection (JP6, JP4, JP5) .....	2-7
2.8 COM2 RS-232/422/485 Selection.....	2-8
2.9 COM2 RS-232/422/485 Serial Port Connector .....	2-8
2.10 Hard Disk Drive Installation.....	2-9
2.11 PCI Card Installation .....	2-15
2.12 Wallmount Kit Installation.....	2-19

## Chapter 3 Award BIOS Setup

3.1 System Test and Initialization. ....	3-2
3.2 Award BIOS Setup .....	3-3

**Chapter 4 Driver Installation**

4.1 Installation .....	4-3
------------------------	-----

**Appendix A Programming The Watchdog Timer**

A.1 Programming .....	A-2
A.2 IT8712 Watchdog Timer Initial Program .....	A-6

**Appendix B I/O Information**

B.1 I/O Address Map .....	B-2
B.2 1 <sup>st</sup> MB Memory Address Map .....	B-3
B.3 IRQ Mapping Chart .....	B-4
B.4 DMA Channel Assignments .....	B-4

Chapter

1

**General  
Information**

## 1.1 Introduction

---

The AEC-6911 BOXER α Advanced Embedded Control system continues the BOXER design concept but focuses on the fast expanding Machine Automation market. The AEC-6911 can provide two PCI slots for expansion. Therefore AEC-6911's expandable function, compact size combined with fanless design and highly efficient heat conduction mechanism can fulfill any rugged technical application in industrial automation, factory control, test instrumentation and safety surveillance.

### Low Power Consumption Design

Intel's® Atom™ N270 1.6GHz processor combined with fanless design and high performance is widely acceptable and dependable in this market. USB 2.0, Ethernet and 4 Serial ports allow communication with diverse devices with a high transfer rate. Furthermore, the AEC-6911 can concurrently support both tiers of expansion interfaces – PCI and PCMCIA. These interfaces are fully integrated within the BOXER series and allow an upgrade to their usefulness. It is a leading-edge thermal and vibration design (up to 55°C operation and 5g rms vibration) and also an innovation for Machine Automation in the IPC industry. AEC-6911 plays a role in connecting all subsystems in common

applications. AA EON not only enhances your competitive value but also gives you an excellent solution for the future.

### **Strict Quality Control Process**

AA EON retains the perfect product design and management team. Our Quality Control through multiple level experience and test has earned a good reputation in IPC field. AA EON's whole product series are subjected to high-level standards which make them our best guarantee and assurance to customers. Excellent product quality will always be AA EON's best advertisement.

### **24-hour FAE System**

AA EON's e-RMA and e-FAE 24-hour a day systems for all customers' prompt request was formally launched in 2005. No matter if it is a holiday or weekend; we can handle all kinds of requests and give you a satisfactory response in 10 days. AA EON is proud of our quick service and professional teamwork to provide our customers with continual support.

Great design, great value and great service are hallmarks of the AA EON BOXER embedded control PCs. There really is no other choice for your application than AA EON if you want the best performance and best value!

## 1.2 Features

---

- Fanless Design with Intel® Atom™ N270 1.6GHz Processor
- Supports 2 PCI slots for expansion
- PCMCIA x 2
- Gigabit Ethernet
- COM x 4, USB 2.0 x 4, RJ-45 x 2
- Operating Temperature: -15°C~55°C(CFD); -15°C~50°C (HDD)
- Anti-vibration up to 5g rms / Anti-shock up to 50 G
- Low Power Consumption

## 1.3 Specifications

---

### System

- CPU Intel® Atom™ N270 1.6GHz Processor
- System Memory DDR2 SDRAM SODIMM x 1, Max. 2 GB
- Expansion PCI slot x 2, PCMCIA x 2
- VGA DB-15 VGA connector,  
Max. Resolution: 2048x1536
- Keyboard/Mouse PS/2 Keyboard & Mouse
- Ethernet 10/100/1000Base-TX;  
RJ-45 Connector x 2
- SSD CompactFlash™ slot x 1
- Device Bay Internal 2.5" Slim HDD Bay
- Serial Port RS-232 x 3, RS-232/422/485 x 1
- Audio Line-in / Line-out / MIC-in by external cable
- USB 4 USB 2.0 ports
- Watchdog Timer Generates a time-out system reset,  
setting via software
- Power Supply 1. DC Input -- Internal DC-DC onverter  
(Default)  
Input voltage: DC 9V/1.91A~ DC  
30V/0.69A  
2. AC Input -- External Power Adapter

(Optional)

Input voltage: 100V AC ~ 240V AC @  
50 ~ 60Hz

- System Control      Power on / off switch x 1; Reset button x 1
- Indicators            Power LED x 1; HDD active LED x 1

**Mechanical and Environmental**


- Construction        Rugged Aluminum Alloy chassis
- Color                 Mustard
- Mounting            Wallmount
- Dimension           8.4”(W) x 4.1”(H) x 9.4”(D)  
(214mm x 104.3mm x 237.8mm)
- Net Weight          12.4 lb (5.63 kg)
- Operating            5°F ~ 131°F (-15°C~55°C) (CFD)  
Temperature          5°F ~ 122°F (-15°C~50°C) (HDD)
- Storage              5~90%@40°C, non-condensing  
Humidity
- Vibration            5g rms / 5~500Hz / random  
operation (CFD); 1g rms / 5~500Hz /  
random operation (Internal HDD  
active Module)
- Shock                50G peak acceleration (11msec.  
duration)(CFD)  
20G peak acceleration (11 msec.

duration) (HDD)


- EMC

CE/FCC class A

## Front side

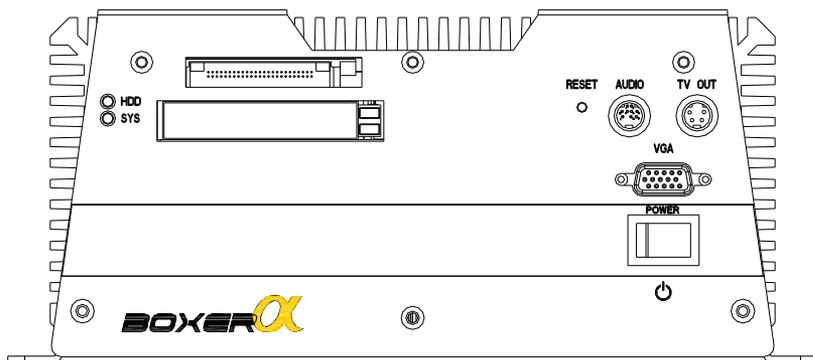

## Rear Side

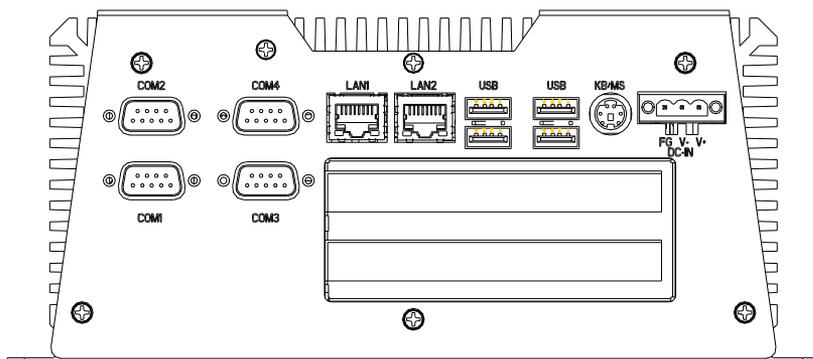


Chapter


2

# Hardware Installation


## 2.1 Jumper and Connector

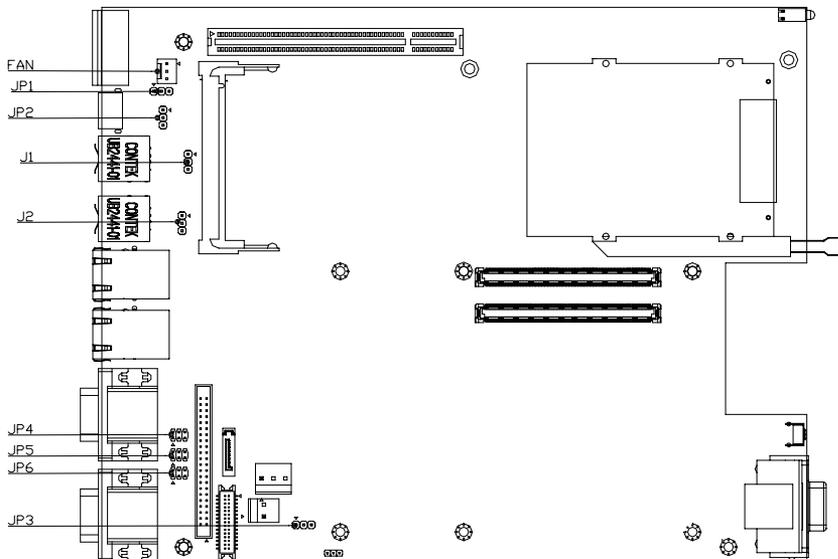


### JP1

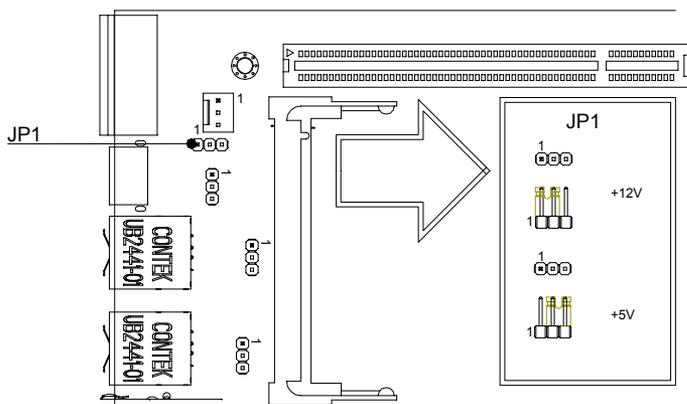


JP2

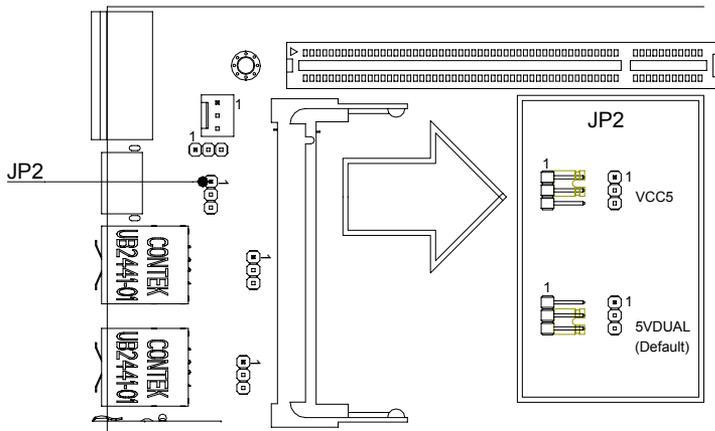


JP3

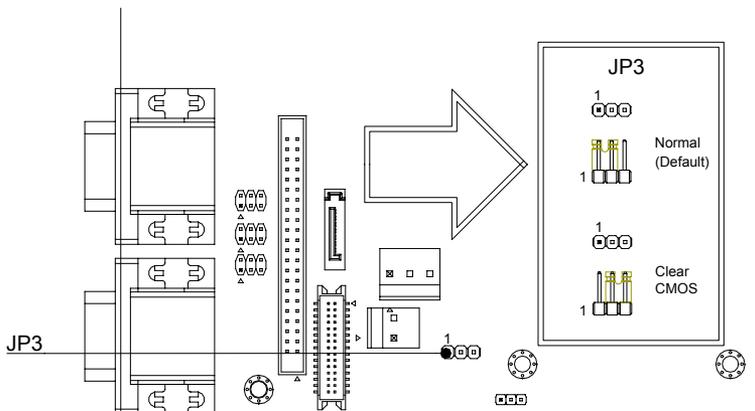


JP4/JP5/JP6

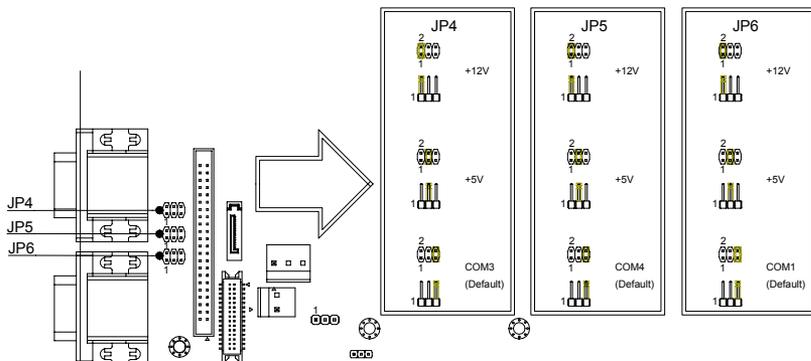


J1/J2

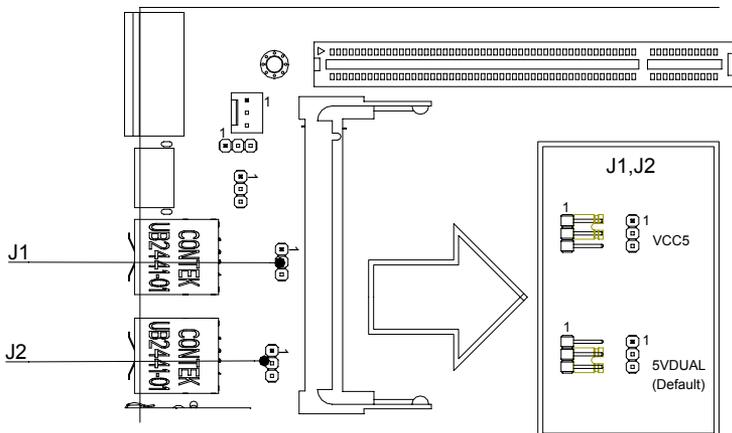

## 2.2 Dimension

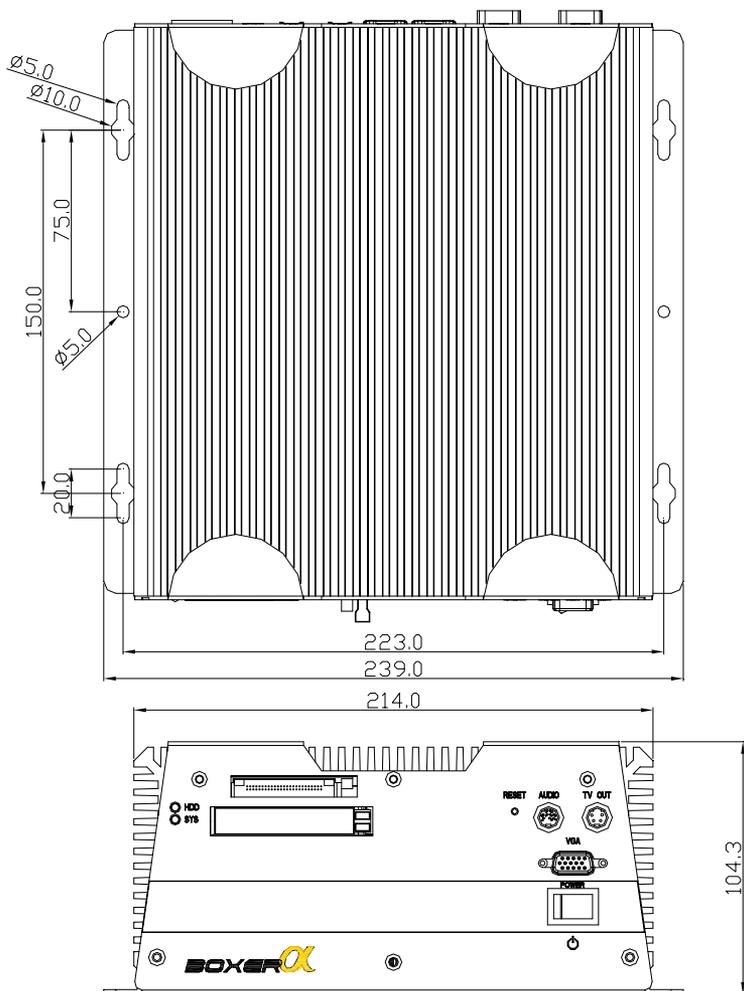

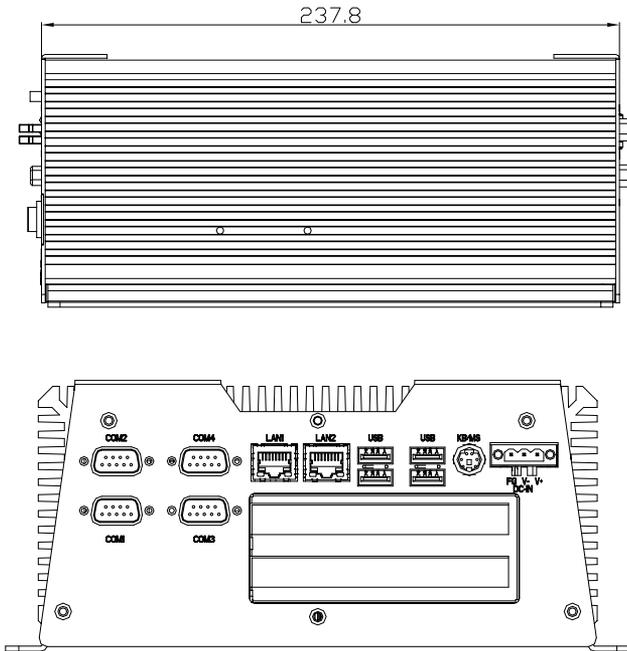

### 2.3 USB1, 2 (J1) & USB3, 4 (J2) Power Selection

---

J1	Function
1-2	Normal → VCC5
2-3	Standby (Default) → 5VDUAL

J2	Function
1-2	Normal → VCC5
2-3	Standby (Default) → 5VDUAL

### 2.4 FAN Power Selection (JP1) (For special usage)

---

JP1	Function
1-2	+12V
2-3	+5V

### 2.5 PS2 Keyboard/ Mouse Power Selection (JP2)

---

JP2	Function
1-2	Normal → VCC5
2-3	Standby (Default) → 5VDUAL

### 2.6 RTC Battery Selection (JP3)

---

JP3	Function
1-2	Normal (Default)
2-3	Clear CMOS

### 2.7 COM1, COM3, COM4, Pin 9 Selection (JP6, JP4, JP5)

---

JP6	Function
1-2	+12V
3-4	+5V

---

5-6	RI for COM1 (Default)
-----	-----------------------

---

JP4	Function
1-2	+12V
3-4	+5V
5-6	RI for COM3 (Default)

---

JP5	Function
1-2	+12V
3-4	+5V
5-6	RI for COM4 (Default)

---

## 2.8 COM2 RS-232/422/485 Selection

---


COM2 RS-232/422/485 selection for AAeon BOXER α series is set in BIOS setting as following:

*Entering BIOS Setting Menu: Choose "Integrated Peripherals → Super IO device → COM2 select". (Default setting is at "RS-232")*

## 2.9 COM2 RS-232/422/485 Serial Port Connector

---

Different devices implement the RS-232/422/485 standard in different ways. If you have problems with a serial device, check the pin assignments below for the connector.

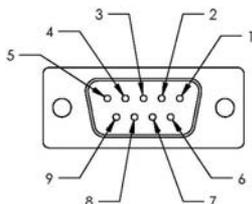


Pin	Signal	Pin	Signal
1	DCD (422TXD-/485DATA-)	2	RXD (422RXD+)
3	TXD (422TXD+/485DATA+)	4	DTR (422RXD-)
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	N.C.

## 2.10 Hard Disk Drive Installation


### Disassemble the AEC-6911

For Hard Disk Drive (HDD) installation, you have to disassemble the bottom lid of AEC-6911 and some components and covers in the AEC-6911.


Step 1: Unfasten the two screws on the rear panel.

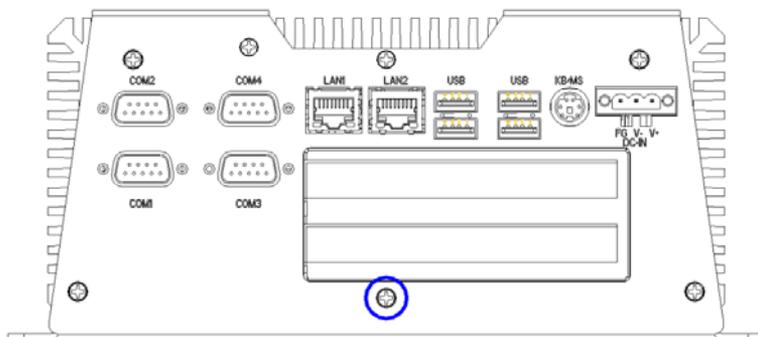

Step 2: Unfasten the screws in blue circle on the front panel.

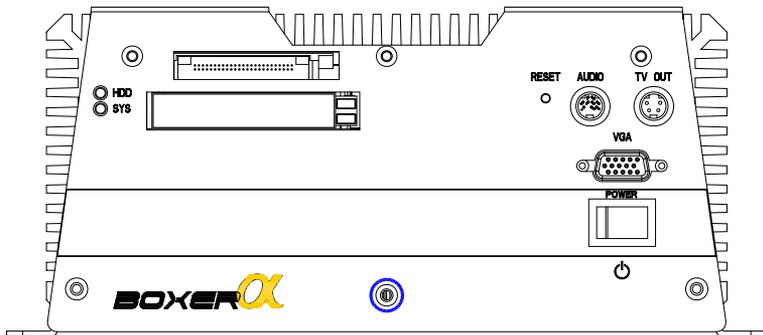


Step 3: Unfasten the six screws on the bottom lid.

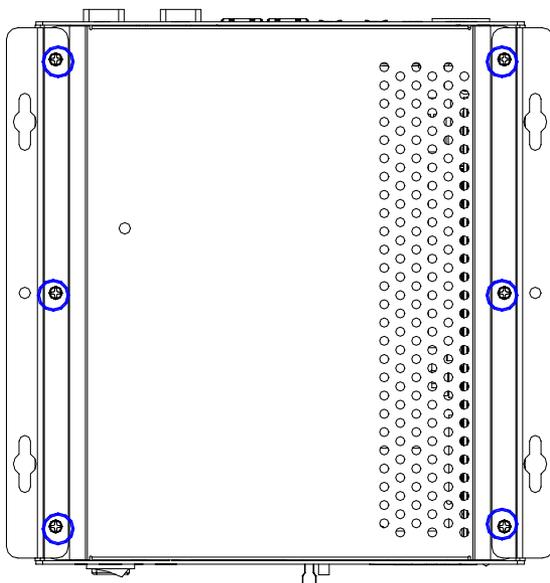


### Assemble the HDD Module

After disassembling the AEC-6911, you have to get the HDD module ready for the proceeding installation.


Step 1: Fasten the four HDD screws and cover with the four black damper

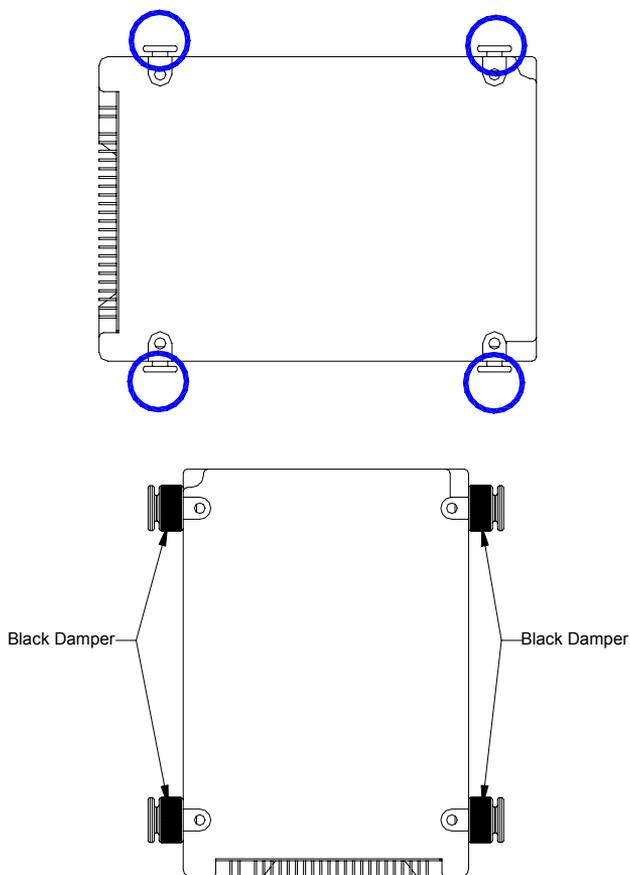

**Step 2:** Assembly the HDD chassis

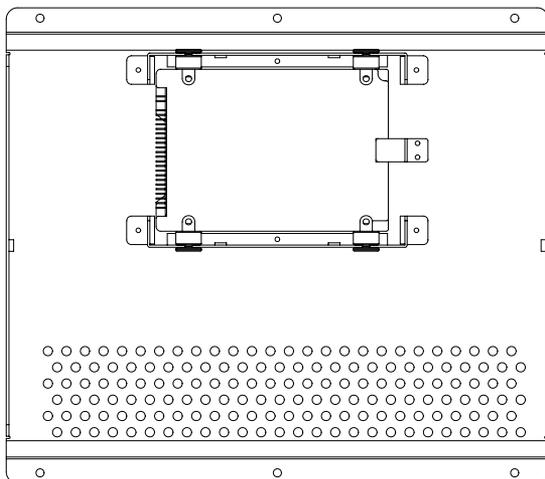


**Step 3:** Assembly the damper bracket

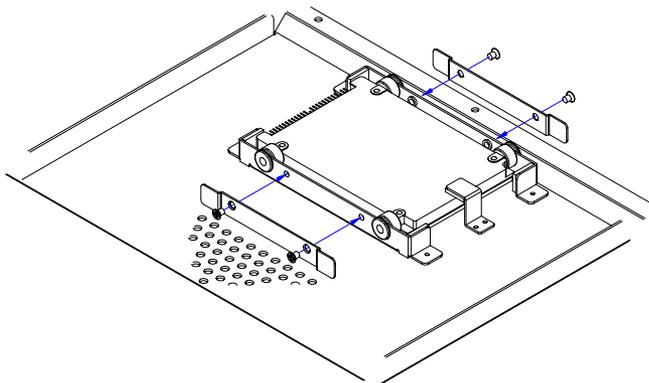


Step 4:


Connect the HDD cable (for IDE Type HDD)

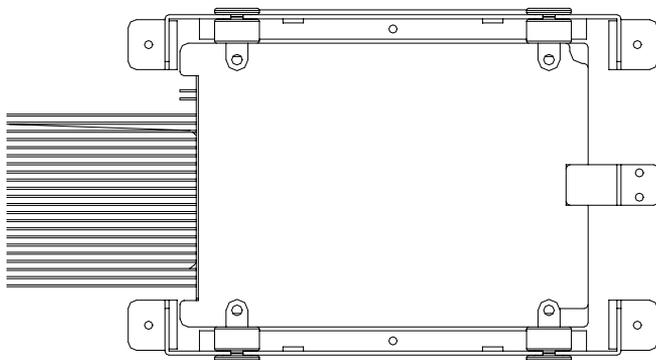


Connect the HDD cable (for SATA Type HDD)

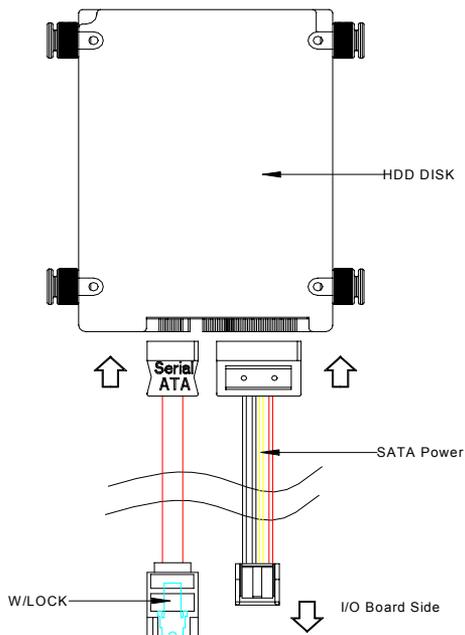


Step 5: Fasten the six screws on the back of the AEC-6911

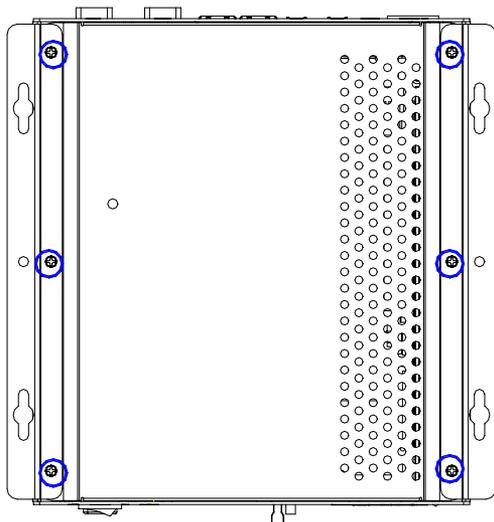

Step 6: Fasten the screw

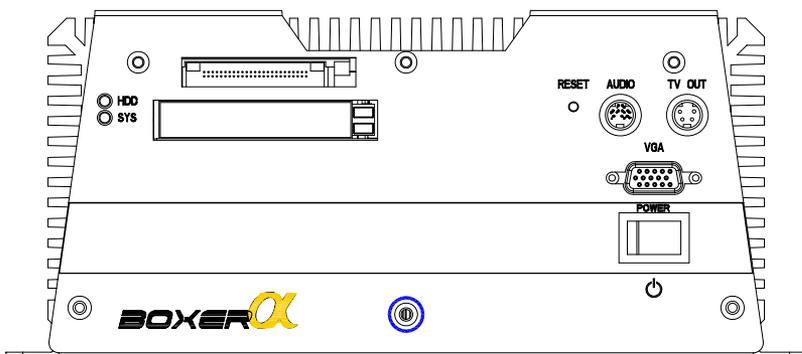


Step 7: Fasten the screw

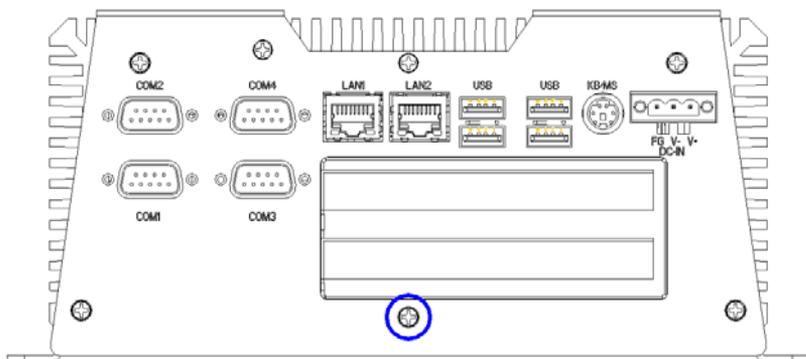


## 2.11 PCI Card Installation


Step 1: Unfasten the screw on the front panel.

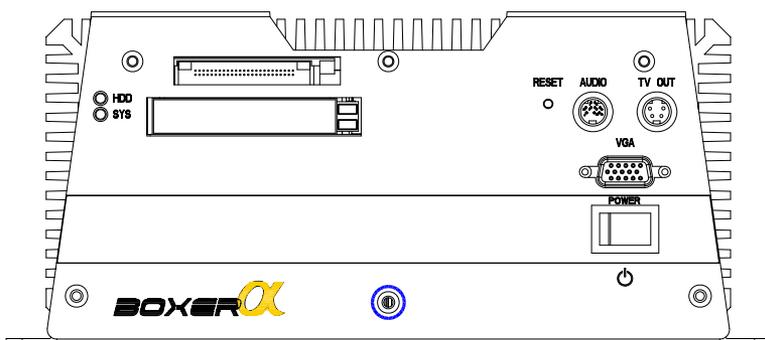


Step 2: Unfasten the screw on the rear panel.

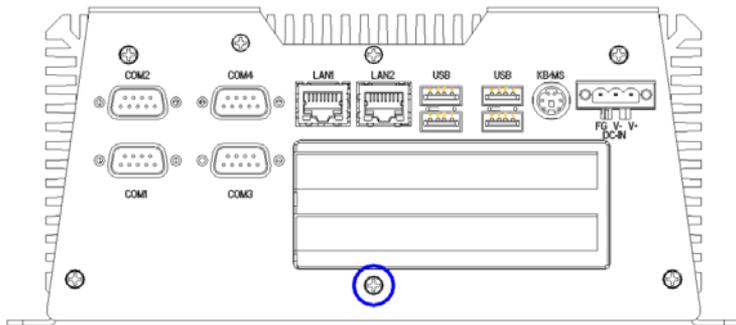


Step 3: Unfasten the six screws on the bottom lid.

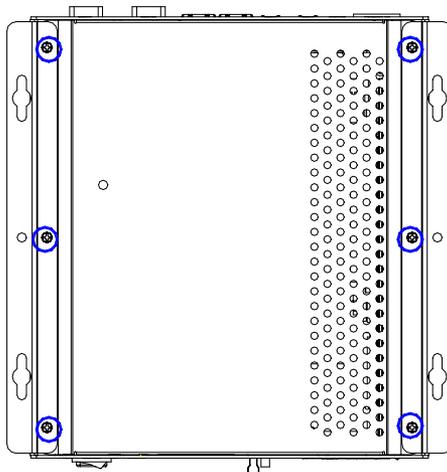


Step 4: Remove the screw with your finger and get the PCI card ready to install. You should keep the shield and screw for use later.

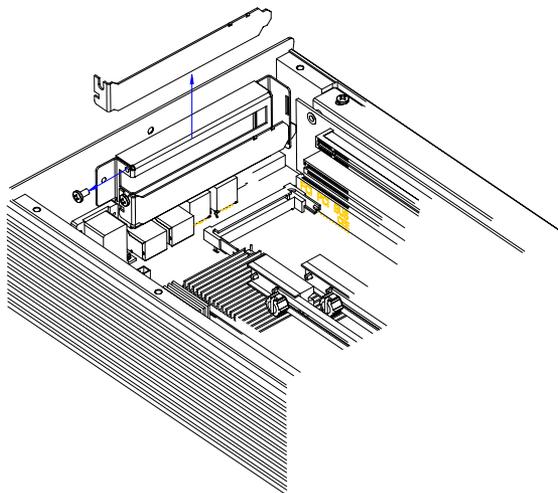


Step 5: Insert the PCI card into the PCI slot and reattach the screw.

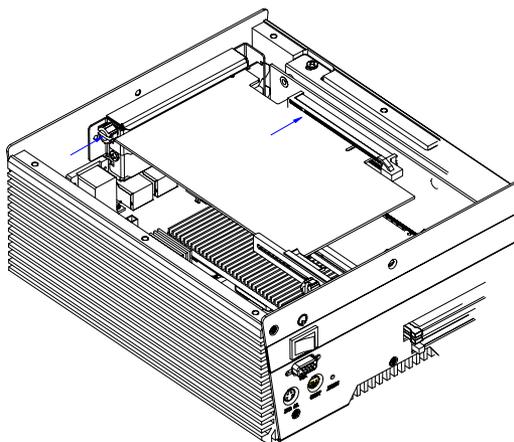



Step 6: Unfasten the screws and push the tenon to lock the PCI card in position.

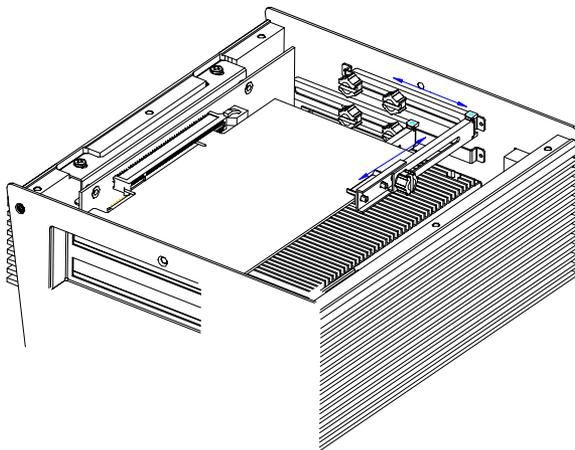

Step 7: Close the bottom lid of the AEC-6911 and fasten six screws on bottom lid.



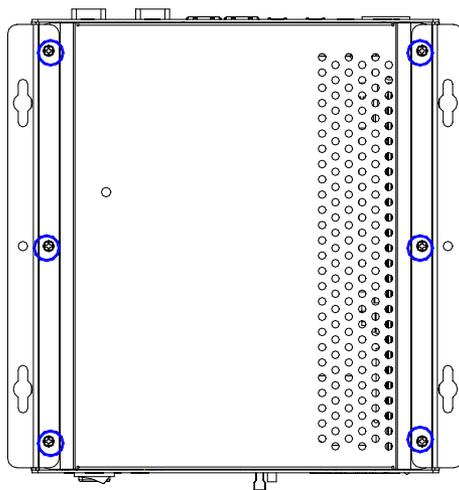


**Step 8:** Fasten the one screw on the rear panel and one screw on the front panel

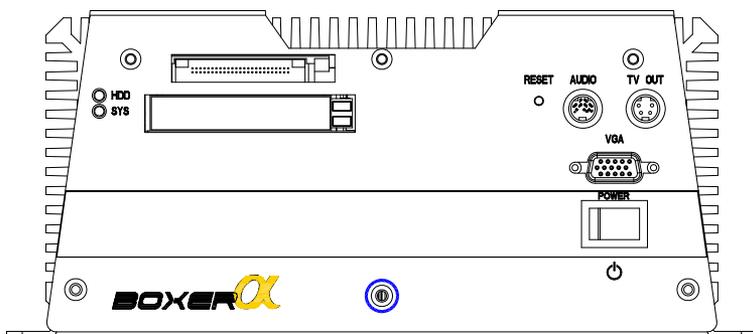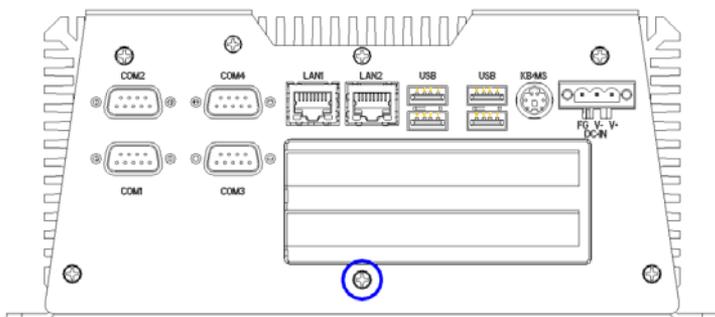

## 2.12 Wallmount kit Installation

**Step 1:** Get the brackets ready and fasten appropriate three screws on each bracket. After fastening the two brackets on the bottom lid of AEC-6911, the wallmount kit installation is finished

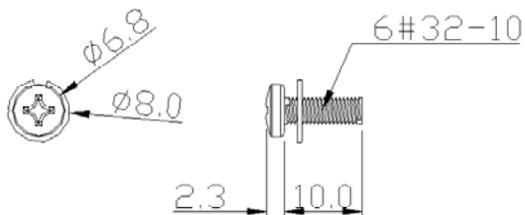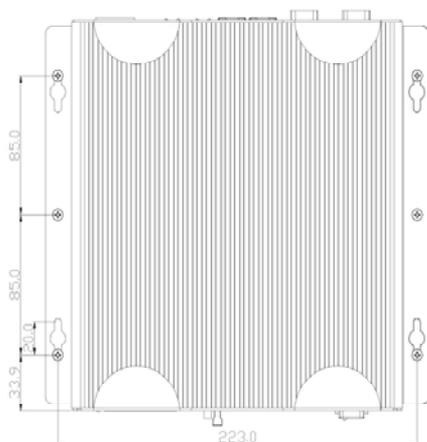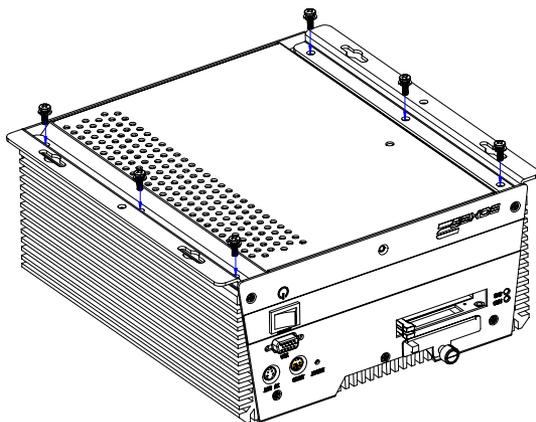

Chapter

3

**Award  
BIOS Setup**

### 3.1 System Test and Initialization

---

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

Press <F1> to RESUME

Write down the message and press the F1 key to continue the boot up sequence.

#### **System configuration verification**

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The AEC-6911 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

## 3.2 Award BIOS Setup

---

Awards BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

### Entering Setup

Power on the computer and press <Del> immediately. This will allow you to enter Setup.

### Standard CMOS Features

Use this menu for basic system configuration. (Date, time, IDE, etc.)

### Advanced BIOS Features

Use this menu to set the advanced features available on your system.

### Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system performance.

### Integrated Peripherals

Use this menu to specify your settings for integrated peripherals. (Primary slave, secondary slave, keyboard, mouse etc.)

**Note:** COM3, COM 4 cannot support LapLink V.5.0(LL5)

### Power Management Setup

Use this menu to specify your settings for power management. (HDD power down, power on by ring, KB wake up, etc.)

### PnP/PCI Configurations

This entry appears if your system supports PnP/PCI.

## **PC Health Status**

This menu allows you to set the shutdown temperature for your system.

## **Frequency/Voltage Control**

Use this menu to specify your settings for auto detect DIMM/PCI clock and spread spectrum.

## **Load Fail-Safe Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

## **Load Optimized Defaults**

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While AWARD has designated the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

## **Set Supervisor/User Password**

Use this menu to set Supervisor/User Passwords.

## **Save and Exit Setup**

Save CMOS value changes to CMOS and exit setup.

## **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

**You can refer to the "AAEON BIOS Item Description.pdf" file in the CD for the meaning of each setting in this chapter.**

Chapter

4

**Driver  
Installation**

The AEC-6911 comes with a CD-ROM that contains all drivers and utilities that meet your needs.

***Follow the sequence below to install the drivers:***

Step 1 – Install INF Driver

Step 2 – Install VGA Driver

Step 3 – Install LAN Driver

Step 4 – Install Audio Driver

USB 2.0 Drivers are available for download using Windows Update for both Windows XP and Windows 2000. For additional information regarding USB 2.0 support in Windows XP and Windows 2000, please visit [www.microsoft.com/hwdev/usb/](http://www.microsoft.com/hwdev/usb/).

Please read instructions below for further detailed installations.

## 4.1 Installation

---

Insert the AEC-6911 CD-ROM into the CD-ROM Drive. The Autorun program will run automatically. You also can choose the drivers to install from step 1 to step 4 in order as following instructions.

### Step 1 – Install INF Driver

1. Click on the **Step 1-INF** folder and then double click on the **Setup.exe**
2. Follow the instructions that the window will show you
3. The system will help you install the driver automatically

### Step 2 – Install VGA Driver

1. Click on the **Step 2-VGA** folder and select the OS folder your system is
2. Double click on the **Setup.exe** located in each OS folder
3. Follow the instructions that the window shows you
4. The system will help you install the driver automatically

### **Caution:**

In AAEON products with Intel embedded graphics chipset, when system booting before CRT / LCD monitor has disconnected to VGA, it will cause Intel graphics chipset automatically detected without CRT / LCD connection and set CRT output to disable. Therefore, CRT / LCD screen will go black and never recovered on Windows.

Because it's a limitation on application for Intel embedded graphics driver under Windows XP. Therefore, there is a simply way to recover CRT / LCD

---

output through Hot-Key function by Intel suggestion as follows:

You need to press <CTRL><ALT><F1> key simultaneously to recover VGA output again. This hot-key function is only in the Windows driver version 6.14.10.4497 or later.

### Step 3 – Install LAN Driver

1. Click on the **Step 3-LAN** folder and select the OS folder your system is
2. Double click on the **.exe** file located in each OS folder
3. Follow the instructions that the window shows you
4. The system will help you install the driver automatically

### Step 4 – Install Audio Driver

1. Click on the **Step 4-AC97** folder and then click on the folder of **Win98ME2KXP**
2. Double click on the **wdm\_a371.exe**
3. Follow the instructions that the window shows you
4. The system will help you install the driver automatically

#### **Note:**

Under the Window OS environment, if the CRT connector is connected to display monitor by the data switch device, the user need to set the color and resolution from Intel Graphic utility (VGA driver) instead of setting from the control panel in case of the wrong display appearance.

Appendix

**A**

# Programming the Watchdog Timer


## A.1 Programming

AEC-6911 utilizes ITE 8712 chipset as its watchdog timer controller.

Below are the procedures to complete its configuration and the AAeon initial watchdog timer program is also attached based on which you can develop customized program to fit your application.

### Configuring Sequence Description

After the hardware reset or power-on reset, the ITE 8712 enters the normal mode with all logical devices disabled except KBC. The initial state (enable bit) of this logical device (KBC) is determined by the state of pin 121 (DTR1#) at the falling edge of the system reset during power-on reset.

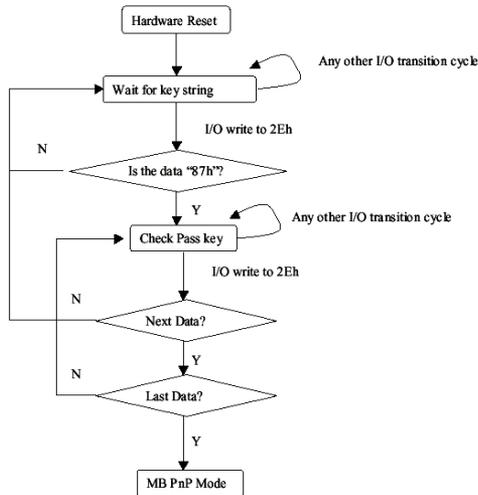

There are three steps to complete the configuration setup: (1) Enter the MB PnP Mode; (2) Modify the data of configuration registers; (3) Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.

### (1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to be performed during Wait for Key state. To ensure the initial state of the key-check logic, it is necessary to perform four write operations to the Special Address port (2EH). Two different enter keys are provided to select configuration ports (2Eh/2Fh) of the next step.

	Address Port	Data Port
87h, 01h, 55h, 55h:	2Eh	2Fh

### (2) Modify the Data of the Registers

All configuration registers can be accessed after entering the MB PnP Mode. Before accessing a selected register, the content of Index 07h must be changed to the LDN to which the register belongs, except some Global registers.

### (3) Exit the MB PnP Mode

Set bit 1 of the configure control register (Index=02h) to 1 to exit the MB PnP Mode.

## WatchDog Timer Configuration Registers

LDN	Index	R/W	Reset	Configuration Register or Action
All	02H	W	N/A	Configure Control
07H	71H	R/W	00H	WatchDog Timer Control Register
07H	72H	R/W	00H	WatchDog Timer Configuration Register
07H	73H	R/W	00H	WatchDog Timer Time-out Value Register

### Configure Control (Index=02h)

This register is write only. Its values are not sticky; that is to say, a hardware reset will automatically clear the bits, and does not require the software to clear them.

Bit	Description
7-2	Reserved
1	Returns to the Wait for Key state. This bit is used when the configuration sequence is completed
0	Resets all logical devices and restores configuration registers to their power-on states.

### WatchDog Timer Control Register (Index=71h, Default=00h)

Bit	Description
7	WDT is reset upon a CIR interrupt
6	WDT is reset upon a KBC (mouse) interrupt
5	WDT is reset upon a KBC (keyboard) interrupt
4	WDT is reset upon a read or a write to the Game Port base address
3-2	Reserved
1	Force Time-out. This bit is self-clearing
0	WDT Status
	1: WDT value reaches 0.
	0: WDT value is not 0

**WatchDog Timer Configuration Register (Index=72h,****Default=00h)**

<b>Bit</b>	<b>Description</b>
7	WDT Time-out value select
	1: Second
	0: Minute
6	WDT output through KRST (pulse) enable
5-4	Reserved
3-0	Select the interrupt level <sup>Note</sup> for WDT

**WatchDog Timer Time-out Value Register (Index=73h,****Default=00h)**

<b>Bit</b>	<b>Description</b>
7-0	WDT Time-out value 7-0

## A.2 IT8712 Watchdog Timer Initial Program

---

```
.MODEL SMALL
```

```
.CODE
```

Main:

```
CALL Enter_Configuration_mode
```

```
CALL Check_Chip
```

```
mov cl, 7
```

```
call Set_Logic_Device
```

```
;time setting
```

```
mov cl, 10 ; 10 Sec
```

```
dec al
```

Watch\_Dog\_Setting:

```
;Timer setting
```

```
mov al, cl
```

```
mov cl, 73h
```

```
call Superio_Set_Reg
```

```
;Clear by keyboard or mouse interrupt
```

```
mov al, 0f0h
```

```
mov cl, 71h
```

```
call Superio_Set_Reg
```

```
;unit is second.
```

```
mov al, 0C0H
```

```
mov cl, 72h
```

```
call Superio_Set_Reg
```

```
; game port enable
mov cl, 9
call Set_Logic_Device
```

```
Initial_OK:
CALL Exit_Configuration_mode
MOV AH,4Ch
INT 21h
```

```
Enter_Configuration_Mode PROC NEAR
MOV SI,WORD PTR CS:[Offset Cfg_Port]
```

```
MOV DX,02Eh
MOV CX,04h
Init_1:
MOV AL,BYTE PTR CS:[SI]
OUT DX,AL
INC SI
LOOP Init_1
RET
Enter_Configuration_Mode ENDP
```

```
Exit_Configuration_Mode PROC NEAR
MOV AX,0202h
CALL Write_Configuration_Data
```

RET

Exit\_Configuration\_Mode ENDP

Check\_Chip PROC NEAR

MOV AL,20h

CALL Read\_Configuration\_Data

CMP AL,87h

JNE Not\_Initial

MOV AL,21h

CALL Read\_Configuration\_Data

CMP AL,12h

JNE Not\_Initial

Need\_Initial:

STC

RET

Not\_Initial:

CLC

RET

Check\_Chip ENDP

Read\_Configuration\_Data PROC NEAR

MOV DX,WORD PTR CS:[Cfg\_Port+04h]

OUT DX,AL

```
MOV DX,WORD PTR CS:[Cfg_Port+06h]
IN AL,DX
RET
Read_Configuration_Data ENDP
```

```
Write_Configuration_Data PROC NEAR
MOV DX,WORD PTR CS:[Cfg_Port+04h]
OUT DX,AL
XCHG AL,AH
MOV DX,WORD PTR CS:[Cfg_Port+06h]
OUT DX,AL
RET
Write_Configuration_Data ENDP
```

```
Superio_Set_Reg proc near
push ax
MOV DX,WORD PTR CS:[Cfg_Port+04h]
mov al,cl
out dx,al
pop ax
inc dx
out dx,al
ret
Superio_Set_Reg endp.Set_Logic_Device proc near
Set_Logic_Device proc near
```

```
push ax
push cx
xchg al,cl
mov cl,07h
call Superio_Set_Reg
pop cx
pop ax
ret
Set_Logic_Device endp

;Select 02Eh->Index Port, 02Fh->Data Port
Cfg_Port DB 087h,001h,055h,055h
```

```
DW 02Eh,02Fh
```

## END Main

*Note: Interrupt level mapping*

0Fh-Dh: not valid

0Ch: IRQ12

.

.

03h: IRQ3

02h: not valid

01h: IRQ1

00h: no interrupt selected

Appendix

**B**

# I/O Information

## B.1 I/O Address Map

Address Range	Device Name
[00000000 - 0000000F]	Direct memory access controller
[00000000 - 00000CF7]	PCI bus
[00000010 - 0000001F]	Motherboard resources
[00000020 - 00000021]	Programmable interrupt controller
[00000022 - 0000003F]	Motherboard resources
[00000040 - 00000043]	System timer
[00000044 - 0000004D]	Motherboard resources
[00000050 - 0000005E]	Motherboard resources
[00000061 - 00000061]	System speaker
[00000062 - 00000063]	Motherboard resources
[00000065 - 0000006F]	Motherboard resources
[00000070 - 00000073]	System CMOS/real time clock
[00000074 - 0000007F]	Motherboard resources
[00000080 - 00000090]	Direct memory access controller
[00000091 - 00000093]	Motherboard resources
[00000094 - 0000009F]	Direct memory access controller
[000000A0 - 000000A1]	Programmable interrupt controller
[000000A2 - 000000BF]	Motherboard resources
[000000C0 - 000000DF]	Direct memory access controller
[000000E0 - 000000EF]	Motherboard resources
[000000F0 - 000000FF]	Numeric data processor
[000001F0 - 000001F7]	Primary IDE Channel
[00000274 - 00000277]	ISA/PNP Read Data Port
[00000279 - 00000279]	ISA/PNP Read Data Port
[00000290 - 0000029F]	Motherboard resources
[000002E0 - 000002E7]	Communications Port (COM4)
[000002F0 - 000002F7]	Communications Port (COM3)
[000002F8 - 000002FF]	Communications Port (COM2)
[00000380 - 000003BF]	Mobile Intel(R) 945 Express Chipset Family
[000003C0 - 000003DF]	Mobile Intel(R) 945 Express Chipset Family
[000003F6 - 000003F6]	Primary IDE Channel
[000003F8 - 000003FF]	Communications Port (COM1)
[00000400 - 000004BF]	Motherboard resources
[000004D0 - 000004D1]	Motherboard resources
[00000500 - 0000051F]	Intel(R) 82801G (ICH7 Family) SMBus Controller - 27DA
[00000680 - 000006BF]	Motherboard resources
[000002E0 - 000002E7]	Communications Port (COM4)
[000002F0 - 000002F7]	Communications Port (COM3)
[000002F8 - 000002FF]	Communications Port (COM2)
[00000380 - 000003BF]	Mobile Intel(R) 945 Express Chipset Family
[000003C0 - 000003DF]	Mobile Intel(R) 945 Express Chipset Family
[000003F6 - 000003F6]	Primary IDE Channel
[000003F8 - 000003FF]	Communications Port (COM1)
[00000400 - 000004BF]	Motherboard resources
[000004D0 - 000004D1]	Motherboard resources
[00000500 - 0000051F]	Intel(R) 82801G (ICH7 Family) SMBus Controller - 27DA
[00000680 - 000006BF]	Motherboard resources
[00000690 - 0000069F]	Motherboard resources
[00000A79 - 00000A79]	ISA/PNP Read Data Port
[00000D00 - 0000FFFF]	PCI bus
[00008000 - 00008FFF]	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D2
[00008F00 - 00008F1F]	Intel(R) PRO/1000 PL Network Connection
[0000C000 - 0000CFFF]	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D0
[0000CF00 - 0000CF1F]	Intel(R) 82574L Gigabit Network Connection
[0000EF00 - 0000EFFF]	Texas Instruments PCI-1520 CardBus Controller
[0000F000 - 0000F0FF]	Realtek AC'97 Audio
[0000F100 - 0000F1FF]	Texas Instruments PCI-1520 CardBus Controller
[0000F200 - 0000F2FF]	Texas Instruments PCI-1520 CardBus Controller
[0000F300 - 0000F30F]	Intel(R) 82801GMB/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
[0000F400 - 0000F403]	Intel(R) 82801GMB/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
[0000F500 - 0000F507]	Intel(R) 82801GMB/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
[0000F600 - 0000F603]	Intel(R) 82801GMB/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
[0000F700 - 0000F707]	Intel(R) 82801GMB/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
[0000F800 - 0000F80F]	Intel(R) 82801G (ICH7 Family) Ultra ATA Storage Controller - 27DF
[0000F900 - 0000F9FF]	Texas Instruments PCI-1520 CardBus Controller
[0000FA00 - 0000FA3F]	Realtek AC'97 Audio
[0000FB00 - 0000FB1F]	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CB
[0000FC00 - 0000FC1F]	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CA
[0000FD00 - 0000FD1F]	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C9
[0000FE00 - 0000FE1F]	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C8
[0000FF00 - 0000FF07]	Mobile Intel(R) 945 Express Chipset Family

## B.2 1<sup>st</sup> MB Memory Address Map

Address Range	Device
[00000000 - 0009FFFF]	System board
[000A0000 - 000BFFFF]	Mobile Intel(R) 945 Express Chipset Family
[000A0000 - 000BFFFF]	PCI bus
[000C0000 - 000DFFFF]	PCI bus
[000DE000 - 000DEFFF]	Texas Instruments PCI-1520 CardBus Controller
[000DF000 - 000DFFFF]	Texas Instruments PCI-1520 CardBus Controller
[000E0000 - 000EFFFF]	System board
[000F0000 - 000FFFFF]	System board
[00100000 - 1F6DFFFF]	System board
[1F6E0000 - 1F6FFFFF]	System board
[1F750000 - FEBFFFFF]	PCI bus
[C0000000 - CFFFFFFF]	Mobile Intel(R) 945 Express Chipset Family
[DFFFD000 - DFFFDFFF]	Texas Instruments PCI-1520 CardBus Controller
[DFFFF000 - DFFFFFFF]	Texas Instruments PCI-1520 CardBus Controller
[E0000000 - EFFFFFFF]	Motherboard resources
[F5900000 - F98FFFFF]	Texas Instruments PCI-1520 CardBus Controller
[F9900000 - FD8FFFFF]	Texas Instruments PCI-1520 CardBus Controller
[FD900000 - FD9FFFFF]	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D2
[FDA00000 - FDAFFFFF]	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D2
[FDAE0000 - FDAFFFFF]	Intel(R) PRO/1000 PL Network Connection
[FDB00000 - FDBFFFFF]	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D0
[FDD00000 - FDDFFFFF]	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D0
[FDDC0000 - FDDDFFFF]	Intel(R) 82574L Gigabit Network Connection
[FDDFC000 - FDDFFFFF]	Intel(R) 82574L Gigabit Network Connection
[FDF00000 - FDF7FFFF]	Mobile Intel(R) 945 Express Chipset Family
[FDF80000 - FDFBFFFF]	Mobile Intel(R) 945 Express Chipset Family
[FDFFC000 - FDFFC3FF]	Intel(R) 82801GBM/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
[FDFFD000 - FDFFD0FF]	Realtek AC'97 Audio
[FDFFE000 - FDFFE1FF]	Realtek AC'97 Audio
[FDFFF000 - FDFFF3FF]	Intel(R) 82801G (ICH7 Family) USB2 Enhanced Host Controller - 27CC
[FEB80000 - FEBFFFFF]	Mobile Intel(R) 945 Express Chipset Family
[FEC00000 - FEC0FFFF]	System board
[FED13000 - FED1DFFF]	System board
[FED20000 - FED3FFFF]	System board
[FED40000 - FED4FFFF]	PCI bus
[FED43000 - FED43FFF]	Texas Instruments PCI-1520 CardBus Controller
[FED44000 - FED44FFF]	Texas Instruments PCI-1520 CardBus Controller
[FED45000 - FED8FFFF]	System board
[FEE00000 - FEE0FFFF]	System board
[FFB00000 - FFB7FFFF]	System board
[FFB80000 - FFBFFFFF]	Intel(R) 82802 Firmware Hub Device
[FFF00000 - FFFFFFFF]	System board

### B.3 IRQ Mapping Chart

Interrupt request (IRQ)	Device
(ISA) 0	System timer
(ISA) 3	Communications Port (COM2)
(ISA) 4	Communications Port (COM1)
(ISA) 8	System CMOS/real time clock
(ISA) 9	Microsoft ACPI-Compliant System
(ISA) 10	Communications Port (COM3)
(ISA) 11	Communications Port (COM4)
(ISA) 13	Numeric data processor
(ISA) 14	Primary IDE Channel
(PCI) 15	Intel(R) 82801G (ICH7 Family) SMBus Controller - 27DA
(PCI) 16	Intel(R) 82574L Gigabit Network Connection
(PCI) 16	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D0
(PCI) 16	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CB
(PCI) 16	Mobile Intel(R) 945 Express Chipset Family
(PCI) 16	Texas Instruments PCI-1520 CardBus Controller
(PCI) 17	Intel(R) 82801G (ICH7 Family) PCI Express Root Port - 27D2
(PCI) 17	Intel(R) PRO/1000 PL Network Connection
(PCI) 17	Realtek AC'97 Audio
(PCI) 17	Texas Instruments PCI-1520 CardBus Controller
(PCI) 18	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27CA
(PCI) 19	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C9
(PCI) 19	Intel(R) 82801GBM/GHM (ICH7-M Family) Serial ATA Storage Controller - 27C4
(PCI) 23	Intel(R) 82801G (ICH7 Family) USB Universal Host Controller - 27C8
(PCI) 23	Intel(R) 82801G (ICH7 Family) USB2 Enhanced Host Controller - 27CC

### B.4 DMA Channel Assignments

Direct memory access (DMA)	Device
4	Direct memory access controller