



FWS-2290

Desktop Network Appliance

User Manual 1st Ed

Copyright Notice

This document is copyrighted, 2024. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Intel® is a registered trademark of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners. The publisher of this document does not imply nor intent to imply ownership of trademarked properties used in this document but omitted from the list above.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● FWS-2290	1
● Power Adapter	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

产品中有毒有害物质或元素名称及含量

AAEON System

QO4-381 Rev.A0

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯 醚(PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
液晶模块	×	×	○	○	○	○
光驱	×	○	○	○	○	○
触控模块	×	○	○	○	○	○
电源	×	○	○	○	○	○
电池	×	○	○	○	○	○
<p>本表格依据 SJ/T 11364 的规定编制。</p> <p>○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572标准规定的限量要求以下。</p> <p>×：表示该有害物质的某一均质材料超出了GB/T 26572的限量要求，然而该部件仍符合欧盟指令2011/65/EU 的规范。</p> <p>备注： 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。 二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。 三、上述部件物质液晶模块、触控模块仅一体机产品适用。</p>						

China RoHS Requirement (EN)

Hazardous and Toxic Materials List

AAEON System

QO4-381 Rev.A0

Component Name	Hazardous or Toxic Materials or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBBS)	Polybrominated diphenyl ethers (PBDES)
PCB and Components	X	O	O	O	O	O
Wires & Connectors for Ext.Connections	X	O	O	O	O	O
Chassis	O	O	O	O	O	O
CPU & RAM	X	O	O	O	O	O
HDD Drive	X	O	O	O	O	O
LCD Module	X	X	O	O	O	O
Optical Drive	X	O	O	O	O	O
Touch Control Module	X	O	O	O	O	O
PSU	X	O	O	O	O	O
Battery	X	O	O	O	O	O

This form is prepared in compliance with the provisions of SJ/T 11364.

O: The level of toxic or hazardous materials present in this component and its parts is below the limit specified by GB/T 26572.

X: The level of toxic of hazardous materials present in the component exceed the limits specified by GB/T 26572, but is still in compliance with EU Directive 2011/65/EU (RoHS 2).

Notes:

1. The Environment Friendly Use Period indicated by labelling on this product is applicable only to use under normal conditions.
2. Individual components including the CPU, RAM/memory, HDD, optical drive, and PSU are optional.
3. LCD Module and Touch Control Module only applies to certain products which feature these components.

Table of Contents

- Chapter 1 – Product Specifications 1
 - 1.1 Specifications 2
- Chapter 2 – Hardware Information 5
 - 2.1 Dimensions 6
 - 2.2 Jumpers and Connectors 9
 - 2.3 List of Jumpers 11
 - 2.3.1 Clear CMOS (CN2) 11
 - 2.3.2 Manual/Auto Power On (JP1) 11
 - 2.4 List of Connectors 12
 - 2.4.1 CMOS Battery Connector (CN3) 14
 - 2.4.2 M.2 2230 E-Key (CN16) 14
 - 2.4.3 M.2 3052 B-Key (CN18) 16
 - 2.4.4 Fan Connector (CPU_FAN2) 17
 - 2.4.5 SATA Power Connector (CN21) 18
 - 2.4.6 Digital IO Header (CN6) 18
 - 2.4.7 BIOS Flash Connector (CN6) 19
 - 2.4.8 Mini Card (CN15) 19
 - 2.4.9 Mini Card (CN17) 20
 - 2.4.10 Port 80 Connector (LPC1) 22
 - 2.4.11 Case Open Header (CN7) 22
 - 2.4.12 M.2 2242 M-Key (CN22) 23
 - 2.4.13 SATA Connector (CN20) 24
 - 2.4.14 Console Connector (CN28) 25
 - 2.4.15 SIM Card (CN19) 25
 - 2.4.16 USB Type-A Port (CN23) 26
 - 2.5 2.5" SATA Drive Installation 27

Chapter 3 – AMI BIOS Setup	30
3.1 System Test and Initialization	31
3.2 AMI BIOS Setup	32
3.3 Setup Submenu: Main	33
3.4 Setup Submenu: Advanced	34
3.4.1 Graphics Configuration	35
3.4.2 CPU Configuration	36
3.4.3 PCH-FW Configuration	37
3.4.4 Firmware Update Configuration	38
3.4.5 PTT Configuration	39
3.4.6 Hardware Monitor	40
3.4.6.1 Smart Fan Function	41
3.4.7 Power Management	42
3.4.8 LAN Bypass Configuration	43
3.4.9 Case Open Configuration	45
3.4.10 AAEON Simple Flash	46
3.5 Setup Submenu: System I/O	47
3.5.1 Storage Configuration	48
3.5.2 Digital IO Port Configuration	49
3.5.3 Legacy Logical Devices Configuration	50
3.5.4 Serial Port Configuration	51
3.5.5 Serial Port Console Redirection	52
3.5.5.1 COM1 Console Redirection Settings	53
3.6 Setup Submenu: Security	56
3.6.1 Trusted Computing	57
3.6.2 Secure Boot	59
3.6.2.1 Key Management	61
3.7 Setup Submenu: Boot	63

3.8	Setup Submenu: Save & Exit	64
Appendix A – Software Development Kit Information.....		65
A.1	Software Development Kit Support List	66
Appendix B – Glue Removal Procedure		67
B.1	Removing Glue from Your System.....	68

Chapter 1

Product Specifications

1.1 Specifications

System

Form Factor	Desktop Network Appliance
Processor	Intel® Processor N-series Processors (Default: Intel® Processor N97)
Chipset	SoC
System Memory	Onboard LPDDR5, up to 16GB

Network

Ethernet	Intel® Ethernet Controller I226-V, 2.5GbE x 4
Bypass	1 Pair

Display

Graphics Controller	Intel® UHD Graphics
Connector	HDMI x 1 (Optional)

Storage

HDD	-
CF/CFast/mSATA	32G eMMC SATA 6Gb/s x 1

Expansion Interface

PCIe Slot	—
Mini-PCIe Slot	M.2 3052 B-Key (5G, Colay Mini Card with Push-pin SIM for 4G LTE/Wi-Fi) M.2 2230 E-Key (Colay Mini Card slot for Wi-Fi)

Expansion Interface

USB	USB 3.1 (Type-A) x 2 (USB 3.1 signal x 1, USB 2.0 signal x 1 shared with M.2 for LTE)
------------	---

Miscellaneous

RTC	Internal RTC
Watchdog Timer	1~255 steps by software programmable
Software Button	GPIO Programmable Push Button x 1
TPM	TPM 2.0 (SLB9670 VQ2.0 FW7.85, optional)
GPIO	(4-bit Input, 4-bit Output, optional)
Fan	Fan x 1
MTBF (Hours)	TBD
Color	Black

Environmental

Power Consumption	12V Lockable DC Power Input Connector x 1 (40W Power Adapter)
Operating Temperature	32°F ~ 104°F (0°C ~ 40°C)
Storage Temperature	-4°F ~ 140°F (-20°C ~ 60°C)
Operating Humidity	10%~80% relative humidity, non-condensing
Storage Humidity	10%~80% @40°C; non-condensing
Vibration	0.5 Grms/ 5 ~ 500Hz / operation (mSATA) 1.5 Grms/ 5 ~ 500Hz / non-operation
Shock	10 G peak acceleration (11 m sec. duration), operation 20 G peak acceleration (11 m sec. duration), non-operation
Dimension (W x D x H)	6.5" x 3.62" x 1.57" (165mm x 92mm x 40mm)

I/O


Front Panel	Power LED x 1
	Status LED x 1
	Bypass LED x 1
	Storage Active LED x 1
	Ethernet LED x 8
	Antenna Hole x 2
	Accessible SIM Slot x 1
Rear Panel	Lockable DC Power Input Connector x 1
	Power Button x 1
	USB 3.0 x 2 (One port supports USB 2.0 signal only)
	2.5GbE RJ-45 x 4
	RJ-45 Console x 1
	Reset Button x 1
	Antenna Hole x 2

Chapter 2


Hardware Information

2.1 Dimensions


System

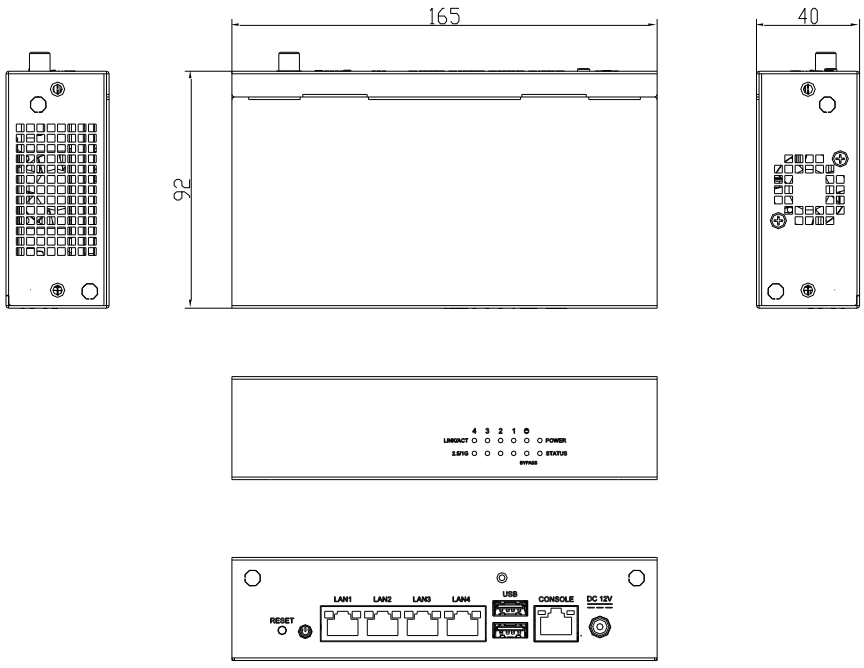

Board Top

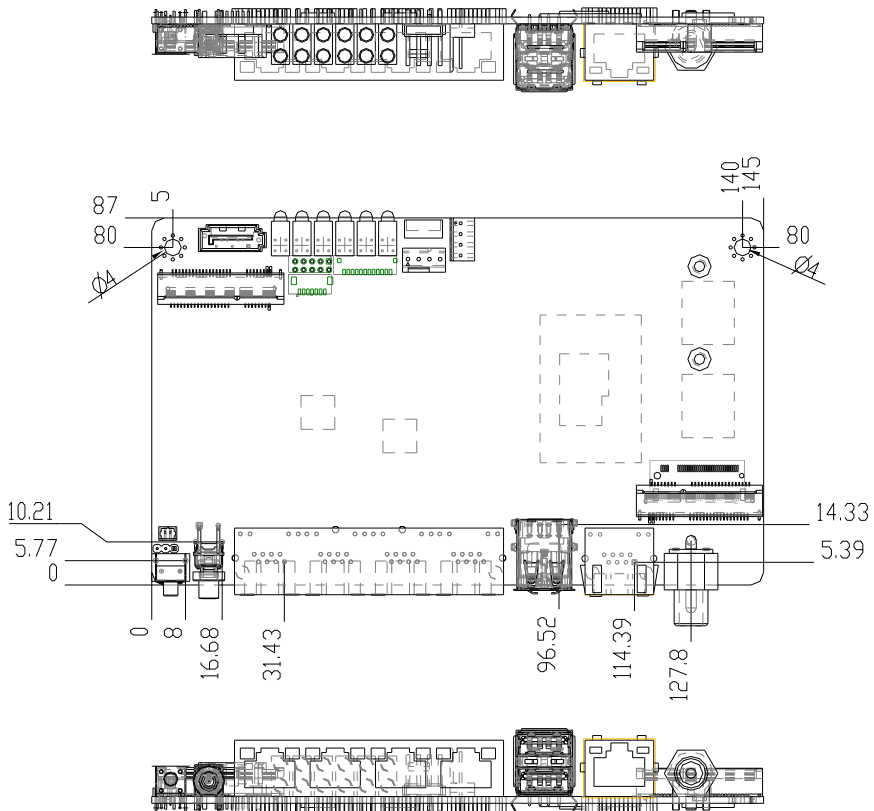


Bottom

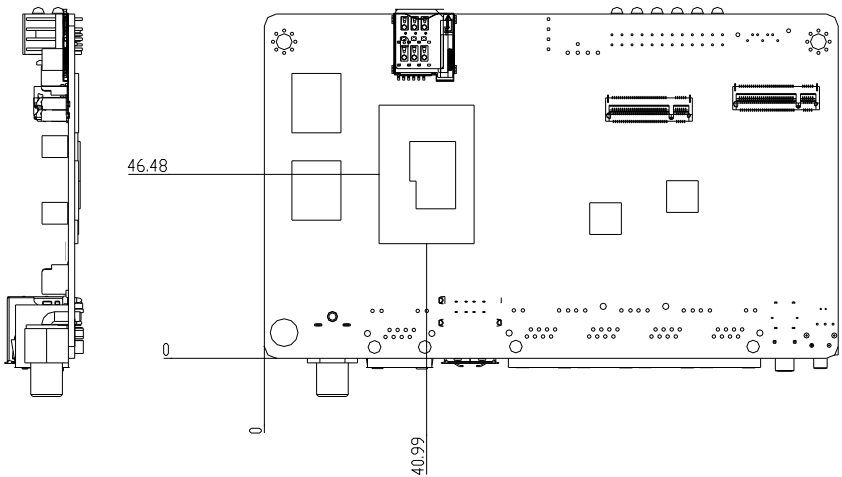


2.2 Jumpers and Connectors

Note: Components and their locations may vary depending upon which configuration was purchased. If you have questions about your FWS-2290, visit our website to contact an AAEON support representative.

Component Side

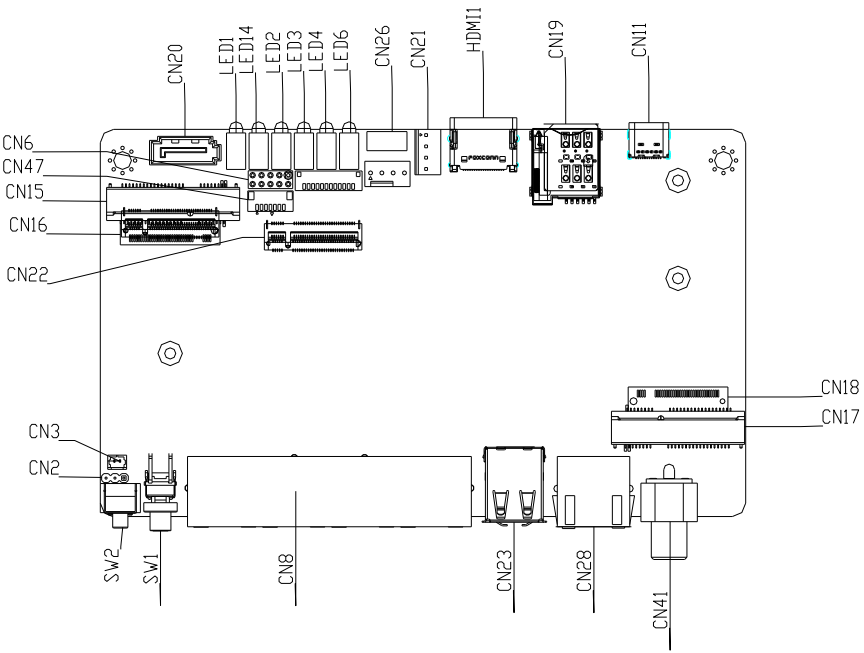

Solder Side

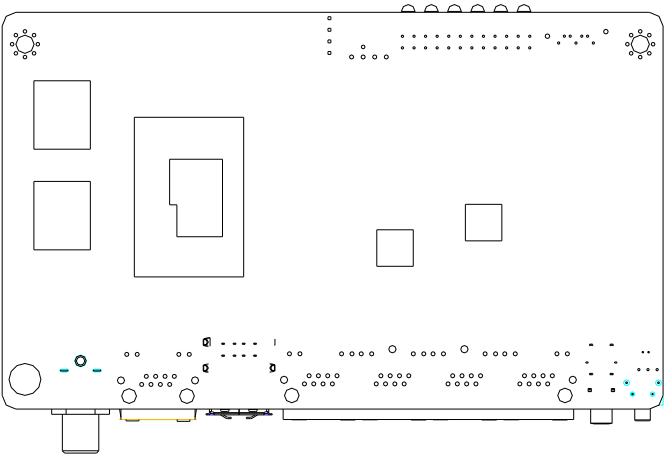


2.3 List of Jumpers

Please refer to the table below for all of the board's jumpers that you can configure for your application


Label	Function
CN2	Clear CMOS
JP1	Manual/Auto Power On Option Header

2.3.1 Clear CMOS (CN2)

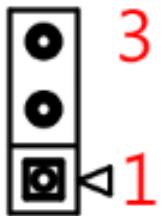

Clear CMOS	
Normal (Default)	1-2
Clear CMOS	2-3

2.3.2 Manual/Auto Power On (JP1)

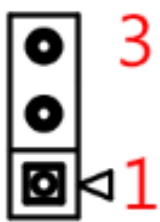

Manual/Auto Power On	
Manual (Default)	1-2
Auto	2-3


2.4 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application. (Optional) denotes a component that is not included on the standard configuration. Some optional components may replace standard components. Contact AAEON support if you have any questions about the configuration of your FWS-2290 system.

Label	Function
SW2	Reset Switch
CN23	USB 3.0 Type-A Port
CN8	2.5GbE RJ-45 Port
CN20	SATA Connector
LED1	System Status LED/Power LED
LED14	Bypass LED/SATA LED
LED2	LAN 0 ACT/Link/Speed LED
LED3	LAN 1 ACT/Link/Speed LED
LED4	LAN 2 ACT/Link/Speed LED
LED6	LAN 3 ACT/Link/Speed LED
CN16	M.2 2230 E-Key (PCIe only)
CN15	Mini Card (PCIe/Half-size only)
CN22	M.2 2242 M-Key (SATA only)
CN26	BIOS Flash Connector
CN18	M.2 3052 B-Key (USB 3.0 & USB 2.0 only)
CN17	Mini Card (PCIe/Half-size only)
CN3	CMOS Battery Connector
LPC1	Port 80 Connector
CPU_FAN2	Fan Connector
CN47	MCU FW Programming Connector
CN7	Case Open Header
CN6	Digital IO Header
CN21	SATA Power Connector
HDMI1	HDMI Connector (Optional)
CN19	SIM Card Connector


Label	Function
CN28	Console Connector
CN41	DC Jack
SW1	Power button
CN11	Type-C Connector Console Port (Optional)

2.4.1 CMOS Battery Connector (CN3)

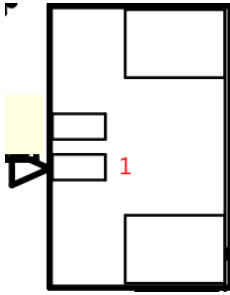

Pin	Signal	Pin	Signal
1	3V	2	GND


2.4.2 M.2 2230 E-Key (CN16)

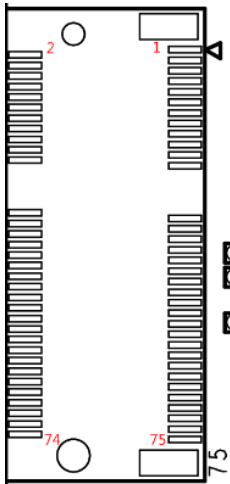

Pin	Signal	Pin	Signal
1	GND	42	
2	+V3.3A_WLAN	43	M.2E1_RXN
3		44	

Pin	Signal	Pin	Signal
4	+V3.3A_WLAN	45	GND
5		46	
6		47	M.2E1_CLKP_B
7	GND	48	
8		49	M.2E1_CLKN_B
9		50	PCH_SUSCLK
10		51	GND
11		52	M.2_WLAN_PERST_R_N
12		53	MC1_CLKREQ#
13		54	BT1_RF_KILL_N
14		55	PMC_WAKE#
15		56	WIFI1_RF_KILL_N
16		57	GND
17		58	M.2B_SMBDATA
18	GND	59	
19		60	M.2B_SMBCLK
20		61	
21		62	
22		63	GND
23		64	
32		65	
33	GND	66	
34		67	
35	PCIE_TXP10	68	
36		69	GND
37	PCIE_TXN10	70	
38		71	
39	GND	72	+V3.3A_WLAN
40		73	
41	M.2E1_RXP	74	+V3.3A_WLAN
		75	GND


2.4.3 M.2 3052 B-Key (CN18)

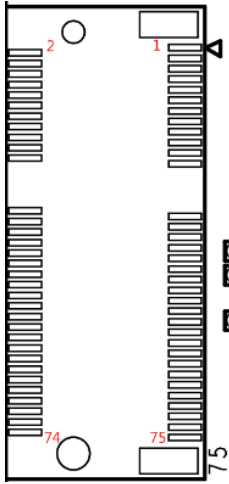

Pin	Signal	Pin	Signal
1	M.2C_CFG3	42	
2	+V3.3A_WLAN	43	GND
3	GND	44	
4	+V3.3A_WLAN	45	
5	GND	46	
6	M.2C_POFF#	47	
7	USB2_CONA3_P	48	BUF_R1_PLTRST#
8	M.2C_DIS#	49	GND
9	USB2_CONA3_N	50	
10		51	
11	GND	52	PMC_WAKE#
12	M.2C_CFG0	53	
13		54	
14		55	GND
15		56	
16		57	
17		58	


Pin	Signal	Pin	Signal
18	GND	59	
19		60	
20	USB3_RXN0	61	
21	UIM1_RST	62	
22	USB3_RXP0	63	
23	UIM1_CLK	64	M.2C_SIMDET#
32	GND	65	M2_RST_N
33	UIM1_DAT	66	PCH_SUSCLK
34	USB3_TXN0	67	M.2C_CFG1
35	UIM1_PWR	68	+V3.3_WWAN
36	USB3_TXP0	69	GND
37	M.2C_DEVSLP	70	+V3.3_WWAN
38	GND	71	GND
39		72	+V3.3A_WLAN
40		73	
41		74	
		75	

2.4.4 Fan Connector (CPU_FAN2)

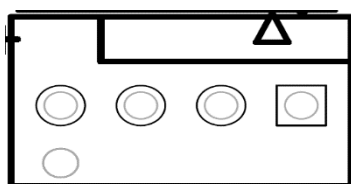


Pin	Signal	Pin	Signal
1	GND	2	+12S
3	FANTAC1	4	FANCTL1

2.4.5 SATA Power Connector (CN21)

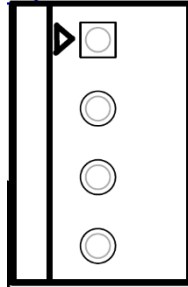


Pin	Signal	Pin	Signal
1		2	GND
3	GND	4	+5VS

2.4.6 Digital IO Header (CN6)

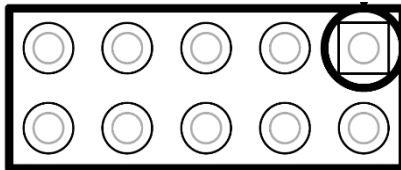


Pin	Signal	Pin	Signal
1	DIO1	2	DIO2
3	DIO3	4	DIO4
5	DIO5	6	DIO6
7	DIO7	8	DIO8
9	+V5S	10	GND

2.4.7 BIOS Flash Connector (CN6)

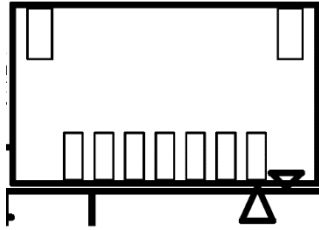

Pin	Signal
1	FLASH_MISO
2	GND
3	FLASH_CLK
4	+VDD_FLASH
5	FLASH_MOSI
6	FLASH_CS0#
7	NC


2.4.8 Mini Card (CN15)

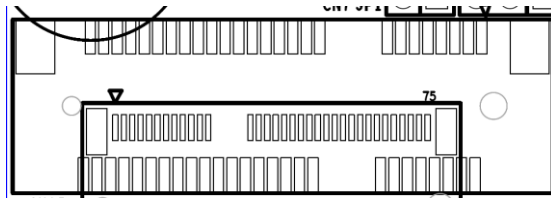

Pin	Signal	Pin	Signal
1	PMC_WAKE#	2	+V3P3A
3	NC	4	GND
5	NC	6	MC1_1P5V
7	MC1_CLKREQ#	8	NC
9	GND	10	NC
11	M.2E1_CLKN_A	12	NC

Pin	Signal	Pin	Signal
13	M.2E1_CLKP_A	14	NC
15	GND	16	NC
17	NC	18	GND
19	NC	20	MC1_DIS#
21	GND	22	BUF_PLTRST#
23	MC1_RXN	24	MC1_3.3AUX
25	MC1_RXP	26	GND
27	GND	28	MC1_1P5V
29	GND	30	SMB_CLK_S
31	M.2E1_TXN	32	SMB_DATA_S
33	M.2E1_TXP	34	GND
35	GND	36	USB_DN4
37	GND	38	USB_DP4
39	+V3P3A	40	GND
41	+V3P3A	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	MC1_1P5V
49	NC	50	GND
51	NC	52	+V3P3A


2.4.9 Mini Card (CN17)

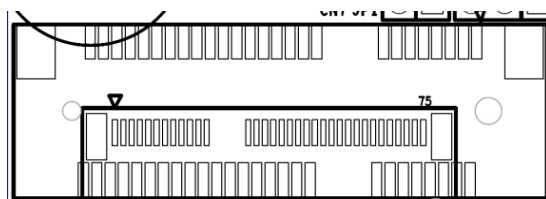

Pin	Signal	Pin	Signal
1	PMC_WAKE#	2	+V3P3A
3	NC	4	GND


Pin	Signal	Pin	Signal
5	NC	6	MC2_1P5V
7	MC1_CLKREQ#	8	UIM1_PWR
9	GND	10	UIM1_DAT
11	NC	12	UIM1_CLK
13	NC	14	UIM1_RST
15	GND	16	UIM1_VPP
17	NC	18	GND
19	NC	20	MC3_DIS#
21	GND	22	DPE_RSTN
23	NC	24	MC3_3.3AUX
25	NC	26	GND
27	GND	28	MC2_1P5V
29	GND	30	SMB_CLK_S
31	NC	32	SMB_DATA_S
33	NC	34	GND
35	GND	36	USB2_CONB3_N
37	GND	38	USB2_CONB3_P
39	+V3P3A	40	GND
41	+V3P3A	42	NC
43	GND	44	NC
45	NC	46	NC
47	NC	48	MC2_1P5V
49	NC	50	GND
51	NC	52	+V3P3A

2.4.10 Port 80 Connector (LPC1)

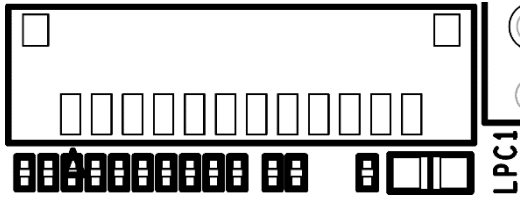


Pin	Signal
1	SIO_ESPIIO0_R2
2	SIO_ESPIIO1_R2
3	SIO_ESPIIO2_R2
4	SIO_ESPIIO3_R2
5	+V3P3S
6	SIO_R2_ESPICS#
7	SIO_R2_ESPIRST#
8	GND
9	SIO_ESPICKL_R2
10	+V3P3A
11	NC
12	NC

2.4.11 Case Open Header (CN7)

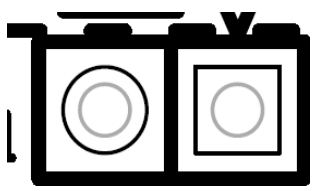

Pin	Signal	Pin	Signal
1	COPEN#	2	Battery-


2.4.12 M.2 2242 M-Key (CN22)

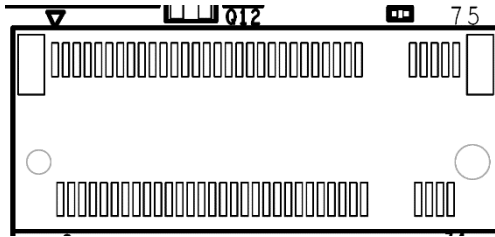

Pin	Signal	Pin	Signal
1	GND	2	+V3P3S
3	GND	4	+V3P3S
5	NC	6	NC
7	NC	8	NC
9	GND	10	M2_SATA_LED#
11	NC	12	+V3P3S
13	NC	14	+V3P3S
15	GND	16	+V3P3S
17	NC	18	+V3P3S
19	NC	20	NC
21	GND	22	NC
23	NC	24	NC
25	NC	26	NC
27	GND	28	NC
29	NC	30	NC
31	NC	32	NC
33	GND	34	NC D
35	NC	36	NC
37	NC	38	M.2_R_DEVSLP
39	GND	40	NC
41	SATA_CRXP1	42	NC
43	SATA_CRXN1	44	NC
45	GND	46	NC


Pin	Signal	Pin	Signal
47	SATA_CTXN1	48	NC
49	SATA_CTXP1	50	BUF_R_PLTRST#
51	GND	52	PU_M2_CLKREQ_N
53	NC	54	PMC_R_WAKE#
55	NC	56	NC
57	GND	58	NC
67	NC	68	PCH_SUSCLK
69	M2_R1_SATA_DET	70	+V3P3S
71	GND	72	+V3P3S
73	GND	74	+V3P3S
75	GND		

2.4.13 SATA Connector (CN20)

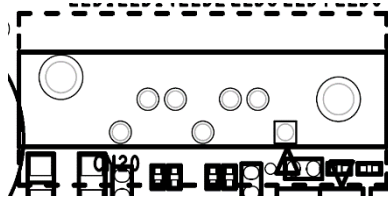


Pin	Signal
1	GND
2	SATA_CTXP0
3	SATA_CTXN0
4	GND
5	SATA_CRXN0
6	SATA_CRXP0
7	GND

2.4.14 Console Connector (CN28)

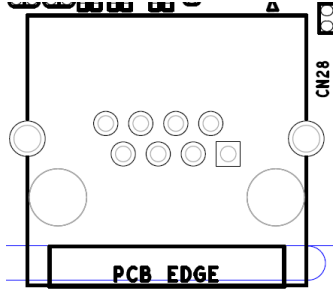

Pin	Signal
1	RTS1
2	DTR1
3	TXD1
4	GND
5	CRJ5
6	RXD1
7	DSR1
8	CTS1

2.4.15 SIM Card (CN19)

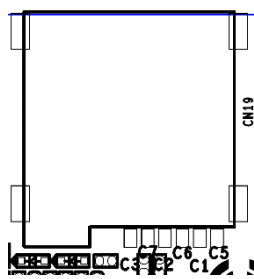

Pin	Signal
C1	UIM1_PWR
C2	UIM1_R_RST

Pin	Signal
C3	UIM1_R_CLK
C5	GND
C6	UIM1_R_VPP
C7	UIM1_R_DAT

2.4.16 USB Type-A Port (CN23)

Pin	Signal
1	USB3VCC
2	USB1-
3	USB1+
4	GND
5	USB3_RXN1
6	USB3_RXP1
7	GND
8	USB3_TXN1
9	USB3_TXP1
10	USB3VCC
11	USB2-
12	USB2+
13	GND
14	USB3_RXN2
15	USB3_RXP2
16	GND
17	USB3_TXN2
18	USB3_TXP2


2.5 2.5" SATA Drive Installation

This section details how to install a 2.5" SATA Drive (SSD) for your FWS-2290. If you have any questions or are unsure about your system's specifications, refer to Chapter 1 or contact an AAEON representative by visiting the support page on our website.


Step 1: Unscrew and remove the top cover.



Step 2: Affix the anti-vibration pad to the 2.5" HDD and secure module to bracket with four (4) screws.

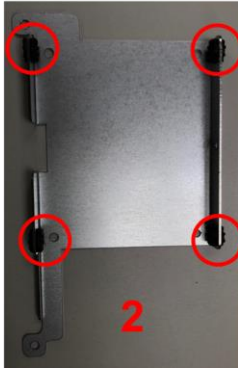

Step 3: Insert the bracket into the system, connect the SATA and SATA Power Cables to the SATA drive, and secure with one (1) screw.

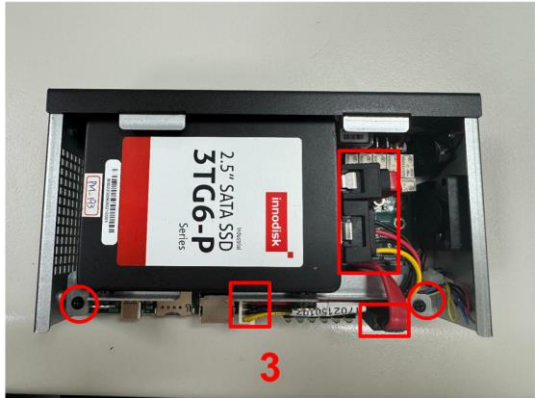

Step 4: Reattach the top panel, making sure to replace the screw removed in Step 1.



Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization during the boot up sequence. If an error, fatal or non-fatal, is encountered, the system will output a few short beeps or display an error message. The system can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory and BIOS NVRAM. If a system configuration is not found or an error is detected, the system will load the default configuration and reboot automatically.

There are three situations in which the CMOS settings will need to be set or changed:

- Starting the system for the first time
- The system hardware has been changed
- The system configuration was reset by the Clear CMOS jumper
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention. The battery must be replaced when it runs down.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <Esc> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Access hardware monitor and advanced board features and options


System I/O – System I/O settings and options

Security – The setup administrator password can be set here


Boot – Set boot drive priority and quiet boot options

Save & Exit – Save changes and exit the program


3.3 Setup Submenu: Main

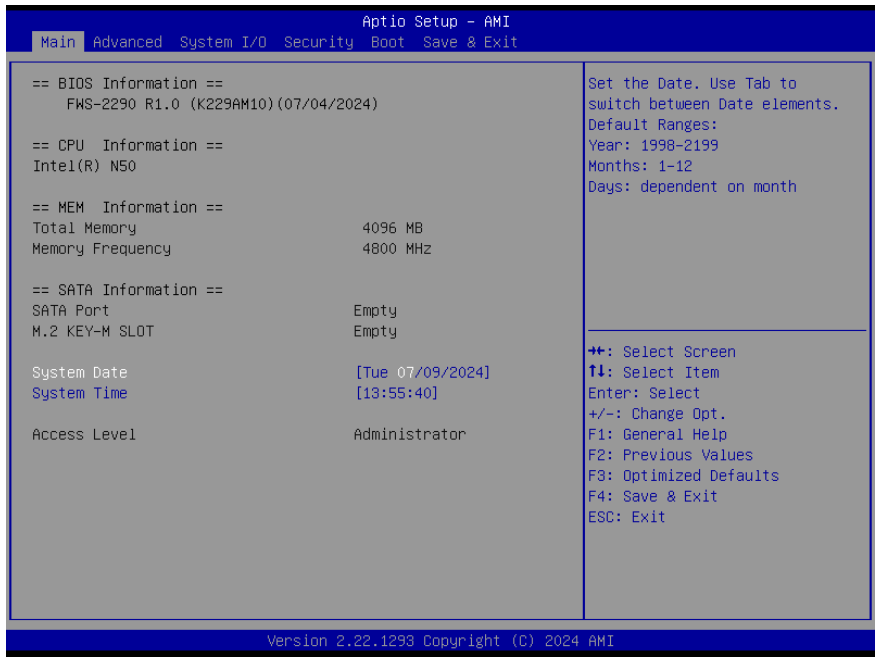

3.4 Setup Submenu: Advanced

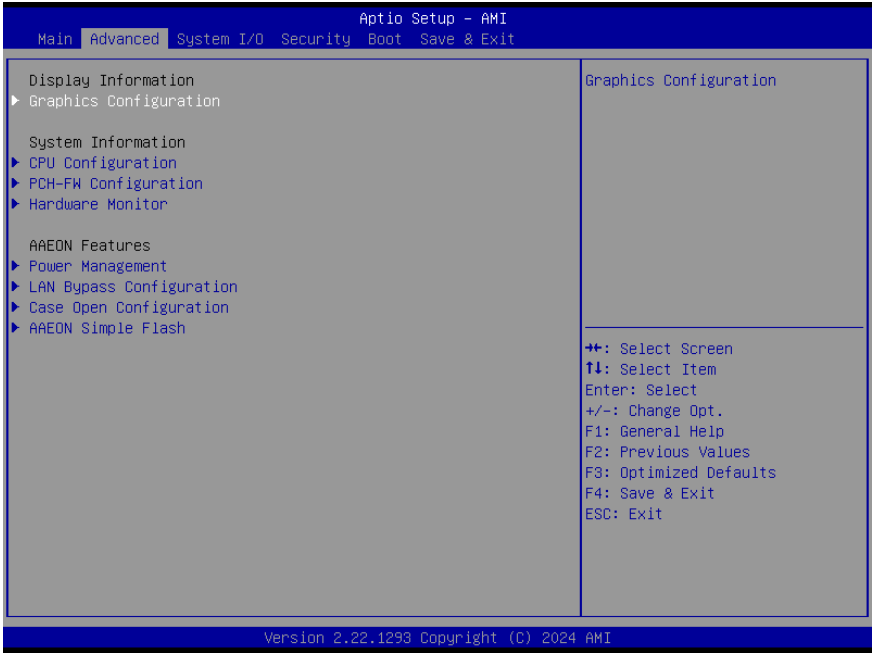

3.4.1 Graphics Configuration

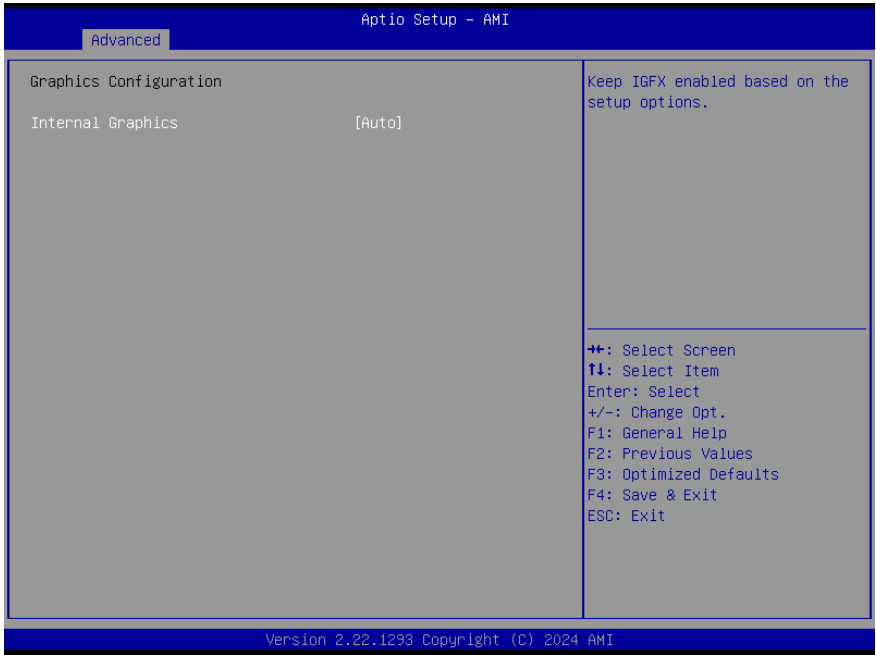


Options Summary		
Internal Graphics	Auto	Optimal Default, Failsafe Default
	Disabled	
	Enabled	
Keep IGFX enabled based on the setup options.		

3.4.2 CPU Configuration




Options Summary	
Intel (VMX) Virtualization Technology	Disabled
	Enabled
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.	
Intel® SpeedStep™	Disabled
	Enabled
Allows more than two frequency ranges to be supported.	
Turbo Mode	Disabled
	Enabled
Enable/Disable processor Turbo Mode (requires EMTTM enabled too).	
C states	Disabled
	Enabled
Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.	

3.4.3 PCH-FW Configuration

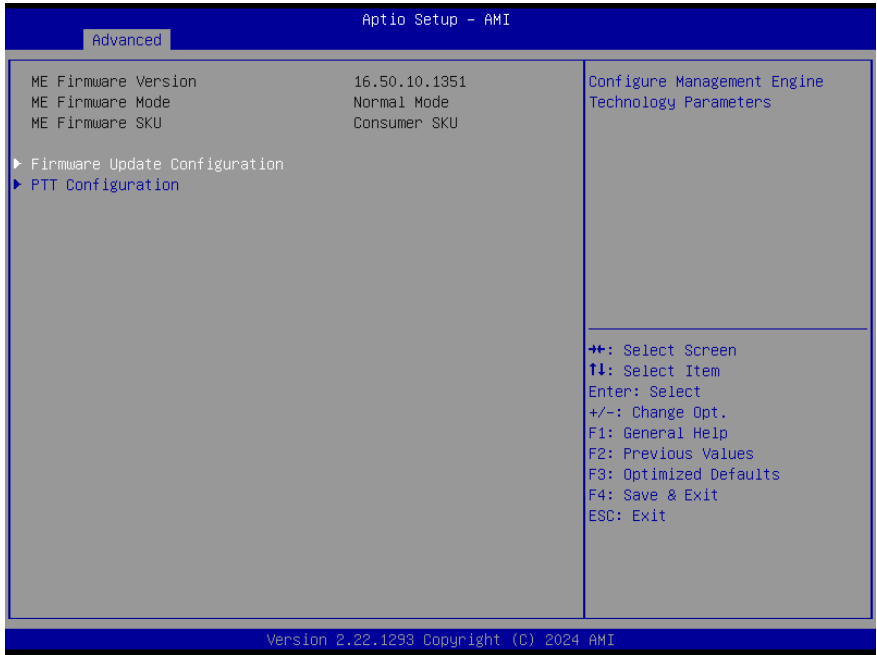


3.4.4 Firmware Update Configuration

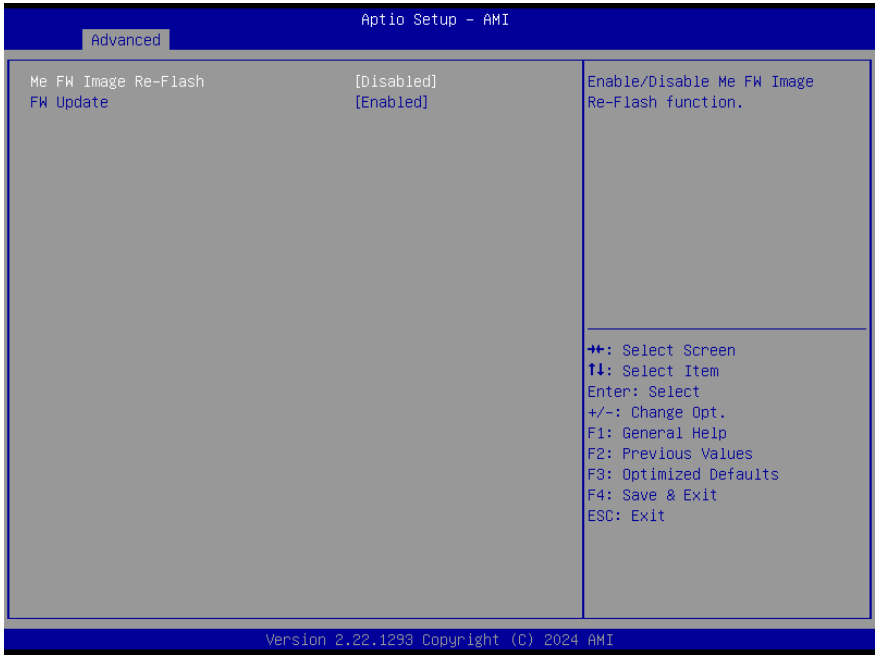


Options Summary	
Me FW Image Re-Flash	Disabled
	Enabled
Enable/Disable Me FW Image Re-Flash function.	
FW Update	Disabled
	Enabled
Enable/Disable ME FW update function.	

3.4.5 PTT Configuration

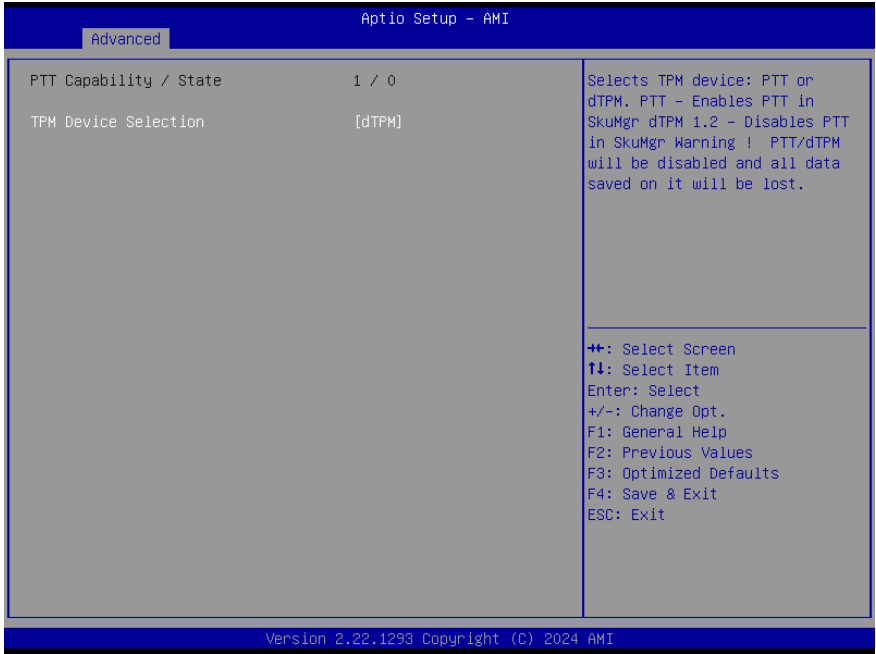


Options Summary	
TPM Device Selection	dTPM
	PTT
Selects TPM device: PTT or dTPM. PTT - Enables PTT in SkuMgr dTPM 1.2 - Disables PTT in SkuMgr Warning! PTT/dTPM will be disabled and all data saved on it will be lost.	

3.4.6 Hardware Monitor

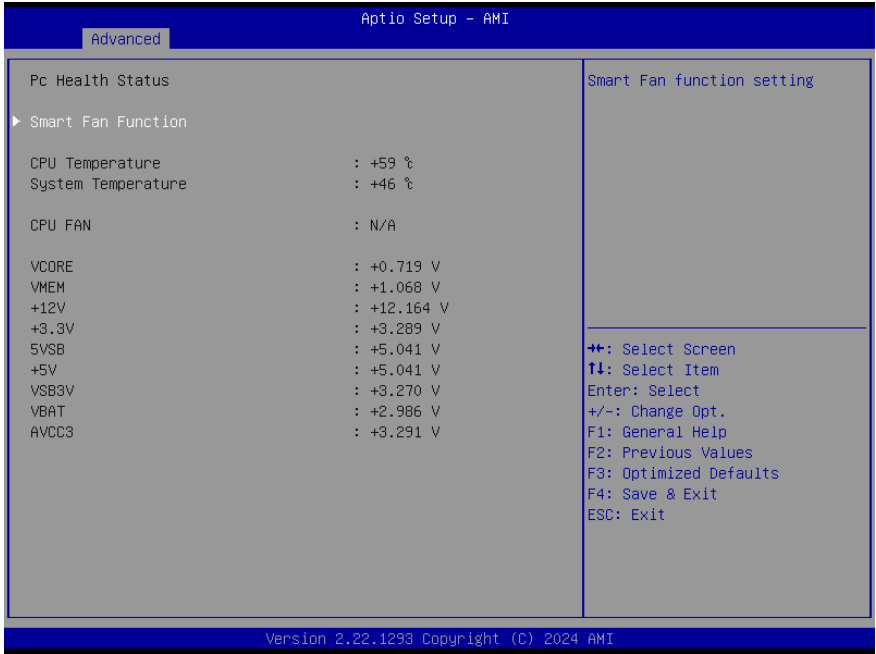


3.4.6.1 Smart Fan Function

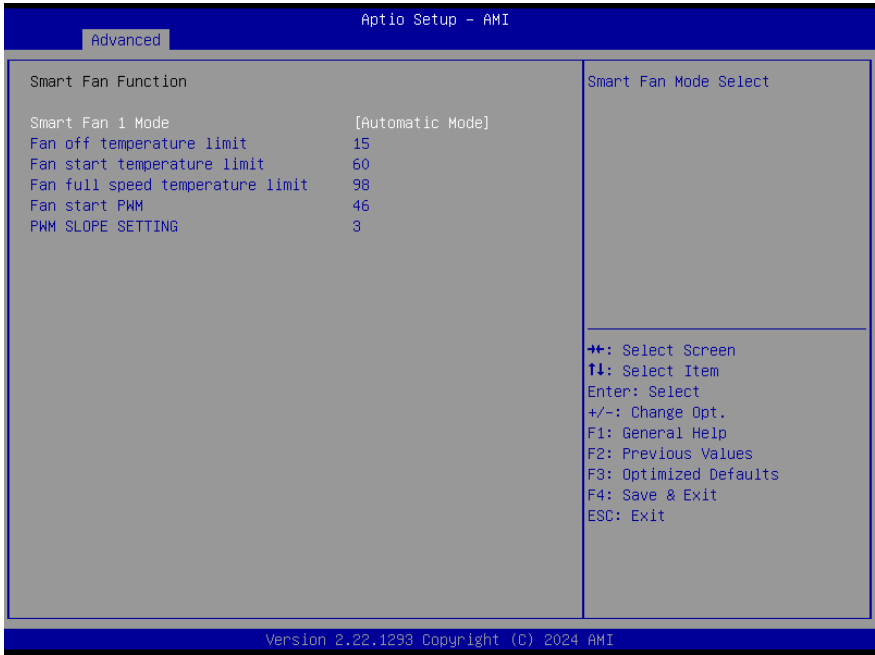

Options Summary		
CPU Fan 1 Mode	Software Mode	
	Automatic Mode	Optimal Default, Failsafe Default
Smart Fan Mode Select		
Manual PWM Setting	127	Optimal Default, Failsafe Default
	0~255	
Manual Mode: Fan will work with this Manual PWM Value		
Fan off temperature limit	15	Optimal Default, Failsafe Default
Fan will off when temperature lower than this limit		
Fan start temperature limit	60	Optimal Default, Failsafe Default
Fan will work when temperature higher than this limit		
Fan full Speed Temperature limit	98	Optimal Default, Failsafe Default
Fan will full speed when temperature higher than this limit		
Fan start PWM	46	Optimal Default, Failsafe Default
Fan will start with this PWM value		

Options Summary		
PWM SLOPE SETTING	3	Optimal Default, Failsafe Default
PWM SLOPE Selection Slope = PWM value/°C		

3.4.7 Power Management

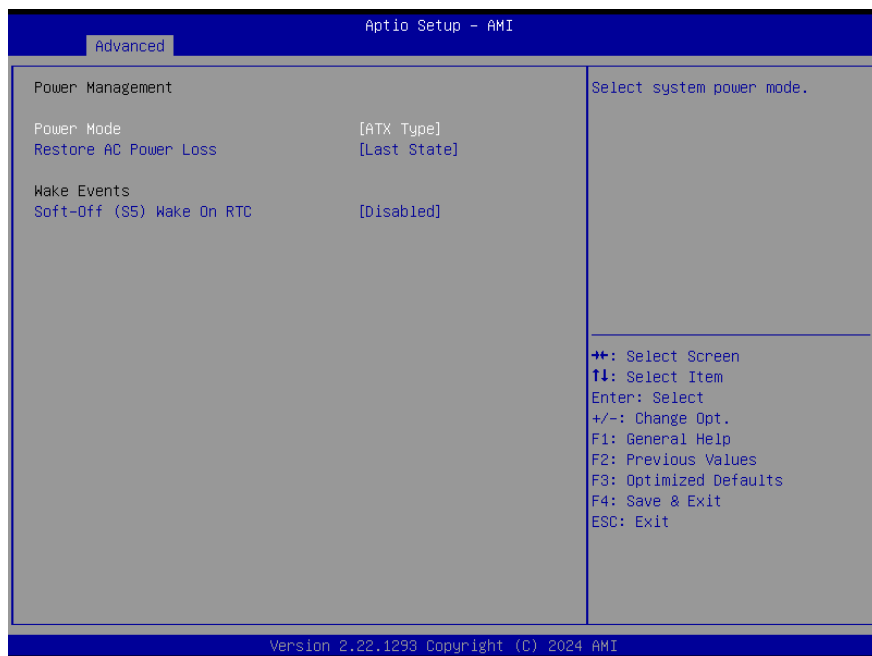

Options Summary	
Power Mode	ATX Type AT Type
Select Power Supply Mode.	
Restore AC Power Loss	Power Off Power On Last State
Select AC power state when power is re-applied after a power failure.	
Soft-Off (S5) Wake On RTC	Disabled By Date By Weekday Bypass


Options Summary

By Date:
System will wake on the day with hr::min::sec specified.

By Weekday:
System will wake on the enabled weekday with hr::min::sec specified.

Bypass:
BIOS will not control RTC wake function

3.4.8 LAN Bypass Configuration

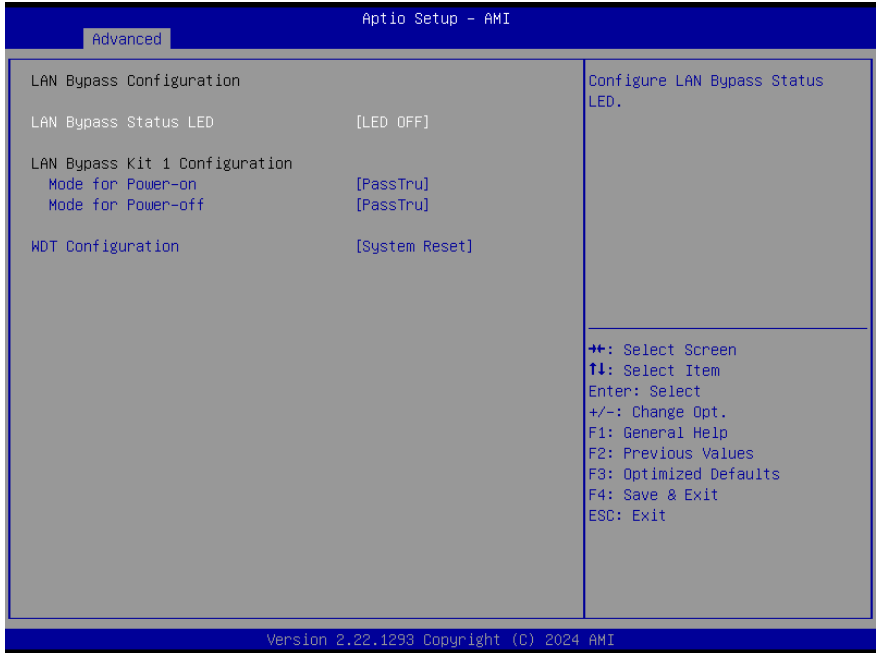


Options Summary

Configure LAN Bypass Status LED	LED OFF	Optimal Default, Failsafe Default
	RED LED ON	
	RED LED BLINK	
	RED LED FAST BLINK	
	GREEN LED ON	
	GREEN LED BLINK	
	GREEN LED FAST BLINK	

Configure LAN Bypass Status LED.


Options Summary		
Mode for Power-on	ByPass	
	PassTru	Optimal Default, Failsafe Default
Configure LAN kit behavior when system in power-on state. (Bypass/Pass Through)		
Mode for Power-off	ByPass	
	PassTru	Optimal Default, Failsafe Default
Configure LAN kit behavior when system in power-off state. (Bypass/Pass Through)		
WDT Configuration	System Reset	Optimal Default, Failsafe Default
	Force ByPass	
Configure WDT behavior, System Reset or Force Bypass		

3.4.9 Case Open Configuration

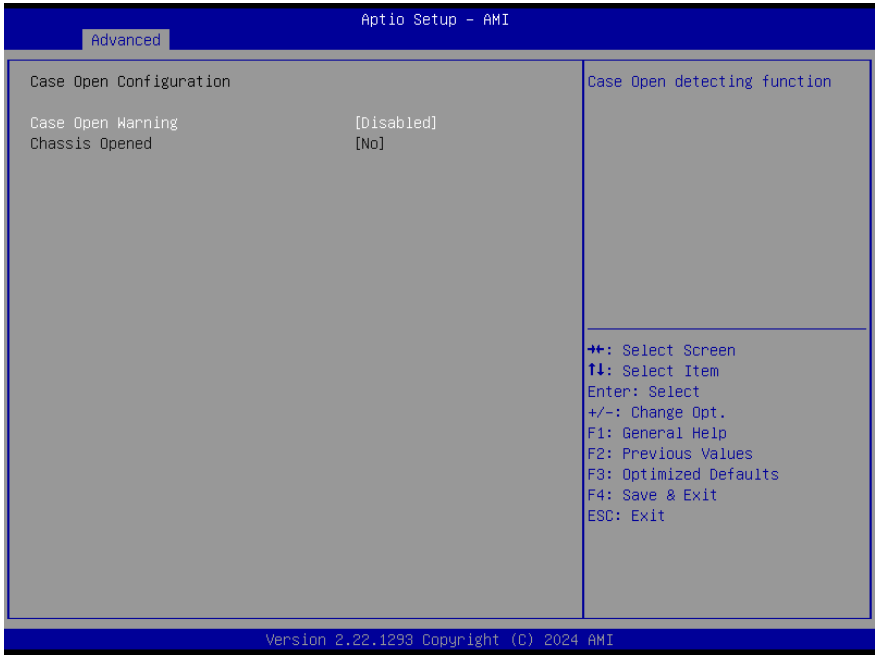

Options Summary		
Case Open Warning	Disabled	Optimal Default, Failsafe Default
	Enabled	
	Clear	
Case Open detecting function.		

3.4.10 AAEON Simple Flash

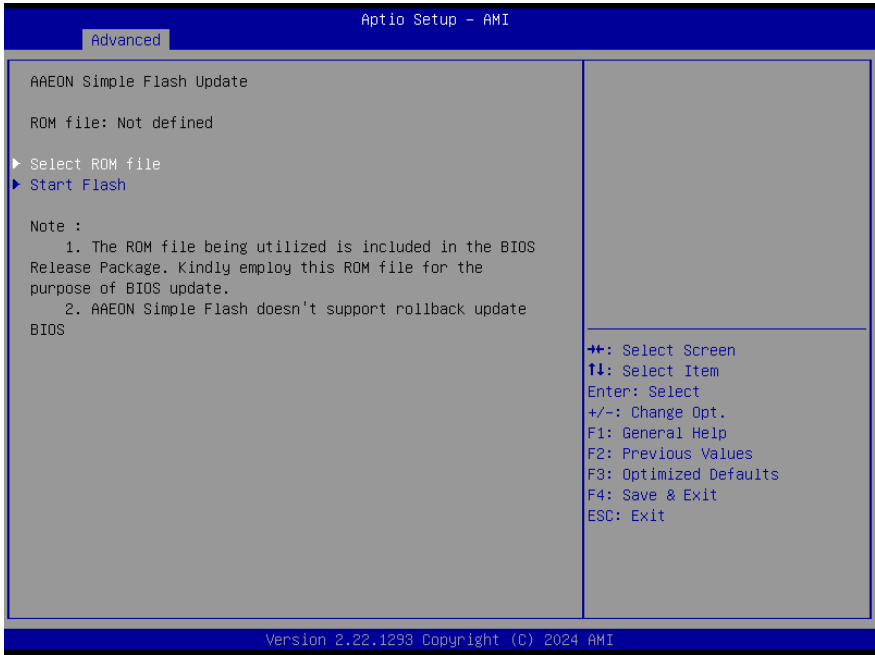

Select ROM file

Select the BIOS ROM file to update.


Start Flash

To start the BIOS ROM update process.

3.5 Setup Submenu: System I/O



3.5.1 Storage Configuration

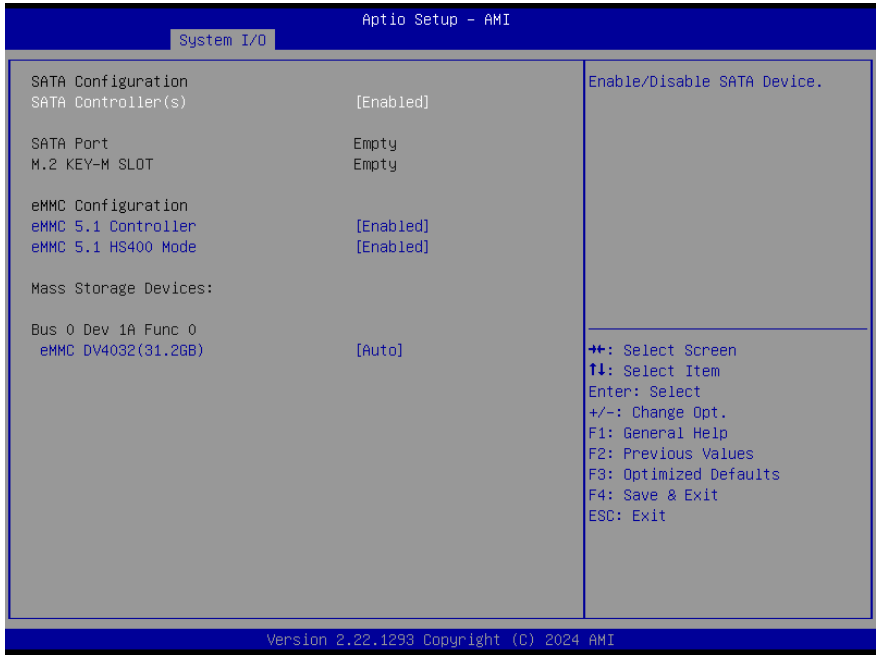


Options Summary		
SATA Controller(s)	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable SATA Device.		
eMMC 5.1 Controller	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SCS eMMC 5.1 Controller.		
eMMC 5.1 HS400 Mode	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SCS eMMC 5.1 HS400 Mode.		

3.5.2 Digital IO Port Configuration




Options Summary		
DIO Port1~4	Output	Optimal Default, Failsafe Default
	Input	
Set DIO as Input or Output		
Output Level	High	Optimal Default, Failsafe Default
	Low	
Set output level when DIO pin is output		
DIO Port5~8	Output	
	Input	Optimal Default, Failsafe Default
Set DIO as Input or Output		

3.5.3 Legacy Logical Devices Configuration

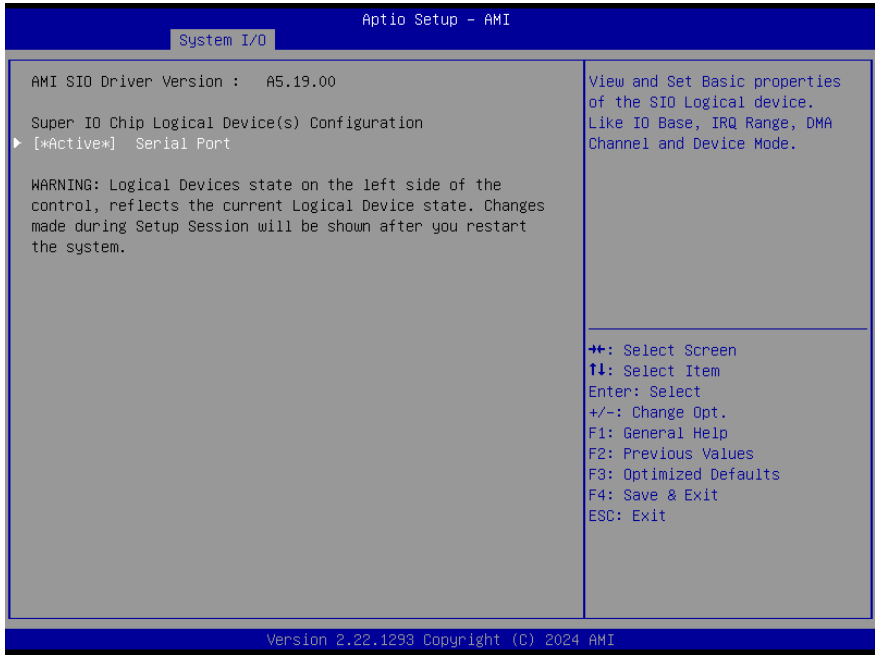

Options Summary		
Skip Scanning of External Gfx Card	Disabled	Optimal Default, Failsafe Default
	Enabled	
If Enable, it will not scan for External Gfx Card on PEG and PCH PCIE Ports		
Primary Display	Auto	Optimal Default, Failsafe Default
	IGFX	
	PEG	
	PCI	
Select which of IGFX/PEG/PCI Graphics device should be Primary Display or select HG for Hybrid Gfx.		
Internal Graphics	Auto	Optimal Default, Failsafe Default
	Disabled	
	Enabled	
Keep IGFX enabled based on the setup options.		

3.5.4 Serial Port Configuration

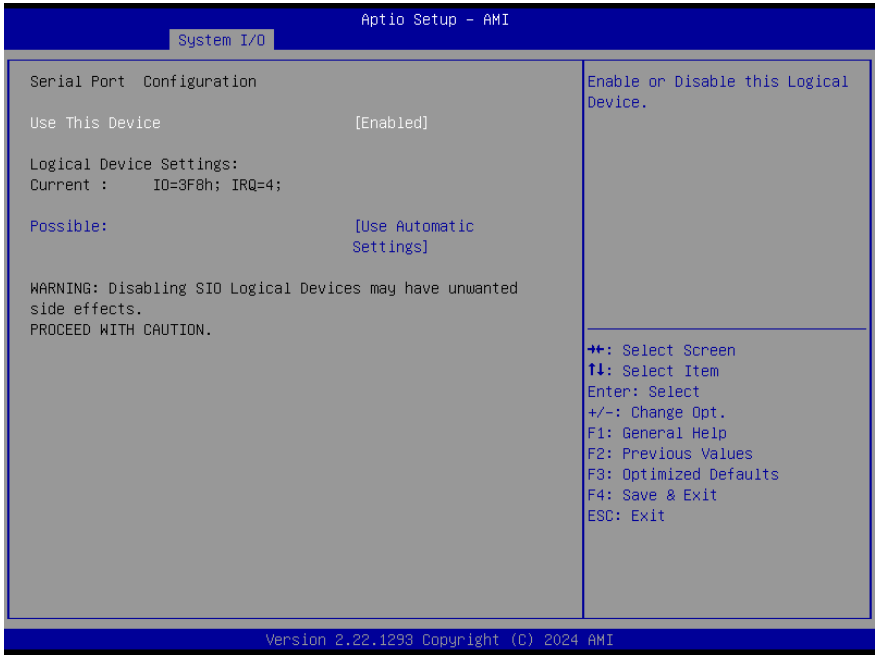


Options Summary	
Use This Device	Disabled
	Enabled
Enable or Disable this Logical Device.	
Possible:	Use Automatic Settings
	IO=3F8h; IRQ=4;
	IO=2F8h; IRQ=3;
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.	

3.5.5 Serial Port Console Redirection



Options Summary		
Console Redirection	Enabled	Optimal Default, Failsafe Default
	Disabled	
Console Redirection Enable or Disable.		
Console Redirection Settings		
The settings specify how the host computer and the remote computer (which the user is using) will exchange data.		
Both computers should have the same or compatible settings.		
Console Redirection EMS	Enabled	
	Disabled	Optimal Default, Failsafe Default
Console Redirection Enable or Disable.		

3.5.5.1 COM1 Console Redirection Settings

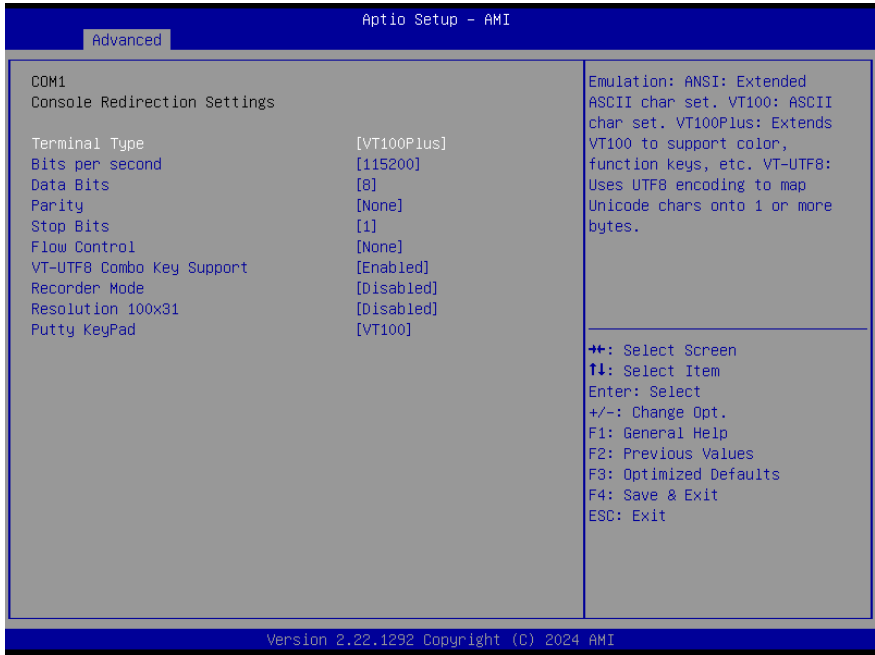


Options Summary		
Terminal Type	VT100	
	VT100Plus	Optimal Default, Failsafe Default
	VT-UTF8	
	ANSI	
Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100Plus: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode.		
Bits per second	9600	
	19200	
	38400	
	57600	
	115200	Optimal Default, Failsafe Default

Options Summary		
Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.		
Data bit	7	
	8	Optimal Default, Failsafe Default
Data Bits		
Parity	None	Optimal Default, Failsafe Default
	Even	
	Odd	
	Mark	
	Space	
<p>A Parity bit can be sent with the data bits to detect some transmission errors.</p> <p>Even: parity bit is 0 if the num of 1's in the data bits is even.</p> <p>Odd: parity bit is 0 if the num of 1's in the data bits is odd.</p> <p>Mark: parity bit is always 1.</p> <p>Space: Parity bit is always 0</p> <p>Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.</p>		
Stop Bits	1	Optimal Default, Failsafe Default
	2	
<p>Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may.</p>		
Flow control	None	Optimal Default, Failsafe Default
	Hardware RTS/CTS	
<p>Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow.</p> <p>Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.</p>		
VT-UTF8 Combo Key Support	Enabled	Optimal Default, Failsafe Default
	Disabled	
<p>Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals.</p>		
Recorder Mode	Disabled	Optimal Default, Failsafe Default
	Enabled	
<p>With this mode enabled only text will be sent. This is to capture Terminal data.</p>		

Options Summary		
Resolution 100x31	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enables or disables extended terminal resolution.		
Putty KeyPad	VT100	Optimal Default, Failsafe Default
	LINUX	
	XTERMR6	
	SCO	
	ESCN	
	VT400	
Select FunctionKey and KeyPad on Putty.		

3.6 Setup Submenu: Security

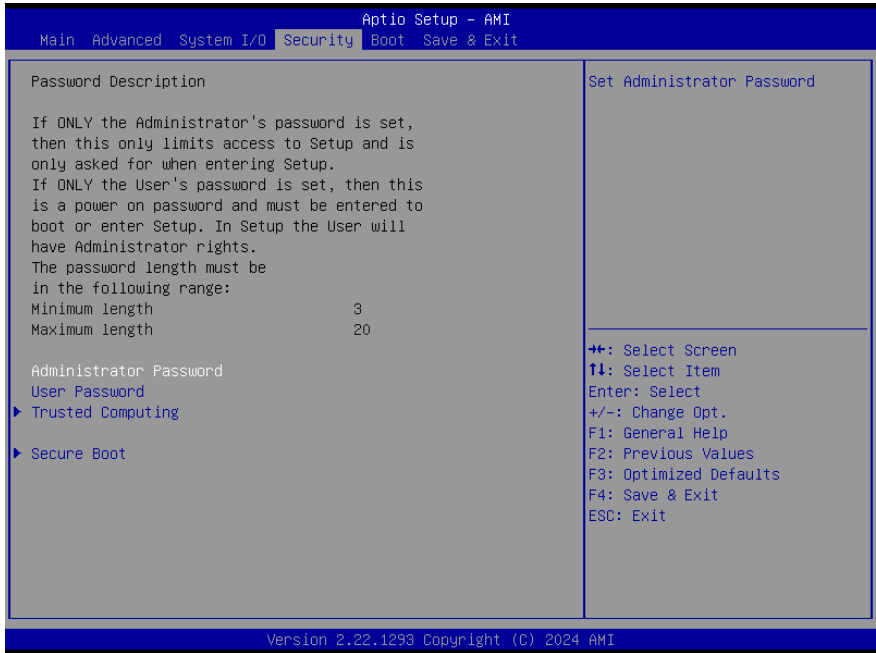

Change User/Administrator Password

You can set an Administrator Password or User Password. An Administrator Password must be set before you can set a User Password. The password will be required during boot up, or when the user enters the Setup utility. A User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, and press Enter. In the dialog box, enter your password (must be between 3 and 20 letters or numbers). Press Enter and retype your password to confirm. Press Enter again to set the password.

Removing the Password

Select the password you want to remove and enter the current password. At the next dialog box press Enter to disable password protection.

3.6.1 Trusted Computing



Options Summary	
Security Device Support	Disabled
	Enabled
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.	
SHA256 PCR Bank	Disabled
	Enabled
Enable or Disable SHA256 PCR Bank	
SHA384 PCR Bank	Disabled
	Enabled
Enable or Disable SHA384 PCR Bank.	
Pending operation	None
	TPM Clear
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.	

Options Summary	
Platform Hierarchy	Disabled
	Enabled
Enable or Disable Platform Hierarchy	
Storage Hierarchy	Disabled
	Enabled
Enable or Disable Storage Hierarchy	
Endorsement Hierarchy	Disabled
	Enabled
Enable or Disable Endorsement Hierarchy	
Physical Presence Spec Version	1.2
	1.3
Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3	
TPM 2.0 InterfaceType	CRB
	TIS
Select the Communication Interface to TPM 20 Device.	
Device Select	TPM 1.2
	TPM 2.0
	Auto
<p>TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found. TPM 1.2 devices will be enumerated.</p>	


3.6.2 Secure Boot



Options Summary	
Secure Boot	Disabled
	Enabled
Secure Boot feature is Active if Secure Boot is Enabled, Platform Key (PK) is enrolled and the System is in User mode. The mode change requires platform reset	
Secure Boot Mode	Standard
	Custom
Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication	
Restore Factory Keys	Yes
	No
Force System to User Mode. Install factory default Secure Boot key databases	

Options Summary	
Reset To Setup Mode	Yes
	No
Delete all Secure Boot key databases from NVRAM	

3.6.2.1 Key Management

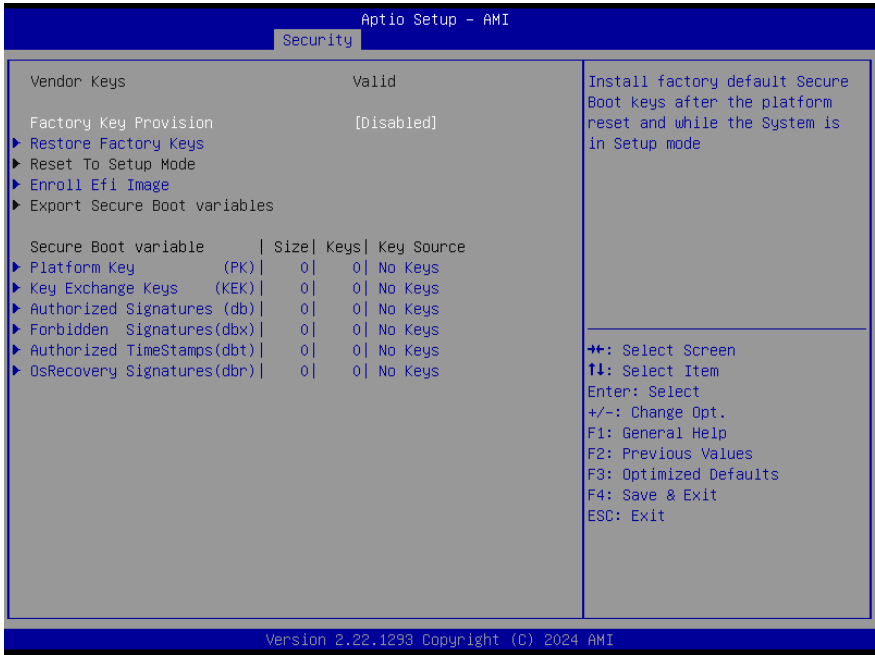

Options Summary	
Factory Key Provision	<div style="border: 1px solid black; padding: 2px; text-align: center;">Disabled</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">Enabled</div>
Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode	
Restore Factory Keys	<div style="border: 1px solid black; padding: 2px; text-align: center;">Yes</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">No</div>
Force System to User Mode. Install factory default Secure Boot key databases	
Reset To Setup Mode	<div style="border: 1px solid black; padding: 2px; text-align: center;">Yes</div> <div style="border: 1px solid black; padding: 2px; text-align: center;">No</div>
Delete all Secure Boot key databases from NVRAM	
Enroll Efi Image	<div style="border: 1px solid black; padding: 2px; text-align: center;">OK</div>
Allow Efi image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db)	
Export Secure Boot variables	<div style="border: 1px solid black; padding: 2px; text-align: center;">OK</div>
Save NVRAM content of Secure Boot variable to a file	

Options Summary**Secure Boot Variables**


Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:
 - a) EFI_SIGNATURE_LIST
 - b) EFI_CERT_X509 (DER encoded)
 - c) EFI_CERT_RSA2048 (bin)
 - d) EFI_CERT_SHAXXX
2. Authenticated UEFI Variable
3. EFI PE/COFF Image (SHA256)

Key Source:

Default, External, Mixed

3.7 Setup Submenu: Boot

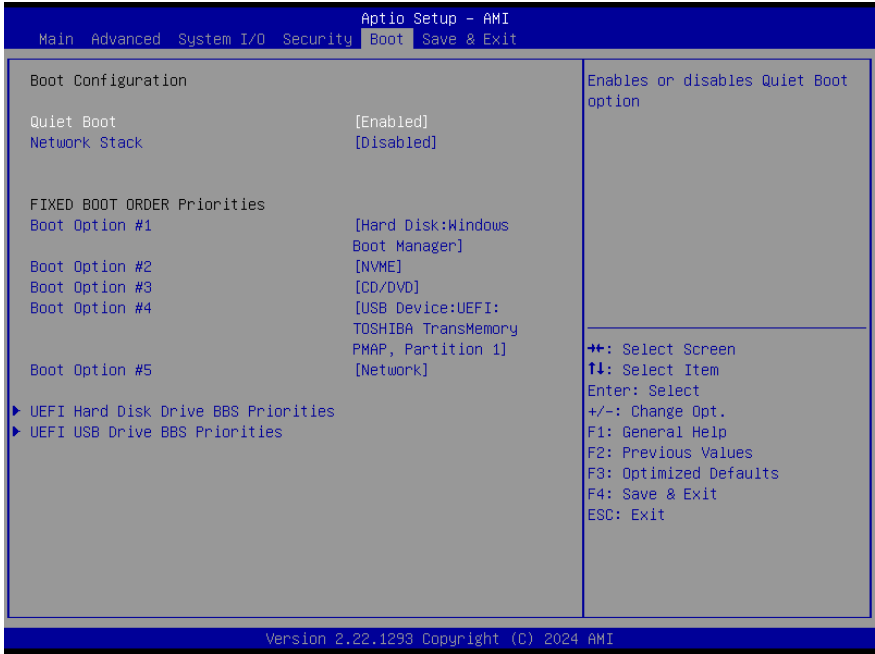

Options Summary	
Quiet Boot	Disabled
	Enabled
Enables or disables Quiet Boot option.	
Network Stack	Disabled
	Enabled
Enable/Disable UEFI Network Stack	
FIXED BOOT ORDER Priorities	Sets the system boot order

3.8 Setup Submenu: Save & Exit



Options Summary	
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Exit	Exit system setup without saving any changes.
Restore Defaults	Restore/Load Default values for all the setup options.

Appendix A

Software Development Kit Information

A.1 Software Development Kit Support List

The FWS-2290 is available with a software development kit (SDK) supporting a range of additional functions and interfaces.

Function	SDK Support
Watchdog Timer	Yes
Software Programming Button	Yes
Status LED	Yes
LAN Bypass	Yes
DIO	Yes
HW Monitor	Yes

For more information regarding the above SDK support list, please contact your AAEON or visit <https://www.aeon.com/en/contacts/> for more information.

Appendix B

Glue Removal Procedure

B.1 Removing Glue from Your System

To protect components from damage and ensure proper operation out of the box, glue may have been applied to some cables or connectors to keep them in place during shipping. This glue must be removed before attempting to swap components or perform maintenance. This section details the steps needed to remove the glue.

Before performing any kind of system maintenance, ensure the system is shut down (not in sleep or hibernate mode) and the power cable has been removed. Follow steps in Chapter 2 to access the components inside.

You will need the following items for this step:

- Cotton or cotton swab
- Anti-static tweezers
- An alcohol solution that is at least 99.5% alcohol (ethanol solution or denatured alcohol). AAEON recommends using an eye dropper or a bottle with a nozzle as in the picture below:




Step 1: Using an eyedropper or bottle as shown above, apply a few drops of alcohol to the glue.

Step 2: Allow the alcohol to soak for 10 seconds, then use a cotton swab or cotton with anti-static tweezers to evenly rub the alcohol over the glue.



Step 3: Let soak for 10 more seconds, then use anti-static tweezers to remove the glue.

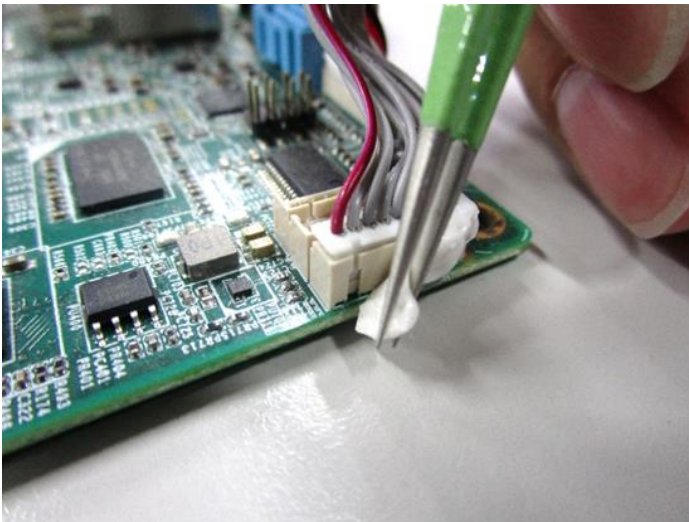

If you encounter any issues or need support, please contact your AAEMON representative or visit our [Support Page](#) at AAEMON.com