

EPIC-BT07

EPIC Board

User's Manual 9th Ed

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows® is a registered trademark of Microsoft Corp.
- Intel®, Atom®, and Celeron® are registered trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- Ubuntu and Canonical are registered trademarks of Canonical Ltd.

All other product names or trademarks are properties of their respective owners. No ownership is implied or assumed for products, names or trademarks not herein listed by the publisher of this document.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● EPIC-BT07	1
● SATA Cable	1
● SATA Power Cable	1
● Heat-Spreader	1
● Screw Kit	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page on AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON 主板/子板/背板

QQ4-381 Rev.A2

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
本表格依据 SJ/T 11364 的规定编制。 ○：表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572标准规定的限量要求以下。 ×：表示该有害物质的某一均质材料超出了GB/T 26572的限量要求，然而该部件仍符合欧盟指令2011/65/EU 的规范。 环保使用期限(EFUP (Environmental Friendly Use Period))：10年 备注：此产品所标示之环保使用期限，系指在一般正常使用状况下。						

China RoHS Requirement (EN)

Name and content of hazardous substances in product

AAEON Main Board/Daughter Board/Backplane

QO4-381 Rev.A2

Part Name	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB Assemblies	×	○	○	○	○	○
Connector and Cable	×	○	○	○	○	○

The table is prepared in accordance with the provisions of SJ/T 11364.

○: Indicates that said hazardous substance contained in all of the homogenous materials for this product is below the limit requirement of GB/T 26572.

×: Indicates that said hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement of GB/T 26572.

But this product still be compliance with 2011/65/EU Directive (allowed with 2011/65/EU Annex III of RoHS exemption with number 6(c),7(a),7(c)-1).

EFUP (Environment Friendly Use Period) value: 10 years

Notes: This product defined period of use is under normal condition.

Table of Contents

Chapter 1 - Product Specifications.....	1
1.1 Specifications	2
1.2 Block Diagram	5
Chapter 2 – Hardware Information	6
2.1 Dimensions	7
2.2 Jumpers and Connectors.....	9
2.3 List of Jumpers	11
2.3.1 Auto Power Button Selection (CN3)	12
2.3.2 PCI-104 VI/O Voltage Selection (CN4).....	12
2.3.3 CMOS RTC Setting (CN5)	12
2.3.4 LVDS/eDP Backlight Voltage Selection (CN17)	12
2.3.5 LVDS/eDP Backlight Control Selection (CN18)	13
2.3.6 Touchscreen 4/5/8-Wire Mode Selection (CN28)	13
2.3.7 COM2 RI/+5/+12V Selection (CN34)	13
2.3.8 COM 3 RI/+5/+12V Selection (CN36)	13
2.3.9 eDP Operating Voltage Selection (CN40).....	14
2.3.10 LVDS/eDP Operating Voltage Selection (CN41).....	14
2.3.11 eDP Backlight Control Selection (CN42)	14
2.3.12 eDP Backlight Voltage Selection (CN43)	14
2.4 List of Connectors.....	15
2.4.1 Stereo Audio Right Channel (CN1)	17
2.4.2 RTC Battery Connector (CN2).....	17
2.4.3 4-Pin Power-In Connector (CN6).....	18
2.4.4 Stereo Audio Left Channel (CN7)	18
2.4.5 2-Pin Power in Connector (CN8)	19
2.4.6 PCI-104 Connector (CN9)	19

2.4.7	Audio Connector (CN10)	21
2.4.8	LPT/Digital I/O Connector (CN12)	22
2.4.9	USB 2.0 Ports 2 - 5 (CN13/14/15/16)	24
2.4.10	LVDS/eDP Inverter / Backlight Connector (CN19)	25
2.4.11	Micro SD Card Connector (CN20)	26
2.4.12	LPC Expansion Connector (CN21)	27
2.4.13	SIM Card Socket (CN22)	28
2.4.14	+5V Output for SATA HDD (CN23)	28
2.4.15	eDP (CN24)	29
2.4.16	SATA Port1 (CN25)	31
2.4.17	Mini Card Slot (CN26)	31
2.4.18	Mini Card/mSATA Slot (CN27)	33
2.4.19	Touchscreen Connector (CN29)	36
2.4.20	PS/2 Keyboard Mouse Connector (CN30)	39
2.4.21	COM Port 4/5/6 (CN31/32/37)	40
2.4.22	SPI Programming Port (CN33)	41
2.4.23	LVDS/eDP Port (CN35)	42
2.4.24	COM Port 3 (CN38)	45
2.4.25	Front Panel Connector (CN39)	48
2.4.26	Ethernet Port 1/2 (CN44/45)	49
2.4.27	eDP Inverter/Backlight (CN46)	50
2.4.28	USB Port 0 & 1 (CN47)	51
2.4.29	DP Port (CN48)	52
2.4.30	COM Port 1 & 2 (CN49)	53
2.4.31	HDMI Port (CN50)	55
2.4.32	VGA Port (CN51)	56
2.4.33	SMBus Connector (CN52)	57
2.4.34	DDR3L SODIMM (DIMM1)	57

Chapter 3 - AMI BIOS Setup	58
3.1 System Test and Initialization	59
3.2 AMI BIOS Setup	60
3.3 Setup Submenu: Main	61
3.4 Setup Submenu: Advanced	62
3.4.1 CPU Configuration	63
3.4.2 IDE Configuration	64
3.4.3 USB Configuration	65
3.4.4 Hardware Monitor	66
3.4.5 Dynamic Digital I/O	67
3.4.6 Power Management	69
3.4.7 SD Card Configuration	70
3.4.8 Trusted Computing	71
3.4.9 SIO Configuration	72
3.4.9.1 Serial Port 1 Configuration	73
3.4.9.2 Serial Port 2 Configuration	74
3.4.9.3 Serial Port 3 Configuration	75
3.4.9.4 Serial Port 4 Configuration	76
3.4.9.5 Serial Port 5 Configuration	77
3.4.9.6 Serial Port 6 Configuration	78
3.4.10 Parallel Port Configuration	79
3.5 Setup Submenu: Chipset	80
3.5.1 North Bridge	81
3.5.1.1 Display Control Configuration	82
3.5.2 South Bridge	84
3.6 Setup Submenu: Security	85
3.7 Setup Submenu: Boot	86
3.7.1 BBS Priorities	87

3.8 Setup Submenu: Save & Exit.....	88
Chapter 4 – Drivers Installation.....	89
4.1 Drivers Download and Installation.....	90
Appendix A – I/O Information	101
A.1 I/O Address Map	102
A.2 Memory Address Map	104
A.3 IRQ Mapping Chart.....	105
Appendix B – Mating Connectors	114
B.1 List of Mating Connectors and Cables.....	115
Appendix C – Electrical Specifications for I/O Ports.....	116
C.1 Electrical Specifications for I/O Ports.....	117

Chapter 1

Product Specifications

1.1 Specifications

System

Form Factor	4" EPIC Board
CPU	Onboard Intel® Celeron®/Atom® Series Processor: Intel® Celeron® Processor J1900 (4C/4T, 2.00 GHz, 10W) Intel® Celeron® Processor N2930 (4C/4T, 1.83 GHz, 7.5W) Intel® Celeron® Processor N2807 (2C/2T, 1.58 GHz, 4.3W) Intel Atom® Processor E3845 (4C/4T, 1.91 GHz, 10W)
Chipset	Integrated with Intel® SoC
Memory Type	DDR3L 1333, Single Channel SODIMM x 1, up to 8GB
BIOS	UEFI
Wake on LAN	Yes
Watchdog Timer	255 Levels
Security	TPM 2.0 (Optional)
RTC	Lithium Battery 3V/240mAh
Dimension	4.53" x 6.50" (115mm x 165mm)
OS Support	Windows® 7/10 (64-bit) Ubuntu 21.04/kernel 5.11.0-13-generic #14

Power

Power Requirement	+9V to +24V (Optional: +12V)
Power Supply Type	AT/ATX
Connector	ATX 4-Pin Connector or 2-Pin Phoenix Connector
Power Consumption	Intel® Celeron® Processor J1900, DDR3L 8GB, 0.99A @12V, 11.88W

Display

Controller	Intel® HD Graphics for Intel Atom® Processor Z3700 Series
LVDS/eDP	LVDS x 1, Dual Channel 24/48-bit, up to 1920 x 1080
Display Interface	VGA x 1, up to 1920 x 1080 HDMI x 1, up to 1920 x 1080
Multiple Display	Up to 2 Simultaneous Displays
Audio	Realtek ALC897
Audio Interface	Line-In/Line-Out/Mic
Speaker	2W Amp.

External I/O

Ethernet	Intel® I210, 1GbE RJ-45 x 2
USB	USB 3.2 Gen 1 x 1 USB 2.0 x 1
Serial Port	COM 2, COM 3 (RS-232/422/485, supports 5V/12V/RI)
Video	HDMI x 1

Internal I/O

USB	USB 2.0 x 4
Serial Port	COM 1, COM 4, COM 5, COM 6 (RS-232, supports RI only)
Video	LVDS x 1 LVDS Inverter 5V/12V@2A VGA x 1
SATA	SATA 3Gb/s x 1 (Default) (up to SATA x 2 shared with mSATA, BOM Optional)
Audio	Line-In/Line-Out/Mic
DIO/GPIO	GPIO 16-bit

Internal I/O

SMBus/I2C	SMBus/I2C (Default: SMBus)
Touch	4/5/8-wire Touch Controller x 1 (Optional)
Fan	DC Fan x 1
SIM	SIM x 1
Front Panel	Power Button, Reset Button, Power LED, SATA LED, Buzzer
Others	Micro-SD x 1 (Optional, only E3800 series) PCI-104 x 1 (Optional, only E3800 series) LPT (SPP/EPP/ECP) x 1 (Optional, co-lay with GPIO, selected by BIOS)


Expansion

Mini PCIe/mSATA	Full Size mPCIe x 1 Full Size mSATA x 1
M.2	—
Others	—

Environment & Certification

Operating Temperature	32°F ~ 140°F (0°C ~ 60°C) 32°F ~ 185°F (-40°C ~ 85°C) W2 Support (E3845 SKU only)
Storage Temperature	32°F ~ 185°F (-40°C ~ 85°C)
Operating Humidity	0% ~ 90% relative humidity, non-condensing
MTBF (Hours)	358,806
EMC	CE/FCC Class A

1.2 Block Diagram

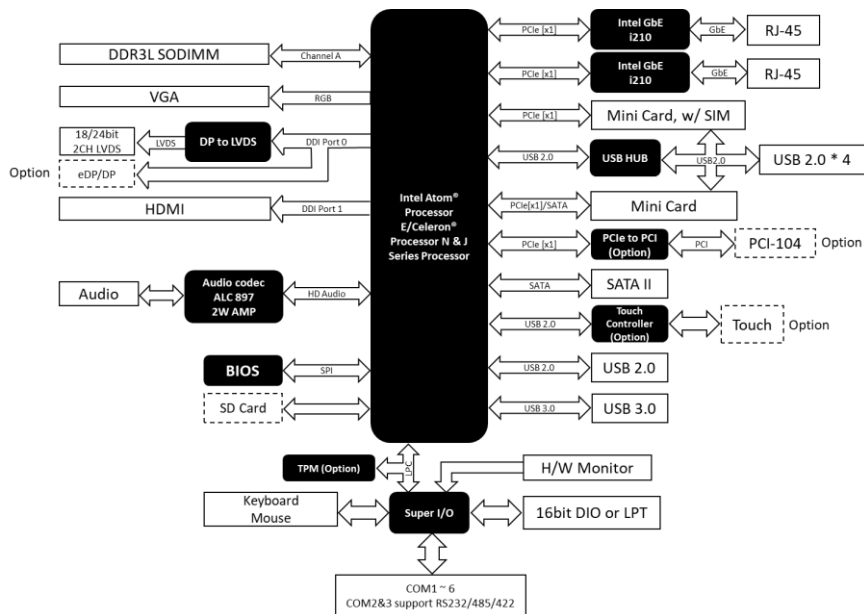


Chapter 2


Hardware Information

2.1 Dimensions

Component Side

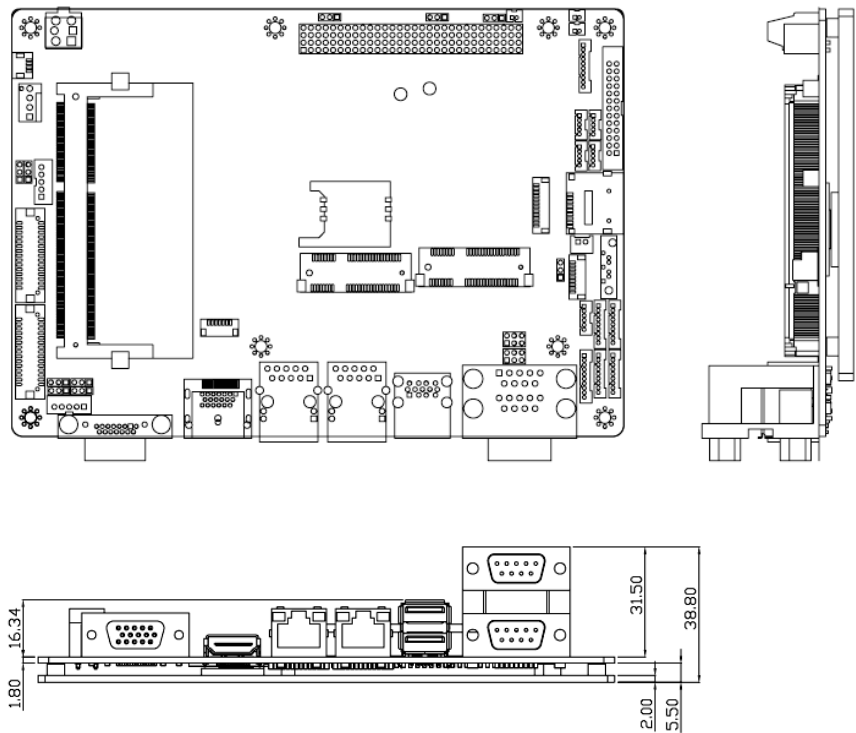


Solder Side

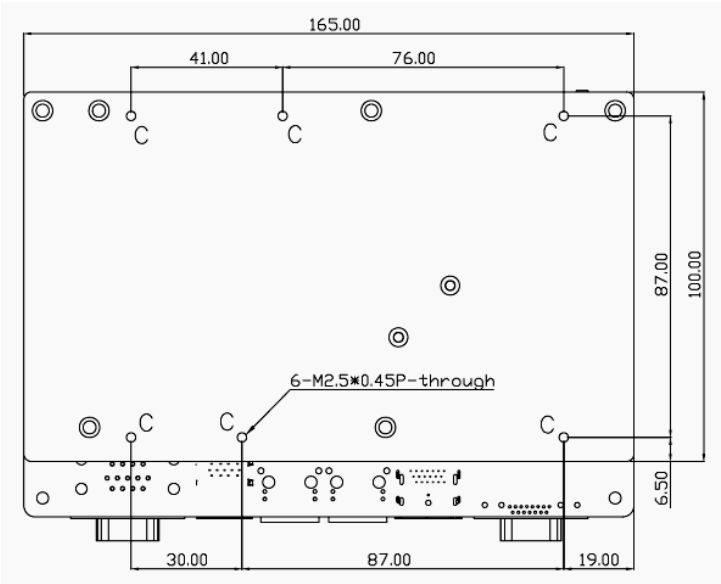


2.2 Jumpers and Connectors

Component Side

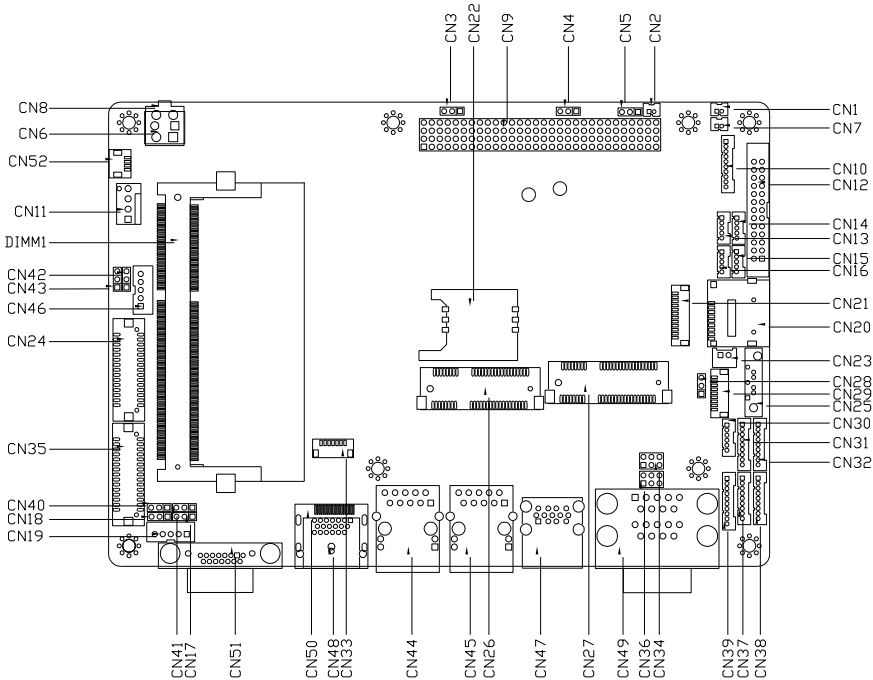

Solder Side

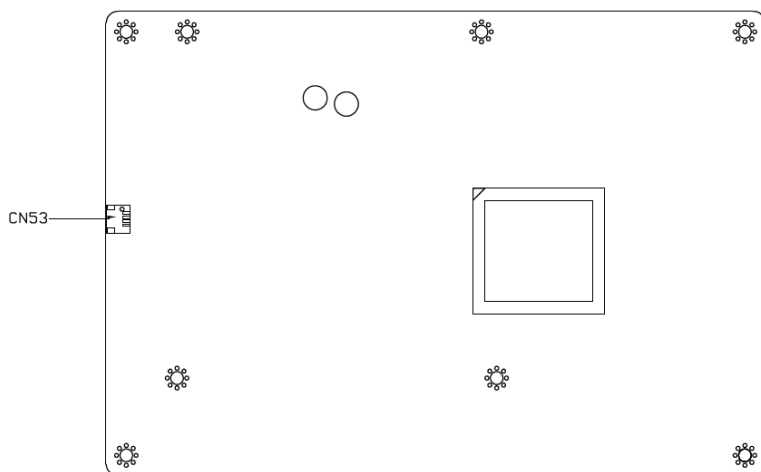

2.3 List of Jumpers


The board features a number of jumpers which can be configured for your application. Please refer to the table below and following sections for all jumpers which can be configured.

Label	Function
CN3	Auto Power Button Selection
CN4	PCI-104 VIO Voltage Selection
CN5	CMOS RTC Setting
CN17	LVDS/eDP Backlight Voltage Selection
CN18	LVDS/eDP Backlight Control Selection
CN28	Touch Screen 4/5/8-Wire Mode Selection
CN34	COM 2 RI/+5/+12V Selection
CN36	COM 3 RI/+5/+12V Selection
CN40	eDP Operating Voltage Selection
CN41	LVDS/eDP Operating Voltage Selection
CN42	eDP Backlight Control Selection
CN43	eDP Backlight Voltage Selection

2.3.1 Auto Power Button Selection (CN3)




Disable



Enable (Default)

Note: When disabled, use CN39 (1-2) to power on the system.

2.3.2 PCI-104 VI/O Voltage Selection (CN4)




+5V




+3.3V (Default)

2.3.3 CMOS RTC Setting (CN5)




Normal (Default)



Clear CMOS

2.3.4 LVDS/eDP Backlight Voltage Selection (CN17)





+12V





+5V (Default)




2.3.5 LVDS/eDP Backlight Control Selection (CN18)

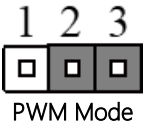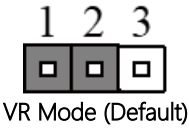




2.3.6 Touchscreen 4/5/8-Wire Mode Selection (CN28)

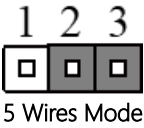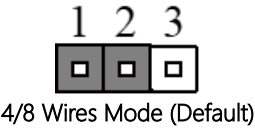



2.3.7 COM2 RI/+5/+12V Selection (CN34)

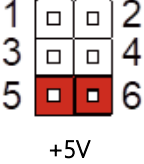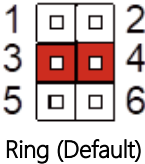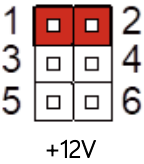



2.3.8 COM 3 RI/+5/+12V Selection (CN36)

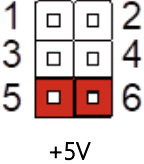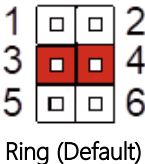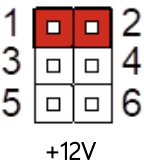



2.3.9 eDP Operating Voltage Selection (CN40)

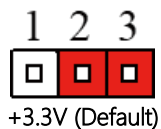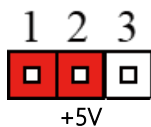



2.3.10 LVDS/eDP Operating Voltage Selection (CN41)

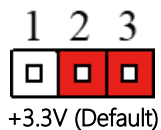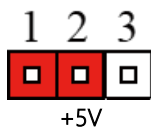

2.3.11 eDP Backlight Control Selection (CN42)

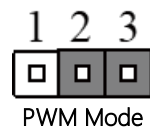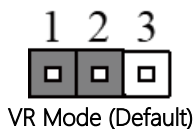

2.3.12 eDP Backlight Voltage Selection (CN43)

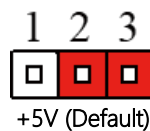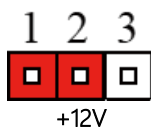

2.4 List of Connectors

This section details the connectors featured on the board, which can be configured for your application. For a list of mating connectors and cables, please see Appendix C. For Electrical Specifications of I/O Ports, please see Appendix D.


Please refer to the table below for a list of all connectors on this board which can be configured.

Label	Function
CN1	Stereo Audio Right Channel
CN2	RTC Battery Connector
CN6	4-Pin Power in Connector
CN7	Stereo Audio Left Channel
CN8	2-Pin Power in Connector
CN9	PCI-104 Connector
CN10	Audio Connector
CN12	LPT/Digital IO Connector
CN13	USB 2.0 Port 2
CN14	USB 2.0 Port 3
CN15	USB 2.0 Port 5
CN16	USB 2.0 Port 4
CN19	LVDS/eDP Inverter/Backlight Connector
CN20	Micro SD Card Connector
CN21	LPC Expansion Connector
CN22	SIM Card Socket
CN23	+5V Output for SATA HDD
CN24	eDP Port
CN25	SATA Port 1
CN26	Mini Card Slot

Label	Function
CN27	Mini Card/mSATA Slot
CN29	Touch Screen Connector
CN30	PS/2 Keyboard Mouse Connector
CN31	COM Port 6
CN32	COM Port 5
CN33	SPI Programming Port
CN35	LVDS/eDP Port
CN37	COM Port 4
CN38	COM Port 3
CN39	Front Panel Connector
CN44	Ethernet Port 1
CN46	eDP Inverter/Backlight Connector
CN45	Ethernet Port 2
CN47	USB Ports 0 & 1
CN48	DP Port
CN49	COM Ports 1 & 2
CN50	HDMI Port
CN51	VGA Port
CN52	SMBus Connector
DIMM1	DDR3L SODIMM


Note: CN50 HDMI Colay with CN24 Display Port is default display port.

2.4.1 Stereo Audio Right Channel (CN1)

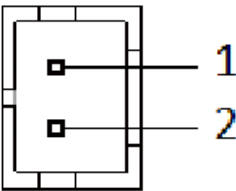


Pin	Pin Name	Signal Type	Signal Level
1	R+	OUT	
2	R-	OUT	

2.4.2 RTC Battery Connector (CN2)

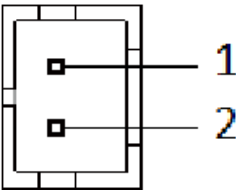


Pin	Pin Name	Signal Type	Signal Level
1	+3.3 V	PWR	3.3 V
2	GND	GND	

2.4.3 4-Pin Power-In Connector (CN6)

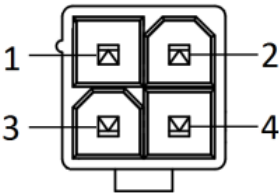


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	GND	GND	
3	+VIN	PWR	+12V // +9V to +24V
4	+VIN	PWR	+12V // +9V to +24V

2.4.4 Stereo Audio Left Channel (CN7)

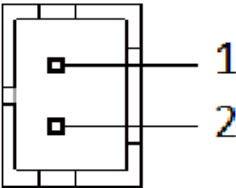

Pin	Pin Name	Signal Type	Signal Level
1	L+	OUT	
2	L-	OUT	

2.4.5 2-Pin Power in Connector (CN8)

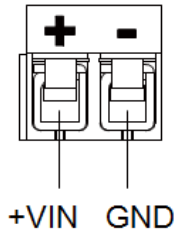


Pin	Pin Name	Signal Type	Signal Level
1	+VIN	PWR	+12V // +9V to +24V
2	GND	GND	

2.4.6 PCI-104 Connector (CN9)

Pin	A	B	C	D
1	GND	+5V_SB	+5V	AD00
2	VI/O	AD02	AD01	+5V
3	AD05	GND	AD04	AD03
4	C/BE0#	AD07	GND	AD06
5	GND	AD09	AD08	GND
6	AD11	VI/O	AD10	M66EN
7	AD14	AD13	GND	AD12
8	+3.3V	C/BE1#	AD15	+3.3V
9	SERR#	GND	PSON#	PAR
10	GND	PERR#	+3.3V	PME#
11	STOP#	+3.3V	LOCK#	GND
12	+3.3V	TRDY#	GND	DEVSEL#
13	FRAME#	GND	IRDY#	+3.3V

Pin	A	B	C	D
14	GND	AD16	+3.3V	C/BE2#
15	AD18	+3.3V	AD17	GND
16	AD21	AD20	GND	AD19
17	+3.3V	AD23	AD22	+3.3V
18	IDSEL0	GND	IDSEL1	IDSEL2
19	AD24	C/BE3#	VI/O	IDSEL3
20	GND	AD26	AD25	GND
21	AD29	+5V	AD28	AD27
22	+5V	AD30	GND	AD31
23	REQ0#	GND	REQ1#	VI/O
24	GND	REQ2#	+5V	GNT0#
25	GNT1#	VI/O	GNT2#	GND
26	+5V	CLK0	GND	CLK1
27	CLK2	+5V	CLK3	GND
28	GND	INTD#	+5V	RST#
29	+12V	INTA#	INTB#	INTC#
30	-12V	REQ3#	GNT3#	GND

2.4.7 Audio Connector (CN10)

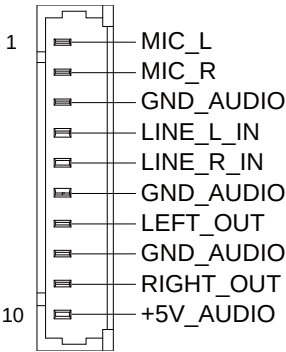

Pin	Pin Name	Signal Type	Signal Level
1	MIC_L	IN	
2	MIC_R	IN	
3	GND_AUDIO	GND	
4	LINE_L_IN	IN	
5	LINE_R_IN	IN	
6	GND_AUDIO	GND	
7	LEFT_OUT	OUT	
8	GND_AUDIO	GND	
9	RIGHT_OUT	OUT	
10	+5V_AUDIO	PWR	+5V

2.4.8 LPT/Digital I/O Connector (CN12)


LPT Mode			
Pin	Pin Name	Signal Type	Signal Level
1	STOBE#	I/O	
2	#AFD	I/O	
3	PPD0	I/O	
4	ERR#	I/O	
5	PPD1	I/O	
6	PINIT#	I/O	
7	PPD2	I/O	
8	SLIN#	I/O	
9	PPD3	I/O	
10	GND	GND	
11	PPD4	I/O	
12	GND	GND	
13	PPD5	I/O	
14	GND	GND	
15	PPD6	I/O	
16	GND	GND	
17	PPD7	I/O	
18	GND	GND	
19	ACK#	I/O	
20	GND	GND	
21	BUSY	I/O	
22	GND	GND	
23	PE	I/O	

LPT Mode			
Pin	Pin Name	Signal Type	Signal Level
24	GND	GND	
25	SLCT	I/O	
26	PWR	PWR	+5V

Digital I/O Mode			
Pin	Pin Name	Signal Type	Signal Level
1	GPIO15	I/O	+5V
2	GPIO14	I/O	+5V
3	GPIO0	I/O	+5V
4	GPIO13	I/O	+5V
5	GPIO1	I/O	+5V
6	GPIO12	I/O	+5V
7	GPIO2	I/O	+5V
8	GPIO11	I/O	+5V
9	GPIO3	I/O	+5V
10	GND	GND	
11	GPIO4	I/O	+5V
12	GND	GND	
13	GPIO5	I/O	+5V
14	GND	GND	
15	GPIO6	I/O	+5V
16	GND	GND	
17	GPIO7	I/O	+5V
18	GND	GND	
19	GPIO10	I/O	+5V
20	GND	GND	


Digital I/O Mode			
Pin	Pin Name	Signal Type	Signal Level
21	GPIO9	I/O	+5V
22	GND	GND	
23	GPIO8	I/O	+5V
24	GND	GND	
25	N.C		
26	PWR	PWR	+5V

2.4.9 USB 2.0 Ports 2 - 5 (CN13/14/15/16)

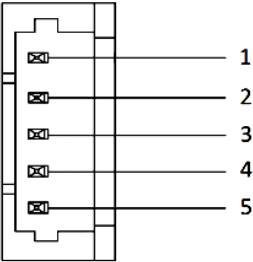

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB2_D-	DIFF	
3	USB2_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.4.10 LVDS/eDP Inverter / Backlight Connector (CN19)

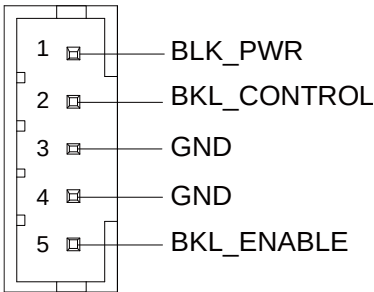


Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	+3.3V

Note: BLK_PWR can be set to +12V or +5V by jumper CN17 (see section 2.3.4).

The maximum driving current is 1.5A.


BKL_CONTROL can be set to VR Mode or PWM Mode by jumper CN18 (see section 2.3.5)

2.4.11 Micro SD Card Connector (CN20)

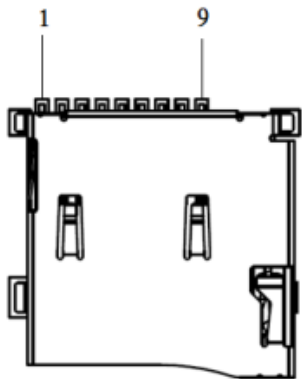

Pin	Pin Name	Signal Type	Signal Level
1	SDIO_D2	I/O	
2	SDIO_D3	I/O	
3	SDIO_CMD	I/O	
4	+3.3V	PWR	+3.3V
5	SDIO_CLK	I/O	
6	GND	GND	
7	SDIO_D0	I/O	
8	SDIO_D1	I/O	
9	SDIO_CD#	I/O	

2.4.12 LPC Expansion Connector (CN21)

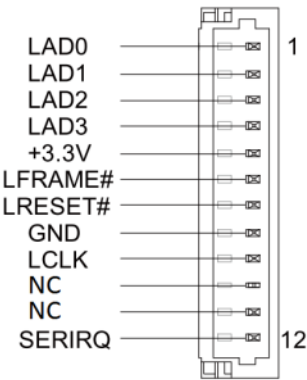


Pin	Pin Name	Signal Type	Signal Level
1	LAD0	I/O	+3.3V
2	LAD1	I/O	+3.3V
3	LAD2	I/O	+3.3V
4	LAD3	I/O	+3.3V
5	+3.3V	PWR	+3.3V
6	LFRAME#	IN	
7	LRESET#	OUT	+3.3V
8	GND	GND	
9	LCLK	OUT	
10	NC		
11	NC		
12	SERIRQ	I/O	+3.3V

2.4.13 SIM Card Socket (CN22)


Pin	Pin Name	Signal Type	Signal Level
1	SIM_PWR	PWR	
2	SIM_RST	IN	
3	SIM_CLK	IN	
4	GND	GND	
5	SIM_VPP	PWR	
6	SIM_DATA	I/O	

2.4.14 +5V Output for SATA HDD (CN23)

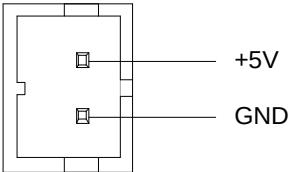

Pin	Pin Name	Signal Type	Signal Level
1	+5V	PWR	+5V
2	GND	GND	

2.4.15 eDP (CN24)

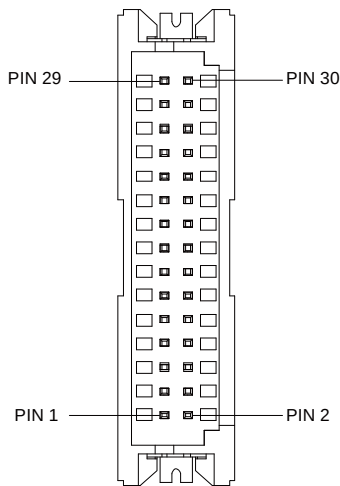


Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	eDP_DA3-	DIFF	
6	eDP_DA3+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	eDP_DA2-	DIFF	
10	eDP_DA2+	DIFF	
11	eDP_DA1-	DIFF	
12	eDP_DA1+	DIFF	
13	eDP_DA0-	DIFF	
14	eDP_DA0+	DIFF	

Pin	Pin Name	Signal Type	Signal Level
15	NC		
16	Hot Plug Detect #		
17	eDP_AUX-	DIFF	
18	eDP_AUX+	DIFF	
19	NC		
20	NC		
21	NC		
22	NC		
23	NC		
24	NC		
25	NC		
26	NC		
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	NC		
30	NC		

Note: LVDS LCD_PWR can be set to +3.3V or +5V by CN40 (see section 2.4.9).
The max driving current is 2A.

2.4.16 SATA Port1 (CN25)

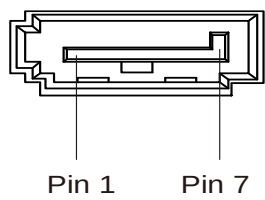

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX+	DIFF	
3	SATA_TX-	DIFF	
4	GND	GND	
5	SATA_RX-	DIFF	
6	SATA_RX+	DIFF	
7	GND	GND	

2.4.17 Mini Card Slot (CN26)

Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	
8	UIM_PWR		
9	GND	GND	
10	UIM_DAT		

Pin	Pin Name	Signal Type	Signal Level
11	PCIE_REF_CLK-	DIFF	
12	UIM_CLK		
13	PCIE_REF_CLK+	DIFF	
14	UIM_RST		
15	GND	GND	
16	UIM_VPP		
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-	DIFF	
24	+3.3VSB	PWR	+3.3V
25	PCIE_RX+	DIFF	
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3VSB	PWR	+3.3V

2.4.18 Mini Card/mSATA Slot (CN27)

Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	
8	NC		


Pin	Pin Name	Signal Type	Signal Level
9	GND	GND	
10	NC		
11	PCIE_REF_CLK-	DIFF	
12	NC		
13	PCIE_REF_CLK+	DIFF	
14	NC		
15	GND	GND	
16	NC		
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	SATA_RX+	DIFF	
24	+3.3V	PWR	+3.3V
25	SATA_RX-	DIFF	
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	SATA_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	SATA_TX+	DIFF	
34	GND	GND	
35	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3V	PWR	+3.3V
40	GND	GND	
41	+3.3V	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3V	PWR	+3.3V

Note: CN27 can be selected for Mini Card or mSATA by BOM change.

2.4.19 Touchscreen Connector (CN29)


8 Wires

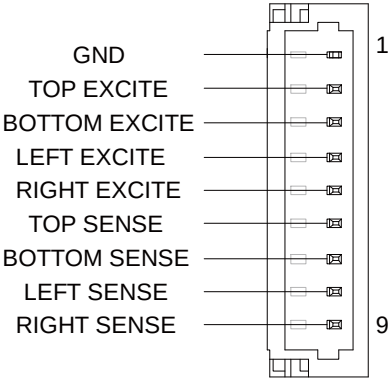

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP EXCITE	IN	
3	BOTTOM EXCITE	IN	
4	LEFT EXCITE	IN	
5	RIGHT EXCITE	IN	
6	TOP SENSE	IN	
7	BOTTOM SENSE	IN	
8	LEFT SENSE	IN	
9	RIGHT SENSE	IN	


Note: Touchscreen mode can be set by jumper CN28 (see section 2.4.6).

5 Wires

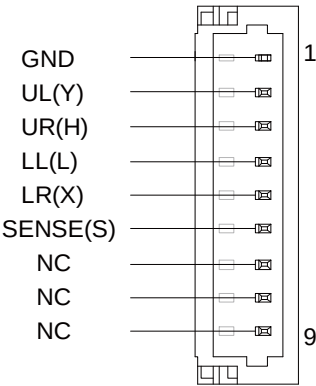


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	UL(Y)	IN	
3	UR(H)	IN	
4	LL(L)	IN	
5	LR(X)	IN	
6	SENSE(S)	IN	
7	NC		
8	NC		
9	NC		

4 Wires

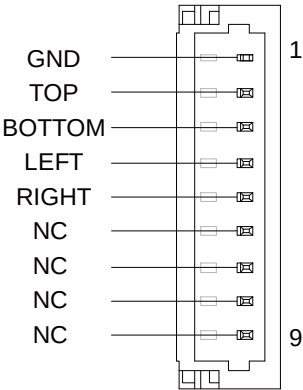


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP	IN	
3	BOTTOM	IN	
4	LEFT	IN	
5	RIGHT	IN	
6	NC		
7	NC		
8	NC		
9	NC		

2.4.20 PS/2 Keyboard Mouse Connector (CN30)

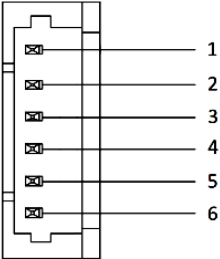


Pin	Pin Name	Signal Type	Signal Level
1	KB_ DATA	I/O	+5V
2	KB_CLK	I/O	+5V
3	GND	GND	
4	+5VSB	PWR	+5V
5	MS_DATA	I/O	+5V
6	MS_CLK	I/O	+5V

2.4.21 COM Port 4/5/6 (CN31/32/37)

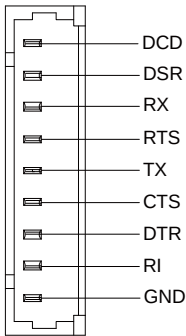


Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	+9V
5	TX	OUT	+9V
6	CTS	IN	
7	DTR	OUT	+9V
8	RI	IN	
9	GND	GND	

2.4.22 SPI Programming Port (CN33)

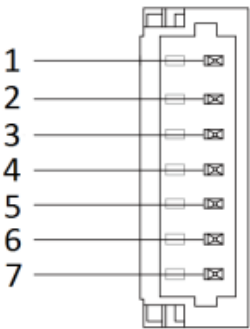

Pin	Pin Name	Signal Type	Signal Level
1	SPI_MISO	OUT	
2	GND	GND	
3	SPI_CLK	IN	
4	+3.3VSB	PWR	+3.3V
5	SPI_MOSI	IN	
6	SPI_CS	IN	
7	NC		

2.4.23 LVDS/eDP Port (CN35)

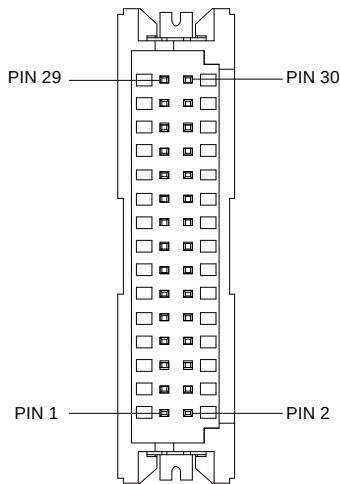

LVDS Settings			
Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	LVDS_A_CLK-	DIFF	
6	LVDS_A_CLK+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	LVDS_DA0-	DIFF	
10	LVDS_DA0+	DIFF	
11	LVDS_DA1-	DIFF	
12	LVDS_DA1+	DIFF	
13	LVDS_DA2-	DIFF	

LVDS Settings			
Pin	Pin Name	Signal Type	Signal Level
14	LVDS_DA2+	DIFF	
15	LVDS_DA3-	DIFF	
16	LVDS_DA3+	DIFF	
17	DDC_DATA	I/O	+3.3V
18	DDC_CLK	I/O	+3.3V
19	LVDS_DB0-	DIFF	
20	LVDS_DB0+	DIFF	
21	LVDS_DB1-	DIFF	
22	LVDS_DB1+	DIFF	
23	LVDS_DB2-	DIFF	
24	LVDS_DB2+	DIFF	
25	LVDS_DB3-	DIFF	
26	LVDS_DB3+	DIFF	
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	LVDS_B_CLK-	DIFF	
30	LVDS_B_CLK+	DIFF	


Note: LVDS LCD_PWR can be set to +3.3V or +5V by jumper CN41 (see section 2.4.10). The max driving current is 2A.

eDP Settings			
Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	eDP_DA3-	DIFF	
6	eDP_DA3+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	eDP_DA2-	DIFF	
10	eDP_DA2+	DIFF	
11	eDP_DA1-	DIFF	
12	eDP_DA1+	DIFF	
13	eDP_DA0-	DIFF	
14	eDP_DA0+	DIFF	
15	NC		
16	Hot Plug Detect #		
17	eDP_AUX-	DIFF	
18	eDP_AUX+	DIFF	
19	NC		
20	NC		
21	NC		
22	NC		
23	NC		
24	NC		
25	NC		
26	NC		

eDP Settings			
Pin	Pin Name	Signal Type	Signal Level
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	NC		
30	NC		

Note: eDP may not work on DDI0. Pre-testing eDP is recommended.

2.4.24 COM Port 3 (CN38)

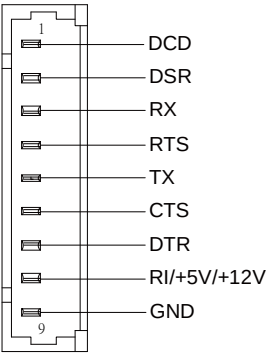


RS-232 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±6V
5	TX	OUT	±6V
6	CTS	IN	
7	DTR	OUT	±6V


RS-232 Settings			
Pin	Pin Name	Signal Type	Signal Level
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

Note: COM 3 RS-232/422/485 can be set by BIOS settings. Default is RS-232. See Ch 3.4.8.3.

Function for Pin 8 can be set by CN36 (See Section 2.3.8)

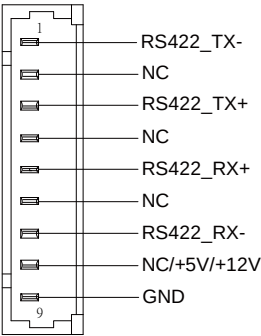


RS-422 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_TX+	OUT	±5V
4	NC		
5	RS422_RX+	IN	
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

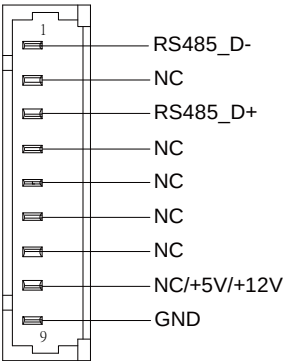


RS-485 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	RS485_D-	I/O	±5V
2	NC		
3	RS485_D+	I/O	±5V
4	NC		
5	NC		
6	NC		
7	NC		
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

2.4.25 Front Panel Connector (CN39)

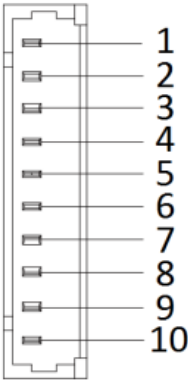


Pin	Pin Name	Signal Type	Signal Level
1	PWR_BTN#	IN	
2	GND	GND	
3	+5V	PWR	+5V
4	FP_SPKR	IN	
5	+3.3V	PWR	+3.3V
6	HDD_LED#	IN	
7	+3.3V	PWR	+3.3V
8	GND	GND	
9	HWRST#	IN	
10	GND	GND	

2.4.26 Ethernet Port 1/2 (CN44/45)

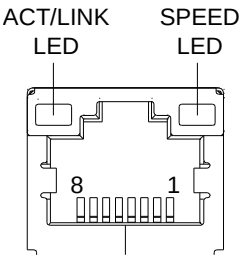

Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	

2.4.27 eDP Inverter/Backlight (CN46)

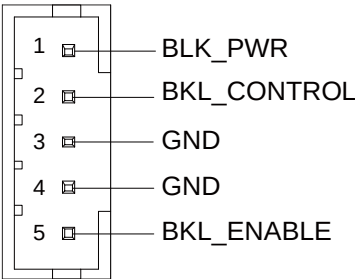


Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	+5V

Note: BLK_PWR can be set to +12V or +5V by CN43. (See Section 2.4.12)

The max driving current is 1.5A.

BLK_CONTROL can be set to VR Mode or PWM Mode by CN42. (See Section 2.4.11)


2.4.28 USB Port 0 & 1 (CN47)

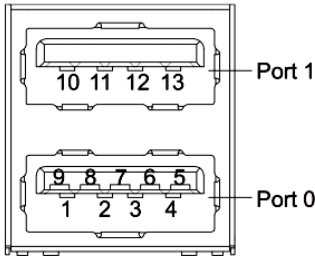

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB0_D-	DIFF	
3	USB0_D+	DIFF	
4	GND	GND	
5	USB0_SSRX-	DIFF	
6	USB0_SSRX+	DIFF	
7	GND	GND	
8	USB0_SSTX-	DIFF	
9	USB0_SSTX+	DIFF	
10	+5VSB	PWR	+5V
11	USB1_D-	DIFF	
12	USB1_D+	DIFF	
13	GND	GND	

Note: Only Port 0 supports USB 3.0.


2.4.29 DP Port (CN48)

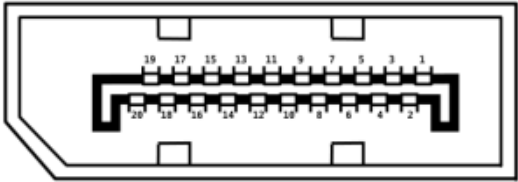

Pin	Pin Name	Signal Type	Signal Level
1	DP_D0+	DIFF	
2	GND	GND	
3	DP_D0-	DIFF	
4	DP_D1+	DIFF	
5	GND	GND	
6	DP_D1-	DIFF	
7	DP_D2+	DIFF	
8	GND	GND	
9	DP_D2-	DIFF	
10	DP_D3+	DIFF	
11	GND	GND	
12	DP_D3-	DIFF	
13	GND	GND	
14	GND	GND	
15	DP_AUX+	DIFF	
16	GND	GND	
17	DP_AUX-	DIFF	
18	HPLG_DETECT	IN	
19	GND	GND	
20	+3.3V	I/O	+3.3V

2.4.30 COM Port 1 & 2 (CN49)

COM 1 RS-232 Settings

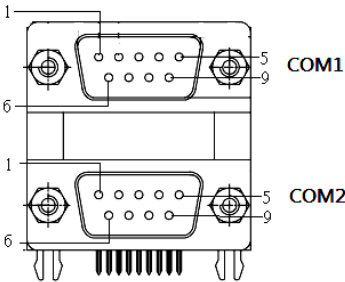

RS-232 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	RX	IN	
3	TX	OUT	±9 V
4	DTR	OUT	±9 V
5	GND	GND	
6	DSR	IN	
7	RTS	OUT	±9 V
8	CTS	IN	
9	RI	IN	

Note: COM2 RS-232/422/485 can be set by BIOS setting. Default is RS-232. See Ch 3.4.8.2.

Function for Pin 9 can be set by jumper CN34 (see section 2.4.7).

COM 2 RS-232 Settings

RS-232 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	RX	N	
3	TX	OUT	±9V
4	DTR	OUT	±9V
5	GND	GND	
6	DSR	IN	
7	RTS	OUT	±9V
8	CTS	IN	
9	RI/+5V/+12V	IN/PWR	+5V/ +12V


COM 2 RS-422 Settings

RS-422 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	RS422_TX-	OUT	±5 V
2	RS422_TX+	OUT	±5 V
3	RS422_RX+	IN	
4	RS422_RX-	IN	
5	GND	GND	
6	NC		
7	NC		
8	NC		
9	NC/+5V/+12V	PWR	+5 V/ +12 V

COM 2 RS-485 Settings

RS-485 Settings			
Pin	Pin Name	Signal Type	Signal Level
1	RS485_D-	I/O	±5V
2	RS485_D+	I/O	±5V
3	NC		
4	NC		
5	GND	GND	
6	NC		
7	NC		
8	NC		
9	NC/+5V/+12V	PWR	+5V/ +12V


2.4.31 HDMI Port (CN50)

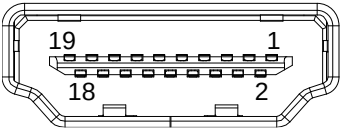

Pin	Pin Name	Signal Type	Signal Level
1	TMDS_DAT2+	DIFF	
2	GND	GND	
3	TMDS_DAT2-	DIFF	
4	TMDS_DAT1+	DIFF	
5	GND	GND	
6	TMDS_DAT1-	DIFF	
7	TMDS_DAT0+	DIFF	
8	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
9	TMDS_DAT0-	DIFF	
10	TMDS_CLK+	DIFF	
11	GND	GND	
12	TMDS_CLK-	DIFF	
13	NC		
14	NC		
15	DDC_CLK	I/O	+5V
16	DDC_DATA	I/O	+5V
17	GND	GND	
18	+5V	I/O	+5V
19	HPLG_DETECT	IN	


2.4.32 VGA Port (CN51)

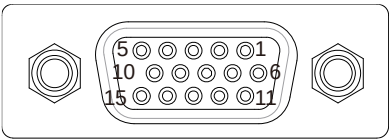

Pin	Pin Name	Signal Type	Signal Level
1	RED	OUT	
2	GREEN	OUT	
3	BLUE	OUT	
4	NC		
5	GND	GND	
6	RED_GND_RTN	GND	
7	GREEN_GND_RTN	GND	
8	BLUE_GND_RTN	GND	

Pin	Pin Name	Signal Type	Signal Level
9	+5V	PWR	+5V
10	CRT_PLUG#		
11	NC		
12	DDC_DATA	I/O	+5V
13	HSYNC	OUT	
14	VSYNC	OUT	
15	DDC_CLK	I/O	+5V

2.4.33 SMBus Connector (CN52)

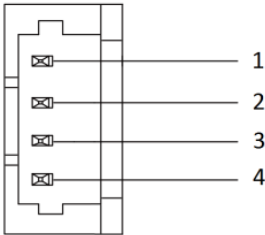

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	+5V
2	SMB_DATA	I/O	
3	SMB_CLK	I/O	
4	+5V	PWR	

2.4.34 DDR3L SODIMM (DIMM1)

Standard Specifications.

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization during the boot up sequence. If an error, fatal or non-fatal, is encountered, the system will output a few short beeps or an error message. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be output, and the BIOS setup program will need to be run to set the configuration information in memory.

There are three situations in which the CMOS settings will need to be set or changed:

- Starting the system for the first time
- The system hardware has been changed
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention. The battery must be replaced when it runs down.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Access and configure advanced processor options and features.

Chipset – Chipset and host bridge options and features

Security – The setup administrator password can be set here


Boot – Set boot options including boot priority and Quiet Boot option

Save & Exit – Save your changes and exit the program


3.3 Setup Submenu: Main



3.4 Setup Submenu: Advanced

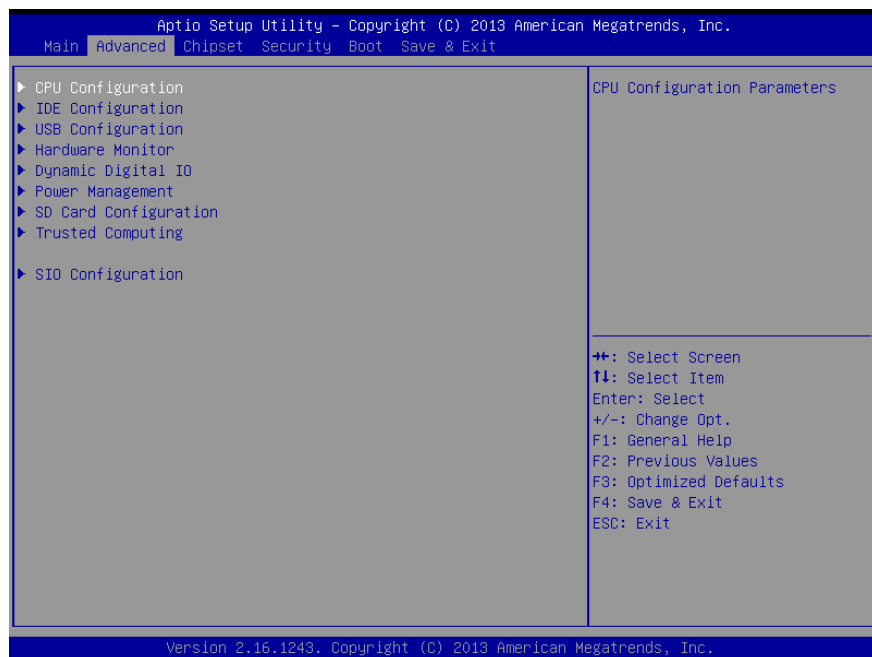


3.4.1 CPU Configuration

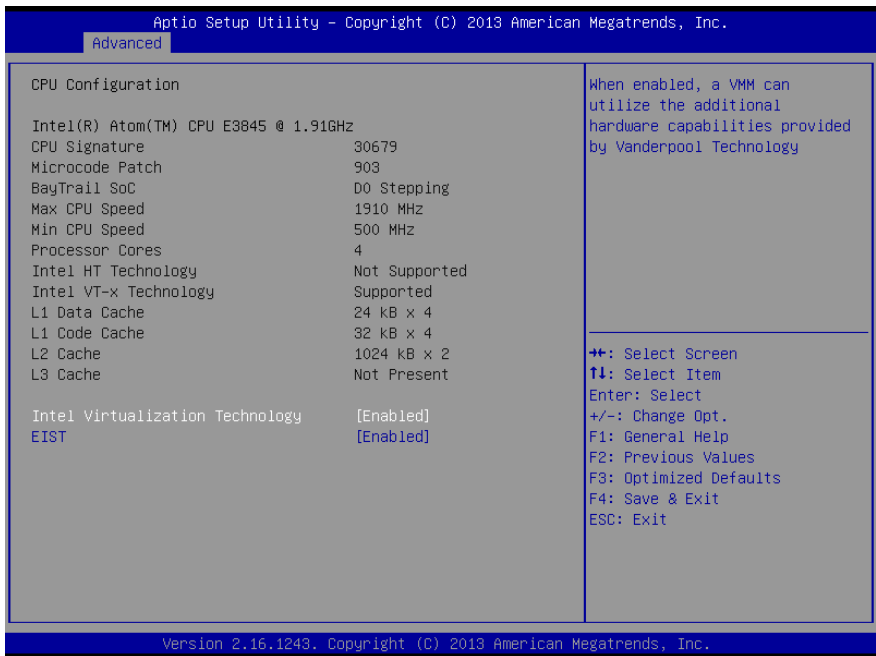

Options Summary


Intel Virtualization Technology	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Intel Virtualization Technology.		
EIST	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable EIST.		

3.4.2 IDE Configuration

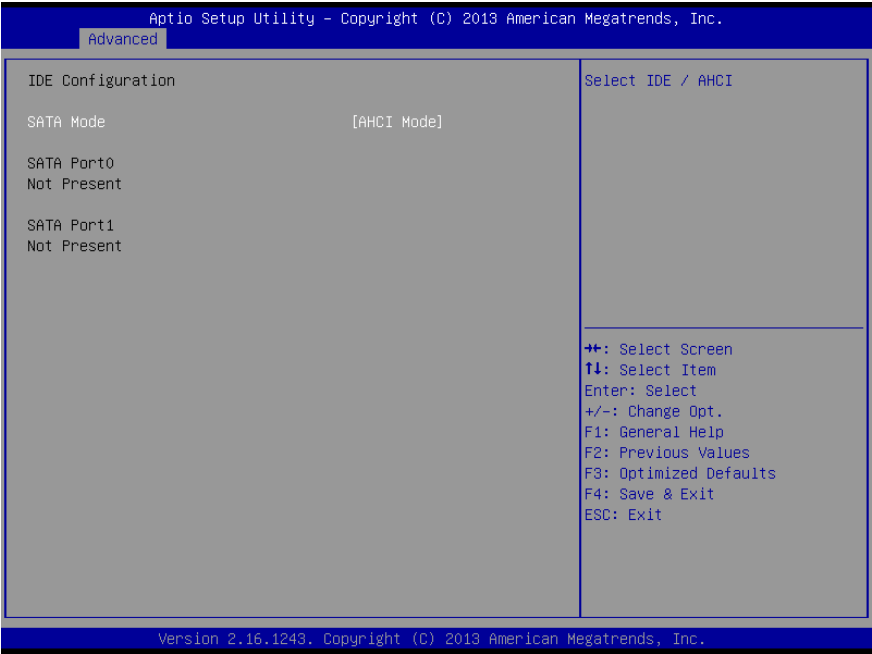


Options Summary		
SATA Mode	IDE Mode	
	AHCI Mode	Optimal Default, Failsafe Default

3.4.3 USB Configuration


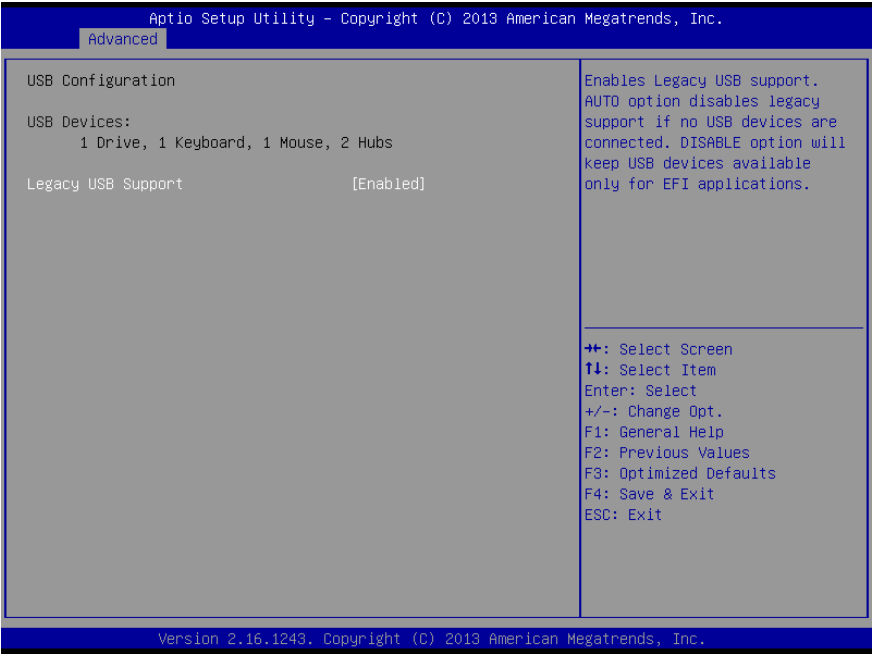


Options Summary		
Legacy USB Support	Enabled	Optimal Default, Failsafe Default
	Disabled	
	Auto	
Enables BIOS Support for Legacy USB Support. When enabled, USB can be functional in legacy environment like DOS. AUTO option disables legacy support if no USB devices are connected.		

3.4.4 Hardware Monitor

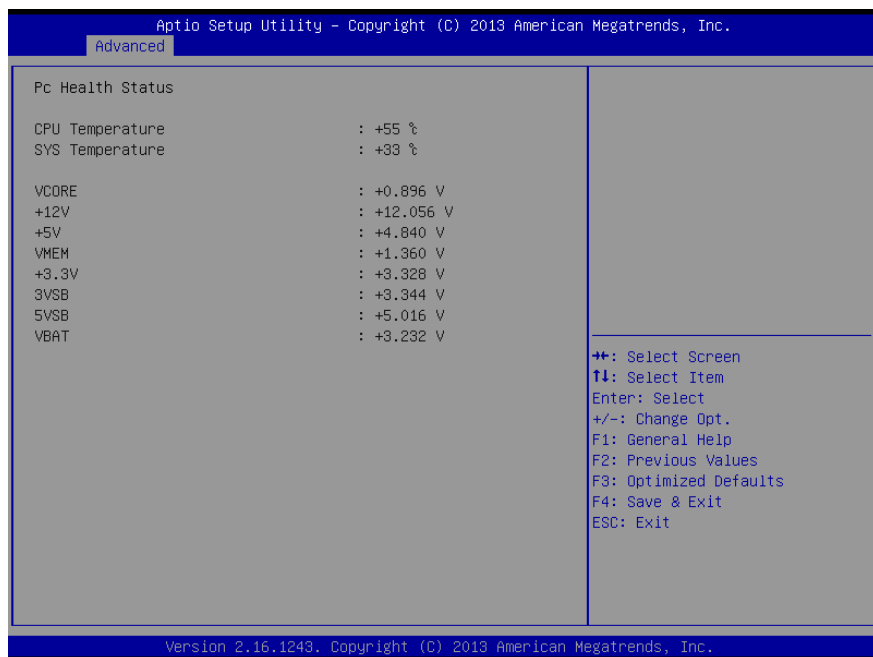


3.4.5 Dynamic Digital I/O

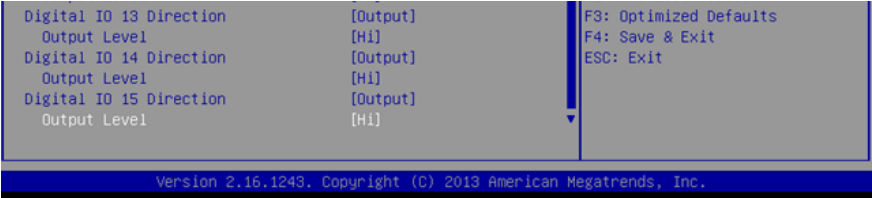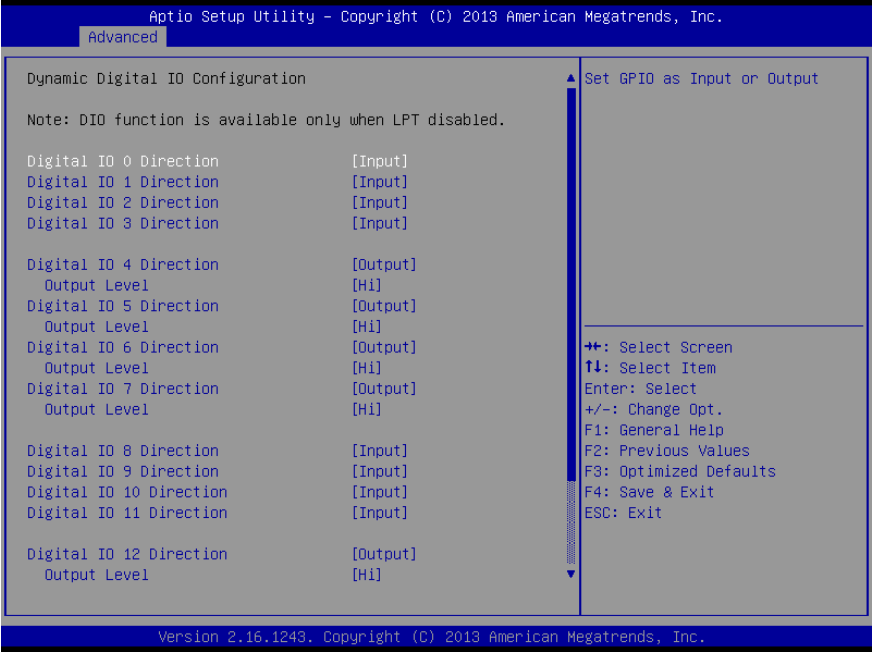

Options Summary		
Digital GPIO [3:0] Direction	Input	Optimal Default, Failsafe Default
	Output	
Set GPIO as Input or Output.		
Digital GPIO [7:4] Direction	Input	
	Output	Optimal Default, Failsafe Default
Set GPIO as Input or Output.		
Output Level	Low	
	Hi	Optimal Default, Failsafe Default


Options Summary		
Digital GPIO [11:8] Direction	Input	Optimal Default, Failsafe Default
	Output	
Set GPIO as Input or Output.		
Digital GPIO [15:12] Direction	Input	
	Output	Optimal Default, Failsafe Default
Set GPIO as Input or Output.		
Output Level	Low	
	Hi	Optimal Default, Failsafe Default

3.4.6 Power Management

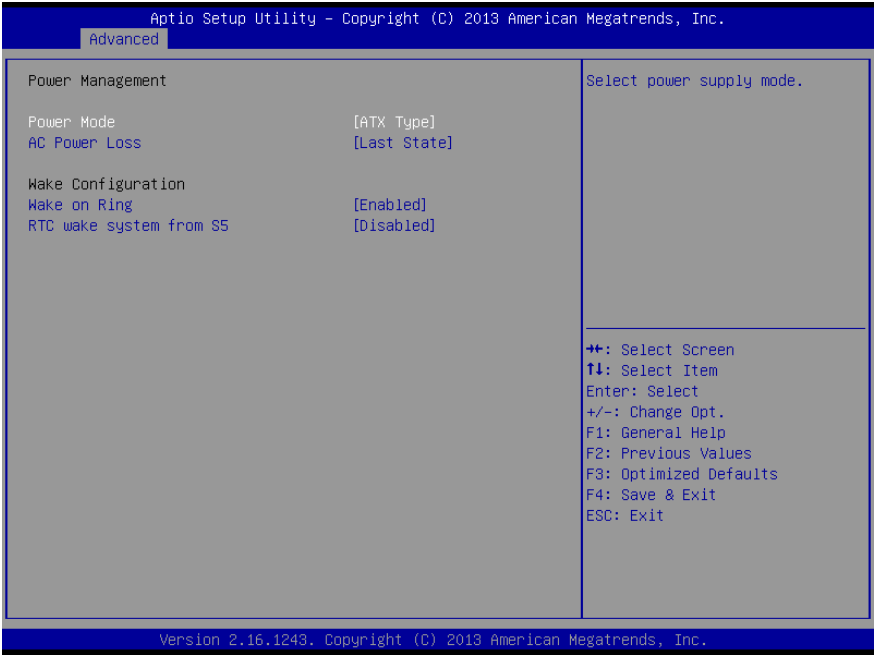


Options Summary		
Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select power supply mode.		
AC Power Loss	Last State	Optimal Default, Failsafe Default
	Power On	
	Power Off	
Select power state when power is re-applied after a power failure.		
Wake on Ring	Enable	Optimal Default, Failsafe Default
	Disable	
Enable or disable System wake on Ring.		
RTC wake system from S5	Disabled	Optimal Default, Failsafe Default
	Fixed Time	
	Dynamic Time	
Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified.		

3.4.7 SD Card Configuration

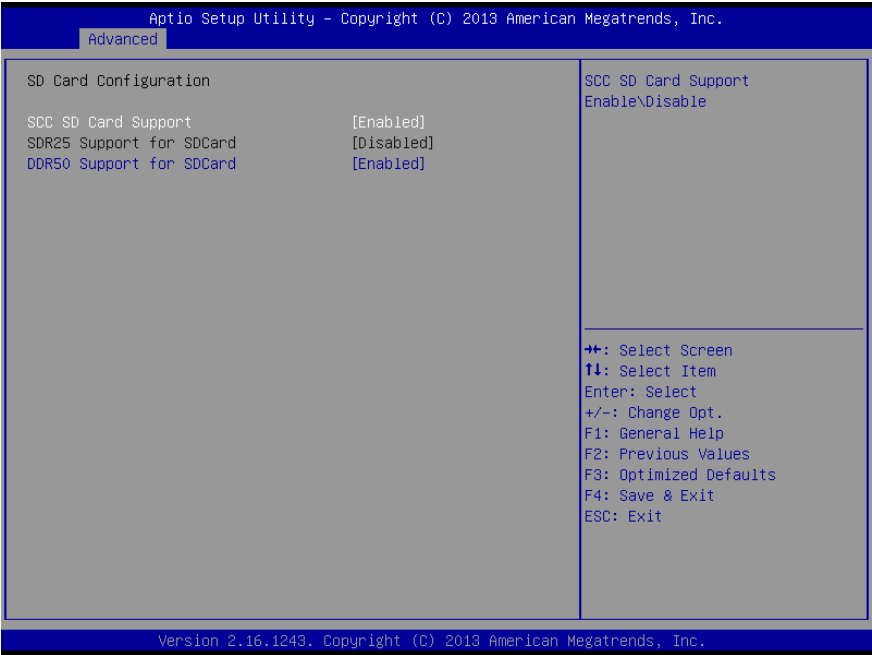


Options Summary		
SCC SD Card Support	Enable	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable SD card.		
SDR25 Support for SDCard	Enabled	
	Disabled	Optimal Default, Failsafe Default
Enable/Disable SDR25 Capability in SD Card controller.		
DDR50 Support for SDCard	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable DDR50 Capability in SD Card controller.		

3.4.8 Trusted Computing

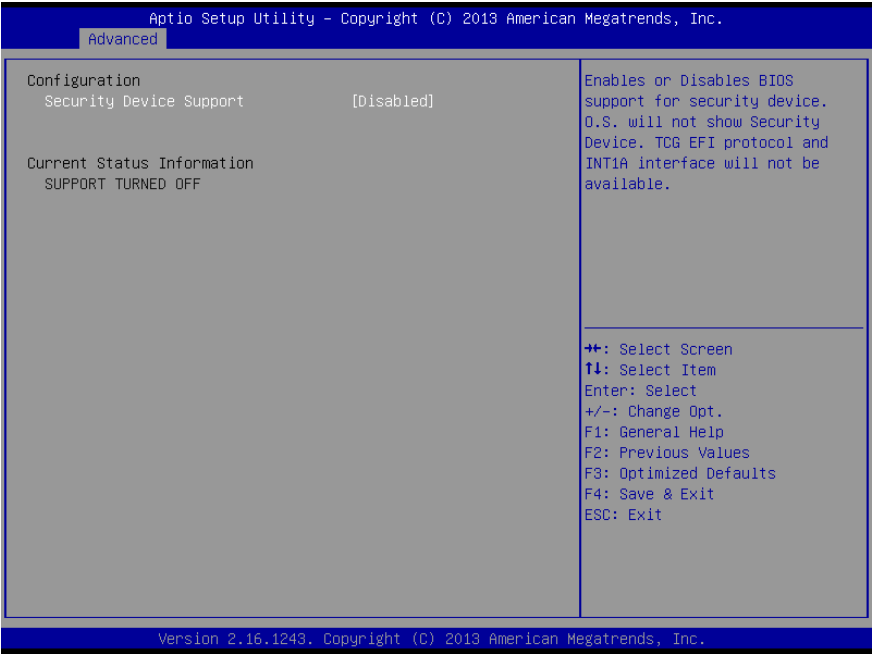


Options Summary		
Security Device Support	Disable	Optimal Default, Failsafe Default
	Enable	
Enable or Disable BIOS support for security device.		

3.4.9 SIO Configuration

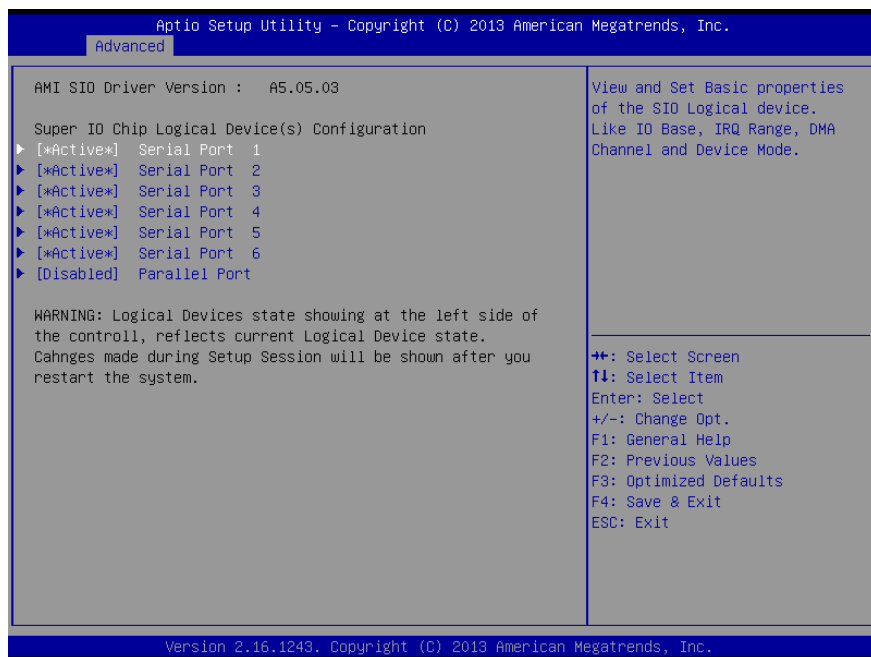


3.4.9.1 Serial Port 1 Configuration

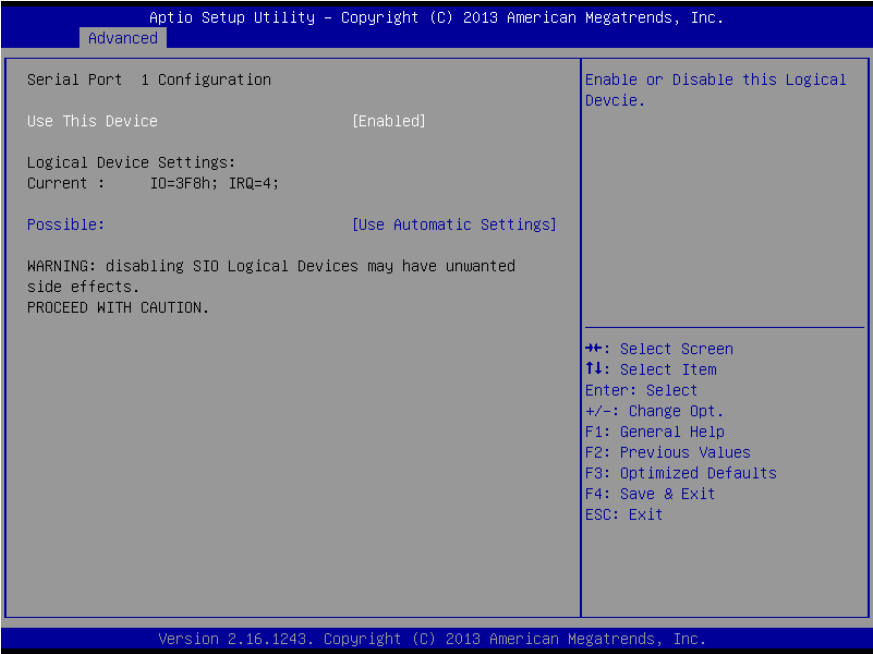


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Serial Port (COM).		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3F8; IRQ=4;	
	IO=2F8; IRQ=3;	
Select an optimal setting for IO device.		

3.4.9.2 Serial Port 2 Configuration

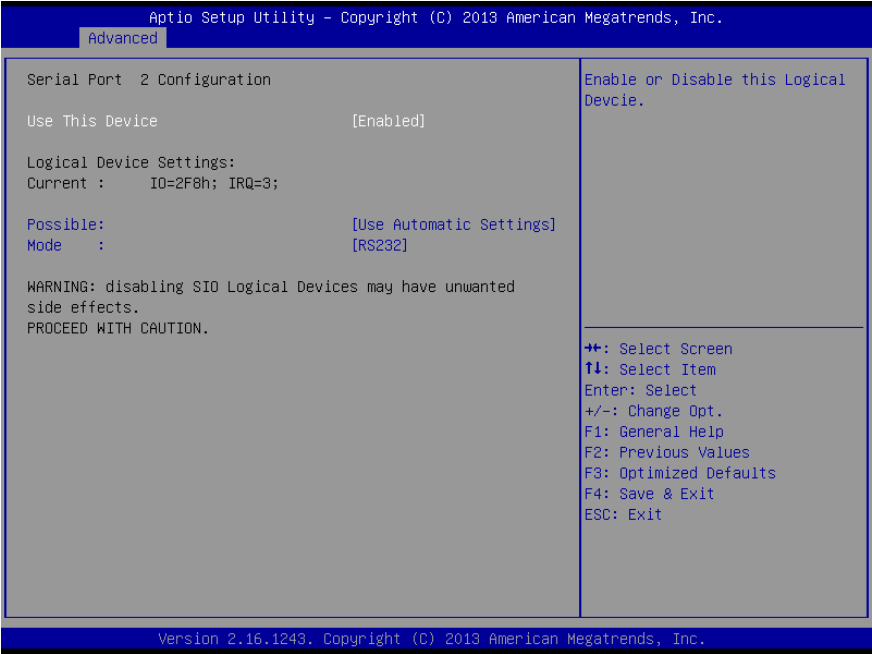


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Serial Port (COM).		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2F8; IRQ=3;	
	IO=3F8; IRQ=4;	
Select an optimal setting for IO device.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	

3.4.9.3 Serial Port 3 Configuration

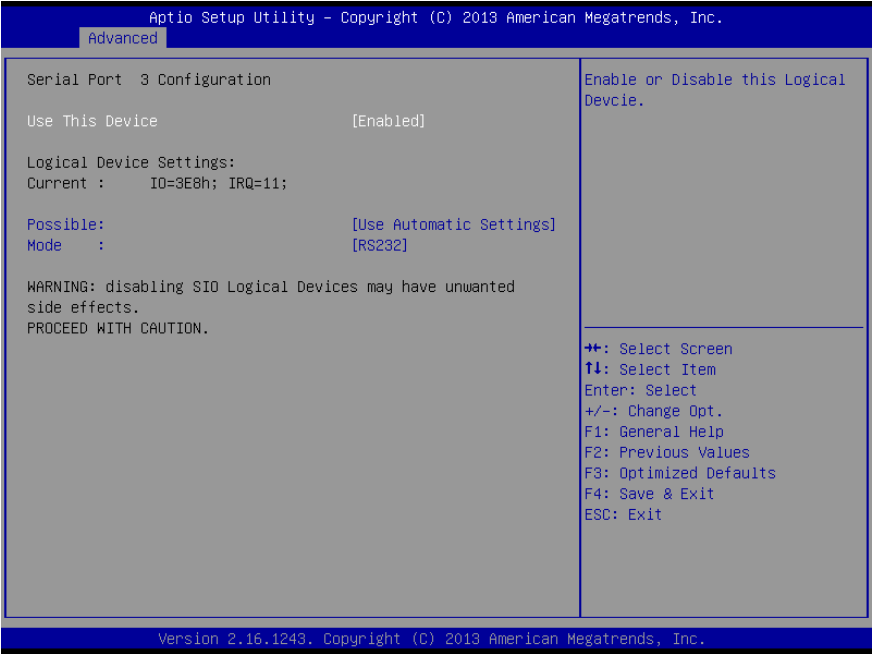


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Serial Port (COM).		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3E8; IRQ=11;	
	IO=2E8; IRQ=11;	
Select an optimal setting for IO device.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	

3.4.9.4 Serial Port 4 Configuration

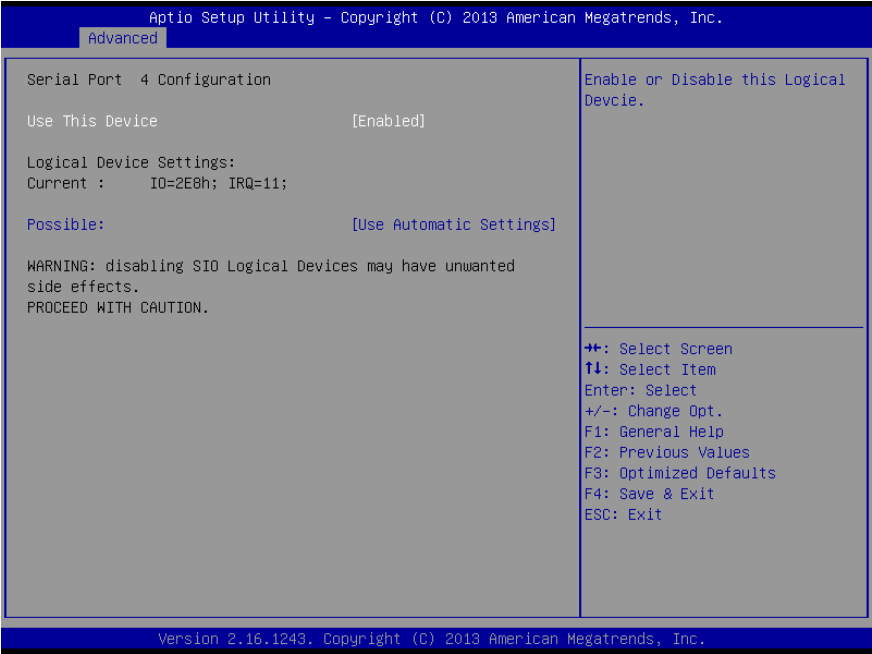


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Serial Port (COM).		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2E8; IRQ=11;	
	IO=3E8; IRQ=11;	
Select an optimal setting for IO device.		

3.4.9.5 Serial Port 5 Configuration

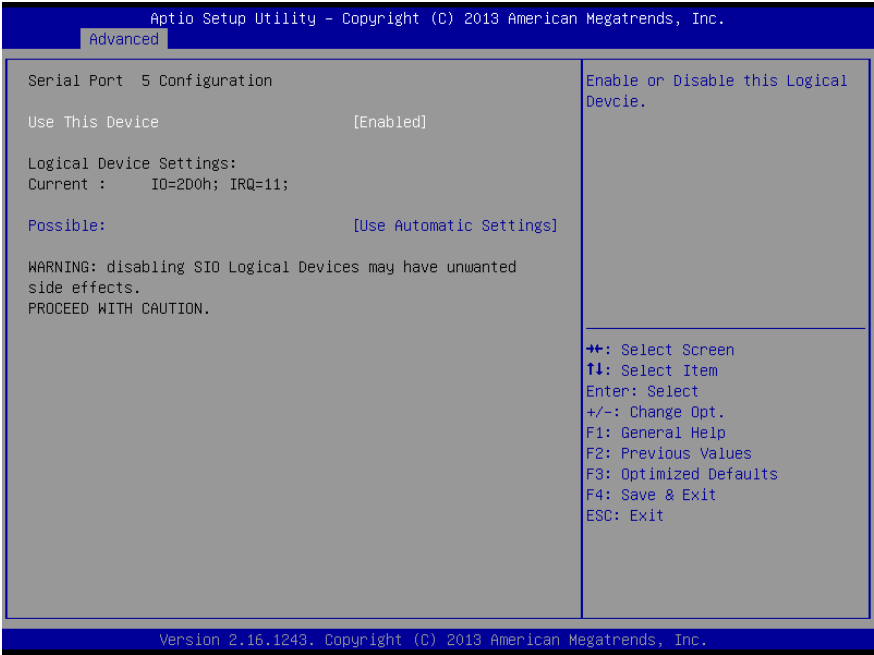


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Serial Port (COM).		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2D0; IRQ=11;	
	IO=2C0; IRQ=11;	
Select an optimal setting for IO device.		

3.4.9.6 Serial Port 6 Configuration

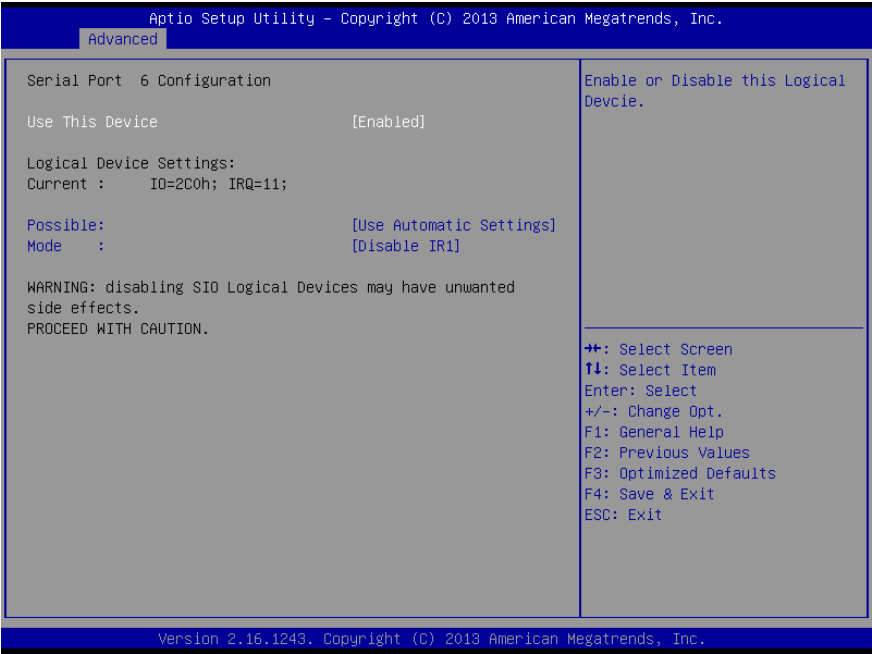

Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
En/Disable Serial Port (COM).		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2C0; IRQ=11;	
	IO=2E8; IRQ=11;	
Select an optimal setting for IO device.		
Mode:	Disable IR1	Optimal Default, Failsafe Default
	Enable IR1 (pulse 1.6uS)	
	Enable IR1 (pulse 3/16-bit time)	
Set the Serial Mode.		

3.4.10 Parallel Port Configuration

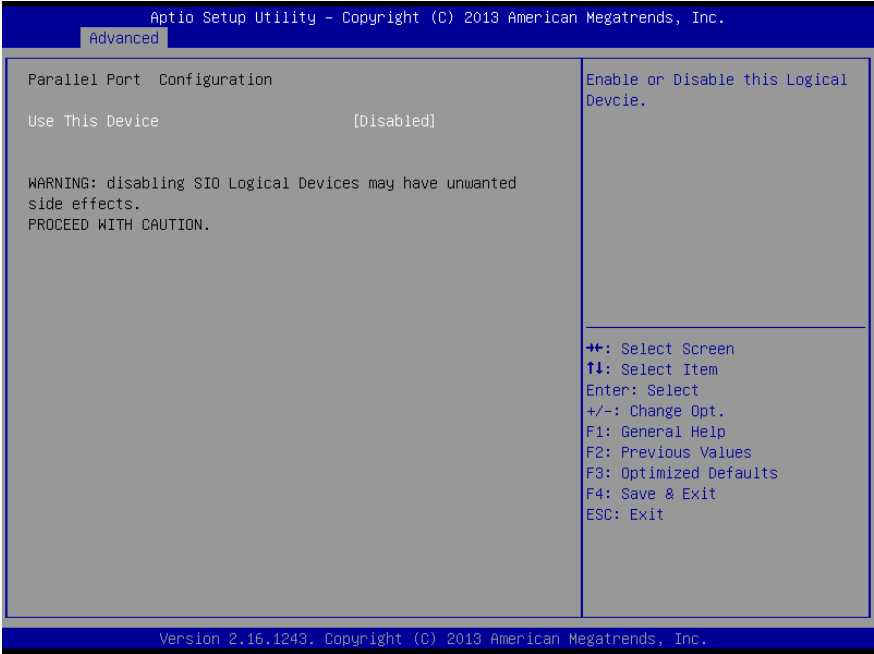


Options Summary		
Use This Device	Disabled	Optimal Default, Failsafe Default
	Enabled	
En/Disable Parallel Port.		


3.5 Setup Submenu: Chipset



3.5.1 North Bridge

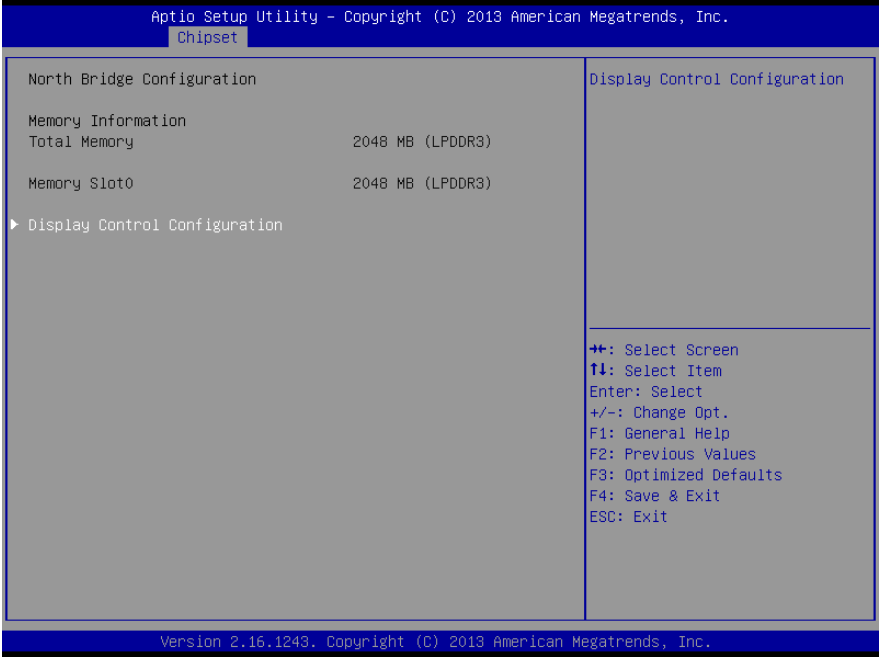

3.5.1.1 Display Control Configuration

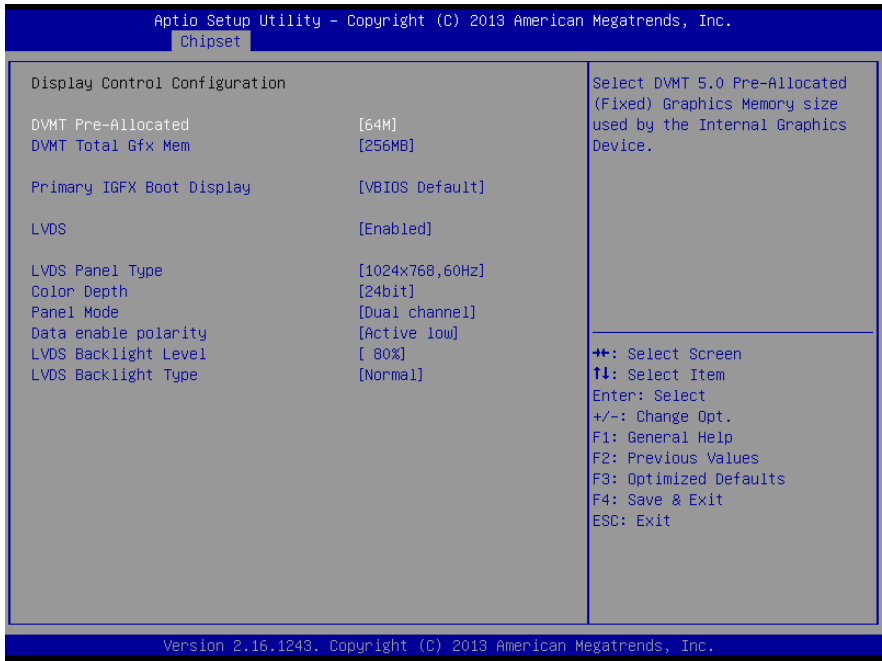


Options Summary		
DVMT Pre-Allocated	64M	Optimal Default, Failsafe Default
	96M	
	128M	
	160M	
	192M	
	224M	
	256M	
	288M	
	320M	
	352M	
	384M	
	416M	
	448M	
	480M	
	512M	

Options Summary		
DVMT Total Gfx Mem	128MB	
	256MB	Optimal Default, Failsafe Default
	Max	
DVMT Total Gfx Mem	128MB	
	256MB	Optimal Default, Failsafe Default
	Max	
LVDS	Enable	Optimal Default, Failsafe Default
	Disable	
LVDS Panel Type	640x480, 60Hz	
	800x480, 60Hz	
	800x600,60Hz	
	1024x600,60Hz	
	1024x768,60Hz	Optimal Default, Failsafe Default
	1280x768,60Hz	
	1280x1024,60Hz	
	1366x768,60Hz	
	1440x900,60Hz	
	1600x1200,60Hz	
	1920x1080,60Hz	
	1920x1200,60Hz	
	1280x800,60Hz	
Color Depth	24bit	
	18bit	Optimal Default, Failsafe Default
Panel Mode	Single Channel	Optimal Default, Failsafe Default
	Dual Channel	
Data enable polarity	Active Low	Optimal Default, Failsafe Default
	Active High	
LVDS Backlight Level	100%	
	90%	
	80%	Default
	70%	
	60%	
	50%	
	40%	
	30%	
	20%	
	10%	
	0%	

Options Summary

LVDS Backlight Control	Normal	Default
	Inverted	


3.5.2 South Bridge

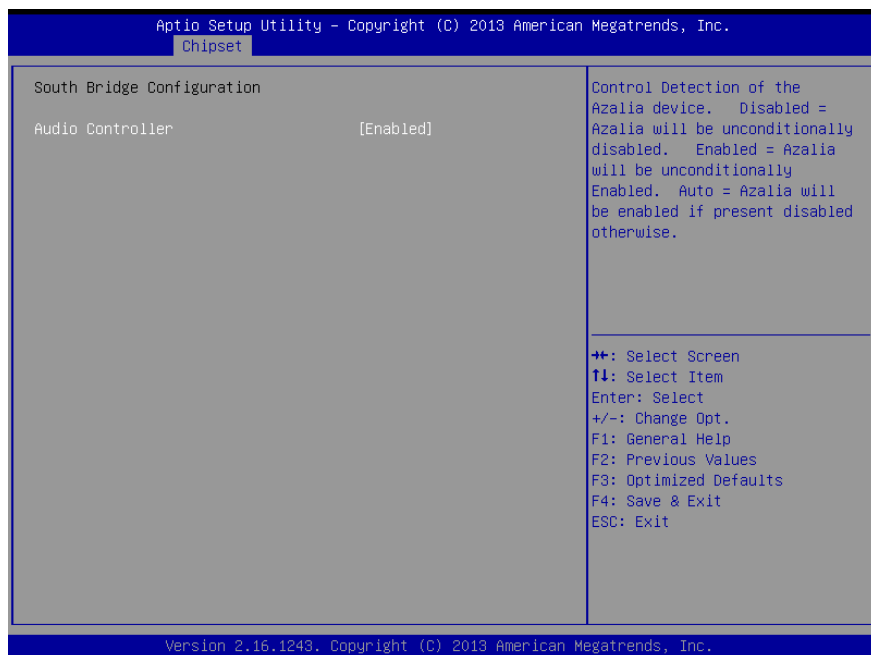

Options Summary

Audio Controller	Disabled	
	Enabled	Optimal Default, Failsafe Default

3.6 Setup Submenu: Security

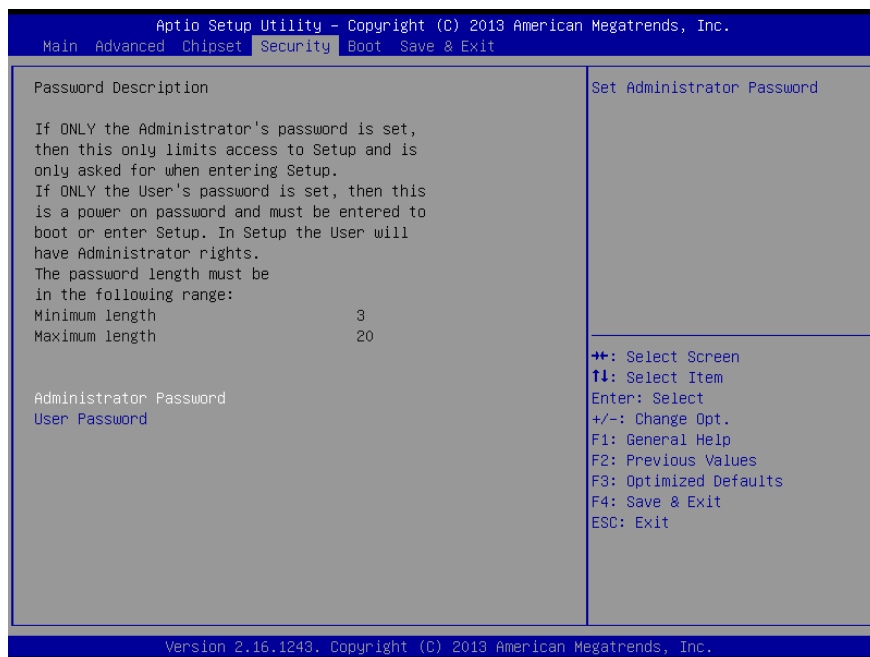

Change User/Administrator Password


You can set an Administrator Password or User Password. An Administrator Password must be set before you can set a User Password. The password will be required during boot up, or when the user enters the Setup utility. A User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, and press Enter. In the dialog box, enter your password (must be between 3 and 20 letters or numbers). Press Enter and retype your password to confirm. Press Enter again to set the password.

Removing the Password


Select the password you want to remove and enter the current password. At the next dialog box press Enter to disable password protection.

3.7 Setup Submenu: Boot

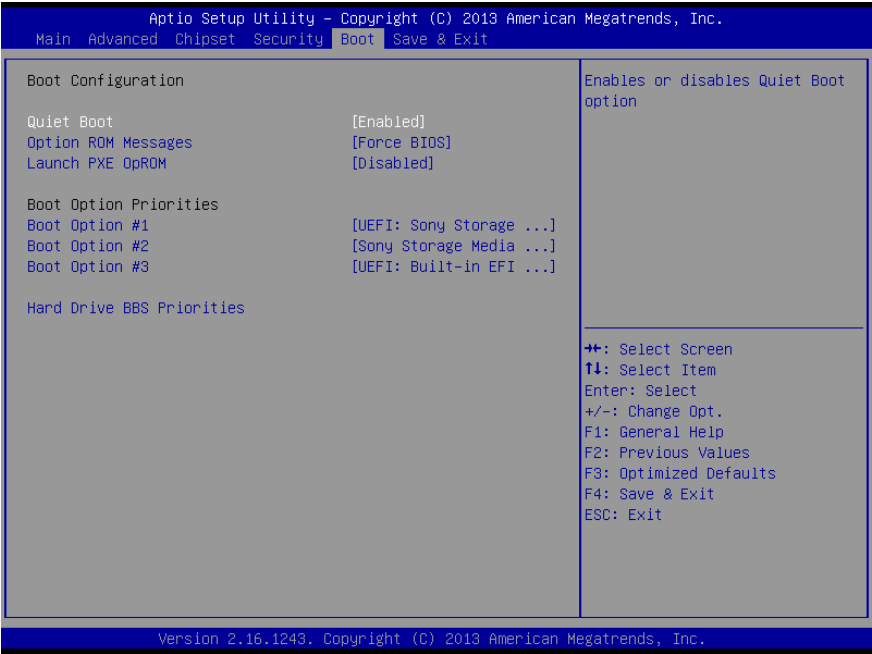


Options Summary		
Quiet Boot	Disabled	
	Enabled	Default
En/Disable showing boot logo.		
Option ROM Messages	Force BIOS	Default
	Keep Current	
Set display mode for Option ROM.		
Launch PXE OpROM	Disabled	Default
	Enabled	
Enable/Disable Legacy Boot Option.		

3.7.1 BBS Priorities

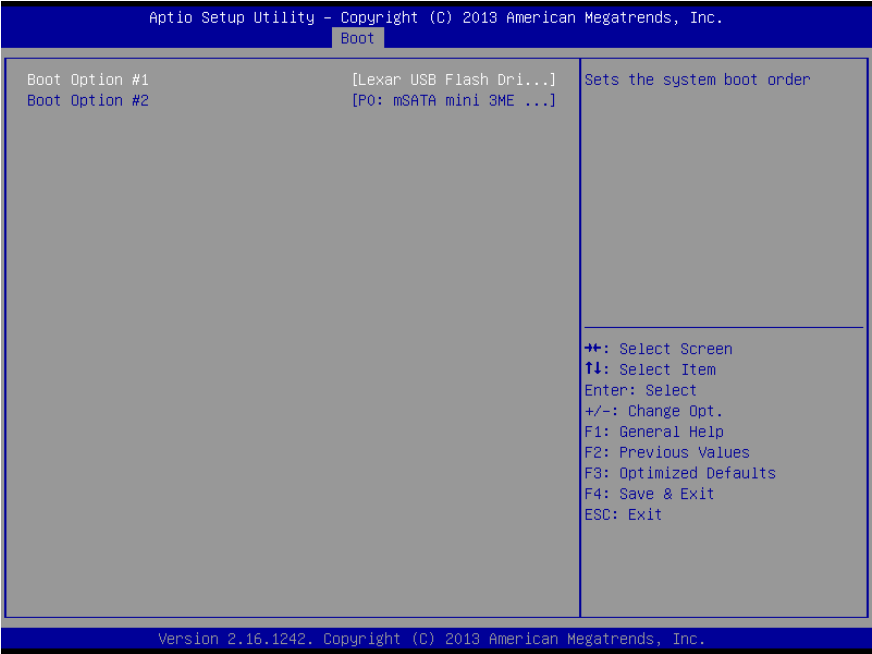

3.8 Setup Submenu: Save & Exit

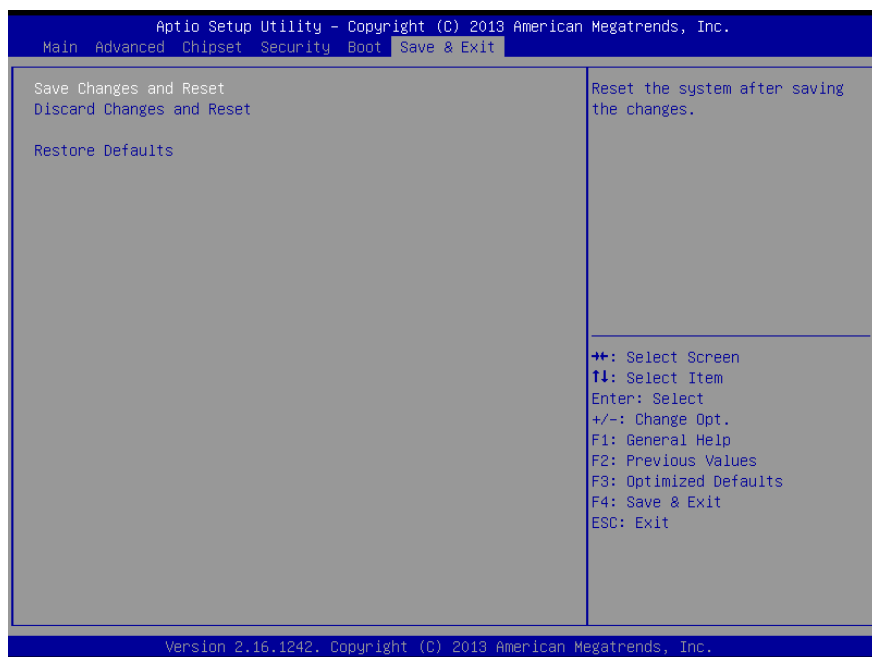

Chapter 4

Drivers Installation

4.1 Drivers Download and Installation

Drivers for the EPIC-BT07 can be downloaded from the product page on the AAEON website by following this link:

<https://www.aaeon.com/en/p/embedded-single-board-computers-epic-bt07>

Download the driver(s) you need and follow the steps below to install them.

Install Chipset Drivers

1. Open the **Chipset** folder and select your OS
2. Open the **SetupChipset.exe** file
3. Follow the instructions
4. Drivers will be installed automatically

Install Graphics Driver

1. Open the **Graphics** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Install LAN Driver

1. Open the **LAN** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Install Intel Sideband Fabric Device Drivers (Windows 8.1/10 only)

1. Open the **Intel Sideband Fabric Device** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Install TPM Drivers

1. Open the **TPM** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Note for TPM Drivers: The hardware ID of MSFT0101 is for TPM 2.0

If you are installing Windows 7 64-bit on your system, you must install KB2920188 and the Hotfix from the following links first:

KB2920188 Download:

<https://support.microsoft.com/en-us/help/2920188/update-to-add-support-for-tpm-2-0-in-windows-7-and-windows-server-2008>

KB2920188 Hotfix Download:

<https://social.technet.microsoft.com/Forums/en-US/000c70e0-e391-4d52-97c3-6144803cb3cd/tpm-20-windows-7-sp1-x64-hotfix-kb2920188>

Install Audio Driver

1. Open the **Audio** folder and select your OS
2. Open the **.exe** file
3. Follow the instructions
4. Drivers will be installed automatically


Install Touch Driver

1. Open the **Touch** folder and select your OS
2. Open the **Setup.exe** file
3. Follow the instructions
4. Drivers will be installed automatically


Install Serial Port Drivers (Optional)

For Windows 7:


1. Change User Account Control settings to **Never notify**

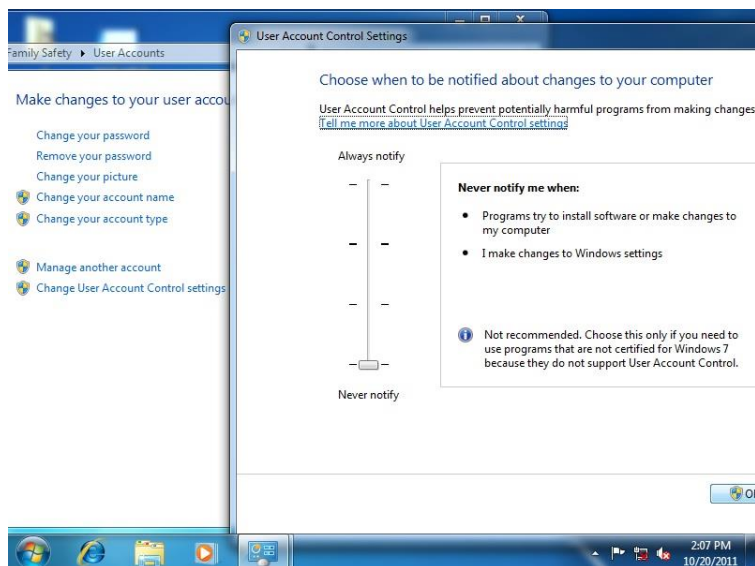

2. Reboot and log in as administrator

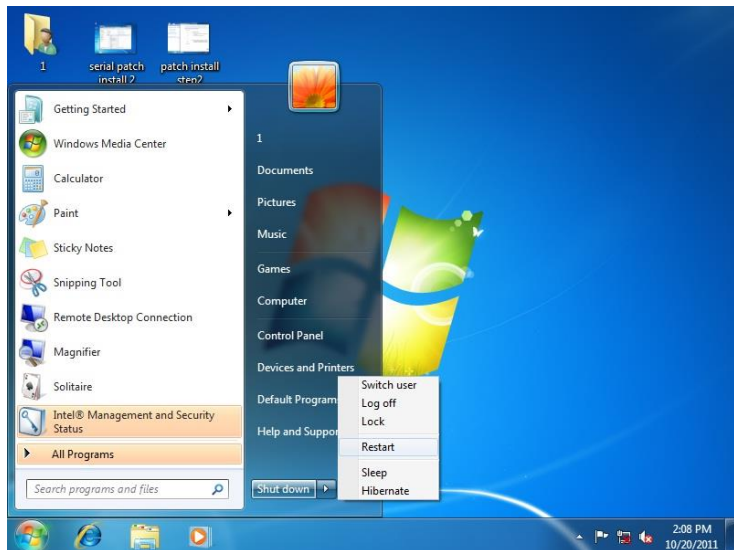


3. Run patch.bat as administrator

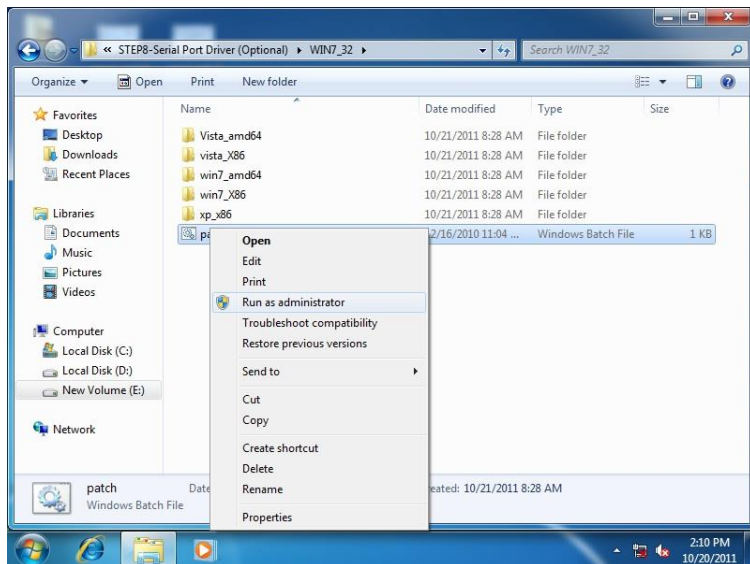


For Windows 8:

1. Open the Apps Screen, right click on the **Command Prompt** tile and select **Run as Administrator**

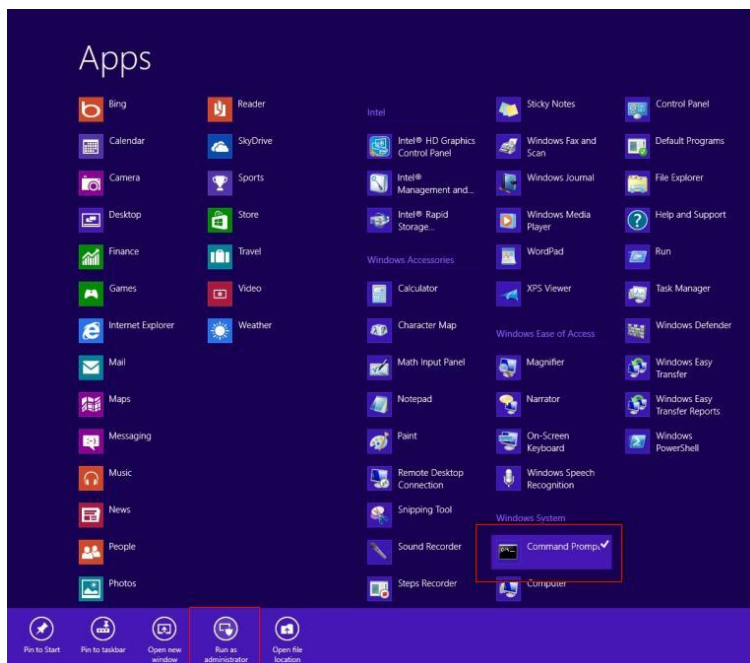


2. To install the driver (patch.bat), you will first have to locate the file in command prompt. To do that, first go to the directory which contains the file by entering **<drive letter>**: eg. if the driver is in D drive, enter **D:**
3. You are now at the directory containing the installation file. Next, go to the folder in which the file resides by entering **cd <folder>** eg: if the file is in a folder named abc, enter **cd <abc>**.

4. You are now at the folder where the file is located. Enter the **patch.bat** to open and install the drivers. If your file is in a subfolder, enter the `cd <folder>` command again to access the subfolder (screenshot below is for reference only).

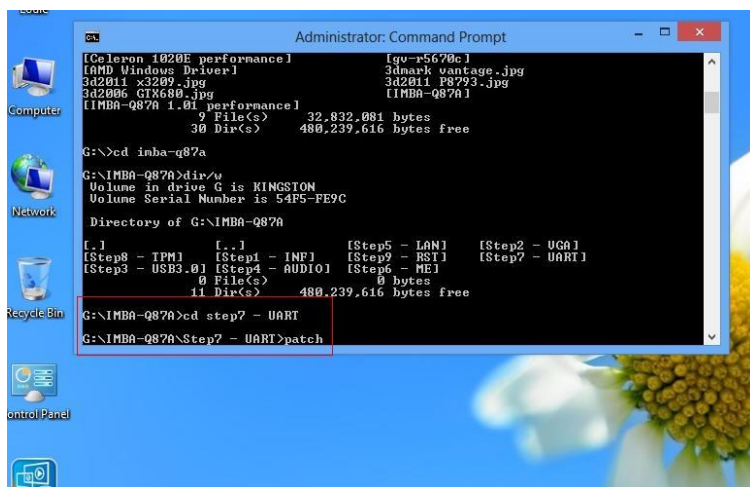


5. Reboot after installation completes.

6. To confirm the installation, go to Device Manager, expand the Ports (COM & LPT) tree and double click on any of the COM ports to open its properties. Go to the Driver tab, select Driver Details and click on **serial.sys**, you should see its provider as **Windows (R) Win 7 DDK Provider**.

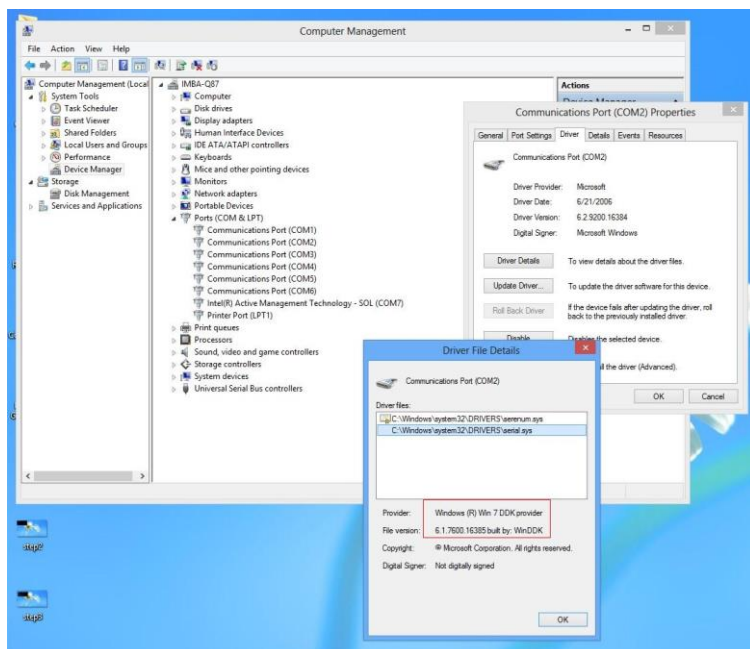


For Windows 10:

1. You will need administrator rights to install the drivers. To get it, first go to **Computer Management** in **Control Panel** and double-click on **Administrator**

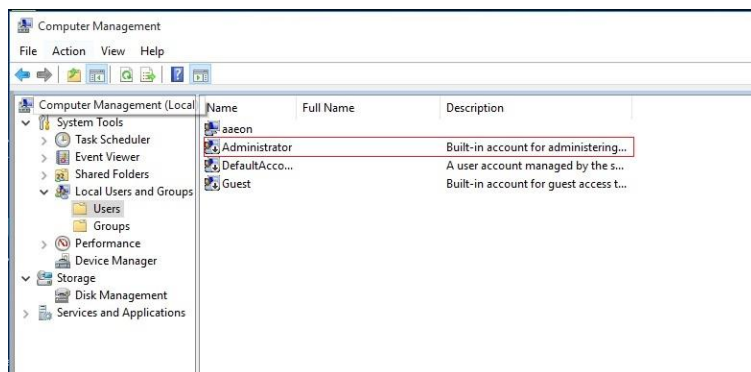


2. In the dialog box, **uncheck the Account is disabled** option to enable administrator account.

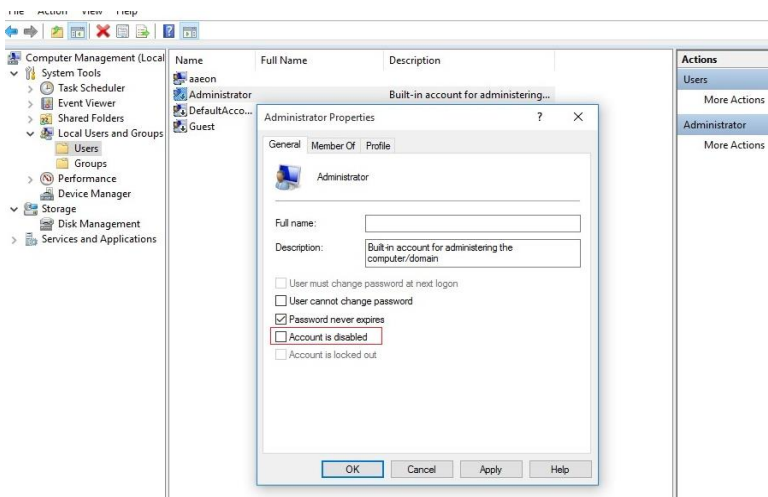

3. Restart and sign in as the administrator (not password protect by default)



4. Go back to the Windows 10 Serial Port drivers directory and run **patch.bat** as administrator.

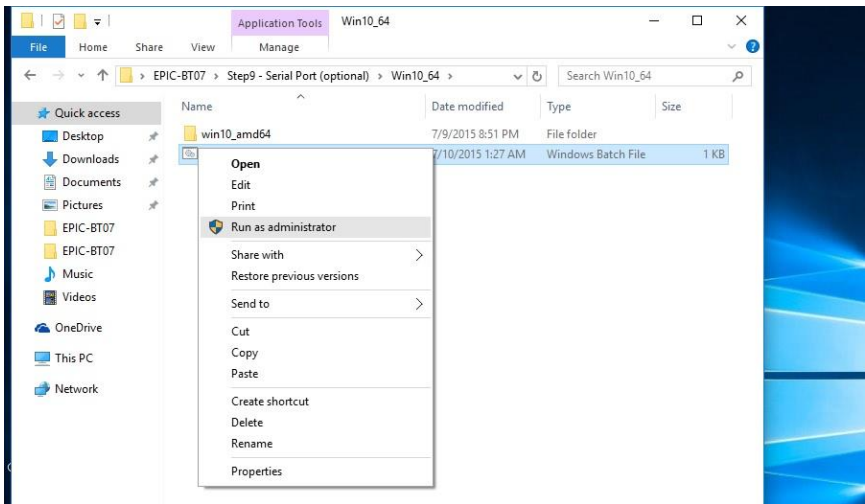

Install Atom E3800 I/O Driver

1. Open the **Peripheral Driver** folder and select your OS
2. Open the **.exe** file
3. Follow the instructions
4. Drivers will be installed automatically

Appendix A

I/O Information

A.1 I/O Address Map

Input/output (IO)	
[0000000000000000 - 000000000000006F]	PCI Express Root Complex
[0000000000000020 - 0000000000000021]	Programmable interrupt controller
[0000000000000020 - 0000000000000021]	Programmable interrupt controller
[0000000000000024 - 0000000000000025]	Programmable interrupt controller
[0000000000000024 - 0000000000000025]	Programmable interrupt controller
[0000000000000028 - 0000000000000029]	Programmable interrupt controller
[0000000000000028 - 0000000000000029]	Programmable interrupt controller
[000000000000002C - 000000000000002D]	Programmable interrupt controller
[000000000000002C - 000000000000002D]	Programmable interrupt controller
[000000000000002E - 000000000000002F]	Motherboard resources
[0000000000000030 - 0000000000000031]	Programmable interrupt controller
[0000000000000030 - 0000000000000031]	Programmable interrupt controller
[0000000000000034 - 0000000000000035]	Programmable interrupt controller
[0000000000000034 - 0000000000000035]	Programmable interrupt controller
[0000000000000038 - 0000000000000039]	Programmable interrupt controller
[0000000000000038 - 0000000000000039]	Programmable interrupt controller
[000000000000003C - 000000000000003D]	Programmable interrupt controller
[000000000000003C - 000000000000003D]	Programmable interrupt controller
[0000000000000040 - 0000000000000043]	System timer
[0000000000000040 - 0000000000000043]	System timer
[000000000000004E - 000000000000004F]	Motherboard resources
[0000000000000050 - 0000000000000053]	System timer
[0000000000000050 - 0000000000000053]	System timer
[0000000000000060 - 0000000000000060]	Standard PS/2 Keyboard
[0000000000000061 - 0000000000000061]	Motherboard resources
[0000000000000063 - 0000000000000063]	Motherboard resources
[0000000000000064 - 0000000000000064]	Standard PS/2 Keyboard
[0000000000000065 - 0000000000000065]	Motherboard resources
[0000000000000067 - 0000000000000067]	Motherboard resources
[0000000000000070 - 0000000000000070]	Motherboard resources
[0000000000000070 - 0000000000000077]	System CMOS/real time clock
[0000000000000078 - 00000000000000CF7]	PCI Express Root Complex
[0000000000000080 - 000000000000008F]	Motherboard resources
[0000000000000092 - 0000000000000092]	Motherboard resources
[00000000000000A0 - 00000000000000A1]	Programmable interrupt controller
[00000000000000A0 - 00000000000000A1]	Programmable interrupt controller
[00000000000000A4 - 00000000000000A5]	Programmable interrupt controller
[00000000000000A4 - 00000000000000A5]	Programmable interrupt controller
[00000000000000A8 - 00000000000000A9]	Programmable interrupt controller
[00000000000000A8 - 00000000000000A9]	Programmable interrupt controller
[00000000000000AC - 00000000000000AD]	Programmable interrupt controller
[00000000000000AC - 00000000000000AD]	Programmable interrupt controller
[00000000000000B0 - 00000000000000B1]	Programmable interrupt controller
[00000000000000B0 - 00000000000000B1]	Programmable interrupt controller
[00000000000000B2 - 00000000000000B3]	Motherboard resources
[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
[00000000000000B8 - 00000000000000B9]	Programmable interrupt controller

	[00000000000000B8 - 00000000000000B9] Programmable interrupt controller
	[00000000000000BC - 00000000000000BD] Programmable interrupt controller
	[00000000000000C0 - 00000000000000C1] Programmable interrupt controller
	[00000000000000C2 - 00000000000000C3] Communications Port (COM6)
	[00000000000000D0 - 00000000000000D1] Communications Port (COM5)
	[00000000000000E8 - 00000000000000E9] Communications Port (COM4)
	[00000000000000F8 - 00000000000000F9] Communications Port (COM2)
	[00000000000000B0 - 00000000000000B1] Intel(R) HD Graphics
	[00000000000000C0 - 00000000000000C1] Intel(R) HD Graphics
	[00000000000000E8 - 00000000000000E9] Communications Port (COM3)
	[00000000000000F8 - 00000000000000F9] Communications Port (COM1)
	[0000000000000040 - 0000000000000041] Motherboard resources
	[00000000000000D0 - 00000000000000D1] Programmable interrupt controller
	[00000000000000D0 - 00000000000000D1] Programmable interrupt controller
	[0000000000000050 - 0000000000000051] Motherboard resources
	[0000000000000060 - 0000000000000061] Motherboard resources
	[0000000000000080 - 0000000000000081] Motherboard resources
	[00000000000000A0 - 00000000000000A1] Motherboard resources
	[00000000000000A0 - 00000000000000A1] Motherboard resources
	[00000000000000A2 - 00000000000000A3] Motherboard resources
	[00000000000000D0 - 00000000000000FF] PCI Express Root Complex
	[000000000000C000 - 000000000000CFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
	[000000000000C000 - 000000000000CFFF] PCI standard PCI-to-PCI bridge
	[000000000000D000 - 000000000000DFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
	[000000000000D000 - 000000000000DFFF] PCI standard PCI-to-PCI bridge
	[000000000000E000 - 000000000000E01F] Intel Device
	[000000000000E000 - 000000000000E01F] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
	[000000000000E020 - 000000000000E03F] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	[000000000000E020 - 000000000000E03F] Standard SATA AHCI Controller
	[000000000000E040 - 000000000000E043] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	[000000000000E040 - 000000000000E043] Standard SATA AHCI Controller
	[000000000000E050 - 000000000000E057] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	[000000000000E050 - 000000000000E057] Standard SATA AHCI Controller
	[000000000000E060 - 000000000000E063] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	[000000000000E060 - 000000000000E063] Standard SATA AHCI Controller
	[000000000000E070 - 000000000000E077] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	[000000000000E070 - 000000000000E077] Standard SATA AHCI Controller
	[000000000000E080 - 000000000000E087] Intel(R) HD Graphics
	[000000000000E080 - 000000000000E087] Intel(R) HD Graphics

A.2 Memory Address Map

Memory	
[0000000000A0000 - 0000000000BFFFF]	Intel(R) HD Graphics
[0000000000A0000 - 0000000000BFFFF]	PCI Express Root Complex
[0000000000C0000 - 0000000000DFFFF]	PCI Express Root Complex
[0000000000E0000 - 0000000000FFFFFF]	PCI Express Root Complex
[000000008000000 - 00000000D0818FFE]	PCI Express Root Complex
[00000000C000000 - 00000000CFFFFFFF]	Intel(R) HD Graphics
[00000000C000000 - 00000000CFFFFFFF]	Intel(R) HD Graphics
[00000000D000000 - 00000000D03FFFFF]	Intel(R) HD Graphics
[00000000D000000 - 00000000D03FFFFF]	Intel(R) HD Graphics
[00000000D040000 - 00000000D04FFFFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Trusted Execution Engine Interface - 0F18
[00000000D040000 - 00000000D04FFFFF]	PCI standard PCI-to-PCI bridge
[00000000D050000 - 00000000D05FFFFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Trusted Execution Engine Interface - 0F18
[00000000D050000 - 00000000D05FFFFF]	PCI standard PCI-to-PCI bridge
[00000000D060000 - 00000000D060FFFF]	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
[00000000D060000 - 00000000D061FFFF]	Intel(R) i211 Gigabit Network Connection
[00000000D060000 - 00000000D06FFFFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
[00000000D061000 - 00000000D0613FFF]	High Definition Audio Controller
[00000000D061400 - 00000000D06140FF]	Intel Device
[00000000D061800 - 00000000D06187FF]	Standard SATA AHCI Controller
[00000000D062000 - 00000000D0623FFF]	Intel(R) i211 Gigabit Network Connection
[00000000D070000 - 00000000D071FFFF]	Intel(R) i211 Gigabit Network Connection #2
[00000000D070000 - 00000000D07FFFFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
[00000000D072000 - 00000000D0723FFF]	Intel(R) i211 Gigabit Network Connection #2
[00000000D080000 - 00000000D080FFFF]	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
[00000000D081000 - 00000000D0813FFF]	High Definition Audio Controller
[00000000D081400 - 00000000D08140FF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
[00000000D081800 - 00000000D08187FF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
[00000000D081900 - 00000000D0819FFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor SD Host Controller
[00000000D081A00 - 00000000D081AFFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor SD Host Controller
[00000000E000000 - 00000000FFFFFFF]	Motherboard resources
[00000000E000000 - 00000000E00000DB]	Intel(R) Sideband Fabric Device
[00000000FED0000 - 00000000FED003FF]	High precision event timer
[00000000FED0100 - 00000000FED01FFF]	Motherboard resources
[00000000FED0300 - 00000000FED03FFF]	Motherboard resources
[00000000FED0400 - 00000000FED04FFF]	Motherboard resources
[00000000FED0800 - 00000000FED08FFF]	Motherboard resources
[00000000FED1C00 - 00000000FED1CFFF]	Motherboard resources
[00000000FED4000 - 00000000FED44FFF]	Trusted Platform Module 1.2
[00000000FEE0000 - 00000000FEEFFFFFFF]	Motherboard resources
[00000000FEF0000 - 00000000FEFFFFFFF]	Motherboard resources
[00000000FF00000 - 00000000FFFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[00000000FF00000 - 00000000FFFFFFFFF]	Intel(R) 82802 Firmware Hub Device

A.3 IRQ Mapping Chart

bt7	
Input/output (IO)	
Interrupt request (IRQ)	
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000001 (01)	Standard PS/2 Keyboard
(ISA) 0x00000003 (03)	Communications Port (COM2)
(ISA) 0x00000004 (04)	Communications Port (COM1)
(ISA) 0x00000005 (05)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor SD Host Controller
(ISA) 0x00000005 (05)	PCI standard PCI-to-PCI bridge
(ISA) 0x00000005 (05)	PCI standard PCI-to-PCI bridge
(ISA) 0x00000005 (05)	PCI standard PCI-to-PCI bridge
(ISA) 0x00000005 (05)	Standard SATA AHCI Controller
(ISA) 0x00000008 (08)	High precision event timer
(ISA) 0x0000000A (10)	High Definition Audio Controller
(ISA) 0x0000000A (10)	Intel Device
(ISA) 0x0000000A (10)	Intel(R) HD Graphics
(ISA) 0x0000000A (10)	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
(ISA) 0x0000000A (10)	PCI standard PCI-to-PCI bridge
(ISA) 0x0000000A (10)	PCI standard PCI-to-PCI bridge
(ISA) 0x0000000B (11)	Communications Port (COM3)
(ISA) 0x0000000B (11)	Communications Port (COM4)
(ISA) 0x0000000B (11)	Communications Port (COM5)
(ISA) 0x0000000B (11)	Communications Port (COM6)
(ISA) 0x0000000C (12)	Microsoft PS/2 Mouse
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System

 (ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
 (ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
 (ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
 (ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
 (ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
 (ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
 (ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
 (ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
 (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
 (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
 (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
 (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
 (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
 (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
 (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
 (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
 (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
 (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
 (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
 (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
 (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
 (ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
 (ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
 (ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
 (ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
 (ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
 (ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
 (ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
 (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
 (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
 (ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System

	(ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BF (191)	Microsoft ACPI-Compliant System
	(ISA) 0x00000100 (256)	Microsoft ACPI-Compliant System
	(ISA) 0x00000101 (257)	Microsoft ACPI-Compliant System
	(ISA) 0x00000102 (258)	Microsoft ACPI-Compliant System
	(ISA) 0x00000103 (259)	Microsoft ACPI-Compliant System
	(ISA) 0x00000104 (260)	Microsoft ACPI-Compliant System
	(ISA) 0x00000105 (261)	Microsoft ACPI-Compliant System
	(ISA) 0x00000106 (262)	Microsoft ACPI-Compliant System
	(ISA) 0x00000107 (263)	Microsoft ACPI-Compliant System
	(ISA) 0x00000108 (264)	Microsoft ACPI-Compliant System
	(ISA) 0x00000109 (265)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010A (266)	Microsoft ACPI-Compliant System

	(ISA) 0x0000010B (267)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010C (268)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010D (269)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010E (270)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010F (271)	Microsoft ACPI-Compliant System
	(ISA) 0x00000110 (272)	Microsoft ACPI-Compliant System
	(ISA) 0x00000111 (273)	Microsoft ACPI-Compliant System
	(ISA) 0x00000112 (274)	Microsoft ACPI-Compliant System
	(ISA) 0x00000113 (275)	Microsoft ACPI-Compliant System
	(ISA) 0x00000114 (276)	Microsoft ACPI-Compliant System
	(ISA) 0x00000115 (277)	Microsoft ACPI-Compliant System
	(ISA) 0x00000116 (278)	Microsoft ACPI-Compliant System
	(ISA) 0x00000117 (279)	Microsoft ACPI-Compliant System
	(ISA) 0x00000118 (280)	Microsoft ACPI-Compliant System
	(ISA) 0x00000119 (281)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011A (282)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011B (283)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011C (284)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011D (285)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011E (286)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011F (287)	Microsoft ACPI-Compliant System
	(ISA) 0x00000120 (288)	Microsoft ACPI-Compliant System
	(ISA) 0x00000121 (289)	Microsoft ACPI-Compliant System
	(ISA) 0x00000122 (290)	Microsoft ACPI-Compliant System
	(ISA) 0x00000123 (291)	Microsoft ACPI-Compliant System
	(ISA) 0x00000124 (292)	Microsoft ACPI-Compliant System
	(ISA) 0x00000125 (293)	Microsoft ACPI-Compliant System
	(ISA) 0x00000126 (294)	Microsoft ACPI-Compliant System
	(ISA) 0x00000127 (295)	Microsoft ACPI-Compliant System
	(ISA) 0x00000128 (296)	Microsoft ACPI-Compliant System
	(ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012A (298)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012B (299)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012C (300)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012D (301)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012E (302)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012F (303)	Microsoft ACPI-Compliant System
	(ISA) 0x00000130 (304)	Microsoft ACPI-Compliant System
	(ISA) 0x00000131 (305)	Microsoft ACPI-Compliant System
	(ISA) 0x00000132 (306)	Microsoft ACPI-Compliant System
	(ISA) 0x00000133 (307)	Microsoft ACPI-Compliant System
	(ISA) 0x00000134 (308)	Microsoft ACPI-Compliant System
	(ISA) 0x00000135 (309)	Microsoft ACPI-Compliant System
	(ISA) 0x00000136 (310)	Microsoft ACPI-Compliant System
	(ISA) 0x00000137 (311)	Microsoft ACPI-Compliant System
	(ISA) 0x00000138 (312)	Microsoft ACPI-Compliant System
	(ISA) 0x00000139 (313)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013A (314)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013B (315)	Microsoft ACPI-Compliant System

	(ISA) 0x0000013C (316)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013D (317)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013E (318)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013F (319)	Microsoft ACPI-Compliant System
	(ISA) 0x00000140 (320)	Microsoft ACPI-Compliant System
	(ISA) 0x00000141 (321)	Microsoft ACPI-Compliant System
	(ISA) 0x00000142 (322)	Microsoft ACPI-Compliant System
	(ISA) 0x00000143 (323)	Microsoft ACPI-Compliant System
	(ISA) 0x00000144 (324)	Microsoft ACPI-Compliant System
	(ISA) 0x00000145 (325)	Microsoft ACPI-Compliant System
	(ISA) 0x00000146 (326)	Microsoft ACPI-Compliant System
	(ISA) 0x00000147 (327)	Microsoft ACPI-Compliant System
	(ISA) 0x00000148 (328)	Microsoft ACPI-Compliant System
	(ISA) 0x00000149 (329)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014B (331)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014C (332)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014D (333)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014E (334)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014F (335)	Microsoft ACPI-Compliant System
	(ISA) 0x00000150 (336)	Microsoft ACPI-Compliant System
	(ISA) 0x00000151 (337)	Microsoft ACPI-Compliant System
	(ISA) 0x00000152 (338)	Microsoft ACPI-Compliant System
	(ISA) 0x00000153 (339)	Microsoft ACPI-Compliant System
	(ISA) 0x00000154 (340)	Microsoft ACPI-Compliant System
	(ISA) 0x00000155 (341)	Microsoft ACPI-Compliant System
	(ISA) 0x00000156 (342)	Microsoft ACPI-Compliant System
	(ISA) 0x00000157 (343)	Microsoft ACPI-Compliant System
	(ISA) 0x00000158 (344)	Microsoft ACPI-Compliant System
	(ISA) 0x00000159 (345)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015A (346)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015B (347)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015C (348)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015D (349)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015E (350)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015F (351)	Microsoft ACPI-Compliant System
	(ISA) 0x00000160 (352)	Microsoft ACPI-Compliant System
	(ISA) 0x00000161 (353)	Microsoft ACPI-Compliant System
	(ISA) 0x00000162 (354)	Microsoft ACPI-Compliant System
	(ISA) 0x00000163 (355)	Microsoft ACPI-Compliant System
	(ISA) 0x00000164 (356)	Microsoft ACPI-Compliant System
	(ISA) 0x00000165 (357)	Microsoft ACPI-Compliant System
	(ISA) 0x00000166 (358)	Microsoft ACPI-Compliant System
	(ISA) 0x00000167 (359)	Microsoft ACPI-Compliant System
	(ISA) 0x00000168 (360)	Microsoft ACPI-Compliant System
	(ISA) 0x00000169 (361)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016A (362)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016B (363)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016C (364)	Microsoft ACPI-Compliant System

	(ISA) 0x0000016D (365)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016E (366)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016F (367)	Microsoft ACPI-Compliant System
	(ISA) 0x00000170 (368)	Microsoft ACPI-Compliant System
	(ISA) 0x00000171 (369)	Microsoft ACPI-Compliant System
	(ISA) 0x00000172 (370)	Microsoft ACPI-Compliant System
	(ISA) 0x00000173 (371)	Microsoft ACPI-Compliant System
	(ISA) 0x00000174 (372)	Microsoft ACPI-Compliant System
	(ISA) 0x00000175 (373)	Microsoft ACPI-Compliant System
	(ISA) 0x00000176 (374)	Microsoft ACPI-Compliant System
	(ISA) 0x00000177 (375)	Microsoft ACPI-Compliant System
	(ISA) 0x00000178 (376)	Microsoft ACPI-Compliant System
	(ISA) 0x00000179 (377)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017A (378)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017B (379)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017C (380)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017D (381)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017E (382)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017F (383)	Microsoft ACPI-Compliant System
	(ISA) 0x00000180 (384)	Microsoft ACPI-Compliant System
	(ISA) 0x00000181 (385)	Microsoft ACPI-Compliant System
	(ISA) 0x00000182 (386)	Microsoft ACPI-Compliant System
	(ISA) 0x00000183 (387)	Microsoft ACPI-Compliant System
	(ISA) 0x00000184 (388)	Microsoft ACPI-Compliant System
	(ISA) 0x00000185 (389)	Microsoft ACPI-Compliant System
	(ISA) 0x00000186 (390)	Microsoft ACPI-Compliant System
	(ISA) 0x00000187 (391)	Microsoft ACPI-Compliant System
	(ISA) 0x00000188 (392)	Microsoft ACPI-Compliant System
	(ISA) 0x00000189 (393)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018A (394)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018B (395)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018C (396)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018D (397)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018E (398)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018F (399)	Microsoft ACPI-Compliant System
	(ISA) 0x00000190 (400)	Microsoft ACPI-Compliant System
	(ISA) 0x00000191 (401)	Microsoft ACPI-Compliant System
	(ISA) 0x00000192 (402)	Microsoft ACPI-Compliant System
	(ISA) 0x00000193 (403)	Microsoft ACPI-Compliant System
	(ISA) 0x00000194 (404)	Microsoft ACPI-Compliant System
	(ISA) 0x00000195 (405)	Microsoft ACPI-Compliant System
	(ISA) 0x00000196 (406)	Microsoft ACPI-Compliant System
	(ISA) 0x00000197 (407)	Microsoft ACPI-Compliant System
	(ISA) 0x00000198 (408)	Microsoft ACPI-Compliant System
	(ISA) 0x00000199 (409)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019A (410)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019B (411)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019C (412)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019D (413)	Microsoft ACPI-Compliant System

	(ISA) 0x0000019E (414)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019F (415)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A0 (416)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A1 (417)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A2 (418)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A3 (419)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A4 (420)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A5 (421)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A6 (422)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A7 (423)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A8 (424)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A9 (425)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AA (426)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AB (427)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AC (428)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AD (429)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AE (430)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AF (431)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B0 (432)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B1 (433)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B2 (434)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B3 (435)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B4 (436)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B5 (437)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B6 (438)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B7 (439)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B8 (440)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B9 (441)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BA (442)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BB (443)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BC (444)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BD (445)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BE (446)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BF (447)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C0 (448)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C1 (449)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C2 (450)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C3 (451)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C4 (452)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C5 (453)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C6 (454)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C7 (455)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C8 (456)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C9 (457)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CA (458)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CB (459)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CC (460)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CD (461)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System

	(ISA) 0x000001CF (463)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D0 (464)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D1 (465)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D2 (466)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D3 (467)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D4 (468)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D5 (469)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D6 (470)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D7 (471)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D8 (472)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D9 (473)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DA (474)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DB (475)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DC (476)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DD (477)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DE (478)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DF (479)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E0 (480)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E1 (481)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E2 (482)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E3 (483)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E4 (484)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E5 (485)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E6 (486)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E7 (487)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E8 (488)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E9 (489)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EA (490)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System

	(PCI) 0x00000005 (05)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
	(PCI) 0x0000000A (10)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Trusted Execution Engine Interface - 0F18
	(PCI) 0x00000010 (16)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
	(PCI) 0x00000011 (17)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
	(PCI) 0x00000012 (18)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 3 - 0F4C
	(PCI) 0x00000013 (19)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	(PCI) 0x00000013 (19)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 4 - 0F4E
	(PCI) 0x00000013 (19)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000016 (22)	High Definition Audio Controller
	(PCI) 0xFFFFFFF1 (-15)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFF2 (-14)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFF3 (-13)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFF4 (-12)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFF5 (-11)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFF6 (-10)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFF7 (-9)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFFF8 (-8)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFFF9 (-7)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFFFA (-6)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFFF B (-5)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFFF C (-4)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFFFF D (-3)	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
	(PCI) 0xFFFFFFF E (-2)	Intel(R) HD Graphics

Appendix B

Mating Connectors

B.1 List of Mating Connectors and Cables

Conn Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
CN1	Stereo Audio RIGHT Channel	PINREX	712-71-02TW01	N/A	N/A
CN6	4-Pin Power in Connector	CATCH	1121-700-04S	ATX 2x2 Power Cable	N/A
CN7	Stereo Audio LEFT Channel	PINREX	712-71-02TW01	N/A	N/A
CN8	2-Pin Power in Connector	DINKLE	DT-126VP-S2016002P	Power Cable	170204010R
CN10	Audio Connector	PINREX	712-71-10TW01	Audio Cable	1709100254
CN12	LPT/Digital IO Connector	PINREX	520-90-26GB00	Parallel Port Cable	1701260200
CN13	USB 2.0 Port 2	PINREX	712-71-05TW01	USB Wafer Cable	1700050207
CN14	USB 2.0 Port 3	PINREX	712-71-05TW01	USB Wafer Cable	1700050207
CN15	USB 2.0 Port 5	PINREX	712-71-05TW01	USB Wafer Cable	1700050207
CN16	USB 2.0 Port 4	PINREX	712-71-05TW01	USB Wafer Cable	1700050207
CN21	LPC Expansion Connector	PINREX	710-73-12TW01	AAEON LPC Cable	1703120130
CN23	+5V Output for SATA HDD	PINREX	721-81-02TW00	2 Pins for SATA Power	1702150155
CN25	SATA Port1	PINREX	770-83-07SB39	SATA Cable	1709070500
CN29	Touch Screen Connector	PINREX	710-73-09TW01	N/A	N/A
CN30	PS/2 Keyboard Mouse Connector	PINREX	712-41-065W00	KB/MS Cable	1700060155
CN31	COM Port 6	PINREX	712-71-09TW01	COM Cable	1701090150
CN32	COM Port 5	PINREX	712-71-09TW01	COM Cable	1701090150
CN37	COM Port 4	PINREX	712-71-09TW01	COM Cable	1701090150
CN38	COM Port 3	PINREX	712-71-09TW01	COM Cable	1701090150

Appendix C

Electrical Specifications for I/O Ports

C.1 Electrical Specifications for I/O Ports

I/O	Reference	Signal Name	Rate Output
Audio I/O Port	CN10	+5V	+5V/1A
COM Port 2	CN49	+5V/+12V	+5V/1A or +12V/1A
COM Port 3	CN38	+5V/+12V	+5V/1A or +12V/1A
DP Port	CN48	+3.3V	+3.3V/1A
Digital IO Port	CN12	+5V	+5V/1A
LVDS/eDP Inverter / Backlight Connector	CN19	+5V/+12V	+5V/1.5A or +12V/1.5A
eDP Inverter/ Backlight Connector	CN46	+5V/+12V	+5V/1.5A or +12V/1.5A
HDMI Port	CN50	+5V	+5V/1A
LVDS Port / eDP	CN35	+3.3V/+5V	+3.3V/2A or +5V/2A
eDP	CN24	+3.3V/+5V	+3.3V/2A or +5V/2A
Mini Card Slot	CN26	+3.3VSB +1.5V	+3.3V/1.1A +1.5V/0.375A
Mini Card Slot	CN27	+3.3VSB +1.5V	+3.3V/1.1A +1.5V/0.375A
PS/2 Keyboard/ Mouse Combo Port	CN30	+5VSB	+5V/1A
+5V Output for SATA HDD	CN23	+5V	+5V/1A
USB Ports 0 & 1	CN47	+5VSB	+5V/0.5A (USB 2.0) +5V/0.9A (USB 3.0)
USB 2.0 Port 2	CN13	+5VSB	+5V/0.5A
USB 2.0 Port 3	CN14	+5VSB	+5V/0.5A
USB 2.0 Port 5	CN15	+5VSB	+5V/0.5A
USB 2.0 Port 4	CN16	+5VSB	+5V/0.5A
VGA Port	CN51	+5V	+5V/1A (reserved)