

# FWS-2252

---

Network Appliance

User's Manual 1<sup>st</sup> Ed

## Copyright Notice

---

This document is copyrighted, 2016. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

## Acknowledgement

---

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation
- Core, Atom are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

## Packing List

---

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● FWS-2252	1
● Power adapter	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

## About this Document

---

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the [AAEON.com](http://AAEON.com) for the latest version of this document.

## Safety Precautions

---

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arises, please the contact our service personnel:
  - i. Damaged power cord or plug
  - ii. Liquid intrusion to the device
  - iii. Exposure to moisture
  - iv. Device is not working as expected or in a manner as described in this manual
  - v. The device is dropped or damaged
  - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

### **Warning!**



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

### **Caution:**

*There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.*

### **Attention:**

*Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.*



## China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Embedded Box PC/ Industrial System

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	○	○	○	○	○	○
外部信号 连接器及线材	○	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	○	○	○	○	○	○
硬盘	○	○	○	○	○	○
电源	○	○	○	○	○	○
<p><b>O:</b> 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p><b>X:</b> 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注： 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。 二、上述部件物质中央处理器、内存、硬盘、光驱、触控模块为选购品。</p>						

## China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products  
AAEON Embedded Box PC/ Industrial System

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	○	○	○	○	○	○
Wires & Connectors for External Connections	○	○	○	○	○	○
Chassis	○	○	○	○	○	○
CPU & RAM	○	○	○	○	○	○
Hard Disk	○	○	○	○	○	○
PSU	○	○	○	○	○	○

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

**Note:** The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

# Table of Contents

---

<b>Chapter 1 - Product Specifications</b> .....	<b>1</b>
1.1 Specifications .....	2
<b>Chapter 2 – Hardware Information</b> .....	<b>5</b>
2.1 Dimensions .....	6
2.2 Jumpers and Connectors .....	9
2.3 List of Jumpers .....	11
2.3.1 Auto PWRBTN selection (JP1) .....	12
2.3.2 CMOS Setting Selection (CN2) .....	12
2.3.3 RTCTEST Setting Selection (CN3) .....	12
2.3.4 CF Power Selection (CN6) .....	12
2.4 List of Connectors .....	13
2.4.1 HDD POWER (CN1, CN4) .....	15
2.4.2 VGA Connector (CN28) .....	15
2.4.3 PS2 Header (CN28) .....	15
2.4.4 CPU Fan (CPU Fan) .....	15
<b>Chapter 3 - AMI BIOS Setup</b> .....	<b>17</b>
3.1 System Test and Initialization .....	18
3.2 AMI BIOS Setup .....	19
3.3 Setup Submenu: Main .....	20
3.4 Setup Submenu: Advanced .....	21
3.4.1 Advanced: CPU Configuration .....	22
3.4.2 Advanced: IDE Configuration .....	23
3.4.3 Advanced: USB Configuration .....	24
3.4.4 Advanced: Hardware Monitor .....	25
3.4.5 Advanced: Power Management .....	26
3.4.6 Advanced: LAN Bypass Configuration .....	27

3.4.7	Advanced: Serial Port Redirection.....	28
3.4.8	Advanced: SIO Configuration .....	29
3.4.7.1	SIO Configuration: Serial Port Configuration.....	30
3.5	Setup submenu: Chipset.....	31
3.5.1	Chipset: North Bridge .....	32
3.5.1.1	North Bridge: Display Control Configuration .....	33
3.6	Setup submenu: Security .....	34
3.7	Setup submenu: Boot.....	35
3.7.1	Boot: BBS Priorities .....	36
3.8	Setup submenu: Exit .....	37
<b>Chapter 4</b>	<b>– Drivers Installation.....</b>	<b>38</b>
4.1	Product CD/DVD .....	39
<b>Appendix A</b>	<b>- Watchdog Timer Programming.....</b>	<b>41</b>
A.1	Watchdog Timer Initial Program .....	42
<b>Appendix B</b>	<b>- I/O Information .....</b>	<b>48</b>
B.1	I/O Address Map.....	49
B.2	Memory Address Map .....	51
B.3	IRQ Mapping Chart.....	52
<b>Appendix C</b>	<b>– Standard Firewall Platform Setting.....</b>	<b>61</b>
C.1	List of Mating Connectors and Cables.....	62
C.2	Status LED Sample Code .....	63
C.3	LED Bypass Mode Sample Code.....	66
C.4	Console Redirection .....	72

# Chapter 1

---

Product Specifications

## 1.1 Specifications

---

### System

- **Processor** Onboard Intel® Celeron™ J1900 2 GHz processor SoC
- **System Memory** 204-pin Dual channel DDR3L 1333MHz SODIMM slot x 2, up to 8 GB
- **Chipset** -
- **Ethernet** Intel® I211AT controller, Gigabit Ethernet x 4 (one pair LAN bypass enabled)
- **BIOS** AMI BIOS
- **Serial ATA** SATA II port x1  
CompactFlash card socket x 1
- **SSD** -
- **Expansion Interface** MiniCard slot x 1
- **Watchdog Timer** System reset: 1~255 steps by software programming
- **RTC** Internal RTC
- **Storage** 2.5" SATA HDD x 1  
CompactFlash card socket x 1
- **Front Panel I/O** Power LED x 1  
Bypass LED x 1  
Status LED x 1  
HDD Active LED x 1  
LAN LED x 8

- **Rear Panel I/O**
  - Software programmable button x 1
  - DC 12V power input x 1
  - Power Button x 1
  - RJ-45 LAN x 4
  - USB 2.0 x 2
  - USB 3.0 x 1
  - RJ-45 Console Port x 1
  - Optional VGA Port x 1
  - Optional Antenna Hole x 1
- **Color**
  - Black
- **Power Supply**
  - DC 40 W power input
- **Power Requirement**
  - DC 12V
- **Dimension (W x D x H)**
  - 200 x 104 x 44mm (
- **Certification**
  - CE/FCC Class A

## Display

- **Chipset**
  -
- **Graphic Engine**
  - Intel® HD Graphics
- **Resolution**
  - 2048 x 1536
- **Output Interface**
  - VGA internal box header x 1

## I/O

- **Serial Port**
  - RJ-45 console x 1
- **Keyboard and Mouse**
  - Reserved pin header

- USB USB 2.0 x 2  
USB 3.0 x 1

## Environmental

- Operating Temperature 0 ~ 40°C (32 ~ 104°F)
- Storage Temperature -20 ~ 60°C (-4 ~ 104°F)
- Operating Humidity 10 ~ 80 % relative humidity, non-condensing
- Storage Humidity 10 ~ 80% @ 40°C, non-condensing
- Anti-Vibration 0.5 G<sub>rms</sub>/5~500Hz/ operation (2.5" HDD x 2)  
1.5 G<sub>rms</sub>/5~500Hz/ non-operation
- Anti-Shock 10G peak acceleration (11m sec. duration),  
operation  
20G peak acceleration (11m sec. duration), non  
operation




# Chapter 2

---


Hardware Information


## 2.1 Dimensions

### System

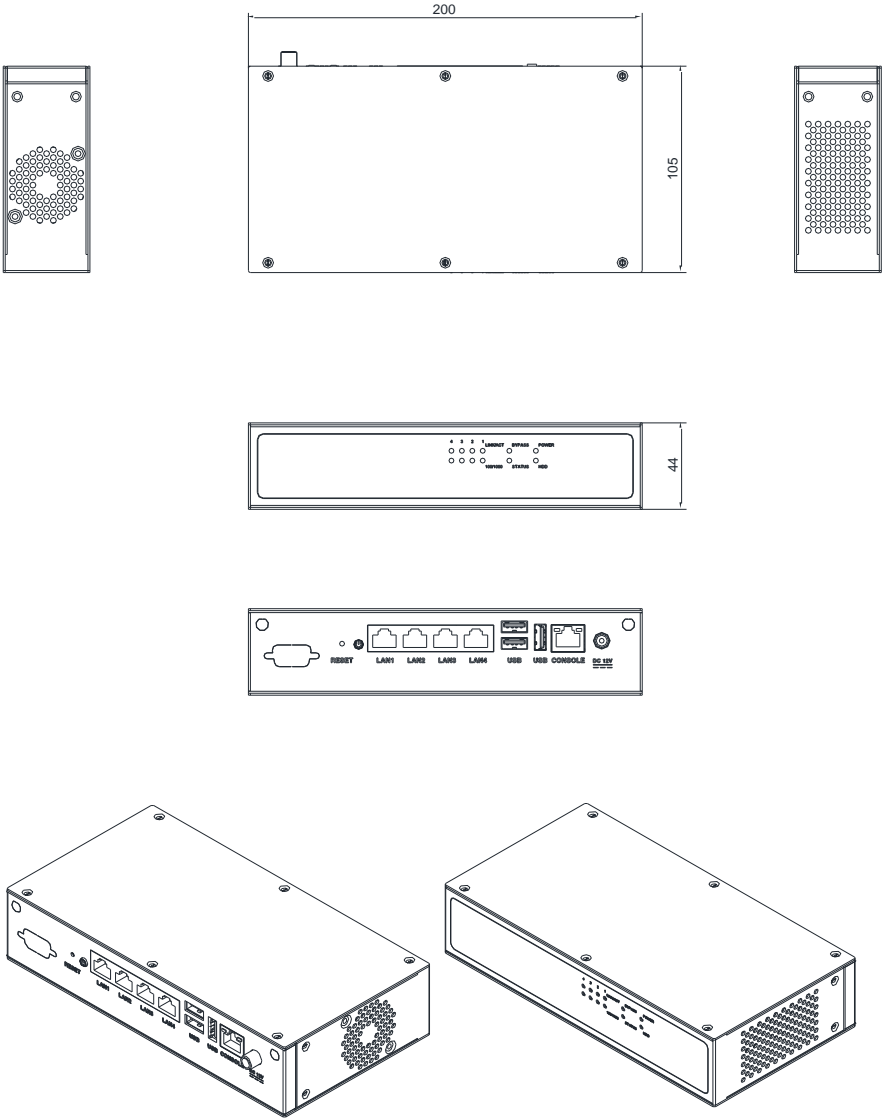


Board

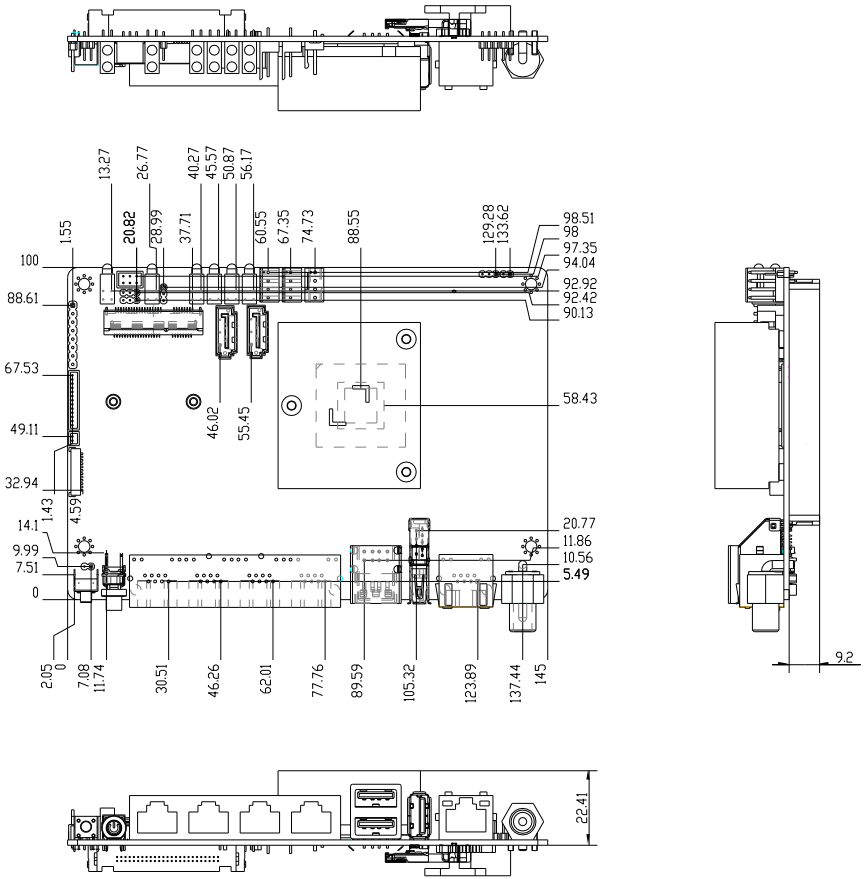

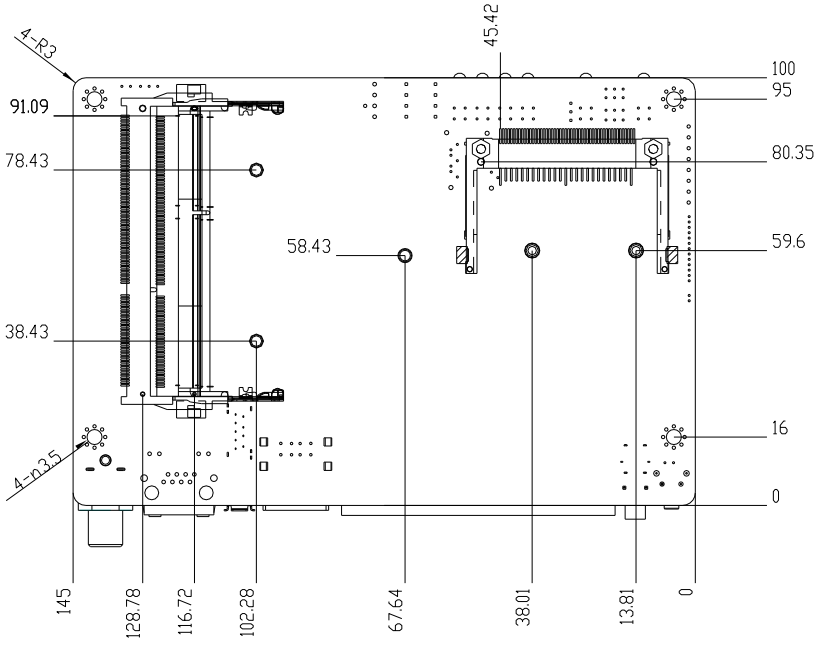


## 2.2 Jumpers and Connectors

### Component Side

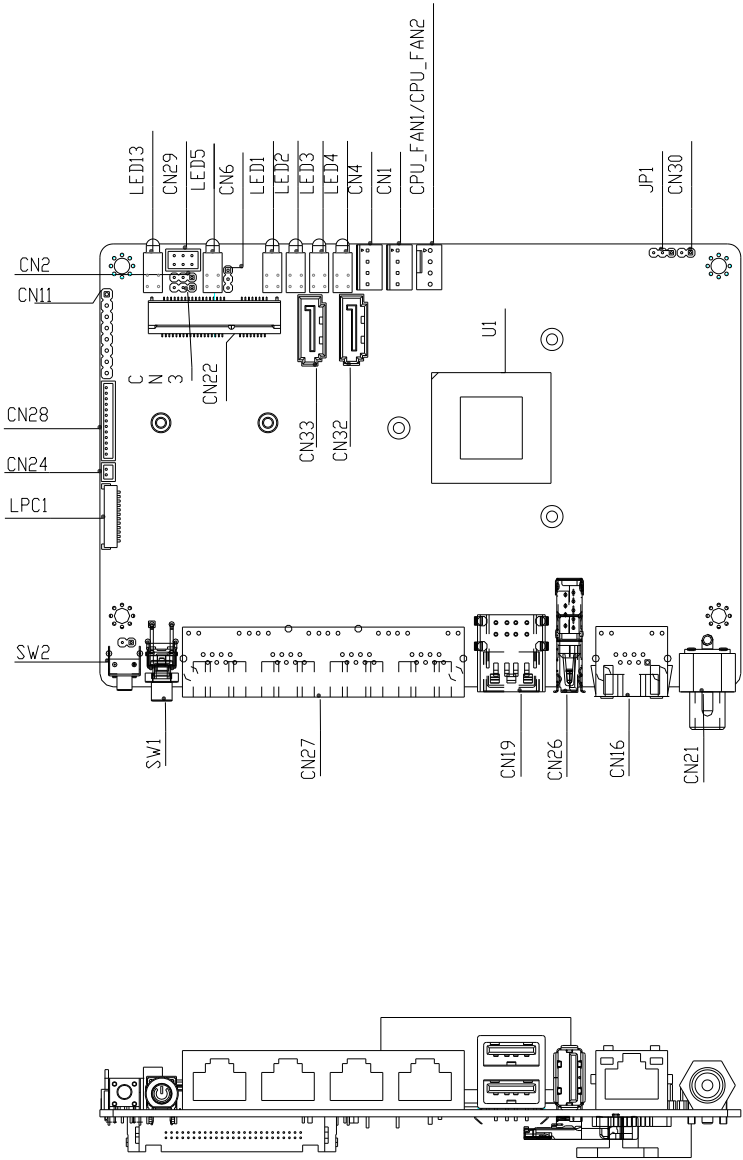

### Solder Side

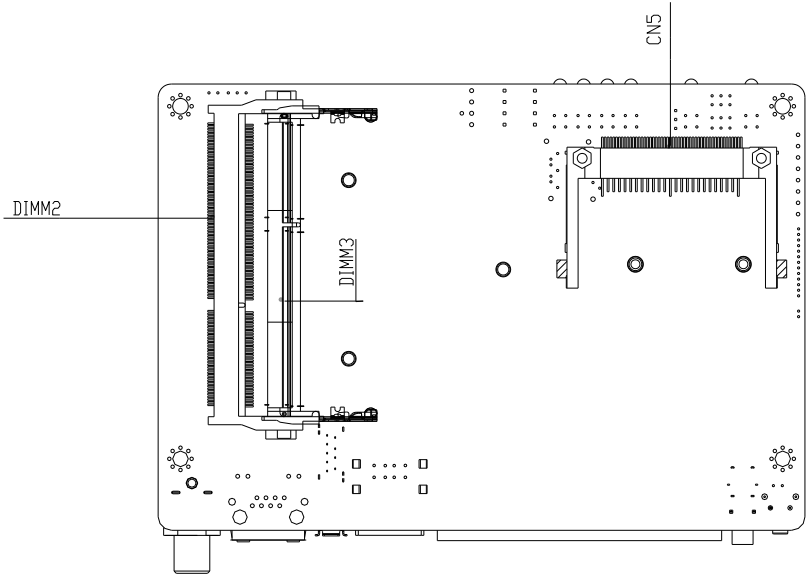

## 2.3 List of Jumpers

---

Please refer to the table below for all of the board's jumpers that you can configure for your application

Label	Function
JP1	Auto Power Button
CN2	Clear CMOS
CN3	RTC TEST
CN6	CF Power Selection
CN30	Power Button
CN31	Software Reset

### 2.3.1 Auto PWRBTN selection (JP1)

---

Pin	Function
1-2	Disable Auto PWRBTN (Default)
2-3	Enable Auto PWRBTN

### 2.3.2 CMOS Setting Selection (CN2)

---

Pin	Function
1-2	Clear CMOS
2-3	Normal (Default)

### 2.3.3 RTCTEST Setting Selection (CN3)

---

Pin	Function
1-2	RTCTEST
2-3	Normal (Default)

### 2.3.4 CF Power Selection (CN6)

---

Pin	Function
1-2	5V
2-3	3.3V (Default)



## 2.4 List of Connectors

---

Please refer to the table below for all of the board's connectors that you can configure for your application

Label	Function
CN1	HDD POWER
CN4	HDD POWER
CN5	CF SOCKET
CN16	COM1
CN19	2*USB2.0
CN21	+12V POWER IN
CN22	MiniCard socket
CN24	Battery
CN26	USB3.0+USB2.0
CN27	LAN1~4
CN28	VGA Connector
CN29	PS2
CN32, CN33	SATA Connector
DIMM2	DDR3L SODIMM
DIMM3	DDR3L SODIMM
SW1	Power Button
SW2	Software Reset
SATA1	SATA Connector
LED13	POWER+HDD LED Instruction
LED5	BYPASS+STATE LED Instruction
LED1	LAN1 LED Instruction
LED2	LAN2 LED Instruction
LED3	LAN3 LED Instruction

---

**LED4**

LAN4 LED Instruction

---

**CPU\_FAN**FAN

---

### 2.4.1 HDD POWER (CN1, CN4)

---

Pin	Signal	Pin	Signal
1	+12V	2	GND
3	GND	4	+5V

### 2.4.2 VGA Connector (CN28)

---

Pin	Signal	Pin	Signal
1	VS	2	HS
3	GND	4	SCL
5	SDA	6	GND
7	BLUE	8	GND
9	GREEN	10	GND
11	RED	12	GND
13	5V		

### 2.4.3 PS2 Header (CN28)

---

Pin	Signal	Pin	Signal
1	KDAT	2	KCLK
3	GND	4	+5V
5	MDAT	6	KCLK

### 2.4.4 CPU Fan (CPU Fan)

---

Pin	Signal	Pin	Signal
1	GND	2	+12 V



# Chapter 3

---

AMI BIOS Setup

## 3.1 System Test and Initialization

---

The system uses certain routines to perform testing and initialization. If an error, fatal or non-fatal, is encountered, a few short beeps or an error message will be outputted. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be outputted, in which case you will need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- You are starting your system for the first time
- You have changed your system's hardware
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention, which is to be replaced once emptied.

## 3.2 AMI BIOS Setup

---

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press <Del> or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

**Main** – Date and time can be set here. Press <Tab> to switch between date elements

**Advanced** – Enable/ Disable boot option for legacy network devices


**Chipset** – For hosting bridge parameters

**Boot** – Enable/ Disable quiet Boot Option

**Security** – The setup administrator password can be set here


**Save & Exit** – Save your changes and exit the program

### 3.3 Setup Submenu: Main

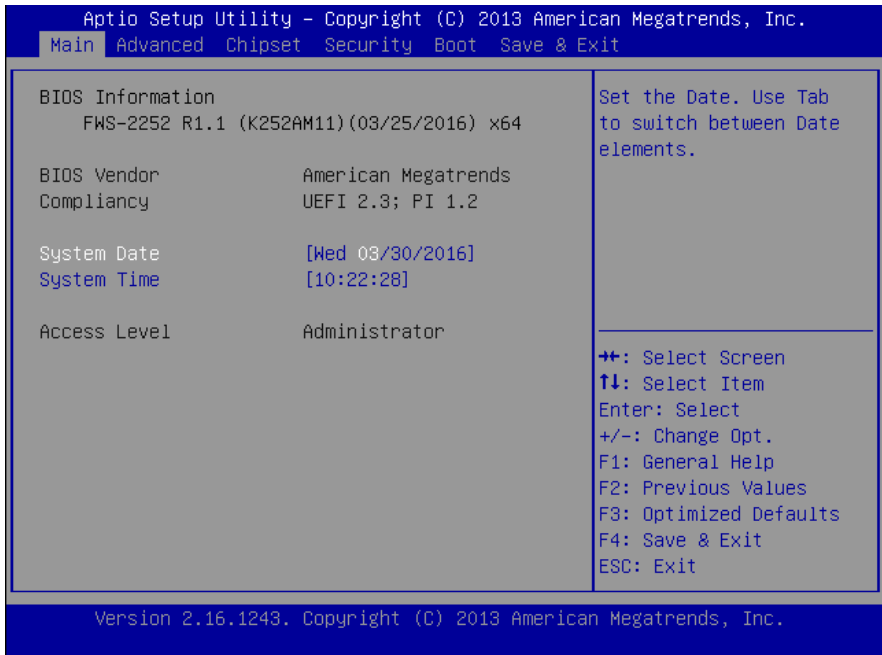




### 3.4 Setup Submenu: Advanced

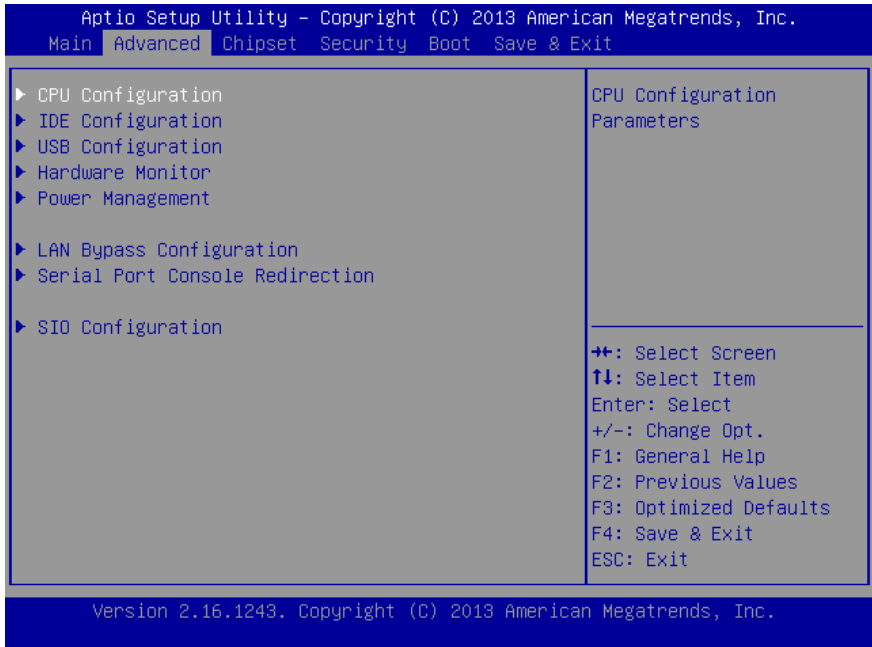


### 3.4.1 Advanced: CPU Configuration

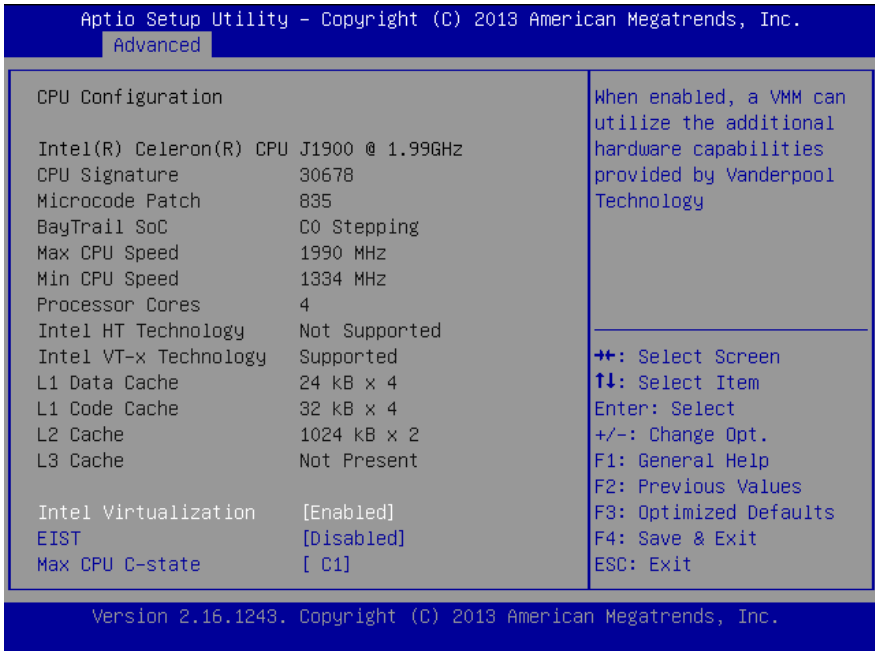

Options summary:

Intel Virtualization Technology	Disabled	
	Enabled	Optimal Default, Failsafe Default
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology		
EIST	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable Intel SpeedStep		
Max CPU C-state	C1	Optimal Default, Failsafe Default
	C6	
	C7	
This option controls Max C state that the processor will support		


### 3.4.2 Advanced: IDE Configuration

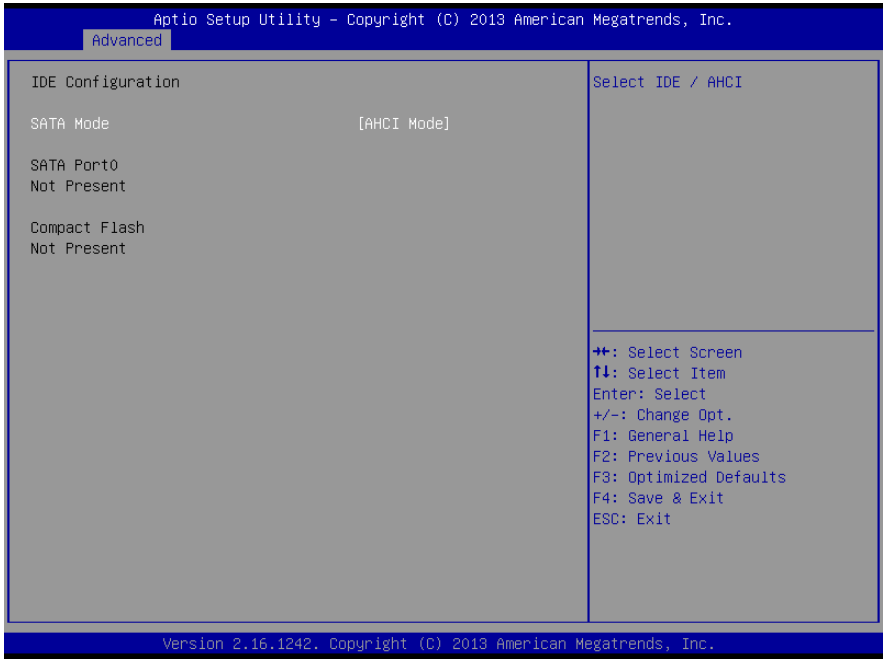

Options summary:

SATA Mode	IDE Mode	
	AHCI Mode	Optimal Default, Failsafe Default
Select IDE / AHCI		

### 3.4.3 Advanced: USB Configuration

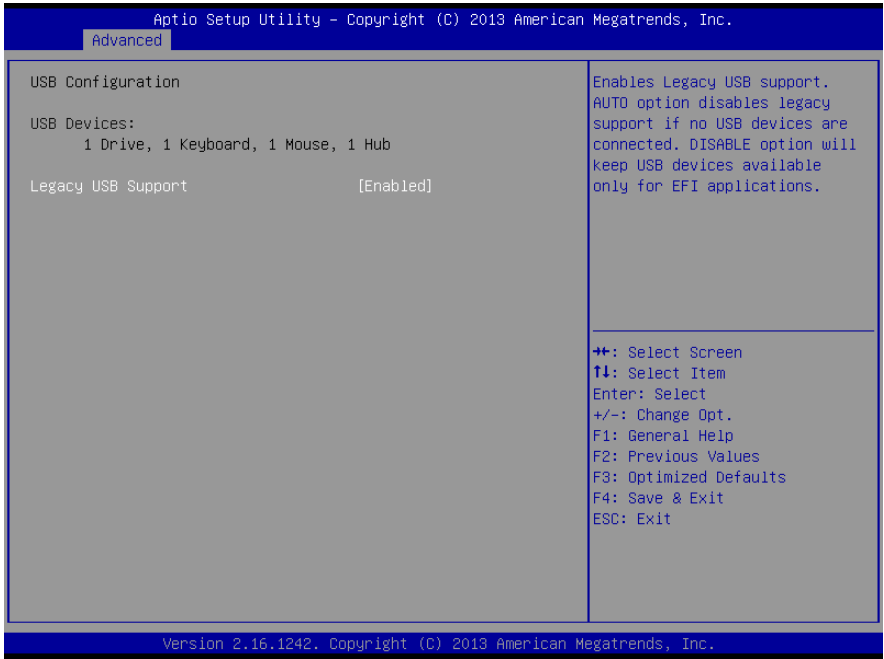

Options summary:

Legacy USB Support	Enabled	Optimal Default, Failsafe Default
	Disabled	
	Auto	
<p>Enables BIOS Support for Legacy USB Support. When enabled, USB can be functional in legacy environment like DOS.          AUTO option disables legacy support if no USB devices are connected</p>		

### 3.4.4 Advanced: Hardware Monitor

```
Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.
  Advanced

Pc Health Status

SYS Temperature(CPU)   : +36 °C
SYS Temperature(SIO)   : +39 °C

CPU Temperature(DTS)   : +43 °C


CPU FAN                 : 3552 RPM

VDDCORE                 : +0.948 V
1.35V                   : +1.356 V
12V                     : +11.760 V
5V                      : +5.000 V
1.8V                    : +1.836 V
5VSB                    : +4.992 V
VBAT                     : +3.048 V

⇄: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.16.1243. Copyright (C) 2013 American Megatrends, Inc.
```


### 3.4.5 Advanced: Power Management

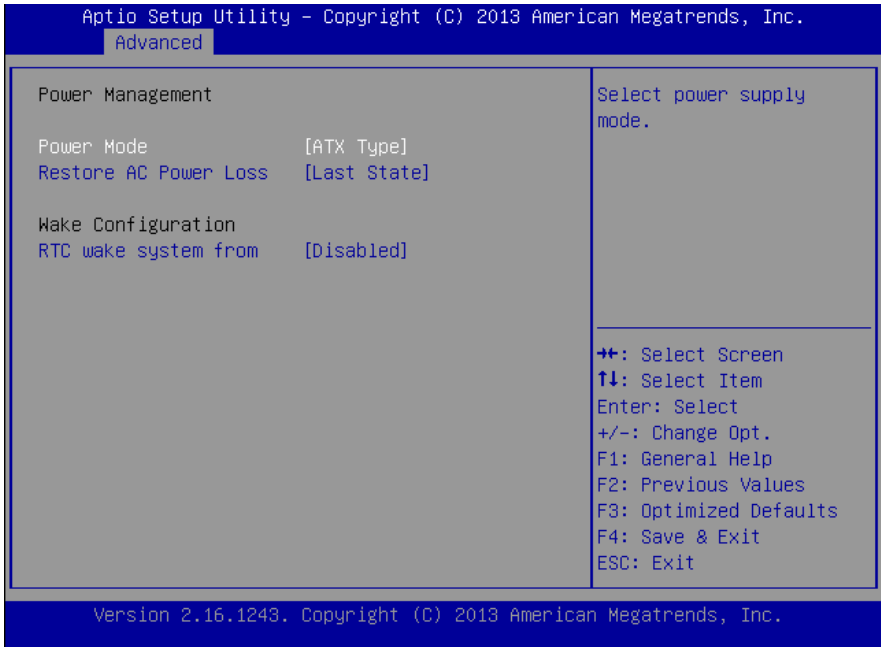

Options summary:

Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select power supply mode.		
Restore AC Power Loss	Last State	Optimal Default, Failsafe Default
	Power On	
	Power Off	
Select AC power state when power is re-applied after a power failure.		
RTC wake system from S5	Disable	Optimal Default, Failsafe Default
	Fixed Time	
	Dynamic Time	
Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified		


### 3.4.6 Advanced: LAN Bypass Configuration

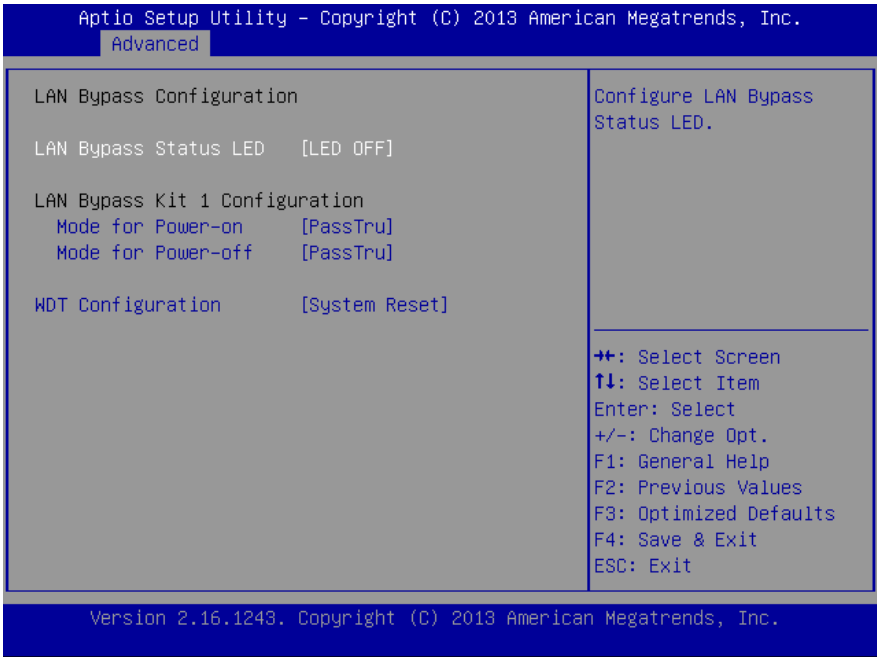

Options summary:

LAN Bypass Status LED	LED OFF	Optimal Default, Failsafe Default
	RED LED ON	
	RED LED BLINK	
	RED LED FAST BLINK	
	GREEN LED ON	
	GREEN LED BLINK	
	GREEN LED FAST BLINK	
Configure LAN Bypass Status LED.		
Mode for Power-on	PassTru	Optimal Default, Failsafe Default
	ByPass	
Configure LAN kit behavior when system in power-on state. (Bypass/Pass Through)		
Mode for Power-off	PassTru	Optimal Default, Failsafe Default
	ByPass	
Configure LAN kit behavior when system in power-off state. (Bypass/Pass Through)		
WDT Configuration	Force ByPass	Optimal Default, Failsafe Default
	System Reset	

### 3.4.7 Advanced: Serial Port Redirection

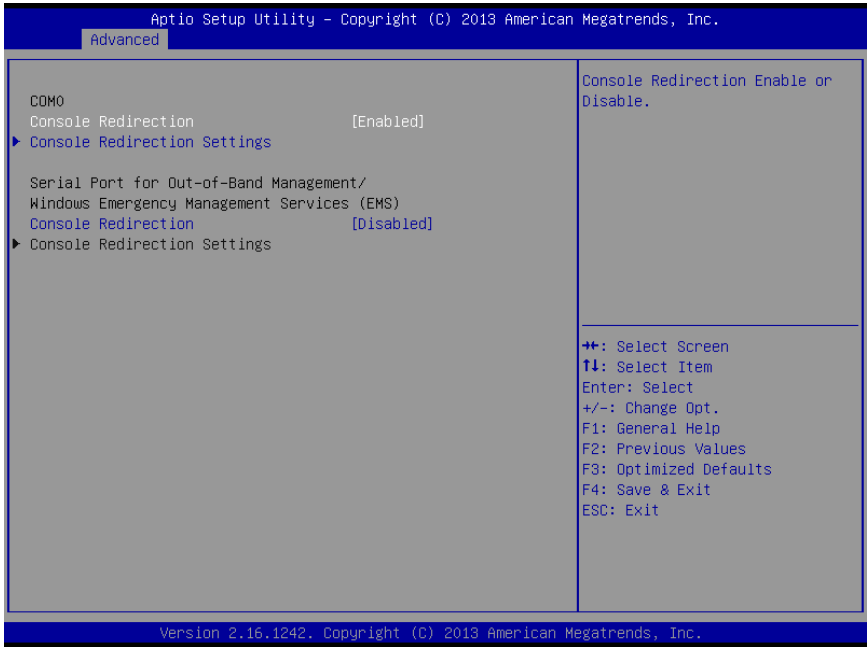


Options summary:


Console Redirection	Disabled	Optimal Default, Failsafe Default
	Enabled	
Console Redirection Enable or Disable.		



### 3.4.8 Advanced: SIO Configuration

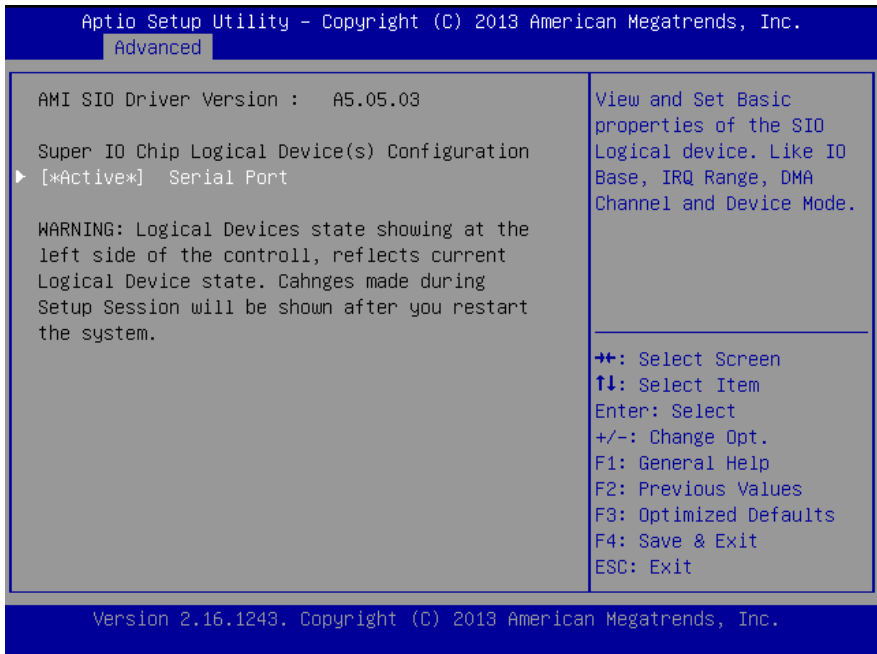


### 3.4.7.1 SIO Configuration: Serial Port Configuration

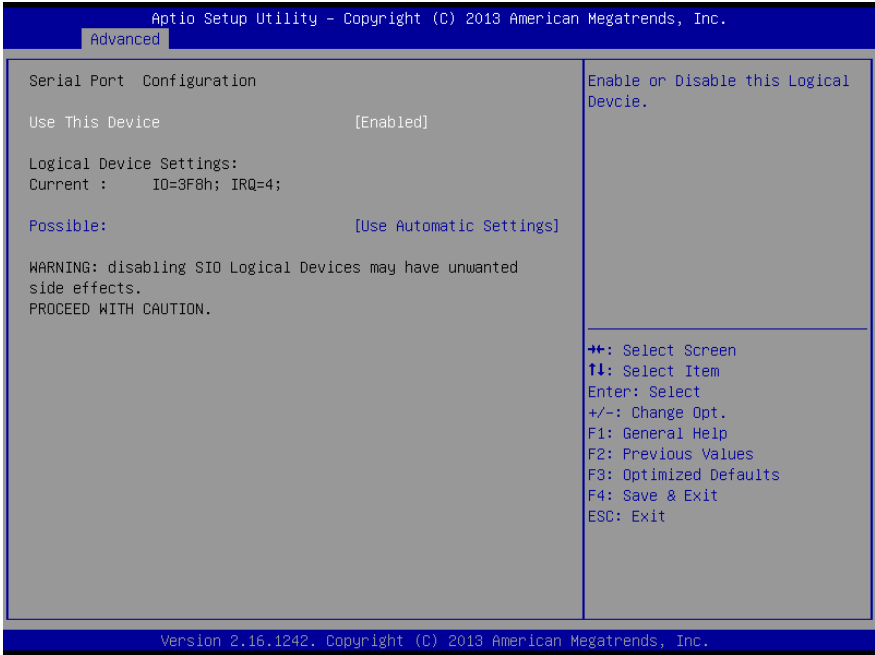


Options summary:

Use This Device	Disabled	Optimal Default, Failsafe Default
	Enabled	
En/Disable Serial Port (COM)		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3F8; IRQ=4;	
	IO=2F8; IRQ=3;	
Select an optimal setting for IO device		


### 3.5 Setup submenu: Chipset

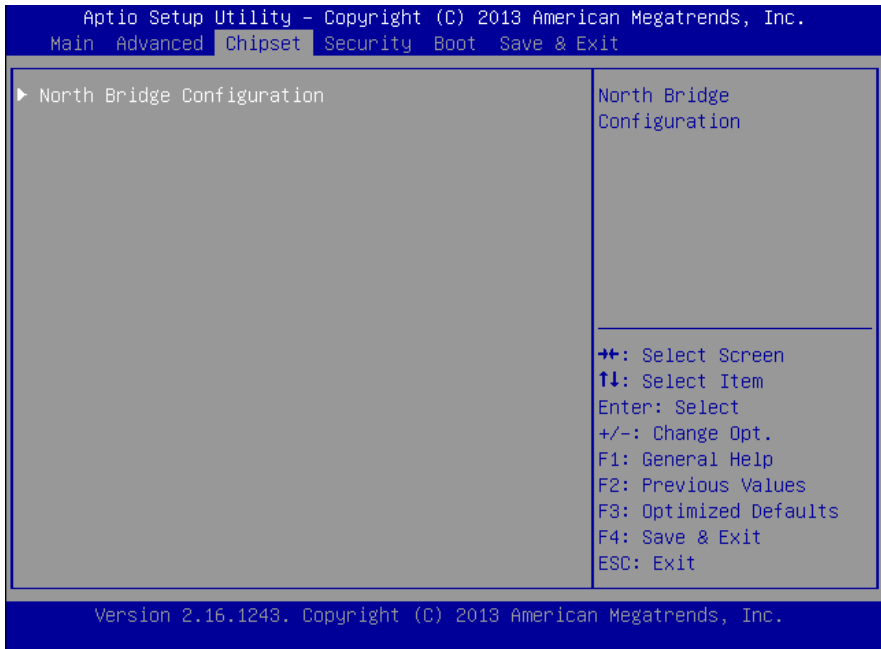

### 3.5.1 Chipset: North Bridge

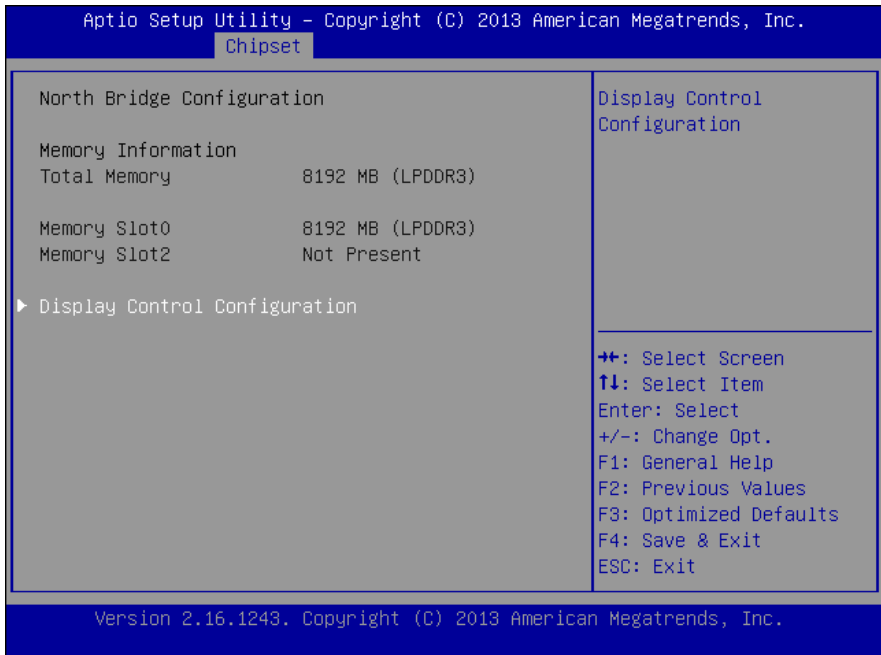


### 3.5.1.1 North Bridge: Display Control Configuration

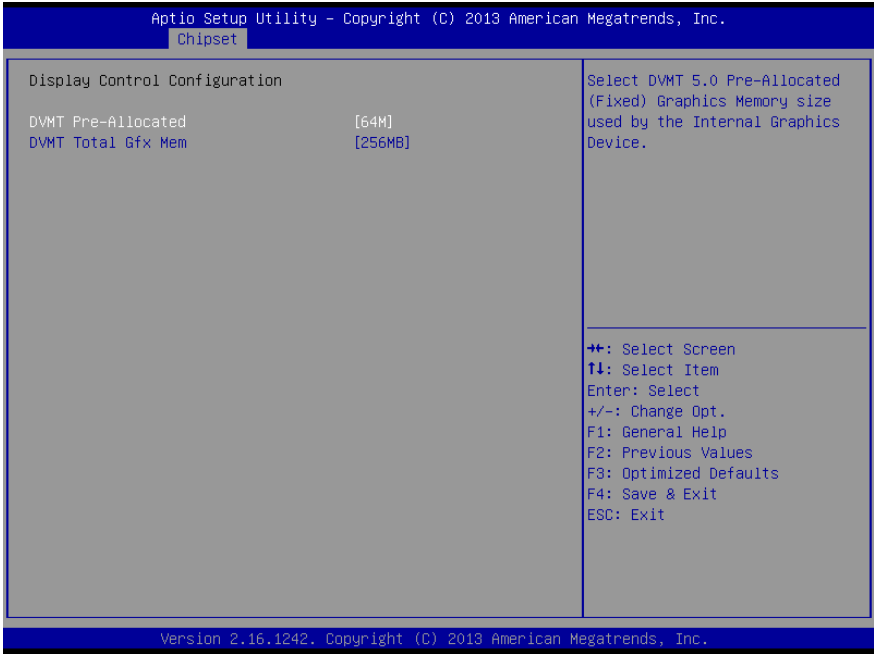

Options summary:

DVMT Pre-Allocated	64M	Optimal Default, Failsafe Default
	96M	
	128M	
	160M ...	
	512M	
Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.		
DVMT Total Gfx Mem	128MB	Optimal Default, Failsafe Default
	256MB	
	Max	
Select DVMT 5.0 Total Graphic Memory size used by the Internal Graphics Device.		

## 3.6 Setup submenu: Security

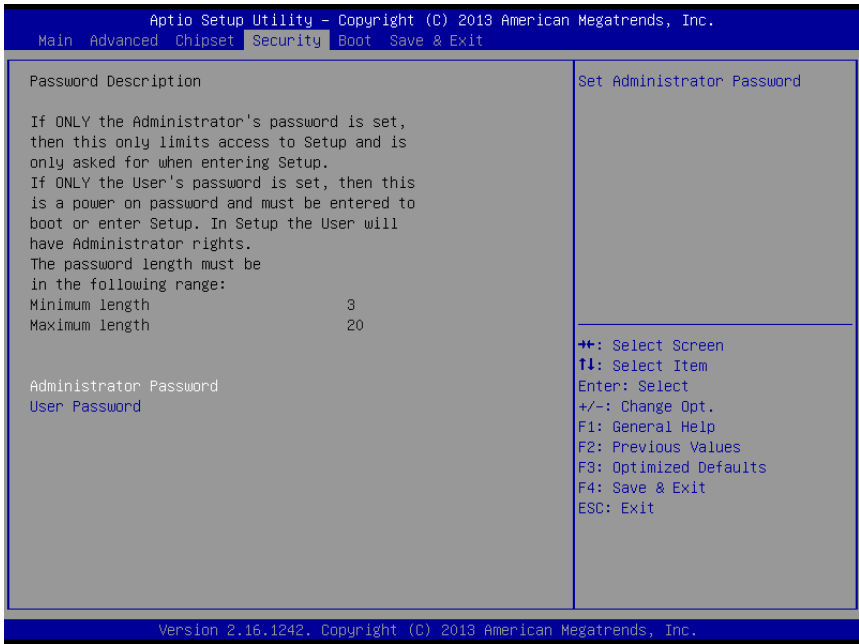

### Change User/Administrator Password


You can set a User Password once an Administrator Password is set. The password will be required during boot up, or when the user enters the Setup utility. Please Note that a User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, press Enter to open a dialog box to enter your password (you can enter no more than six letters or numbers). Press Enter to confirm your entry, after which you will be prompted to retype your password for a final confirmation. Press Enter again after you have retyped it correctly.

### Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.


### 3.7 Setup submenu: Boot

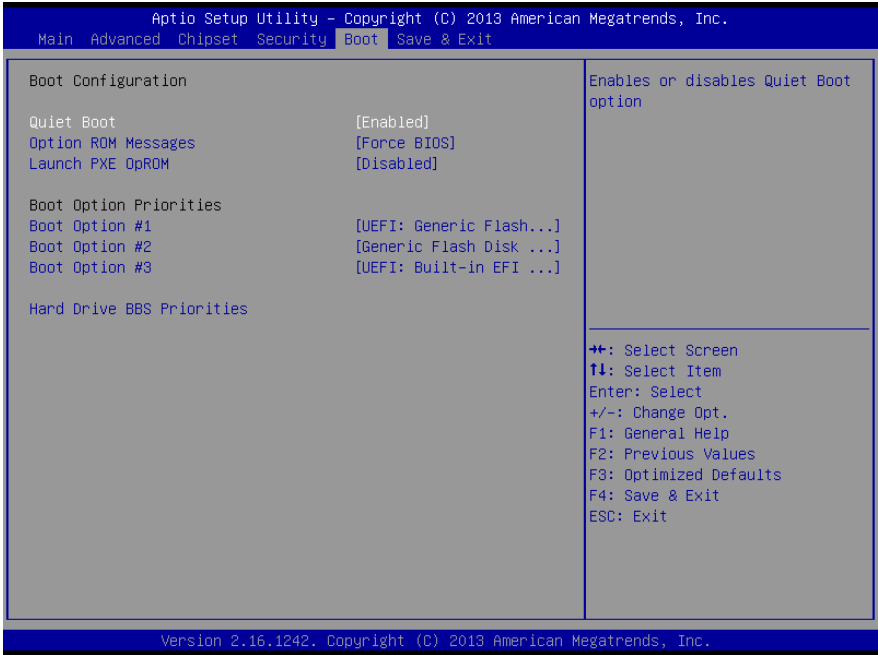

Options summary:


Quiet Boot	Disabled	Default
	Enabled	
En/Disable showing boot logo.		
Option ROM Messages	Force BIOS	Default
	Keep Current	
Set display mode for Option ROM		
Launch PXE OpROM	Disabled	Default
	Enabled	
En/Disable Legacy Boot Option		

### 3.7.1 Boot: BBS Priorities

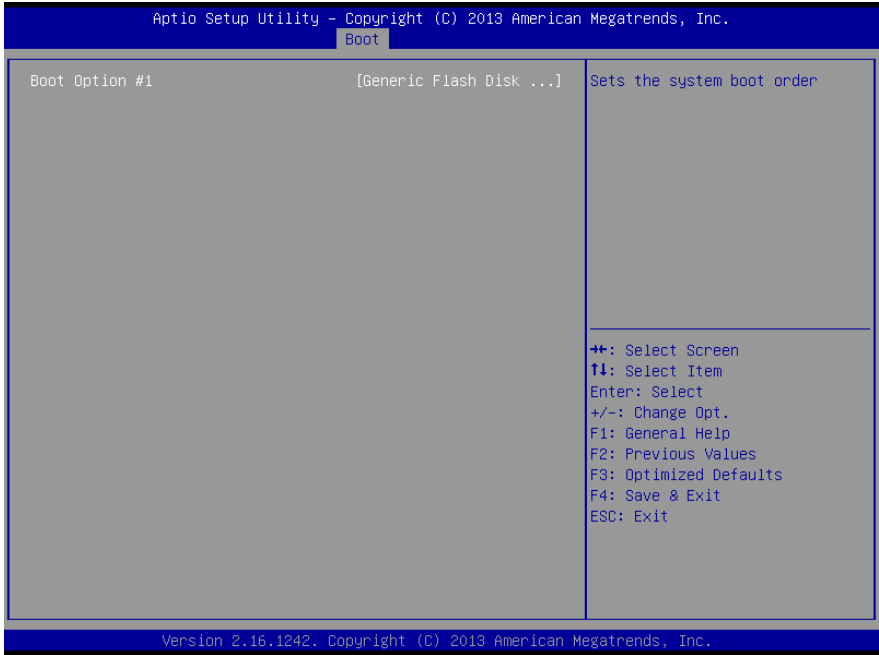



### 3.8 Setup submenu: Exit

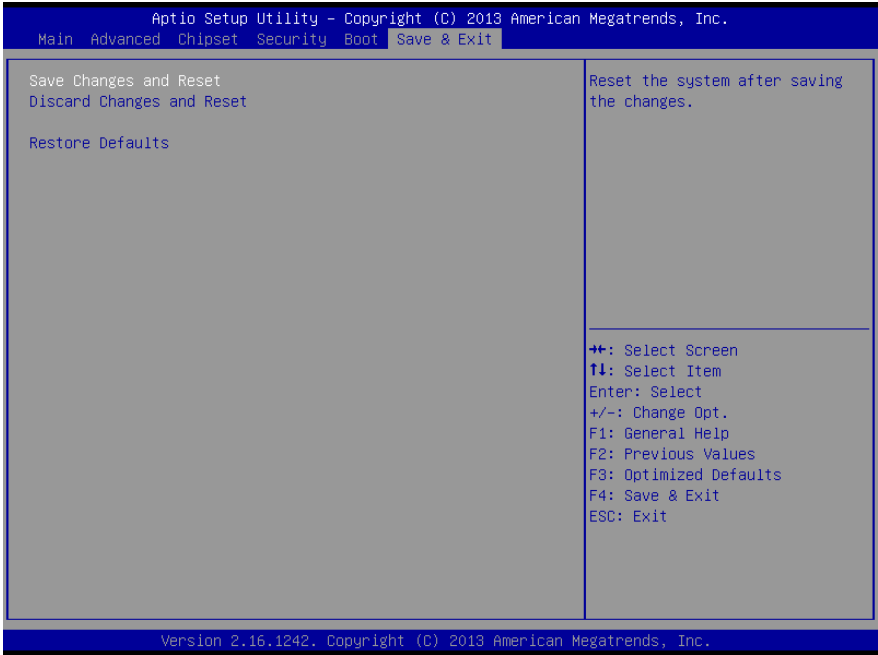

# Chapter 4

---

Drivers Installation

## 4.1 Product CD/DVD

---

The FWS-2252 comes with a product DVD that contains all the drivers and utilities you need to setup your product. Insert the DVD and follow the steps in the autorun program to install the drivers.

In case the program does not start, follow the sequence below to install the drivers.

### Step 1 – Install Chipset Drivers

1. Open the **Step 1 - Chipset** folder followed by the **SetupChipset.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

### Step 2 – Install Graphics Driver

1. Open the **Step 2 - Graphics** and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

### Step 3 – Install Network Driver

1. Open the **Step 3 - Network** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

### Step 4 – Install xHCI Driver (Windows 7 only)

1. Open the **Step 4 - xHCI** folder followed by **Setup.exe**

2. Follow the instructions
3. Drivers will be installed automatically

#### **Step 5 – Install Intel Sideband Fabric Device Driver (Windows 8.1 only)**

1. Open the **Step 5 –Intel Sideband Fabric Device** followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically

# Appendix A

---

## Watchdog Timer Programming

## A.1 Watchdog Timer Initial Program

Table 1 : SuperIO relative register table		
	Default Value	Note
Index	0x2E(Note1)	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F(Note2)	SIO MB PnP Mode Data Register 0x2F or 0x4F

Table 2 : Watchdog relative register table					
	LDN	Register	BitNum	Value	Note
Timer Counter	0x07(Note3)	0x73(Note4)		(Note24)	Time of watchdog timer (0~255) This register is byte access
Counting Unit	0x07(Note5)	0x72(Note6)	7(Note7)	1(Note8)	Select time unit. 1: second 0: minute
Watchdog Enable (KRST)	0x07(Note9)	0x72(Note10)	6(Note11)	1(Note12)	0: Disable 1: Enable
Timeout Status	0x07(Note13)	0x71(Note14)	0(Note15)	1	1: Clear timeout status

```
*****
// SuperIO relative definition (Please reference to Table 1)
#define byte   SIOIndex //This parameter is represented from Note1
#define byte   SIOData //This parameter is represented from Note2
#define void   IOWriteByte(byte IOPort, byte Value);
#define byte   IOReadByte(byte IOPort);
// Watch Dog relative definition (Please reference to Table 2)
#define byte   TimerLDN //This parameter is represented from Note3
#define byte   TimerReg //This parameter is represented from Note4
#define byte   TimerVal // This parameter is represented from Note24
#define byte   UnitLDN //This parameter is represented from Note5
#define byte   UnitReg //This parameter is represented from Note6
#define byte   UnitBit //This parameter is represented from Note7
#define byte   UnitVal //This parameter is represented from Note8
#define byte   EnableLDN //This parameter is represented from Note9
#define byte   EnableReg //This parameter is represented from Note10
#define byte   EnableBit //This parameter is represented from Note11
#define byte   EnableVal //This parameter is represented from Note12
#define byte   StatusLDN // This parameter is represented from Note13
#define byte   StatusReg // This parameter is represented from Note14
#define byte   StatusBit // This parameter is represented from Note15
*****
```

```
*****
VOID Main(){
    // Procedure : AaeonWDTConfig
    // (byte)Timer : Time of WDT timer.(0x00~0xFF)
    // (boolean)Unit : Select time unit(0: second, 1: minute).
    AaeonWDTConfig();

    // Procedure : AaeonWDTEnable
    // This procedure will enable the WDT counting.
    AaeonWDTEnable();
}
*****
```



```

*****
// Procedure : AaeonWDTEnable
VOID  AaeonWDTEnable (){
    WDTEnableDisable(EnableLDN, EnableReg, EnableBit, 1);
}

// Procedure : AaeonWDTConfig
VOID  AaeonWDTConfig (){
    // Disable WDT counting
    WDTEnableDisable(EnableLDN, EnableReg, EnableBit, 0);
    // Clear Watchdog Timeout Status
    WDTClearTimeoutStatus();
    // WDT relative parameter setting
    WDTParameterSetting();
}

VOID  WDTEnableDisable(byte LDN, byte Register, byte BitNum, byte Value){
    SIOBitSet(LDN, Register, BitNum, Value);
}

VOID  WDTParameterSetting(){
    // Watchdog Timer counter setting
    SIOByteSet(TimerLDN, TimerReg, TimerVal);
    // WDT counting unit setting
    SIOBitSet(UnitLDN, UnitReg, UnitBit, UnitVal);
}

VOID  WDTClearTimeoutStatus(){
    SIOBitSet(StatusLDN, StatusReg, StatusBit, 1);
}
*****

```

```
*****
VOID SIOEnterMBPnPMode0{
    Switch(SIOIndex){
        Case 0x2E:
            IOWriteByte(SIOIndex, 0x87);
            IOWriteByte(SIOIndex, 0x01);
            IOWriteByte(SIOIndex, 0x55);
            IOWriteByte(SIOIndex, 0x55);
            Break;
        Case 0x4E:
            IOWriteByte(SIOIndex, 0x87);
            IOWriteByte(SIOIndex, 0x01);
            IOWriteByte(SIOIndex, 0x55);
            IOWriteByte(SIOIndex, 0xAA);
            Break;
    }
}

VOID SIOExitMBPnPMode0{
    IOWriteByte(SIOIndex, 0x02);
    IOWriteByte(SIODData, 0x02);
}

VOID SIOSelectLDN(byte LDN){
    IOWriteByte(SIOIndex, 0x07); // SIO LDN Register Offset = 0x07
    IOWriteByte(SIODData, LDN);
}
*****
```

```
*****
VOID  SIOBitSet(byte LDN, byte Register, byte BitNum, byte Value){
    Byte TmpValue;

    SIOEnterMBPnPMode();
    SIOSelectLDN(byte LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= ~(1 << BitNum);
    TmpValue |= (Value << BitNum);
    IOWriteByte(SIOData, TmpValue);
    SIOExitMBPnPMode();
}

VOID  SIOByteSet(byte LDN, byte Register, byte Value){
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    IOWriteByte(SIOData, Value);
    SIOExitMBPnPMode();
}
*****
```

# Appendix B

---

I/O Information

## B.1 I/O Address Map

Network Appliance  
FWS-2252













































Address Range	Component
[0000000000000000 - 000000000000006F]	PCI Express Root Complex
[0000000000000020 - 0000000000000021]	Programmable interrupt controller
[0000000000000024 - 0000000000000025]	Programmable interrupt controller
[0000000000000028 - 0000000000000029]	Programmable interrupt controller
[000000000000002C - 000000000000002D]	Programmable interrupt controller
[000000000000002E - 000000000000002F]	Motherboard resources
[0000000000000030 - 0000000000000031]	Programmable interrupt controller
[0000000000000034 - 0000000000000035]	Programmable interrupt controller
[0000000000000038 - 0000000000000039]	Programmable interrupt controller
[000000000000003C - 000000000000003D]	Programmable interrupt controller
[0000000000000040 - 0000000000000043]	System timer
[000000000000004E - 000000000000004F]	Motherboard resources
[0000000000000050 - 0000000000000053]	System timer
[0000000000000060 - 0000000000000060]	Standard PS/2 Keyboard
[0000000000000061 - 0000000000000061]	Motherboard resources
[0000000000000063 - 0000000000000063]	Motherboard resources
[0000000000000064 - 0000000000000064]	Standard PS/2 Keyboard
[0000000000000065 - 0000000000000065]	Motherboard resources
[0000000000000067 - 0000000000000067]	Motherboard resources
[0000000000000070 - 0000000000000070]	Motherboard resources
[0000000000000070 - 0000000000000077]	System CMOS/real time clock
[0000000000000078 - 00000000000000CF]	PCI Express Root Complex
[0000000000000080 - 000000000000008F]	Motherboard resources
[0000000000000092 - 0000000000000092]	Motherboard resources
[00000000000000A0 - 00000000000000A1]	Programmable interrupt controller
[00000000000000A4 - 00000000000000A5]	Programmable interrupt controller
[00000000000000A8 - 00000000000000A9]	Programmable interrupt controller
[00000000000000AC - 00000000000000AD]	Programmable interrupt controller
[00000000000000B0 - 00000000000000B1]	Programmable interrupt controller
[00000000000000B2 - 00000000000000B3]	Motherboard resources
[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
[00000000000000B8 - 00000000000000B9]	Programmable interrupt controller
[00000000000000BC - 00000000000000BD]	Programmable interrupt controller
[000000000000003B0 - 000000000000003BB]	Intel(R) HD Graphics
[000000000000003C0 - 000000000000003DF]	Intel(R) HD Graphics
[000000000000003F8 - 000000000000003FF]	Communications Port (COM1)
[0000000000000400 - 000000000000047F]	Motherboard resources
[00000000000004D0 - 00000000000004D1]	Programmable interrupt controller
[0000000000000500 - 00000000000005FE]	Motherboard resources
[0000000000000600 - 000000000000061F]	Motherboard resources
[0000000000000680 - 000000000000069F]	Motherboard resources
[0000000000000A00 - 0000000000000A2F]	Motherboard resources
[0000000000000A30 - 0000000000000A3F]	Motherboard resources
[0000000000000A40 - 0000000000000A4F]	Motherboard resources
[0000000000000D00 - 0000000000000FFF]	PCI Express Root Complex
[000000000000A000 - 000000000000AFFF]	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 4 - 0F4E

```
[000000000000A000 - 000000000000AFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 4 - 0F4E
[000000000000A000 - 000000000000AFFF] PCI standard PCI-to-PCI bridge
[000000000000A000 - 000000000000AFFF] PCI standard PCI-to-PCI bridge
[000000000000B000 - 000000000000BFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 3 - 0F4C
[000000000000C000 - 000000000000CFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
[000000000000D000 - 000000000000DFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
[000000000000E000 - 000000000000E01F] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
[000000000000E020 - 000000000000E03F] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
[000000000000E040 - 000000000000E043] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
[000000000000E050 - 000000000000E057] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
[000000000000E060 - 000000000000E063] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
[000000000000E070 - 000000000000E077] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
[000000000000E080 - 000000000000E087] Intel(R) HD Graphics
```

















































## B.2 Memory Address Map

















































- ▲ fws-2252
  - ▷ Input/output (I/O)
  - ▷ Interrupt request (IRQ)
  - ▲ Memory
    - [00000000000A0000 - 00000000000BFFFF] Intel(R) HD Graphics
    - [00000000000A0000 - 00000000000BFFFF] PCI Express Root Complex
    - [00000000000C0000 - 00000000000DFFFF] PCI Express Root Complex
    - [00000000000E0000 - 00000000000FFFFFF] PCI Express Root Complex
    - [00000000000C000000 - 00000000000CFFFFFF] Intel(R) HD Graphics
    - [00000000000C000000 - 00000000000D916FFF] PCI Express Root Complex
    - [00000000000D000000 - 00000000000D03FFFF] Intel(R) HD Graphics
    - [00000000000D040000 - 00000000000D041FFFF] Intel(R) I211 Gigabit Network Connection #4
    - [00000000000D040000 - 00000000000D044FFFF] PCI standard PCI-to-PCI bridge
    - [00000000000D040000 - 00000000000D044FFFF] PCI standard PCI-to-PCI bridge
    - [00000000000D040000 - 00000000000D05FFFFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 4 - 0F4E
    - [00000000000D042000 - 00000000000D0423FFF] Intel(R) I211 Gigabit Network Connection #4
    - [00000000000D050000 - 00000000000D0503FFF] PCI standard PCI-to-PCI bridge
    - [00000000000D060000 - 00000000000D061FFFF] Intel(R) I211 Gigabit Network Connection #2
    - [00000000000D060000 - 00000000000D06FFFFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 3 - 0F4C
    - [00000000000D062000 - 00000000000D0623FFF] Intel(R) I211 Gigabit Network Connection #2
    - [00000000000D070000 - 00000000000D071FFFF] Intel(R) I211 Gigabit Network Connection #3
    - [00000000000D070000 - 00000000000D07FFFFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
    - [00000000000D072000 - 00000000000D0723FFF] Intel(R) I211 Gigabit Network Connection #3
    - [00000000000D080000 - 00000000000D081FFFF] Intel(R) I211 Gigabit Network Connection #3
    - [00000000000D080000 - 00000000000D08FFFFFF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
    - [00000000000D082000 - 00000000000D0823FFF] Intel(R) I211 Gigabit Network Connection
    - [00000000000D090000 - 00000000000D090FFFF] Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
    - [00000000000D0910000 - 00000000000D0913FFF] High Definition Audio Controller
    - [00000000000D0914000 - 00000000000D091401F] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
    - [00000000000D0916000 - 00000000000D09167FF] Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
    - [00000000000E000000 - 00000000000EFFFFFF] Motherboard resources
    - [00000000000E0000D0 - 00000000000E0000DB] Intel(R) Sideband Fabric Device
    - [00000000000FED00000 - 00000000000FED003FF] High precision event timer
    - [00000000000FED01000 - 00000000000FED01FFF] Motherboard resources
    - [00000000000FED03000 - 00000000000FED03FFF] Motherboard resources
    - [00000000000FED04000 - 00000000000FED04FFF] Motherboard resources
    - [00000000000FED08000 - 00000000000FED08FFF] Motherboard resources
    - [00000000000FED1C000 - 00000000000FED1CFFF] Motherboard resources
    - [00000000000FEE00000 - 00000000000FEEFFFFFF] Motherboard resources
    - [00000000000FEF00000 - 00000000000FEFFFFFF] Motherboard resources
    - [00000000000FFF00000 - 00000000000FFFFFFFFF] Intel(R) 82802 Firmware Hub Device

















































## B.3 IRQ Mapping Chart

















































Interrupt request (IRQ)	
	(ISA) 0x00000000 (00) System timer
	(ISA) 0x00000001 (01) Standard PS/2 Keyboard
	(ISA) 0x00000004 (04) Communications Port (COM1)
	(ISA) 0x00000008 (08) High precision event timer
	(ISA) 0x0000000C (12) Microsoft PS/2 Mouse
	(ISA) 0x00000051 (81) Microsoft ACPI-Compliant System
	(ISA) 0x00000052 (82) Microsoft ACPI-Compliant System
	(ISA) 0x00000053 (83) Microsoft ACPI-Compliant System
	(ISA) 0x00000054 (84) Microsoft ACPI-Compliant System
	(ISA) 0x00000055 (85) Microsoft ACPI-Compliant System
	(ISA) 0x00000056 (86) Microsoft ACPI-Compliant System
	(ISA) 0x00000057 (87) Microsoft ACPI-Compliant System
	(ISA) 0x00000058 (88) Microsoft ACPI-Compliant System
	(ISA) 0x00000059 (89) Microsoft ACPI-Compliant System
	(ISA) 0x0000005A (90) Microsoft ACPI-Compliant System
	(ISA) 0x0000005B (91) Microsoft ACPI-Compliant System
	(ISA) 0x0000005C (92) Microsoft ACPI-Compliant System
	(ISA) 0x0000005D (93) Microsoft ACPI-Compliant System
	(ISA) 0x0000005E (94) Microsoft ACPI-Compliant System
	(ISA) 0x0000005F (95) Microsoft ACPI-Compliant System
	(ISA) 0x00000060 (96) Microsoft ACPI-Compliant System
	(ISA) 0x00000061 (97) Microsoft ACPI-Compliant System
	(ISA) 0x00000062 (98) Microsoft ACPI-Compliant System
	(ISA) 0x00000063 (99) Microsoft ACPI-Compliant System
	(ISA) 0x00000064 (100) Microsoft ACPI-Compliant System
	(ISA) 0x00000065 (101) Microsoft ACPI-Compliant System
	(ISA) 0x00000066 (102) Microsoft ACPI-Compliant System
	(ISA) 0x00000067 (103) Microsoft ACPI-Compliant System
	(ISA) 0x00000068 (104) Microsoft ACPI-Compliant System
	(ISA) 0x00000069 (105) Microsoft ACPI-Compliant System
	(ISA) 0x0000006A (106) Microsoft ACPI-Compliant System
	(ISA) 0x0000006B (107) Microsoft ACPI-Compliant System
	(ISA) 0x0000006C (108) Microsoft ACPI-Compliant System
	(ISA) 0x0000006D (109) Microsoft ACPI-Compliant System
	(ISA) 0x0000006E (110) Microsoft ACPI-Compliant System
	(ISA) 0x0000006F (111) Microsoft ACPI-Compliant System
	(ISA) 0x00000070 (112) Microsoft ACPI-Compliant System
	(ISA) 0x00000071 (113) Microsoft ACPI-Compliant System
	(ISA) 0x00000072 (114) Microsoft ACPI-Compliant System
	(ISA) 0x00000073 (115) Microsoft ACPI-Compliant System
	(ISA) 0x00000074 (116) Microsoft ACPI-Compliant System
	(ISA) 0x00000075 (117) Microsoft ACPI-Compliant System
	(ISA) 0x00000076 (118) Microsoft ACPI-Compliant System
	(ISA) 0x00000077 (119) Microsoft ACPI-Compliant System
	(ISA) 0x00000078 (120) Microsoft ACPI-Compliant System
	(ISA) 0x00000079 (121) Microsoft ACPI-Compliant System
	(ISA) 0x0000007A (122) Microsoft ACPI-Compliant System

















































 (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
 (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
 (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
 (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
 (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
 (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
 (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
 (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
 (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
 (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
 (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
 (ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
 (ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
 (ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
 (ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
 (ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
 (ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
 (ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
 (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
 (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
 (ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System

















































 (ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BF (191)	Microsoft ACPI-Compliant System
 (ISA) 0x00000100 (256)	Microsoft ACPI-Compliant System
 (ISA) 0x00000101 (257)	Microsoft ACPI-Compliant System
 (ISA) 0x00000102 (258)	Microsoft ACPI-Compliant System
 (ISA) 0x00000103 (259)	Microsoft ACPI-Compliant System
 (ISA) 0x00000104 (260)	Microsoft ACPI-Compliant System
 (ISA) 0x00000105 (261)	Microsoft ACPI-Compliant System
 (ISA) 0x00000106 (262)	Microsoft ACPI-Compliant System
 (ISA) 0x00000107 (263)	Microsoft ACPI-Compliant System
 (ISA) 0x00000108 (264)	Microsoft ACPI-Compliant System
 (ISA) 0x00000109 (265)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010A (266)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010B (267)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010C (268)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010D (269)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010E (270)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010F (271)	Microsoft ACPI-Compliant System
 (ISA) 0x00000110 (272)	Microsoft ACPI-Compliant System
 (ISA) 0x00000111 (273)	Microsoft ACPI-Compliant System
 (ISA) 0x00000112 (274)	Microsoft ACPI-Compliant System
 (ISA) 0x00000113 (275)	Microsoft ACPI-Compliant System
 (ISA) 0x00000114 (276)	Microsoft ACPI-Compliant System
 (ISA) 0x00000115 (277)	Microsoft ACPI-Compliant System
 (ISA) 0x00000116 (278)	Microsoft ACPI-Compliant System
 (ISA) 0x00000117 (279)	Microsoft ACPI-Compliant System
 (ISA) 0x00000118 (280)	Microsoft ACPI-Compliant System
 (ISA) 0x00000119 (281)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011A (282)	Microsoft ACPI-Compliant System

















































 (ISA) 0x0000011B (283)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011C (284)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011D (285)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011E (286)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011F (287)	Microsoft ACPI-Compliant System
 (ISA) 0x00000120 (288)	Microsoft ACPI-Compliant System
 (ISA) 0x00000121 (289)	Microsoft ACPI-Compliant System
 (ISA) 0x00000122 (290)	Microsoft ACPI-Compliant System
 (ISA) 0x00000123 (291)	Microsoft ACPI-Compliant System
 (ISA) 0x00000124 (292)	Microsoft ACPI-Compliant System
 (ISA) 0x00000125 (293)	Microsoft ACPI-Compliant System
 (ISA) 0x00000126 (294)	Microsoft ACPI-Compliant System
 (ISA) 0x00000127 (295)	Microsoft ACPI-Compliant System
 (ISA) 0x00000128 (296)	Microsoft ACPI-Compliant System
 (ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012A (298)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012B (299)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012C (300)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012D (301)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012E (302)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012F (303)	Microsoft ACPI-Compliant System
 (ISA) 0x00000130 (304)	Microsoft ACPI-Compliant System
 (ISA) 0x00000131 (305)	Microsoft ACPI-Compliant System
 (ISA) 0x00000132 (306)	Microsoft ACPI-Compliant System
 (ISA) 0x00000133 (307)	Microsoft ACPI-Compliant System
 (ISA) 0x00000134 (308)	Microsoft ACPI-Compliant System
 (ISA) 0x00000135 (309)	Microsoft ACPI-Compliant System
 (ISA) 0x00000136 (310)	Microsoft ACPI-Compliant System
 (ISA) 0x00000137 (311)	Microsoft ACPI-Compliant System
 (ISA) 0x00000138 (312)	Microsoft ACPI-Compliant System
 (ISA) 0x00000139 (313)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013A (314)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013B (315)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013C (316)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013D (317)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013E (318)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013F (319)	Microsoft ACPI-Compliant System
 (ISA) 0x00000140 (320)	Microsoft ACPI-Compliant System
 (ISA) 0x00000141 (321)	Microsoft ACPI-Compliant System
 (ISA) 0x00000142 (322)	Microsoft ACPI-Compliant System
 (ISA) 0x00000143 (323)	Microsoft ACPI-Compliant System
 (ISA) 0x00000144 (324)	Microsoft ACPI-Compliant System
 (ISA) 0x00000145 (325)	Microsoft ACPI-Compliant System
 (ISA) 0x00000146 (326)	Microsoft ACPI-Compliant System
 (ISA) 0x00000147 (327)	Microsoft ACPI-Compliant System
 (ISA) 0x00000148 (328)	Microsoft ACPI-Compliant System
 (ISA) 0x00000149 (329)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System
















































 (ISA) 0x0000014B (331)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014C (332)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014D (333)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014E (334)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014F (335)	Microsoft ACPI-Compliant System
 (ISA) 0x00000150 (336)	Microsoft ACPI-Compliant System
 (ISA) 0x00000151 (337)	Microsoft ACPI-Compliant System
 (ISA) 0x00000152 (338)	Microsoft ACPI-Compliant System
 (ISA) 0x00000153 (339)	Microsoft ACPI-Compliant System
 (ISA) 0x00000154 (340)	Microsoft ACPI-Compliant System
 (ISA) 0x00000155 (341)	Microsoft ACPI-Compliant System
 (ISA) 0x00000156 (342)	Microsoft ACPI-Compliant System
 (ISA) 0x00000157 (343)	Microsoft ACPI-Compliant System
 (ISA) 0x00000158 (344)	Microsoft ACPI-Compliant System
 (ISA) 0x00000159 (345)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015A (346)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015B (347)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015C (348)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015D (349)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015E (350)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015F (351)	Microsoft ACPI-Compliant System
 (ISA) 0x00000160 (352)	Microsoft ACPI-Compliant System
 (ISA) 0x00000161 (353)	Microsoft ACPI-Compliant System
 (ISA) 0x00000162 (354)	Microsoft ACPI-Compliant System
 (ISA) 0x00000163 (355)	Microsoft ACPI-Compliant System
 (ISA) 0x00000164 (356)	Microsoft ACPI-Compliant System
 (ISA) 0x00000165 (357)	Microsoft ACPI-Compliant System
 (ISA) 0x00000166 (358)	Microsoft ACPI-Compliant System
 (ISA) 0x00000167 (359)	Microsoft ACPI-Compliant System
 (ISA) 0x00000168 (360)	Microsoft ACPI-Compliant System
 (ISA) 0x00000169 (361)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016A (362)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016B (363)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016C (364)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016D (365)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016E (366)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016F (367)	Microsoft ACPI-Compliant System
 (ISA) 0x00000170 (368)	Microsoft ACPI-Compliant System
 (ISA) 0x00000171 (369)	Microsoft ACPI-Compliant System
 (ISA) 0x00000172 (370)	Microsoft ACPI-Compliant System
 (ISA) 0x00000173 (371)	Microsoft ACPI-Compliant System
 (ISA) 0x00000174 (372)	Microsoft ACPI-Compliant System
 (ISA) 0x00000175 (373)	Microsoft ACPI-Compliant System
 (ISA) 0x00000176 (374)	Microsoft ACPI-Compliant System
 (ISA) 0x00000177 (375)	Microsoft ACPI-Compliant System
 (ISA) 0x00000178 (376)	Microsoft ACPI-Compliant System
 (ISA) 0x00000179 (377)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017A (378)	Microsoft ACPI-Compliant System

	(ISA) 0x0000017B (379)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017C (380)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017D (381)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017E (382)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017F (383)	Microsoft ACPI-Compliant System
	(ISA) 0x00000180 (384)	Microsoft ACPI-Compliant System
	(ISA) 0x00000181 (385)	Microsoft ACPI-Compliant System
	(ISA) 0x00000182 (386)	Microsoft ACPI-Compliant System
	(ISA) 0x00000183 (387)	Microsoft ACPI-Compliant System
	(ISA) 0x00000184 (388)	Microsoft ACPI-Compliant System
	(ISA) 0x00000185 (389)	Microsoft ACPI-Compliant System
	(ISA) 0x00000186 (390)	Microsoft ACPI-Compliant System
	(ISA) 0x00000187 (391)	Microsoft ACPI-Compliant System
	(ISA) 0x00000188 (392)	Microsoft ACPI-Compliant System
	(ISA) 0x00000189 (393)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018A (394)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018B (395)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018C (396)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018D (397)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018E (398)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018F (399)	Microsoft ACPI-Compliant System
	(ISA) 0x00000190 (400)	Microsoft ACPI-Compliant System
	(ISA) 0x00000191 (401)	Microsoft ACPI-Compliant System
	(ISA) 0x00000192 (402)	Microsoft ACPI-Compliant System
	(ISA) 0x00000193 (403)	Microsoft ACPI-Compliant System
	(ISA) 0x00000194 (404)	Microsoft ACPI-Compliant System
	(ISA) 0x00000195 (405)	Microsoft ACPI-Compliant System
	(ISA) 0x00000196 (406)	Microsoft ACPI-Compliant System
	(ISA) 0x00000197 (407)	Microsoft ACPI-Compliant System
	(ISA) 0x00000198 (408)	Microsoft ACPI-Compliant System
	(ISA) 0x00000199 (409)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019A (410)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019B (411)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019C (412)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019D (413)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019E (414)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019F (415)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A0 (416)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A1 (417)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A2 (418)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A3 (419)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A4 (420)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A5 (421)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A6 (422)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A7 (423)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A8 (424)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A9 (425)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AA (426)	Microsoft ACPI-Compliant System



 (ISA) 0x000001AB (427)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AC (428)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AD (429)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AE (430)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AF (431)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B0 (432)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B1 (433)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B2 (434)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B3 (435)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B4 (436)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B5 (437)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B6 (438)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B7 (439)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B8 (440)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B9 (441)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BA (442)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BB (443)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BC (444)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BD (445)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BE (446)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BF (447)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C0 (448)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C1 (449)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C2 (450)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C3 (451)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C4 (452)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C5 (453)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C6 (454)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C7 (455)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C8 (456)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C9 (457)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CA (458)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CB (459)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CC (460)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CD (461)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CF (463)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D0 (464)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D1 (465)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D2 (466)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D3 (467)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D4 (468)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D5 (469)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D6 (470)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D7 (471)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D8 (472)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D9 (473)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DA (474)	Microsoft ACPI-Compliant System

	(ISA) 0x000001DB (475)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DC (476)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DD (477)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DE (478)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DF (479)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E0 (480)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E1 (481)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E2 (482)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E3 (483)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E4 (484)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E5 (485)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E6 (486)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E7 (487)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E8 (488)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E9 (489)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EA (490)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000A (10)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
	(PCI) 0x00000010 (16)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
	(PCI) 0x00000010 (16)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000011 (17)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
	(PCI) 0x00000011 (17)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000012 (18)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 3 - 0F4C
	(PCI) 0x00000013 (19)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	(PCI) 0x00000013 (19)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 4 - 0F4E
	(PCI) 0x00000013 (19)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000016 (22)	High Definition Audio Controller
	(PCI) 0xFFFFF0E5 (-27)	Intel(R) I211 Gigabit Network Connection #2

	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000A (10)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor Platform Control Unit - SMBus Port - 0F12
	(PCI) 0x00000010 (16)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 1 - 0F48
	(PCI) 0x00000010 (16)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000011 (17)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 2 - 0F4A
	(PCI) 0x00000011 (17)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000012 (18)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 3 - 0F4C
	(PCI) 0x00000013 (19)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor AHCI - 0F23
	(PCI) 0x00000013 (19)	Intel(R) Atom(TM)/Celeron(R)/Pentium(R) Processor PCI Express - Root Port 4 - 0F4E
	(PCI) 0x00000013 (19)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000016 (22)	High Definition Audio Controller
	(PCI) 0xFFFFF5E5 (-27)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFF5E6 (-26)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFF5E7 (-25)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFF5E8 (-24)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFF5E9 (-23)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFF5EA (-22)	Intel(R) I211 Gigabit Network Connection #2
	(PCI) 0xFFFFF5EB (-21)	Intel(R) I211 Gigabit Network Connection #3
	(PCI) 0xFFFFF5EC (-20)	Intel(R) I211 Gigabit Network Connection #3
	(PCI) 0xFFFFF5ED (-19)	Intel(R) I211 Gigabit Network Connection #3
	(PCI) 0xFFFFF5EE (-18)	Intel(R) I211 Gigabit Network Connection #3
	(PCI) 0xFFFFF5EF (-17)	Intel(R) I211 Gigabit Network Connection #3
	(PCI) 0xFFFFF5F0 (-16)	Intel(R) I211 Gigabit Network Connection #3
	(PCI) 0xFFFFF5F1 (-15)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFF5F2 (-14)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFF5F3 (-13)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFF5F4 (-12)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFF5F5 (-11)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFF5F6 (-10)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFF5F7 (-9)	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
	(PCI) 0xFFFFF5F8 (-8)	Intel(R) HD Graphics
	(PCI) 0xFFFFF5F9 (-7)	Intel(R) I211 Gigabit Network Connection #4
	(PCI) 0xFFFFF5FA (-6)	Intel(R) I211 Gigabit Network Connection #4
	(PCI) 0xFFFFF5FB (-5)	Intel(R) I211 Gigabit Network Connection #4
	(PCI) 0xFFFFF5FC (-4)	Intel(R) I211 Gigabit Network Connection #4
	(PCI) 0xFFFFF5FD (-3)	Intel(R) I211 Gigabit Network Connection #4
	(PCI) 0xFFFFF5FE (-2)	Intel(R) I211 Gigabit Network Connection #4

▾ Memory



# Appendix C

---

Standard Firewall Platform Setting

## C.1 List of Mating Connectors and Cables

Status LED Control Table

	IO 0XA04 BIT4	IO 0XA03 BIT0	IO 0XA01 BIT2
LED Off	0	0	0
Red LED On	0	0	1
Red LED Blink	0	1	0
Red LED Fast Blink	0	1	1
Green LED Blink	1	0	1
Green LED Fast Blink	1	1	0
Green LED On	1	1	1

LAN Bypass Configuration Table

Item		IO 0XA00 BIT5	IO 0XA00 BIT6	IO 0XA00 BIT4	IO 0XA00 BIT2	IO 0XA00 BIT1
LAN1 ~2	Power Bypass	Negedge	0	1		
	On Pass Through	Negedge	0	0		0(WDT_RE SET)
LAN1 ~2	Power Bypass	Negedge	0		1	1(BYPASS)
	Off Pass Through	Negedge	0		0	

**Note :** "IO 0XA00 BIT5" will be activated when "0XA00 BIT6.4.2.1" is ready.

## C.2 Status LED Sample Code

---

```
#define LED_BASE_ADDR0x48E

// LED Off
VOID LED_OFF()
{
    UINT16    TEMP16;

    TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;
    IoOut16(LED_BASE_ADDR, TEMP16);
}

// Red LED On
VOID RED_LED_ON()
{
    UINT16    TEMP16;

    TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;
    TEMP16 |= 0x0002;
    IoOut16(LED_BASE_ADDR, TEMP16);
}

// Red LED Blink
VOID RED_LED_BLINK()
{
    UINT16    TEMP16;

    TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;
```

```
    TEMP16 |= 0x0800;
    IoOut16(LED_BASE_ADDR, TEMP16);
}

// Red LED Fast Blink
VOID RED_LED_FBLINK()
{
    UINT16    TEMP16;

    TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;
    TEMP16 |= 0x0802;
    IoOut16(LED_BASE_ADDR, TEMP16);
}

// Green LED On
VOID GREEN_LED_ON()
{
    UINT16    TEMP16;

    TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;
    TEMP16 |= 0x0812;
    IoOut16(LED_BASE_ADDR, TEMP16);
}

// Green LED Blink
VOID GREEN_LED_BLINK()
{
    UINT16    TEMP16;
```

```
TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;  
TEMP16 |= 0x0012;  
IoOut16(LED_BASE_ADDR, TEMP16);  
}
```

```
// Green LED Fast Blink
```

```
VOID GREEN_LED_FBLINK()
```

```
{  
    UINT16    TEMP16;
```

```
    TEMP16 = IoIn16(LED_BASE_ADDR) & 0xF7ED;  
    TEMP16 |= 0x0810;  
    IoOut16(LED_BASE_ADDR, TEMP16);
```

### C.3 LED Bypass Mode Sample Code

---

```
#define LANBP_BASE_ADDR      0x48C
#define PAIR_SEL_BASE_ADDR  0x4B8

/*
Select LAN Pair I or II
PAIR_NUM =      0x00 - PAIR I
               0x01 - PAIR II
*/
VOID SEL_PAIR(
    IN    UINT8PAIR_NUM;
)
{
    UINT8TEMP8;

    PAIR_NUM = PAIR_NUM << 5;
    TEMP8 = IoIn8(PAIR_SEL_BASE_ADDR) & 0xDF;
    TEMP8 |= PAIR_NUM;
    IoOut8(PAIR_SEL_BASE_ADDR, TEMP8);
}

/*
Execute LAN ByPass Settings
*/
VOID EXE_SET()
{
    UINT8TEMP8;
```

```
TEMP8 = IoIn8(LANBP_BASE_ADDR + 3) | 0x10;
IoOut8(LANBP_BASE_ADDR + 3, TEMP8);
Sleep(500);
IoOut8(LANBP_BASE_ADDR + 3, TEMP8 & 0xEF);
}

/*
LAN1 & 2 Power On ByPass Mode Set
BP_MODE = 0x00 - Pass Through Mode
           = 0x01 - By Pass Mode
*/
VOID LAN12_PWRON_BP()
{
    UINT8TEMP8;

    SEL_PAIR(0x00);        // Select Pair I
    TEMP8 = IoIn8(LANBP_BASE_ADDR + 1) & 0xFE;
    TEMP8 |= BP_MODE;
    IoOut8(LANBP_BASE_ADDR + 1, TEMP8);

    EXE_SET();            // Execute Set
}

/*
```

LAN1 & 2 Power Off ByPass Mode Set

BP\_MODE = 0x00 - Pass Through Mode

= 0x01 - By Pass Mode

\*/

VOID LAN12\_PWROFF\_BP()

{

UINT8TEMP8;

SEL\_PAIR(0x00); // Select Pair I

TEMP8 = IoIn8(LANBP\_BASE\_ADDR) & 0x7F;

TEMP8 |= BP\_MODE << 7;

IoOut8(LANBP\_BASE\_ADDR, TEMP8);

EXE\_SET(); // Execute Set

}

/\*

LAN3 & 4 Power On ByPass Mode Set

BP\_MODE = 0x00 - Pass Through Mode

= 0x01 - By Pass Mode

\*/

VOID LAN34\_PWRON\_BP()

{

UINT8TEMP8;

SEL\_PAIR(0x01); // Select Pair II

TEMP8 = IoIn8(LANBP\_BASE\_ADDR + 1) & 0xFE;



```
TEMP8 |= BP_MODE;
IoOut8(LANBP_BASE_ADDR + 1, TEMP8);

EXE_SET();          // Execute Set
}

/*
LAN3 & 4 Power Off ByPass Mode Set
BP_MODE = 0x00 - Pass Through Mode
          = 0x01 - By Pass Mode
*/
VOID LAN34_PWROFF_BP()
{
    UINT8TEMP8;

    SEL_PAIR(0x01); // Select Pair II
    TEMP8 = IoIn8(LANBP_BASE_ADDR) & 0x7F;
    TEMP8 |= BP_MODE << 7;
    IoOut8(LANBP_BASE_ADDR, TEMP8);

    EXE_SET();          // Execute Set
}

/*
Set Watch Dog as LAN1 & 2 By Pass mode
*/
```

```
VOID WDT_LAN12_BP()
{
    UINT8TEMP8;

    SEL_PAIR(0x00) ;           // Select Pair I
    TEMP8 = IoIn8(LANBP_BASE_ADDR) | 0x40;
    IoOut8(LANBP_BASE_ADDR, TEMP8);

    EXE_SET();                // Execute Set
}
```

```
/*
Set Watch Dog as LAN3 & 4 By Pass mode
*/
```

```
VOID WDT_LAN34_BP()
{
    UINT8TEMP8;

    SEL_PAIR(0x01) ;           // Select Pair II
    TEMP8 = IoIn8(LANBP_BASE_ADDR) | 0x40;
    IoOut8(LANBP_BASE_ADDR, TEMP8);

    EXE_SET();                // Execute Set
}
```

```
/*
```

Set Watch Dog as system reset mode

```
*/  
VOID WDT_RESET()  
{  
    UINT8TEMP8;  
  
    SEL_PAIR(0x00);        // Select Pair I  
    TEMP8 = IoIn8(LANBP_BASE_ADDR) & 0xBF;  
    IoOut8(LANBP_BASE_ADDR, TEMP8);  
  
    SEL_PAIR(0x00);        // Select Pair II  
    IoOut8(LANBP_BASE_ADDR, TEMP8);  
  
    EXE_SET();            // Execute Set  
}
```

## C.4 Console Redirection

---

Console redirection allows you to maintain a system from a remote location by re-directing keyboard input and text output through the serial port. This section will tell you how to use the console redirection.

1. Please insert console cable between on FWS-2252 and remote client system.

2. Setup BIOS in FWS-2252

BIOS >> Advanced >> Serial Port Console Redirection >> Console Redirection:  
Enabled (Default)

Enabled Attempt to redirect console via COM port

Disabled Console redirection function

BIOS >> Advanced >> Serial Port Console Redirection >> Serial Redirection Settings  
>> Bits per second: 115200 (Default)

3. Configure Console redirection on client system. This example is for the Windows platform.

Step 1 - Click the Start button, point to programs >> Accessories >> Communication, and click Hyper Terminal

Step 2 - Enter any name for the new connection and select any icon

Step 3 - Click OK

Step 4 - From the connect to pull-down menu, select a COM port available on your client system and click OK

Step 5 - Select Baud Rate >> 19200, Flow control >> None, Data bit >>8, Parity check >> None, Stop bit>>1

4. Power on FWS-2252 and it will display the BIOS information on the client system.