

FWS-7810

1U Rackmount

Network Appliance Platform

2 SATA 6.0 Gb/s, 2 USB3.0

1 PCI-E[x8] (Optional)

1 NIM (Optional)

Copyright Notice

This document is copyrighted, 2013. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMI is a trademark of American Megatrends Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- Intel®, Core®, and Xeon Quad Core, are trademarks of Intel® Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ISoundBlaster is a trademark of Creative Labs, Inc.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 FWS-7810
- 1 DVD-ROM for manual (in PDF format) and drivers
- 2 SATA HDD Cable
- 2 Serial ATA Cable
- 1 RJ-45 Console Cable
- 1 CPU Heatsink
- 1 Ear Bracket Module, Black

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

Contents

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features	1-3
1.3 Specifications	1-4
1.4 General System Information	1-7

Chapter 2 Quick Installation Guide

2.1 Safety Precautions	2-2
2.2 Location of Connectors	2-3
2.3 Mechanical Drawings of FWS-7810.....	2-5
2.4 List of Jumpers.....	2-6
2.5 List of Connectors	2-6
2.6 Setting Jumpers	2-8
2.7 Clear CMOS (CMOS).....	2-9
2.8 Auto Power Button (JP2).....	2-9
2.9 Front Panel Connector (FP1)	2-9
2.10 Front Panel Connector (FP2)	2-9
2.11 USB3.0 Port PIN Header	2-10
2.12 Installing the CPU and the Heat Sink	2-11
2.13 Installing the Two 2.5" Hard Disk Drive (HDD)	2-17
2.14 Installing the Network Interface Module (NIM)	2-22

Chapter 3 AMI BIOS Setup

3.1 System Test and Initialization	3-2
--	-----

3.2 AMI BIOS Setup	3-3
--------------------------	-----

Chapter 4 Driver Installation

4.1 Installation	4-3
------------------------	-----

Appendix A Programming the Watchdog Timer

A.1 Watchdog Timer Initial Program	A-2
--	-----

Appendix B I/O Information

B.1 I/O Address Map	B-2
B.2 Memory Address Map	B-3
B.3 IRQ Mapping Chart	B-4
B.4 DMA Channel Assignments	B-8

Appendix C Standard LAN Bypass Platform Setting

C.1 Status LED	C-2
C.2 LAN Bypass	C-4
C.3 LCD Module	C-9
C.4 Software Reset button (General Propose Input)	C-12

Chapter

1

**General
Information**

1.1 Introduction

FWS-7810 adopts Intel® 4th generation Core™ / Xeon series processor. The chipset is equipped with Intel® C226. In addition, the system memory features four 240-pin ECC DDR3 1333/1600 MHz DIMM up to 32GB and supports dual-channel. FWS-7810 deploys eight Gigabit Ethernet ports (optional up to 2 pairs LAN bypass function). The condensed appearance of FWS-7810 features 1U form factor that fits nicely into a space-limited environment.

This compact FWS-7810 is equipped with two SATA6.0 Gb/s (optional up to 3 SATA ports). In addition, it offers flexible expansion with network products and features one optional PCI-E[x8] slot and one optional Network Interface Module (NIM) slot, two USB3.0 ports and one RJ-45 for console. The console port deploys console re-direction that increases the network security via remote control. Moreover, there is a front panel support LCM with keypad control that allows for easy access and operation. All of these designs provide for a more user-friendly solution.

1.2 Features

- 1U Rackmount 8 LAN Ports Network Appliance
- Intel® 4th Generation Core™ /Xeon Processor
- 240-Pin Dual-Channel ECC DDR3 1333/1600MHz DIMM x 4
(Up To 32 GB)
- Gigabit Ethernet x 8 with Optional 2-Pair LAN Bypass
Function
- SATA 6.0 Gb/s x 2 (Optional 3 SATA Ports)
- Internal 3.5" SATA HDD x 1 or 2.5" SATA HDD x 2
- LCM with Keypad x 1
- RJ-45 for Console x 1, USB3.0 x 2
- 250W AC Type Power Input
- RAID 0,1 Support
- VGA Header x 1

1.3 Specifications

System

Form Factor	1U 8-port Network Appliance
Processor	Intel® 4th generation Core™/ Xeon
System Memory	240-pin Dual-Channel ECC DDR3 1333/1600 DIMM Socket x 4, up to 32 GB
Chipset	Intel® C226
Ethernet (Optional)	Intel® 82574L controller, Gigabit Ethernet x 8 (optional up to 2 pairs LAN bypass function)
BIOS	AMI BIOS ROM
Serial ATA	SATA 6.0 Gb/s x 2 (optional 3 SATA ports)
Expansion Interface	Network Interface Module (NIM) x 1 (optional); PCI-E[x8] slot x 1 (optional)
Watchdog Timer	1~255 steps by software programming
RTC	Internal RTC
Storage	3.5" SATA HDD bay x 1 or 2.5" SATA HDD bay x 2
System Fan	4 cm Ball Bearing Fan x 2
Front I/O Panel	Power LED x 1 Bypass LED (Optional up to 2) Status LED x 1


	HDD Active LED x 1
	USB port x 2
	RJ-45 port with LED x 8
	RJ-45 console x 1
	LCM Display and 4 keypad x 1
	Software programming switch x 1
Rear I/O Panel	AC power input x 1
	Power switch x 1
	Expansion slot x 2 (optional PCI-E[x8] slot x 1)
Color	Black
LCM	16 x 2 characters with 4 keypad control
Power Supply	Flex ATX 250W
Dimension	16.9" x 12.01" x 1.73" (430mm x 305mm x 44mm)
<i>Display</i>	
VGA Controller	Pin header reserved for Graphic display
<i>I/O</i>	
Serial Port	RJ-45 console x 1 (on front panel), RS-232 box header x 1 (optional)
Keyboard and Mouse	Reserved pin header (optional)
Universal Serial Bus	USB2.0 x 2

Environmental

Operating Temperature	32°F~104°F (0°C~40°C)
Storage Temperature	-4°F~140°F (-20°C~60°C)
Operating Humidity	10~80% relative humidity, non-condensing
Storage Humidity	10~80% @ 40°C, non-condensing
Vibration	0.5 g rms/ 5~500 Hz/ operation (2.5" Hard Disk Drive) 1.5 g rms/ 5~500 Hz/ non-operation
Shock	10 G peak acceleration (11 m sec. duration), operation 20 G peak acceleration (11 m sec. duration), non-operation

1.4 General System Information

Front View

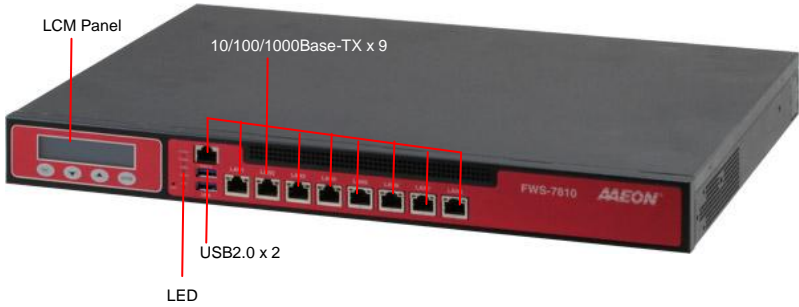

Rear View



Chapter

2

**Quick
Installation
Guide**

2.1 Safety Precautions

The installation is intended for technically qualified personnel who have experience installing and configuring system boards.

The equipment can be installed in a restricted access location (RAL) only.

A restricted access location is a site location for equipment where the following criteria apply:

01. Access can only be gained by service persons or by users who have been trained on the restrictions and the precautions for this specific site.

02. Access is by means of at least one of the following, special tool, lock and key, or other means of security, and is controlled by the authority responsible for the location.

Safety Precautions:

Warning!



Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.

Caution!




Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis

Risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.


2.2 Location of Connectors

Board of FWS-7810


Component side

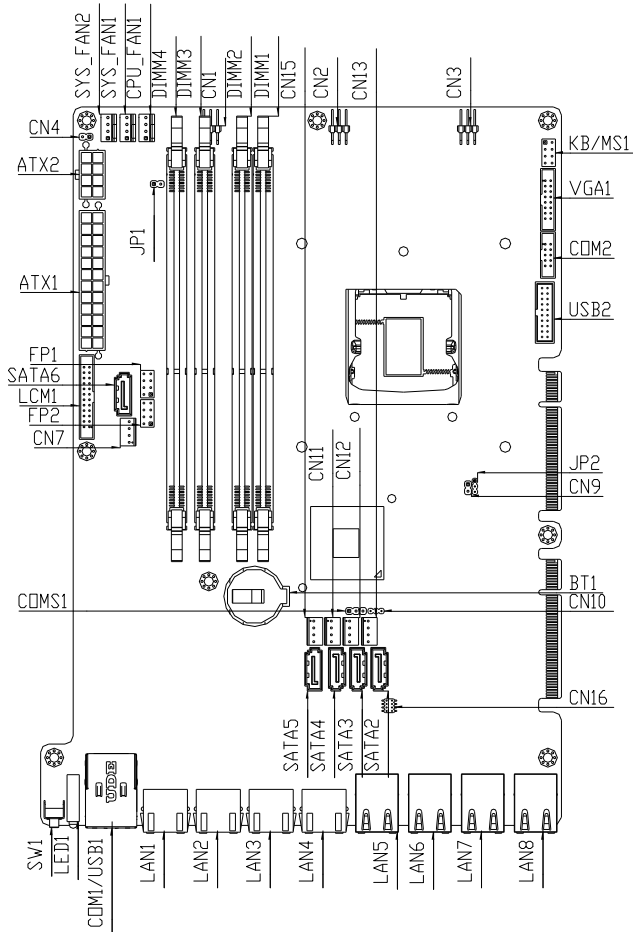

Solder Side

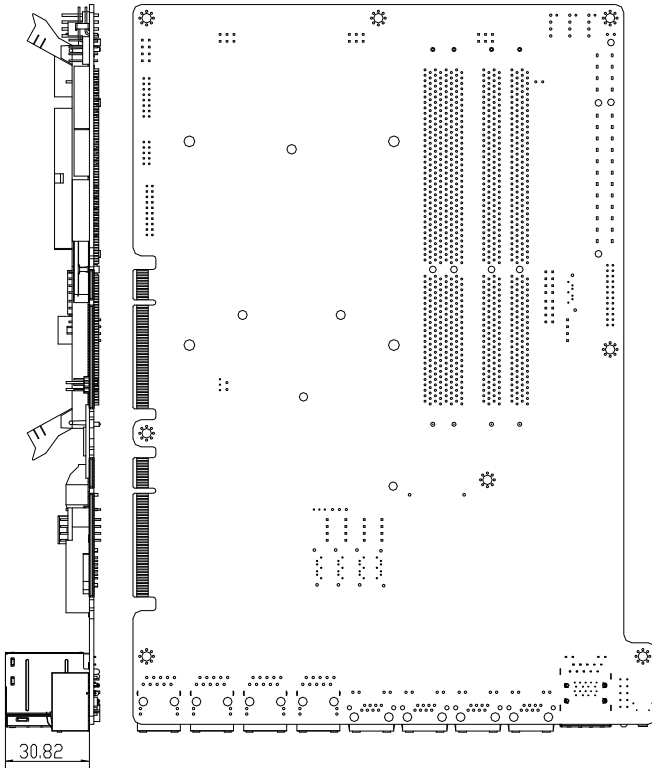

2.3 Mechanical Drawings of FWS-7810

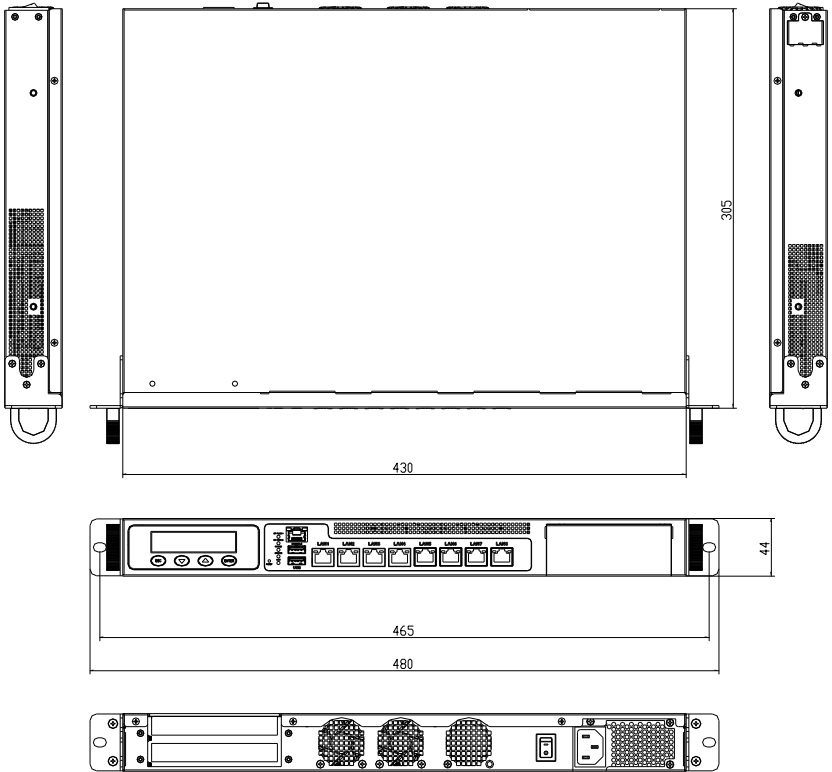

2.4 List of Jumpers

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

Label	Function
JP2	Auto Power Button
CMOS	Clear CMOS

2.5 List of Connectors

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:


Label	Function
FP1	Front Panel Connector 1
FP2	Front Panel Connector 2
KB/MS1	PS2 KB/MS Pin Header
VGA1	VGA Pin Header
COM2	RS-232 Pin Header
USB2	USB 3.0 Pin Header
DIMM1	DDR3 DIMM Slot
DIMM2	DDR3 DIMM Slot
DIMM3	DDR3 DIMM Slot
DIMM4	DDR3 DIMM Slot
BT1	Battery
SATA1~SATA6	SATA Connector

LAN1	10/100/1000 Base-TX Ethernet Connector
LAN2	10/100/1000 Base-TX Ethernet Connector
LAN3	10/100/1000 Base-TX Ethernet Connector
LAN4	10/100/1000 Base-TX Ethernet Connector
LAN5	10/100/1000 Base-TX Ethernet Connector
LAN6	10/100/1000 Base-TX Ethernet Connector
LAN7	10/100/1000 Base-TX Ethernet Connector
LAN8	10/100/1000 Base-TX Ethernet Connector
CPU_FAN1	4-Pin Fan Connector
SYS_FAN1	4-Pin Fan Connector
SYS_FAN2	4-Pin Fan Connector
CN7	SATA Power Connector
CN11~CN15	SATA Power Connector
CN4	Power Bottom
LCM1	LCM Connector
ATX1	24-Pin ATX Power Connector
ATX2	8-Pin ATX Power Connector
COM1/USB1	COM/USB3 Connector
SW1	Reset Switch (By Control)

2.6 Setting Jumpers

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip.

To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.

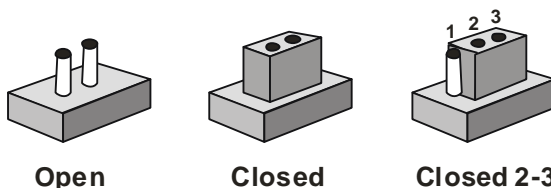

A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change.

Generally, you simply need a standard cable to make most connections.

2.7 Clear CMOS (CMOS)

CMOS	Function
1-2	Protected (Default)
2-3	Clear

2.8 Auto Power Button (JP2)

JP2	Function
1-2	Power ON by Button (Default)
2-3	Auto Power ON

2.9 Front Panel Connector (FP1)

Pin	Signal	Pin	Signal
1	External Speaker (+)	2	Key Board Lock (+)
3	NC	4	GND
5	Internal Buzzer (-)	6	I2C Bus SMB Clock
7	External Speaker (-)	8	I2C Bus SMB Data

Note:

Internal Buzzer Enable: Close Pin 5,7

2.10 Front Panel Connector (FP2)


Pin	Signal	Pin	Signal
1	Power On Button (+)	2	Reset Switch (+)
3	Power On Button (-)	4	Reset Switch (-)
5	HDD LED (+)	6	Power LED (+)
7	HDD LED (-)	8	Power LED (-)

2.11 USB3.0 Port PIN Header


Pin	Signal	Pin	Signal
1	VCC	20	NC
2	USB3_RX1_DN_C	19	VCC
3	USB3_RX1_DP_C	18	USB3_RX2_DN_C
4	GND	17	USB3_RX2_DP_C
5	USB3_TX1_DN_C	16	GND
6	USB3_TX1_DP_C	15	USB3_TX2_DN_C
7	GND	14	USB3_TX2_DP_C
8	USBP_0N_C	13	GND
9	USBP_0P_C	12	USBP_1N_C
10	NC	11	USBP_1P_C

2.12 Installing the CPU and the Heat Sink


Step 1: Loosen the screws and remove the fan duct

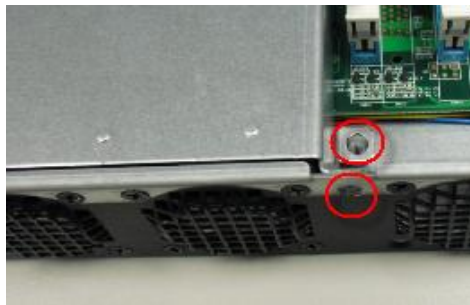


Step 2: Release the lock pole of the CPU bracket

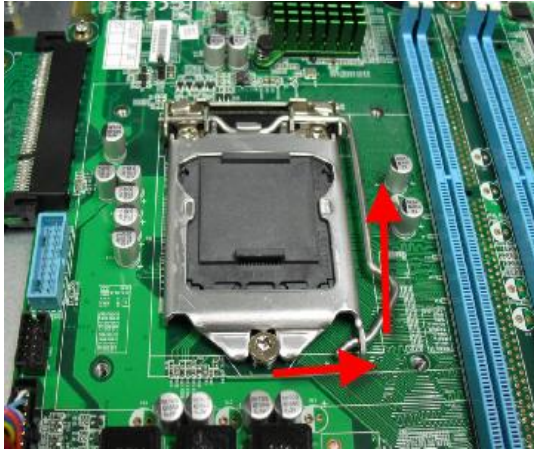


Step 3: Lift up the CPU bracket

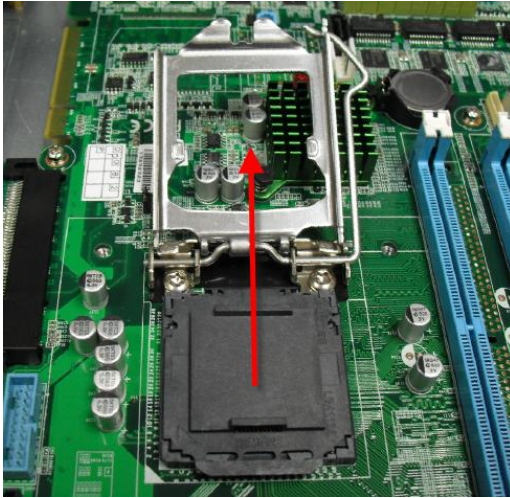


Step 4 : Lift up the CPU cover

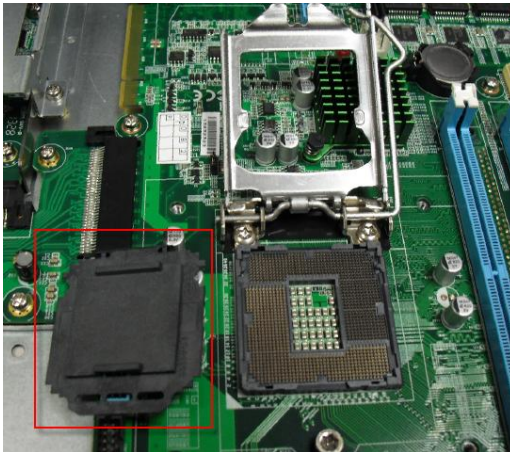


Step 5 : Place the CPU to the socket and have the two fillisters locked properly

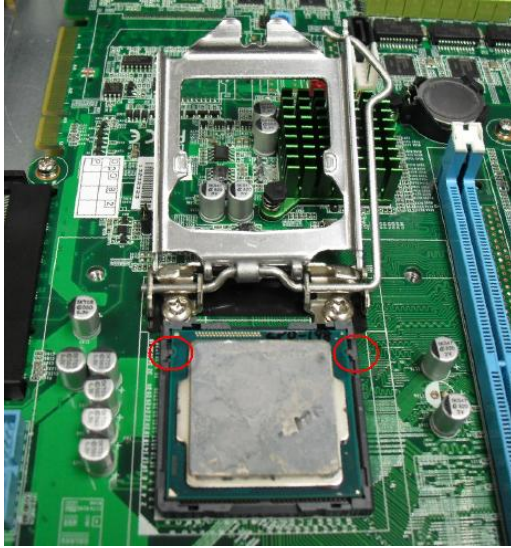


Step 6 : Close the CPU bracket and lock the pole to the position

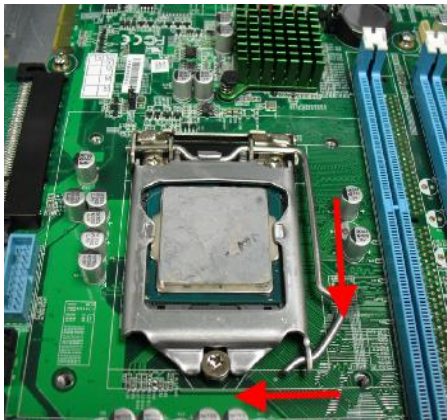

Step 7 : Cover the Heatsink on the CPU and watch out the direction of the Heatsink that did not against the airflow

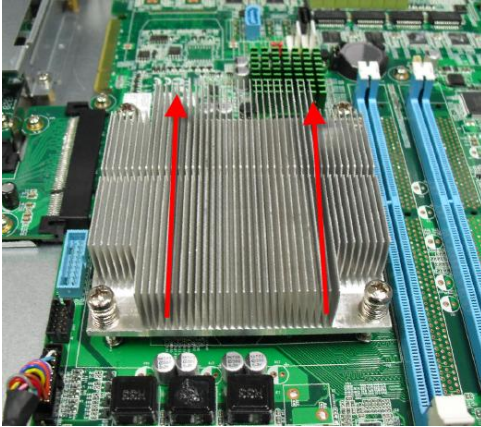

Step 8: Fasten the four screws to lock the air duct

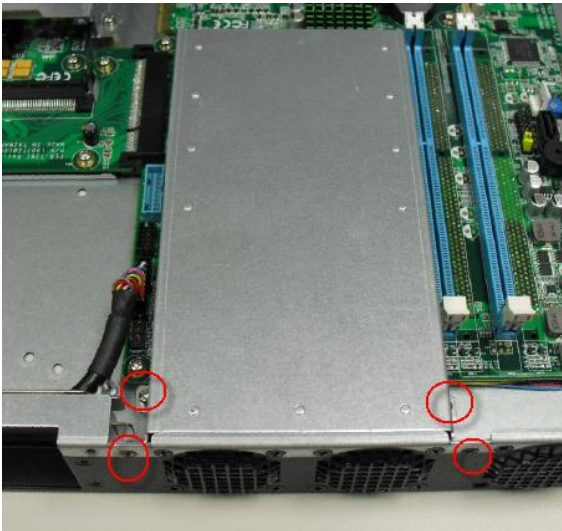


2.13 Installing the Two 2.5" Hard Disk Drive (HDD)


Step 1: Unscrew the upper lid




Step 2: Unfasten the four screws

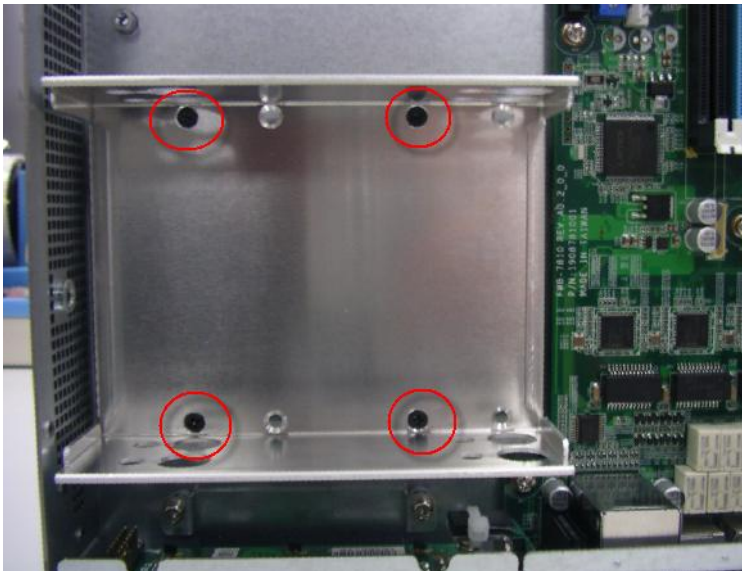

Step 3: put the screw into cushion

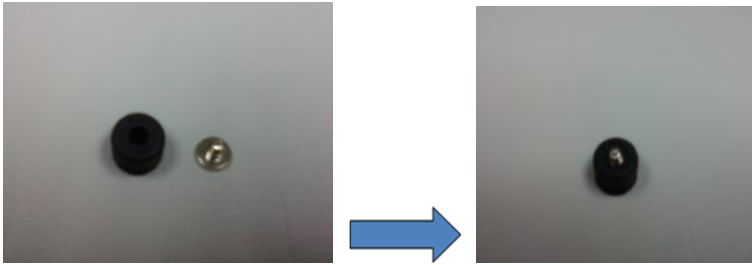

Step 4: put the assembled cushions to the upper place of the 2.5" HDD bracket

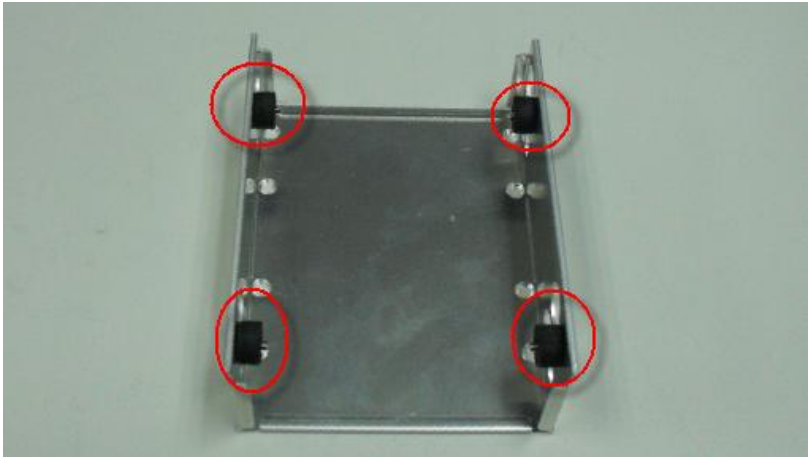

Step 5: put the assembled cushions to the lower place of the 2.5" HDD

bracket



Step 6: Lock the HDD to the lower cushions with four screws




Step 7: Lock the second HDD to the upper cushions with four screws




Step 8: Lock the HDD bracket to the chassis with four screws



Step 9: Connect the SATA cable and power cable to the HDD in lower place


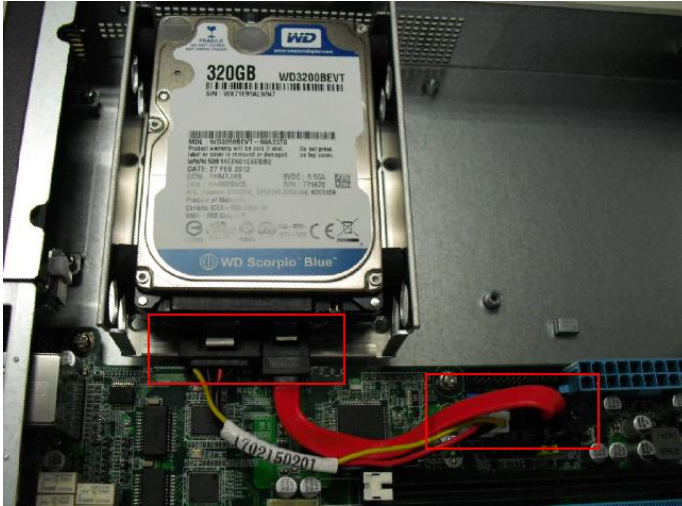


Step 10: Connect the SATA cable and power cable to the HDD in upper place

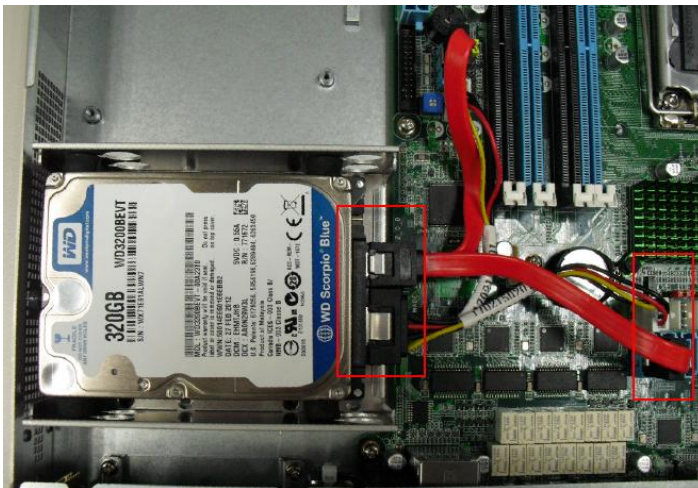

2.14 Installing the Network Interface Module (NIM)

Step 1: Unfasten the screws on the bottom of chassis

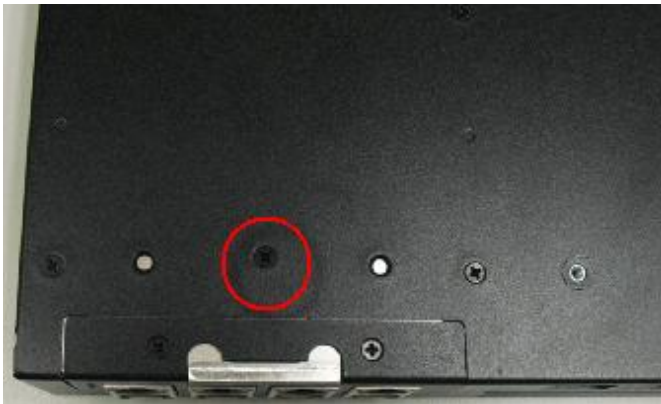
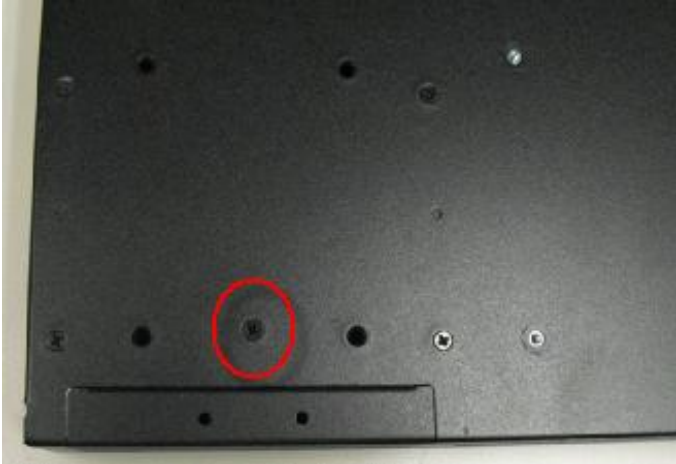


Step 2 : Remove the null Module cover or existing LAN module



Step 3 : Insert the LAN Module and fasten the screws on the chassis



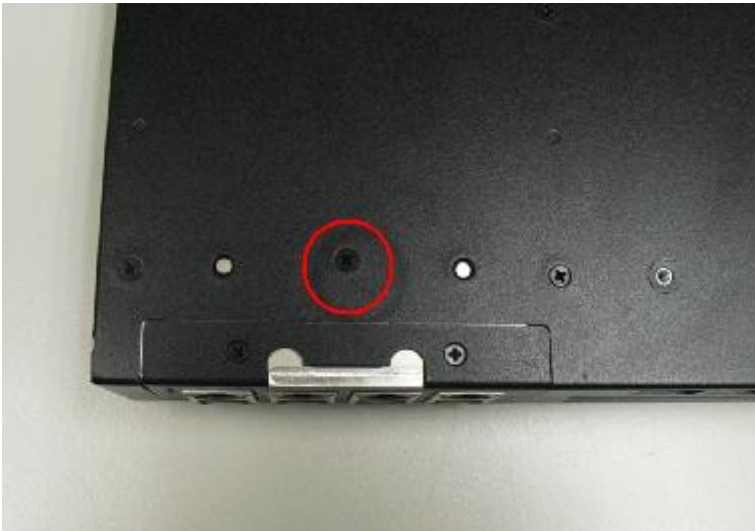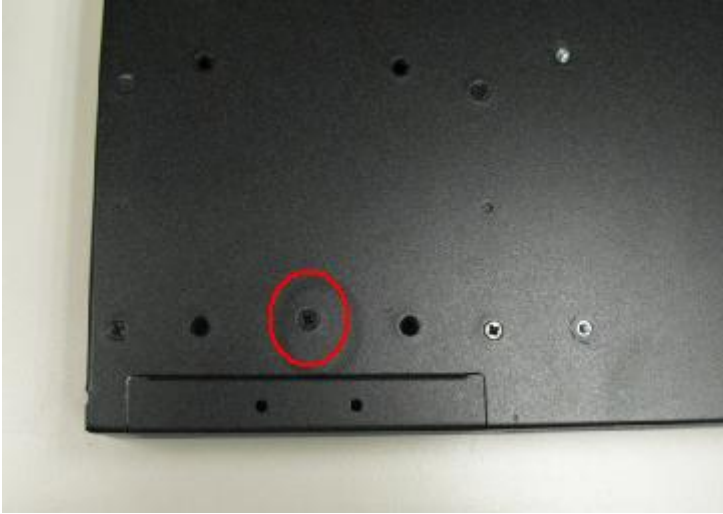

Below Table for China RoHS Requirements

产品中有毒有害物质或元素名称及含量

AAEON Boxer/ Industrial System

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	×	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
电源	×	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注： 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。 二、上述部件物质中央处理器、内存、硬盘、电源为选购品。</p>						

Chapter

3

**AMI
BIOS Setup**

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The FWS-7810 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press or <F2> immediately. This will allow you to enter Setup.

Main

Set the date, use tab to switch between date elements.

Advanced

Enable/disable boot option for legacy network devices.

Chipset

host bridge parameters.

Boot

Enables/disables quiet boot option.

Security

Set setup administrator password.

Save&Exit


Exit system setup after saving the changes.

Setup Menu


Setup submenu: Main

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.	
Main Advanced Chipset Boot Security Save & Exit	
BIOS Information FWS-7810 R1.7(FW78AM17) (11/04/2013)	Set the Date. Use Tab to switch between Date elements.
BIOS Vendor Core Version Compliance	American Megatrends 4.6.5.4 x64 UEFI 2.3.1; PI 1.2
System Date System Time	[Thu 02/12/2009] [21:41:20]
Access Level	Administrator
	++ : Select Screen ↑↓ : Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.	

Setup submenu: Advanced

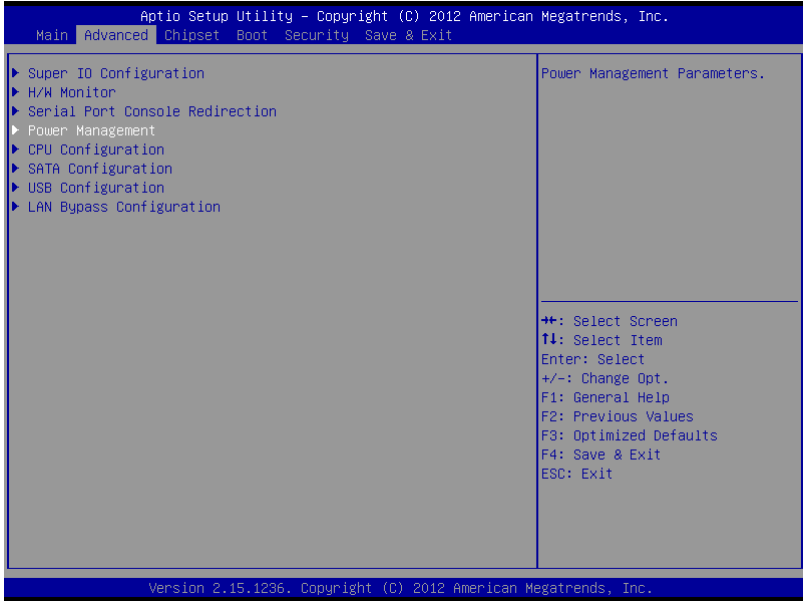

Super IO Configuration

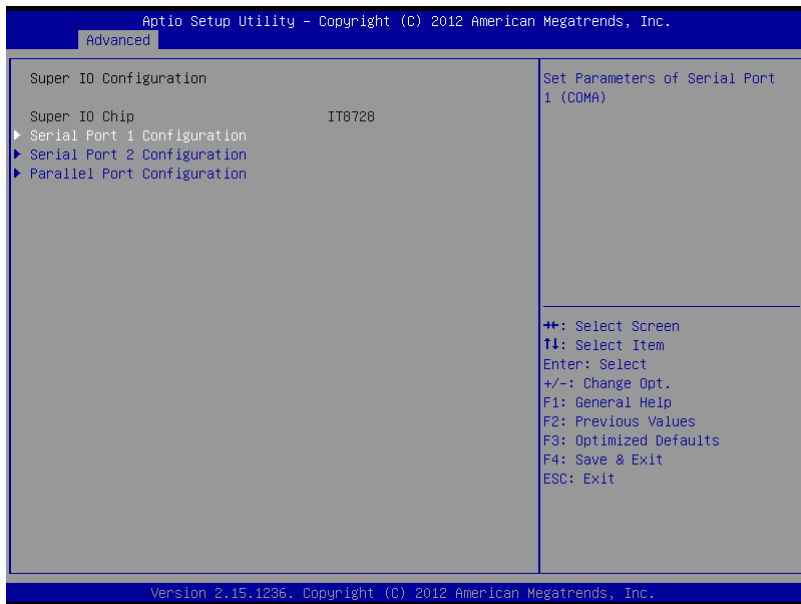

Serial Port 1 Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

Serial Port 1 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=3F8h; IRQ=4;	
Change Settings	[Auto]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

Serial Port	Disabled
	Enabled
Enable or Disable Serial Port (COM)	
Serial Port	Auto
	IO=3F8h; IRQ=4;
	IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;
	IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;
	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;
Select an optimal setting for Super IO device.	

Serial Port 2 Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

Serial Port 2 Configuration		Enable or Disable Serial Port (COM)
Serial Port	[Enabled]	
Device Settings	IO=2F8h; IRQ=3;	
Change Settings	[Auto]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

Serial Port	Disabled
	Enabled
Enable or Disable Serial Port (COM)	
Serial Port	Auto
	IO=2F8h; IRQ=3;
	IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;
	IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;
	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;
Select an optimal setting for Super IO device.	

Parallel Port Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

Parallel Port Configuration		Enable or Disable Parallel Port (LPT/LPTE)
Parallel Port	[Enabled]	
Device Settings	IO=378h; IRQ=5;	
Change Settings	[Auto]	
Device Mode	[Standard Parallel P...]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

Parallel Port	Disabled
	Enabled
Enable or Disable Serial Port (COM)	
Change Settings	Auto
	IO=378h; IRQ=5;
	IO=378h; IRQ=5,6,7,9,10,11,12;
	IO=278h; IRQ=5,6,7,9,10,11,12;
	IO=3BCh; IRQ=5,6,7,9,10,11,12;
Select an optimal setting for Super IO device.	
Device Mode	Standard Parallel Port Mode
	EPP Mode
	ECP Mode
	EPP Mode & ECP Mode
Change the Printer Port mode.	

H/W Monitor

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.


Advanced

▶ Smart Fan Function	Smart Fan function setting
Pc Health Status	
Sys temperature(CPU)	: +76 %
Sys temperature	: +46 %
CPU temperature(DTS)	: +91 %
CPU Fan1 Speed	: 2070 RPM
SYS Fan1 Speed	: 5075 RPM
VCore	: +1.764 V
V_SM	: +1.356 V
+12V	: +12.042 V
+5V	: +5.040 V
VIN5	: +4.992 V
VBAT	: +3.048 V

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Smart Fan Function

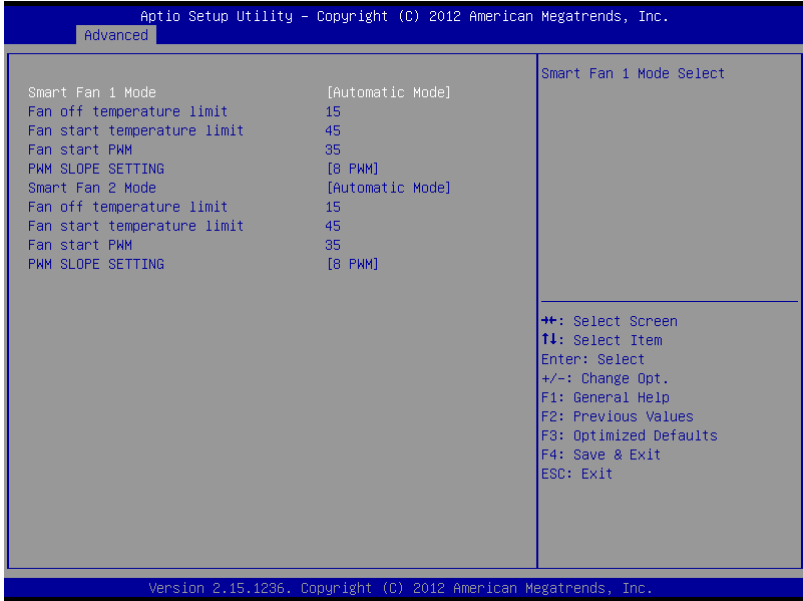

Options summary:

Smart Fan Mode	Full on Mode
	Automatic Mode
	Manual Mode
Smart Fan Mode Select	
Fan off temperature limit	15 (0-127)
Fan will of when temperature lower than this limit.	
Fan start temperature limit	45 (0-127)
Fan will work when temperature higher than this limit.	
Fan start PWM	35 (0-255)
Fan will start with this PWM value(Range 0-255).	

PWM SLOPE SETTING	0.125 PWM
	0.25 PWM
	0.5 PWM
	1 PWM
	2 PWM
	4 PWM
	8 PWM
	15.875 PWM
PWM SLOPE Selection	

Serial Port Console Redirection

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

COM1 Console Redirection [Enabled] ▶ Console Redirection Settings	Console Redirection Enable or Disable.
COM2 Console Redirection [Disabled] ▶ Console Redirection Settings	
Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS) Console Redirection [Disabled] ▶ Console Redirection Settings	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

Console Redirection	Disabled (COM2)
	Enabled (COM1)
Console Redirection Enabled or Disabled.	

Console Redirection Settings

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

COM1 Console Redirection Settings		Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
Terminal Type	[VT100+]	++: Select Screen F1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Bits per second	[115200]	
Data Bits	[8]	
Parity	[None]	
Stop Bits	[1]	
Flow Control	[None]	
VT-UTF8 Combo Key Support	[Enabled]	
Recorder Mode	[Disabled]	
Resolution 100x31	[Disabled]	
Legacy OS Redirection Resolution	[80x24]	
Putty KeyPad	[VT100]	
Redirection After BIOS POST	[Always Enable]	

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

Terminal Type	VT100
	VT100+
	VT-UTF8
	ANSI
Emulation: ANSI: Extended ASCII char set. VT100: ASCII char set. VT100+: Extends VT100 to support color, function keys, etc. VT-UTF8: Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.	
Bits per second	9600
	19200
	38400
	57600
	115200
Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.	
Data Bits	7
	8
Data Bits	

Parity	None
	Even
	Odd
	Mark
	Space
A parity bit can be sent with the data bits to detect some transmission errors. Even: parity bit is 0 if the num of 1's in the data bits is even. Odd: parity bit is 0 if num of 1's in the data bits is odd. Mark: parity bit is always 1. Space: Parity bit is always 0. Mark and Space Parity do not allow for error detection.	
Stop Bits	1
	2
Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning). The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.	
Flow Control	None
	Hardware RTS/CTS
Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a 'stop' signal can be sent to stop the data flow. Once the buffers are empty, a 'start' signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.	

VT-UTF8 Combo Key Support	Disabled
	Enabled
Enable VT-UTF8 Combination Key Support for ANSI/VT100 terminals	
Recorder Mode	Disabled
	Enabled
On this mode enabled only text will be send. This is to capture Terminal data.	
Resolution 100x31	Disabled
	Enabled
Enables or disables extended terminal resolution	
Legacy OS Redirection Resolution	80x24
	80x25
On Legacy OS, the Number of Rows and Columns supported redirection	
Putty KeyPad	VT100
	LINUX
	XTERMR6
	SCO
	ESCN
	VT400
Select FunctionKey and KeyPad on Putty.	
Redirection After BIOS POST	Always Enable
	BootLoader
The Setting Specify if BootLoader is selected than Legacy console redirection is disabled before booting to Legacy OS. Default value is Always Enable which means Legacy console Redirection is enabled for Legacy OS.	

Power Management

Options summary:

Power Mode	ATX Type
	AT Type
Select Power Supply Mode.	
ACPI Sleep State	Suspend Disabled
	S3 only (Suspend to RAM)
Select ACPI sleep state the system will enter when the SUSPEND button is pressed.	
Restore AC Power Loss	Power Off
	Power On
	Last State
Select AC power state when power is re-applied after a power failure.	
Resume on Ring	Disabled
	Enabled
Enable/Disable Resume from RI# signal.	
Resume on PCIE	Disabled
	Enabled
Enable/Disable Resume from PCIE signal.	
Wake system with Fixed Time	Disabled
	Enabled
Enable or disable System wake on alarm event. When enable, System will wake on the hr::min::sec specified.	
Wake up day	0
Select 0 for daily system wake up, 1-31 for which day of month that you would like the system to wake up.	
Wake up hour	0
Select 0-23 For example enter 3 for 3am and 15 for 3pm.	
Wake up minute	0
0-59	
Wake up second	0
0-59	
Wake system with Dynamic Time	Disabled
	Enabled
Enable or disable System wake on alarm event. When enabled, System will wake on the current time + Increase minute(s).	
Wake up minute increase	1
1-5	

CPU Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

CPU Configuration	
Intel(R) Core(TM) i7-4770S CPU @ 3.10GHz	
CPU Signature	306c3
Processor Family	6
Microcode Patch	16
FSB Speed	100 MHz
Max CPU Speed	3100 MHz
Min CPU Speed	800 MHz
CPU Speed	2800 MHz
Processor Cores	4
Intel HT Technology	Supported
Intel VT-x Technology	Supported
Intel SMX Technology	Supported
64-bit	Supported
EIST Technology	Supported
CPU C3 state	Supported
CPU C6 state	Supported
CPU C7 state	Supported
L1 Data Cache	32 kB x 4
L1 Code Cache	32 kB x 4
L2 Cache	256 kB x 4
L3 Cache	8192 kB

Enabled for Windows XP and Linux OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1236, Copyright (C) 2012 American Megatrends, Inc.

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

CPU Signature	306c3	Turbo Mode.
Processor Family	6	
Microcode Patch	16	
FSB Speed	100 MHz	
Max CPU Speed	3100 MHz	
Min CPU Speed	800 MHz	
CPU Speed	2800 MHz	
Processor Cores	4	
Intel HT Technology	Supported	
Intel VT-x Technology	Supported	
Intel SMX Technology	Supported	
64-bit	Supported	
EIST Technology	Supported	
CPU C3 state	Supported	
CPU C6 state	Supported	
CPU C7 state	Supported	
L1 Data Cache	32 kB x 4	
L1 Code Cache	32 kB x 4	
L2 Cache	256 kB x 4	
L3 Cache	8192 kB	
Hyper-threading	[Enabled]	
Intel Virtualization Technology	[Enabled]	
Turbo Mode	[Enabled]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1236, Copyright (C) 2012 American Megatrends, Inc.

Options summary :

Hyper-threading	Disabled
	Enabled
Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only on thread per enabled core is enabled.	
Intel Virtualization Technology	Disabled
	Enabled
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.	
Turbo Mode	Disabled
	Enabled
Turbo Mode	

SATA Configuration (IDE)

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

SATA Controller(s)	[Enabled]	Enable or disable SATA Device.
SATA Mode Selection	[IDE]	
Serial ATA Port 0	Empty	++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Software Preserve	Unknown	
Serial ATA Port 1	Empty	
Software Preserve	Unknown	
Serial ATA Port 2	Empty	
Software Preserve	Unknown	
Serial ATA Port 3	Empty	
Software Preserve	Unknown	
Serial ATA Port 4	Empty	
Software Preserve	Unknown	
Serial ATA Port 5	Empty	
Software Preserve	Unknown	

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary :

SATA Controller(s)	Disabled
	Enabled
Enable or disable SATA Device.	
SATA Mode Selection	IDE
	AHCI
	RAID
Determines how SATA controller(s) operate.	

SATA Configuration (AHCI)

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

SATA Controller(s)	[Enabled]	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.
SATA Mode Selection	[AHCI]	
SATA Controller Speed	[Default]	
Serial ATA Port 0	Empty	++: Select Screen F1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Software Preserve	Unknown	
Port 0	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Spin Up Device	[Disabled]	
Serial ATA Port 1	Empty	
Software Preserve	Unknown	
Port 1	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Spin Up Device	[Disabled]	
Serial ATA Port 2	Empty	
Software Preserve	Unknown	
Port 2	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Spin Up Device	[Disabled]	

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

Options summary :

SATA Controller Speed	Disabled
	Enabled
Enable or disable SATA Device.	
SATA Mode Selection	Default
	Gen1
	Gen2
	Gen3
Indicates the maximum speed the SATA controller can support.	
Port	Disabled
	Enabled
Enable or Disable SATA Port	
Hot Plug	Disabled
	Enabled
Designates this port as Hot Pluggable.	
External SATA	Disabled
	Enabled
External SATA Support.	

SATA Device Type	Hard Disk Drive
	Solid State Drive
Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.	
Spin Up Device	Disabled
	Enabled
On an edge detect from 0 to 1, the PCH starts a COMRESET initialization sequence to device.	

SATA Configuration (RAID)

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

SATA Controller(s)	[Enabled]	▲ Determines how SATA controller(s) operate.
SATA Mode Selection	[RAID]	
SATA Controller Speed	[Default]	
Serial ATA Port 0	Empty	▼
Software Preserve	Unknown	
Port 0	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Spin Up Device	[Disabled]	
Serial ATA Port 1	Empty	
Software Preserve	Unknown	
Port 1	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Spin Up Device	[Disabled]	
Serial ATA Port 2	Empty	
Software Preserve	Unknown	
Port 2	[Enabled]	
Hot Plug	[Disabled]	
External SATA	[Disabled]	
SATA Device Type	[Hard Disk Drive]	
Spin Up Device	[Disabled]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

Options summary :

SATA Controller Speed	Disabled
	Enabled
Enable or disable SATA Device.	
SATA Mode Selection	Default
	Gen1
	Gen2
	Gen3
Indicates the maximum speed the SATA controller can support.	
Port	Disabled
	Enabled
Enable or Disable SATA Port	
Hot Plug	Disabled
	Enabled
Designates this port as Hot Pluggable.	
External SATA	Disabled
	Enabled
External SATA Support.	

SATA Device Type	Hard Disk Drive
	Solid State Drive
Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.	
Spin Up Device	Disabled
	Enabled
On an edge detect from 0 to 1, the PCH starts a COMRESET initialization sequence to device.	

USB Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

<p>USB Configuration</p> <p>USB Devices: 1 Drive, 1 Keyboard, 1 Mouse, 2 Hubs</p> <p>Legacy USB Support [Enabled]</p>	<p>Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.</p> <hr/> <p>++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>
---	---

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

Legacy USB Support	Enabled
	Disabled
	Auto
Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB device available only for EFI applications.	

LAN Bypass Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Advanced

STATUS LED CTRL	[LED OFF]	STATUS LED CTRL help.
LAN1_2 Power ON	[PassTru]	
LAN1_2 Power OFF	[PassTru]	
LAN3_4 Power ON	[PassTru]	
LAN3_4 Power OFF	[PassTru]	
LAN5_6 Power ON	[PassTru]	
LAN5_6 Power OFF	[PassTru]	
LAN7_8 Power ON	[PassTru]	
LAN7_8 Power OFF	[PassTru]	
WDT	[Reset]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit


Version 2.15.1236. Copyright (C) 2012 American Megatrends, Inc.

Options summary :

STATUS LED CTRL	LED OFF RED LED ON RED LED BLINK RED LED FAST BLINK GREEN LED ON GREEN LED BLINK GREEN LED FAST BLINK
STATUS LED CTRL help.	
LAN kit Power ON	Bypass PassTru
Setting LAN kit function behavior when power on.(Bypass/Pass Through)	
LAN kit Power Off	Bypass PassTru
Setting LAN kit function behavior when power off.(Bypass/Pass Through)	

WDT	Bypass
	Reset
WDT function select, Reset: Reset System. Bypass: Reset LAN kits to Bypass mode.	

Setup submenu: Chipset

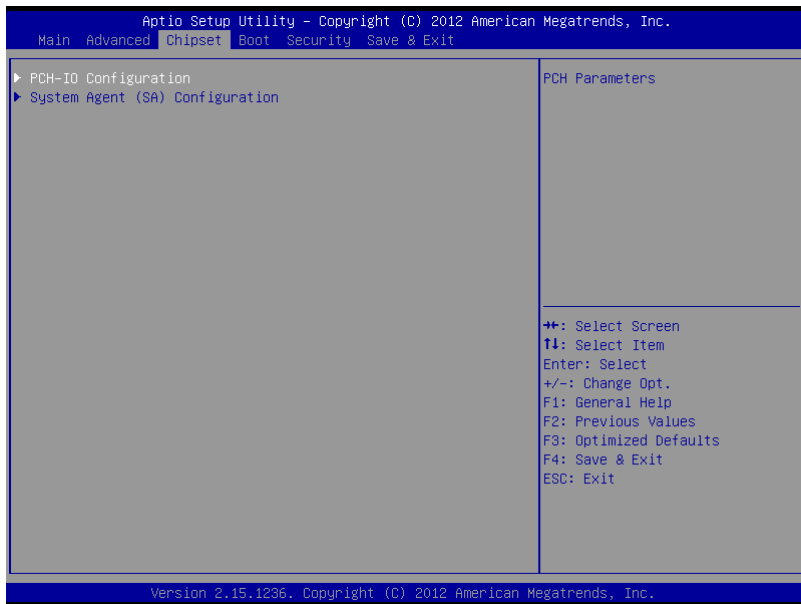

PCH-IO Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Chipset

PCI-E LAN Port 1 [Enabled] PCI-E LAN Port 2 [Enabled] PCI-E LAN Port 3 [Enabled] PCI-E LAN Port 4 [Enabled] PCI-E LAN Port 5 [Enabled] PCI-E LAN Port 6 [Enabled] PCI-E LAN Port 7 [Enabled] PCI-E LAN Port 8 [Enabled]	Control the PCI Express Root Port. ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
--	--

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary:

PCI-E LAN Port n	Disabled
	Enabled
Control the PCI Express Root Port.	

System Agent (SA) Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Chipset

VT-d Capability	Supported	Check to enable VT-d function on MCH.
VT-d	[Enabled]	
▶ Memory Configuration		
		++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary :

VT-d	Disabled
	Enabled
Check to enable VT-d function on MCH.	

Memory Configuration

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Chipset

Memory Information	
Memory RC Version	1.6.2.1
Memory Frequency	1600 Mhz
Total Memory	8192 MB (DDR3)
DIMM#0	8192 MB (DDR3)
DIMM#1	Not Present
DIMM#2	Not Present
DIMM#3	Not Present
CAS Latency (tCL)	11
Minimum delay time	
CAS to RAS (trCDmin)	11
Row Precharge (trPmin)	11
Active to Precharge (trASmin)	28
XMP Profile 1	Not Supported
XMP Profile 2	Not Supported

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Boot

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Main Advanced Chipset **Boot** Security Save & Exit


Boot Configuration		Enables or disables Quiet Boot option
Quiet Boot	[Enabled]	
Launch 82574L #1 PXE OpROM	[Disabled]	
Launch 82574L #2 PXE OpROM	[Disabled]	
Launch 82574L #3 PXE OpROM	[Disabled]	
Launch 82574L #4 PXE OpROM	[Disabled]	
Launch 82574L #5 PXE OpROM	[Disabled]	
Launch 82574L #6 PXE OpROM	[Disabled]	
Launch 82574L #7 PXE OpROM	[Disabled]	
Launch 82574L #8 PXE OpROM	[Disabled]	
Boot Option Priorities		++: Select Screen !1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Boot Option #1	[ADATA USB Flash Dri...]	
Boot Option #2	[UEFI: ADATA USB Fla...]	
Hard Drive BBS Priorities		

Version 2.15.1286. Copyright (C) 2012 American Megatrends, Inc.

Options summary :

Quiet Boot	Disabled
	Enabled
Enables or disables Quiet Boot option.	
Launch 82574L # PXE	Disabled
	Enabled
Enable or Disable Legacy Boot Option for 82574 # .	

Security

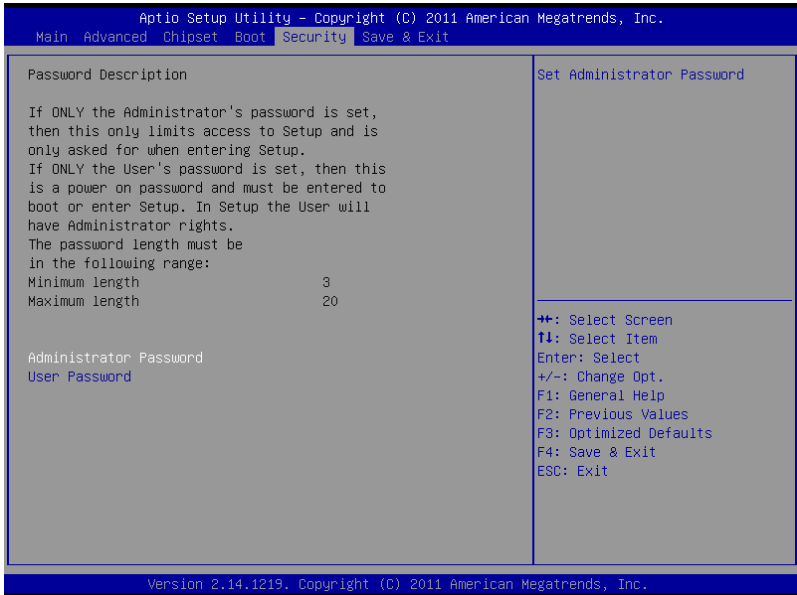

Change User/Supervisor Password

You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

If you highlight these items and press Enter, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

Setup submenu: Exit



Chapter

4

**Driver
Installation**

The FWS-7810 comes with an AutoRun DVD-ROM that contains all drivers and utilities that can help you to install the driver automatically.

Insert the driver DVD, the driver DVD-title will auto start and show the installation guide. If not, please follow the sequence below to install the drivers.

Follow the sequence below to install the drivers:

Step 1 – Install Chipset Driver

Step 2 – Install VGA Driver

Step 3 – Install USB3.0 Driver

Step 4 – Install LAN Driver

Step 5 – Install ME Driver

Please read instructions below for further detailed installations.

4.1 Installation

Insert the FWS-7810 DVD-ROM into the DVD-ROM drive and install the drivers from Step 1 to Step 5 in order.

Step 1 – Install Chipset Driver

1. Click on the **Step1 - Chipset** folder and double click on the **infinst_autol.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 2 – Install VGA Driver

1. Click on the **Step2 - VGA** folder and double click on the **Setup.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 3 – Install USB3.0 Driver

1. Click on the **Step3 - USB3.0** folder and double click on the **Setup.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 4 – Install LAN Driver

1. Click on the **Step4 - LAN** folder and double click on the **Autorun.exe** file

2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Step 5 – Install ME Driver

1. Click on the **Step5 - ME** folder and double click on the **Setup.exe** file
2. Follow the instructions that the window shows
3. The system will help you install the driver automatically

Appendix

A

Programming the Watchdog Timer

A.1 Watchdog Timer Initial Program

Table 1 : SuperIO relative register table		
	Default Value	Note
Index	0x2E ^(Note1)	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F ^(Note2)	SIO MB PnP Mode Data Register 0x2F or 0x4F

Table 2 : Watchdog relative register table					
	LDN	Register	BitNum	Value	Note
Timer Counter	0x07 ^(Note3)	0x73 ^(Note4)		(Note24)	Time of watchdog timer (0~255) This register is byte access
Counting Unit	0x07 ^(Note5)	0x72 ^(Note6)	7 ^(Note7)	1 ^(Note8)	Select time unit. 1: second 0: minute
Watchdog Enable (KRST)	0x07 ^(Note9)	0x72 ^(Note10)	4 ^(Note11)	1 ^(Note12)	0: Disable 1: Enable
Timeout Status	0x07 ^(Note13)	0x71 ^(Note14)	0 ^(Note15)	1	1: Clear timeout status

// SuperIO relative definition (Please reference to Table 1)

#define byte SIOIndex //This parameter is represented from **Note1**

#define byte SIOData //This parameter is represented from **Note2**

#define void IOWriteByte(**byte** IOPort, **byte** Value);

#define byte IOReadByte(**byte** IOPort);

// Watch Dog relative definition (Please reference to Table 2)

#define byte TimerLDN //This parameter is represented from **Note3**

#define byte TimerReg //This parameter is represented from **Note4**

#define byte TimerVal // This parameter is represented from **Note24**

#define byte UnitLDN //This parameter is represented from **Note5**

#define byte UnitReg //This parameter is represented from **Note6**

#define byte UnitBit //This parameter is represented from **Note7**

#define byte UnitVal //This parameter is represented from **Note8**

#define byte EnableLDN //This parameter is represented from **Note9**

#define byte EnableReg //This parameter is represented from **Note10**

#define byte EnableBit //This parameter is represented from **Note11**

#define byte EnableVal //This parameter is represented from **Note12**

#define byte StatusLDN // This parameter is represented from **Note13**

#define byte StatusReg // This parameter is represented from **Note14**

#define byte StatusBit // This parameter is represented from **Note15**

```
*****
VOID Main(){
    // Procedure : AaeonWDTConfig
    // (byte)Timer : Time of WDT timer.(0x00~0xFF)
    // (boolean)Unit : Select time unit(0: second, 1: minute).
    AaeonWDTConfig();

    // Procedure : AaeonWDTEnable
    // This procedure will enable the WDT counting.
    AaeonWDTEnable();
}
*****
```

```
*****
// Procedure : AaeonWDTEnable
VOID AaeonWDTEnable (){
    WDTEnableDisable(EnableLDN, EnableReg, EnableBit, 1);
}

// Procedure : AaeonWDTConfig
VOID AaeonWDTConfig (){
    // Disable WDT counting
    WDTEnableDisable(EnableLDN, EnableReg, EnableBit, 0);
    // Clear Watchdog Timeout Status
    WDTClearTimeoutStatus();
    // WDT relative parameter setting
    WDTParameterSetting();
}

VOID WDTEnableDisable(byte LDN, byte Register, byte BitNum, byte Value){
    SIOBitSet(LDN, Register, BitNum, Value);
}

VOID WDTParameterSetting(){
    // Watchdog Timer counter setting
    SIOByteSet(TimerLDN, TimerReg, TimerVal);
    // WDT counting unit setting
    SIOBitSet(UnitLDN, UnitReg, UnitBit, UnitVal);
}

VOID WDTClearTimeoutStatus(){
    SIOBitSet(StatusLDN, StatusReg, StatusBit, 1);
}
*****
```

```
VOID SIOEnterMBPnPMode(){
    Switch(SIOIndex){
        Case 0x2E:
            IOWriteByte(SIOIndex, 0x87);
            IOWriteByte(SIOIndex, 0x01);
            IOWriteByte(SIOIndex, 0x55);
            IOWriteByte(SIOIndex, 0x55);
            Break;
        Case 0x4E:
            IOWriteByte(SIOIndex, 0x87);
            IOWriteByte(SIOIndex, 0x01);
            IOWriteByte(SIOIndex, 0x55);
            IOWriteByte(SIOIndex, 0xAA);
            Break;
    }
}

VOID SIOExitMBPnPMode(){
    IOWriteByte(SIOIndex, 0x02);
    IOWriteByte(SIOData, 0x02);
}

VOID SIOSelectLDN(byte LDN){
    IOWriteByte(SIOIndex, 0x07); // SIO LDN Register Offset = 0x07
    IOWriteByte(SIOData, LDN);
}
```

VOID **SIOBitSet(byte LDN, byte Register, byte BitNum, byte Value){**

Byte TmpValue;

SIOEnterMBPnPMode();

SIOSelectLDN(byte LDN);

IOWriteByte(SIOIndex, Register);

TmpValue = IOReadByte(SIOData);

TmpValue &= ~(1 << BitNum);

TmpValue |= (Value << BitNum);

IOWriteByte(SIOData, TmpValue);

SIOExitMBPnPMode();

}

VOID **SIOByteSet(byte LDN, byte Register, byte Value){**

SIOEnterMBPnPMode();

SIOSelectLDN(LDN);

IOWriteByte(SIOIndex, Register);

IOWriteByte(SIOData, Value);

SIOExitMBPnPMode();













































}

Appendix

B

I/O Information

B.1 I/O Address Map

	[00000090 - 0000009F] Motherboard resources
	[00000092 - 00000092] Motherboard resources
	[00000093 - 0000009F] Direct memory access controller
	[000000A0 - 000000A1] Programmable interrupt controller
	[000000A2 - 000000BF] Motherboard resources
	[000000A4 - 000000A5] Programmable interrupt controller
	[000000A8 - 000000A9] Programmable interrupt controller
	[000000AC - 000000AD] Programmable interrupt controller
	[000000B0 - 000000B1] Programmable interrupt controller
	[000000B2 - 000000B3] Motherboard resources
	[000000B4 - 000000B5] Programmable interrupt controller
	[000000B8 - 000000B9] Programmable interrupt controller
	[000000BC - 000000BD] Programmable interrupt controller
	[000000C0 - 000000DF] Direct memory access controller
	[000000E0 - 000000EF] Motherboard resources
	[000000F0 - 000000F0] Numeric data processor
	[000002F8 - 000002FF] Communications Port (COM2)
	[00000378 - 0000037F] Printer Port (LPT1)
	[000003B0 - 000003BB] Intel(R) HD Graphics 4600
	[000003C0 - 000003DF] Intel(R) HD Graphics 4600
	[000003F8 - 000003FF] Communications Port (COM1)
	[000004D0 - 000004D1] Motherboard resources
	[000004D0 - 000004D1] Programmable interrupt controller
	[00000680 - 0000069F] Motherboard resources
	[00000A00 - 00000A1F] Motherboard resources
	[00000A20 - 00000A2F] Motherboard resources
	[00000A30 - 00000A3F] Motherboard resources
	[00000D00 - 0000FFFF] PCI bus
	[0000164E - 0000164F] Motherboard resources
	[00001800 - 000018FE] Motherboard resources
	[00001854 - 00001857] Motherboard resources
	[00001C00 - 00001CFE] Motherboard resources
	[00001D00 - 00001DFE] Motherboard resources
	[00001E00 - 00001EFE] Motherboard resources
	[00001F00 - 00001FFE] Motherboard resources
	[00007000 - 00007FFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #8 - 8C1E
	[00008000 - 00008FFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #7 - 8C1C
	[00009000 - 00009FFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #6 - 8C1A
	[0000A000 - 0000AFFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #5 - 8C18
	[0000B000 - 0000BFFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #4 - 8C16
	[0000C000 - 0000CFFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #3 - 8C14
	[0000D000 - 0000DFFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #2 - 8C12
	[0000E000 - 0000EFFF] Intel(R) 8 Series/C220 Series PCI Express Root Port #1 - 8C10
	[0000F000 - 0000F03F] Intel(R) HD Graphics 4600

[0000F040 - 0000F05F]	Intel(R) 8 Series/C220 Series SMBus Controller - 8C22
[0000F060 - 0000F06F]	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
[0000F070 - 0000F07F]	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
[0000F080 - 0000F083]	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
[0000F090 - 0000F097]	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
[0000F0A0 - 0000F0A3]	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
[0000F0B0 - 0000F0B7]	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
[0000FFFF - 0000FFFF]	Motherboard resources
[0000FFFF - 0000FFFF]	Motherboard resources
[0000FFFF - 0000FFFF]	Motherboard resources



















































B.2 Memory Address Map

















































Memory	
[000A0000 - 000BFFFF]	Intel(R) HD Graphics 4600
[000A0000 - 000BFFFF]	PCI bus
[000D0000 - 000D3FFF]	PCI bus
[000D4000 - 000D7FFF]	PCI bus
[000D8000 - 000DBFFF]	PCI bus
[000DC000 - 000DFFFF]	PCI bus
[000E0000 - 000E3FFF]	PCI bus
[000E4000 - 000E7FFF]	PCI bus
[7D200000 - FEAF7FFF]	PCI bus
[E0000000 - EFFFFFFF]	Intel(R) HD Graphics 4600
[F7000000 - F73FFFFF]	Intel(R) HD Graphics 4600
[F7400000 - F74FFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #8 - 8C1E
[F7440000 - F745FFFF]	Intel(R) Gigabit CT Desktop Adapter #2
[F7460000 - F7463FFF]	Intel(R) Gigabit CT Desktop Adapter #2
[F7500000 - F75FFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #7 - 8C1C
[F7540000 - F755FFFF]	Intel(R) Gigabit CT Desktop Adapter #7
[F7560000 - F7563FFF]	Intel(R) Gigabit CT Desktop Adapter #7
[F7600000 - F76FFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #6 - 8C1A
[F7640000 - F765FFFF]	Intel(R) Gigabit CT Desktop Adapter #6
[F7660000 - F7663FFF]	Intel(R) Gigabit CT Desktop Adapter #6
[F7700000 - F77FFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #5 - 8C18
[F7740000 - F775FFFF]	Intel(R) Gigabit CT Desktop Adapter #5
[F7760000 - F7763FFF]	Intel(R) Gigabit CT Desktop Adapter #5
[F7800000 - F78FFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #4 - 8C16
[F7840000 - F785FFFF]	Intel(R) Gigabit CT Desktop Adapter #4
[F7860000 - F7863FFF]	Intel(R) Gigabit CT Desktop Adapter #4
[F7900000 - F79FFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #3 - 8C14
[F7940000 - F795FFFF]	Intel(R) Gigabit CT Desktop Adapter
[F7960000 - F7963FFF]	Intel(R) Gigabit CT Desktop Adapter
[F7A00000 - F7AFFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #2 - 8C12
[F7A40000 - F7A5FFFF]	Intel(R) Gigabit CT Desktop Adapter #3
[F7A60000 - F7A63FFF]	Intel(R) Gigabit CT Desktop Adapter #3
[F7B00000 - F7BFFFFF]	Intel(R) 8 Series/C220 Series PCI Express Root Port #1 - 8C10
[F7B40000 - F7B5FFFF]	Intel(R) Gigabit CT Desktop Adapter #8






















































[F7B60000 - F7B63FFF]	Intel(R) Gigabit CT Desktop Adapter #8
[F7C00000 - F7C0FFFF]	Intel(R) USB 3.0 eXtensible Host Controller
[F7C10000 - F7C13FFF]	High Definition Audio Controller
[F7C15000 - F7C150FF]	Intel(R) 8 Series/C220 Series SMBus Controller - 8C22
[F7C16000 - F7C163FF]	Intel(R) 8 Series/C220 Series USB Enhanced Host Controller #1 - 8C26
[F7C17000 - F7C173FF]	Intel(R) 8 Series/C220 Series USB Enhanced Host Controller #2 - 8C2D
[F7C19000 - F7C190FF]	Intel(R) Management Engine Interface
[F7FD0000 - F7FDFFFF]	Motherboard resources
[F7FE0000 - F7FEFFFF]	Motherboard resources
[F8000000 - FBFFFFFF]	Motherboard resources
[FED00000 - FED003FF]	High precision event timer
[FED10000 - FED17FFF]	Motherboard resources
[FED18000 - FED18FFF]	Motherboard resources
[FED19000 - FED19FFF]	Motherboard resources
[FED1C000 - FED1FFFF]	Motherboard resources
[FED20000 - FED3FFFF]	Motherboard resources
[FED40000 - FED44FFF]	System board
[FED45000 - FED8FFFF]	Motherboard resources
[FED90000 - FED93FFF]	Motherboard resources
[FEE00000 - FEEFFFFFF]	Motherboard resources
[FF000000 - FFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[FF000000 - FFFFFFFF]	Motherboard resources

B.3 IRQ Mapping Chart

Interrupt request (IRQ)	
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000001 (01)	Standard PS/2 Keyboard
(ISA) 0x00000003 (03)	Communications Port (COM2)
(ISA) 0x00000004 (04)	Communications Port (COM1)
(ISA) 0x00000008 (08)	System CMOS/real time clock
(ISA) 0x0000000C (12)	Microsoft PS/2 Mouse
(ISA) 0x0000000D (13)	Numeric data processor
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System

 (ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
 (ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
 (ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
 (ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
 (ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
 (ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
 (ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
 (ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
 (ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
 (ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
 (ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
 (ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
 (ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
 (ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
 (ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
 (ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
 (ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
 (ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
 (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
 (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
 (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
 (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
 (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
 (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
 (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
 (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
 (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
 (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
 (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
 (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
 (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System

	(ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
	(ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
	(ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
	(ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
	(ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
	(ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
	(ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
	(ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
	(ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
	(ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
	(ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000A (10)	Intel(R) 8 Series/C220 Series SMBus Controller - 8C22
	(PCI) 0x00000010 (16)	High Definition Audio Controller
	(PCI) 0x00000010 (16)	Intel(R) 8 Series/C220 Series USB Enhanced Host Controller #2 - 8C2D
	(PCI) 0x00000010 (16)	Intel(R) Management Engine Interface

	(PCI) 0x00000013 (19)	Intel(R) 8 Series/C220 Series 2 port Serial ATA Storage Controller - 8C08
	(PCI) 0x00000017 (23)	Intel(R) 8 Series/C220 Series USB Enhanced Host Controller #1 - 8C2E
	(PCI) 0xFFFFFC4 (-60)	Intel(R) Gigabit CT Desktop Adapter #6
	(PCI) 0xFFFFFC5 (-59)	Intel(R) Gigabit CT Desktop Adapter #6
	(PCI) 0xFFFFFC6 (-58)	Intel(R) Gigabit CT Desktop Adapter #6
	(PCI) 0xFFFFFC7 (-57)	Intel(R) Gigabit CT Desktop Adapter #6
	(PCI) 0xFFFFFC8 (-56)	Intel(R) Gigabit CT Desktop Adapter #6
	(PCI) 0xFFFFFC9 (-55)	Intel(R) Gigabit CT Desktop Adapter #6
	(PCI) 0xFFFFFCA (-54)	Intel(R) Gigabit CT Desktop Adapter #5
	(PCI) 0xFFFFFCB (-53)	Intel(R) Gigabit CT Desktop Adapter #5
	(PCI) 0xFFFFFCC (-52)	Intel(R) Gigabit CT Desktop Adapter #5
	(PCI) 0xFFFFFCD (-51)	Intel(R) Gigabit CT Desktop Adapter #5
	(PCI) 0xFFFFFCE (-50)	Intel(R) Gigabit CT Desktop Adapter #5
	(PCI) 0xFFFFFCF (-49)	Intel(R) Gigabit CT Desktop Adapter #5
	(PCI) 0xFFFFFD0 (-48)	Intel(R) Gigabit CT Desktop Adapter #4
	(PCI) 0xFFFFFD1 (-47)	Intel(R) Gigabit CT Desktop Adapter #4
	(PCI) 0xFFFFFD2 (-46)	Intel(R) Gigabit CT Desktop Adapter #4
	(PCI) 0xFFFFFD3 (-45)	Intel(R) Gigabit CT Desktop Adapter #4
	(PCI) 0xFFFFFD4 (-44)	Intel(R) Gigabit CT Desktop Adapter #4
	(PCI) 0xFFFFFD5 (-43)	Intel(R) Gigabit CT Desktop Adapter #4
	(PCI) 0xFFFFFD6 (-42)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFD7 (-41)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFD8 (-40)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFD9 (-39)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFDA (-38)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFDB (-37)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFDC (-36)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFDD (-35)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFDE (-34)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFDF (-33)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFE0 (-32)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFE1 (-31)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFE2 (-30)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE3 (-29)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE4 (-28)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE5 (-27)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE6 (-26)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE7 (-25)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE8 (-24)	Intel(R) USB 3.0 eXtensible Host Controller
	(PCI) 0xFFFFFE9 (-23)	Intel(R) HD Graphics 4600
	(PCI) 0xFFFFFEA (-22)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEB (-21)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEC (-20)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFED (-19)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEE (-18)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEF (-17)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFF0 (-16)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFFF1 (-15)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFFF2 (-14)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFFF3 (-13)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFFF4 (-12)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFFF5 (-11)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFFF6 (-10)	Intel(R) 8 Series/C220 Series PCI Express Root Port #8 - 8C1E

	(PCI) 0xFFFFFDE (-34)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFDF (-33)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFE0 (-32)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFE1 (-31)	Intel(R) Gigabit CT Desktop Adapter #3
	(PCI) 0xFFFFFE2 (-30)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE3 (-29)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE4 (-28)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE5 (-27)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE6 (-26)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE7 (-25)	Intel(R) Gigabit CT Desktop Adapter #8
	(PCI) 0xFFFFFE8 (-24)	Intel(R) USB 3.0 eXtensible Host Controller
	(PCI) 0xFFFFFE9 (-23)	Intel(R) HD Graphics 4600
	(PCI) 0xFFFFFEA (-22)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEB (-21)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEC (-20)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFED (-19)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEE (-18)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFFEF (-17)	Intel(R) Gigabit CT Desktop Adapter #7
	(PCI) 0xFFFFF0 (-16)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFF1 (-15)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFF2 (-14)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFF3 (-13)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFF4 (-12)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFF5 (-11)	Intel(R) Gigabit CT Desktop Adapter #2
	(PCI) 0xFFFFF6 (-10)	Intel(R) 8 Series/C220 Series PCI Express Root Port #8 - 8C1E
	(PCI) 0xFFFFF7 (-9)	Intel(R) 8 Series/C220 Series PCI Express Root Port #7 - 8C1C
	(PCI) 0xFFFFF8 (-8)	Intel(R) 8 Series/C220 Series PCI Express Root Port #6 - 8C1A
	(PCI) 0xFFFFF9 (-7)	Intel(R) 8 Series/C220 Series PCI Express Root Port #5 - 8C18
	(PCI) 0xFFFFFA (-6)	Intel(R) 8 Series/C220 Series PCI Express Root Port #4 - 8C16
	(PCI) 0xFFFFFB (-5)	Intel(R) 8 Series/C220 Series PCI Express Root Port #3 - 8C14
	(PCI) 0xFFFFFC (-4)	Intel(R) 8 Series/C220 Series PCI Express Root Port #2 - 8C12
	(PCI) 0xFFFFFD (-3)	Intel(R) 8 Series/C220 Series PCI Express Root Port #1 - 8C10
	(PCI) 0xFFFFFE (-2)	Xeon(R) processor E3-1200 v3/4th Gen Core processor PCI Express x16 Controller - 00C0

B.4 DMA Channel Assignments

	Direct memory access (DMA)
	4 Direct memory access controller

Appendix

C

Standard LAN Bypass Platform Setting

C.1 Status LED

Introduction

FWS-7810 provides a LED indicator which can change the LED status by AAEON SDK. User is able to program the LED status to express different status.

Status LED Configuration

STA_LED2	STA_LED1	STA_LED0	LED States
0	0	0	LED Off
0	0	1	Red
0	1	0	Red Blinking (Slowly)
0	1	1	Red Blinking (Quickly)
1	0	0	Reserved
1	0	1	Green Blinking (Slowly)
1	1	0	Green Blinking (Quickly)
1	1	1	Green

	Attribute	Register(I/O)	BitNum	Value
STA_LED2	R/W	0xA02(Note1)	5(Note4)	(Note7)
STA_LED1	R/W	0xA02(Note2)	4(Note5)	(Note7)
STA_LED0	R/W	0xA01(Note3)	2(Note5)	(Note7)

Sample Code

```
*****
```

```
#define Word LED2Add //This parameter is represented from Note1
```

```
#define Word LED1Add //This parameter is represented from Note2
```

```
#define Word LED0Add //This parameter is represented from Note3
```

```
#define Byte LED2Bit //This parameter is represented from Note4
```

```
#define Byte LED1Bit //This parameter is represented from Note5
```

```
#define Byte LED0Bit //This parameter is represented from Note6
```

```
#define Byte UnitVal //This parameter is represented from Note7
```

```
*****
```

```
VOID SET_Value (Word IoAddr, Byte BitNum,Byte Value){
```

```
BYTE TmpValue;
```

```
TmpValue = inportb (IoAddr);
```

```
TmpValue &= ~(1 << BitNum);
```

```
TmpValue |= (Value << BitNum);
```

```
outport(IoAddr, TmpValue);
```

```
}
```

```
*****
```

```
VOID Main(){
```

```
SET_Value (LED2Add, LED2Bit, UnitVal); //Setting STA_LED2
```

```
SET_Value (LED1Add, LED1Bit, UnitVal); //Setting STA_LED1
```

```
SET_Value (LED0Add, LED0Bit, UnitVal); //Setting STA_LED0
```

```
}
```

```
*****
```

C.2 LAN Bypass

Introduction

FWS-7810 provides LAN Bypass kit and allow uninterrupted network traffic even if a single in-line appliance is shut down or hangs. Customer can upgrade to 2 or 4 LAN Bypass kit with options.

LAN Bypass Configuration

Table 1 : ID Select table of LAN kit			
LAN_ID2	LAN_ID1	LAN_ID0	LAN kit selected
0	0	0	LAN Kit 1 Selected
0	0	1	LAN Kit 2 Selected
0	1	0	LAN Kit 3 Selected
0	1	1	LAN Kit 4 Selected
1	0	0	LAN Kit 5 Selected
1	0	1	LAN Kit 6 Selected
1	1	0	LAN Kit 7 Selected
1	1	1	LAN Kit 8 Selected

Table 2 : LAN Bypass relative register table	
Function	Description
LAN_ID2	Use for selecting which LAN kit will be configured, refer to Table 1 of ID Select table of LAN kit. They should be set before ACT_EN.
LAN_ID1	
LAN_ID0	

PWR_ON	Use for configuring LAN Bypass function behavior to LAN kit, when system power on. 1: Bypass 0: Pass Through
PWR_OFF	Use for configuring LAN Bypass function behavior to LAN kit, when system power off. 1: Bypass 0: Pass Through
WDT_EN	Use for configuring WDT function behavior to LAN kit, when WDT triggered. 0: Normal WDT reset (Default) 1: Force Bypass
ACT_EN	Use for activating programming of LAN kit. It is edge triggering (falling edge 1 to 0) and should be set to high(1) as its normal state.

Table 3 : LAN Bypass relative register mapping table

	Attribute	Register(I/O)	BitNum	Value
LAN_ID2	R/W	0xA05(Note1)	7(Note8)	(Note15)
LAN_ID1	R/W	0xA05(Note2)	6(Note9)	(Note15)
LAN_ID0	R/W	0xA00(Note3)	6(Note10)	(Note15)
PWR_ON	R/W	0xA00(Note4)	4(Note11)	(Note15)
PWR_OFF	R/W	0xA00(Note5)	2(Note12)	(Note15)
WDT_EN	R/W	0xA00(Note6)	1(Note13)	(Note15)

ACT_EN	R/W	0xA00(Note7)	5(Note14)	(Note15)
--------	-----	--------------	-----------	----------

Sample Code

```
#define Word LAN_ID2 //This parameter is represented from Note1
#define Word LAN_ID1 //This parameter is represented from Note2
#define Word LAN_ID0 //This parameter is represented from Note3
#define Byte PWR_ON //This parameter is represented from Note4
#define Byte PWR_OFF //This parameter is represented from Note5
#define Byte WDT_EN //This parameter is represented from Note6
#define Byte ACT_EN //This parameter is represented from Note7
#define Byte LANID2 //This parameter is represented from Note8
#define Byte LANID1 //This parameter is represented from Note9
#define Byte LANID0 //This parameter is represented from Note10
#define Byte PWR_ON_R //This parameter is represented from Note11
#define Byte PWR_OFF_R //This parameter is represented from Note12
#define Byte WDT_EN_R //This parameter is represented from Note13
#define Byte ACT_EN_R //This parameter is represented from Note14
#define Byte UnitVal //This parameter is represented from Note15
```

```
VOID Bypass_Active (Word IoAddr, Byte BitNum){ BYTE TmpValue;
TmpValue = inportb (IoAddr);
TmpValue &= ~(1 << BitNum);
outport(IoAddr, TmpValue);
```

```

delay100ms();

TmpValue |= (Value << BitNum);

outport(IoAddr, TmpValue);

}

*****

*****

VOID SET_Value (Word IoAddr, Byte BitNum,Byte Value){ BYTE TmpValue;

TmpValue = inportb (IoAddr);

TmpValue &= ~(1 << BitNum);

TmpValue |= (Value << BitNum);

outport(IoAddr, TmpValue);

}

*****

VOID Main() {

//Select LAN kit refer to table 1

SET_Value (LAN_ID2, LANID2, UnitVal);

SET_Value (LAN_ID1, LANID1, UnitVal);

SET_Value (LAN_ID0, LANID1, UnitVal);

//Set the PWR_ON parameter

SET_Value (PWR_ON, PWR_ON_R, UnitVal);

//Set the PWR_OFF parameter

SET_Value (PWR_OFF, PWR_OFF_R, UnitVal);

//Set the WDT_EN parameter

SET_Value (PWR_OFF, PWR_OFF_R, UnitVal);

//Active LAN Bypass setting

```

```
Bypass_Active (ACT_EN, ACT_EN_R);
```

```
}
```

```
*****
```

C.3 LCD Module

Introduction

FWS-7810 provides a LCM (LCD Module) to display information via standard parallel port. User is able to program the LCM to express different status.

Sample Code

```
void Display_Clear()
{
    outportb(0x378, 0x01);
    wait();
    outportb(0x37A, 0xC8);
    wait();
    outportb(0x37A, 0xCA);
    wait();
}

void Return_Home()
{
    outportb(0x378, 0x02);
    wait();
    outportb(0x37A, 0xC8);
    wait();
    outportb(0x37A, 0xCA);
    wait();
}
```

```
}  
  
void Entry_mode_set()  
{  
    outportb(0x378, 0x06);  
    wait();  
    outportb(0x37A, 0xC8);  
    wait();  
    outportb(0x37A, 0xCA);  
    wait();  
}  
  
void Display_Off()  
{  
    outportb(0x378, 0x08);  
    wait();  
    outportb(0x37A, 0xC8);  
    wait();  
    outportb(0x37A, 0xCA);  
    wait();  
}  
  
void Display_On_Cursor_Off()  
{  
    outportb(0x378, 0x0C);  
    wait();  
    outportb(0x37A, 0xC8);
```

```
wait();  
outportb(0x37A, 0xCA);  
wait();  
}  
  
void Display_On_Cursor_On()  
{  
outportb(0x378, 0x0E);  
wait();  
outportb(0x37A, 0xC8);  
wait();  
outportb(0x37A, 0xCA);  
wait();  
}
```

C.4 Software Reset button (General Propose Input)

Introduction

FWS-7810 provides a general propose input button which status can get by AAEON SDK.

Soft Reset Button Configuration

Table 2 : LAN Bypass relative register table	
Function	Description
BTN_STS	Reading this register returns the pin level status which is normal high active low. 0: Pin Level States Low. 1: Pin Level States High.

Table 1 : Soft Reset Button register mapping table				
	Attribute	Register(I/O)	BitNum	Value
BTN_STS	R	0xA05(Note1)	4(Note2)	(Note3)

Sample Code

```
*****
#define Word BTN_STS //This parameter is represented from Note1
#define Byte BTN_STS_R //This parameter is represented from Note2
*****
Byte GET_Value (Word IoAddr, Byte BitNum,Byte Value){ BYTE TmpValue;
```



```
TmpValue = inportb (IoAddr);
```

```
    return (TmpValue & (1 << BitNum))
```

```
}
```

```
*****
```

```
VOID Main() {
```

```
Byte RstBtn;
```

```
RstBtn = GET_Value (BTN_STS, BTN_STS_R); // Active Low
```

```
}
```

```
*****
```