

# GENE-ADP6

---

3.5" Subcompact Board

User's Manual 3<sup>rd</sup> Ed

## Copyright Notice

---

This document is copyrighted, 2024. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

## Acknowledgements

---

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows® is a registered trademark of Microsoft Corp.
- Intel®, Iris®, and Celeron® are registered trademarks of Intel Corporation
- Core™ is a trademark of Intel Corporation
- Realtek is a trademark of Realtek Semiconductor Corporation.
- Ubuntu and Canonical are registered trademarks of Canonical Ltd.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries

All other product names or trademarks are properties of their respective owners.

## Packing List

---

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
GENE-ADP6 MB	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

## About this Document

---

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at [AAEON.com](http://AAEON.com) for the latest version of this document.

## Safety Precautions

---

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
  - i. Damaged power cord or plug
  - ii. Liquid intrusion to the device
  - iii. Exposure to moisture
  - iv. Device is not working as expected or in a manner as described in this manual
  - v. The device is dropped or damaged
  - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

### **Warning!**



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

### **Caution:**

*There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.*

### **Attention:**

*Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.*



## China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	X	X	○	○	○	○
外部信号 连接器及线材	X	X	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限, 系指在一般正常使用状况下。</p>						

## China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products

AAEON Main Board/ Daughter Board/ Backplane

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	X	X	○	○	○	○
Wires & Connectors for External Connections	X	X	○	○	○	○
<p>O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.</p> <p>X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.</p> <p><b>Note:</b> The Environment Friendly Use Period as labeled on this product is applicable under normal usage only</p>						

## Table of Contents

---

<b>Chapter 1 - Product Specifications</b> .....	<b>1</b>
1.1 Specifications .....	2
1.2 Block Diagram .....	6
<b>Chapter 2 – Hardware Information</b> .....	<b>7</b>
2.1 Dimensions .....	8
2.2 Jumpers and Connectors.....	10
2.3 List of Jumpers .....	12
2.3.1 Auto Power Button Enable/Disable Selection (JP1).....	13
2.3.2 COM 1 Pin 9 Function Selection (JP2).....	13
2.3.3 COM 2 Pin 9 Function Selection (JP3) .....	13
2.3.4 LVDS Backlight Inverter Voltage Selection (JP4).....	13
2.3.5 LVDS Operating Voltage Selection (JP4) .....	14
2.3.6 Clear CMOS Jumper (JP5).....	14
2.3.7 LVDS Backlight Lightness Control Mode Selection (JP6) .....	14
2.4 List of Connectors.....	15
2.4.1 +5V Output for SATA HDD (CN1) .....	17
2.4.2 SATA (CN2) .....	17
2.4.3 External +12V Input (Optional) (CN3).....	18
2.4.4 External Power Input (CN4) .....	18
2.4.5 Audio I/O Port (CN5) .....	19
2.4.6 M.2 3052/3042/2242 B-Key Connector (CN6) .....	20
2.4.7 DDR5 SODIMM Channel 1 (CN7) .....	22
2.4.8 Front Panel (CN9).....	31
2.4.9 DDR5 SODIMM Channel 2 (CN10) .....	31
2.4.10 COM Port 3/Port 4 (CN11).....	32
2.4.10.1 COM Port 3 RS-RS-422/RS-485 .....	33

2.4.10.2	COM Port 4 RS-422/RS-485.....	33
2.4.11	COM Port 1/Port 2 (CN12).....	34
2.4.11.1	COM Port 1 RS-422/RS-485 .....	35
2.4.11.2	COM Port 2 RS-422/RS-485.....	36
2.4.12	USB 2.0 Port 5/Port 6 (CN13) .....	36
2.4.13	GPIO Port (CN14).....	37
2.4.14	USB 2.0 Port 7/Port 8 (CN15).....	38
2.4.15	SPI Flash Programming Port (CN16) .....	39
2.4.16	LVDS Inverter/Backlight Connector (CN17) .....	39
2.4.17	M.2 2230 E-Key Connector (CN18) .....	40
2.4.18	M.2 2280 M-Key Connector (CN19).....	43
2.4.19	eDP Connector (CN20).....	45
2.4.20	LVDS Connector (CN21).....	47
2.4.21	I2C/SMBus/Port 80 Debug Port (CN22).....	48
2.4.22	Nano SIM Card Socket (CN23) .....	49
2.4.23	RTC Battery Connector (CN24).....	50
2.4.24	4-Pin Fan Connector (CN26).....	50
2.4.25	RJ-45 LAN Port 1/Port 2 (CN27) .....	51
2.4.26	LAN Port 1 LED Connector (CN28) .....	52
2.4.27	USB 3.2/USB 2.0 Port 3 (CN29).....	52
2.4.28	USB 3.2/USB 2.0 Port 1/Port 2 (CN30).....	53
2.4.29	DP Connector (CN31).....	54
2.4.30	HDMI Connector (CN33).....	55
2.4.31	USB Type-C (CN34) .....	56
2.4.32	FPC Connector (CN35) .....	57
2.4.33	LAN Port 2 LED Connector (CN36).....	59
2.5	Thermal Solutions.....	60
2.5.1	Active Cooling Fan - GENE-ADP6-FAN01.....	60

2.5.2	Heatspreader - GENE-ADP6-HSP01 .....	62
2.5.3	Heatsink -GENE-ADP6-HSK01.....	64
<b>Chapter 3 - AMI BIOS Setup .....</b>		<b>66</b>
3.1	System Test and Initialization .....	67
3.2	AMI BIOS Setup .....	68
3.3	Setup Submenu: Main .....	69
3.4	Setup Submenu: Advanced.....	70
3.4.1	CPU Configuration.....	71
3.4.2	PCH-FW Configuration.....	72
3.4.3	Firmware Update Configuration .....	73
3.4.4	PTT Configuration.....	74
3.4.5	Trusted Computing.....	75
3.4.6	SATA Configuration.....	77
3.4.7	Hardware Monitor .....	78
3.4.7.1	Smart Fan Mode Configuration .....	79
3.4.8	SIO Configuration .....	80
3.4.8.1	Serial Port 1 Configuration .....	81
3.4.8.2	Serial Port 2 Configuration .....	82
3.4.8.3	Serial Port 3 Configuration .....	83
3.4.8.4	Serial Port 4 Configuration .....	84
3.4.9	Serial Port Console Redirection .....	85
3.4.10	Legacy Console Redirection Settings.....	86
3.4.11	AAEON BIOS Robot .....	87
3.4.12	Power Management.....	89
3.4.13	GPIO Port Configuration .....	90
3.5	Setup Submenu: Chipset .....	91
3.5.1	System Agent (SA) Configuration.....	92
3.5.2	Memory Configuration.....	93

3.5.3	LVDS Panel Configuration .....	94
3.6	Setup Submenu: Security .....	96
3.6.1	Secure Boot .....	97
3.6.2	Key Management .....	98
3.7	Setup Submenu: Boot .....	100
3.7.1	BBS Priorities .....	101
3.8	Setup Submenu: Save & Exit .....	102
3.9	Setup Submenu: MEBx .....	103
3.9.1	Intel® AMT Configuration .....	104
3.9.2	Redirection features .....	105
3.9.3	User Consent .....	106
3.9.4	Power Control .....	107
<b>Chapter 4</b>	<b>– Driver Installation .....</b>	<b>108</b>
4.1	Driver Download/Installation .....	109
<b>Appendix A</b>	<b>- I/O Information .....</b>	<b>111</b>
A.1	I/O Address Map .....	112
A.2	Memory Address Map .....	114
A.3	IRQ Mapping Chart .....	115
<b>Appendix B</b>	<b>– Mating Connectors and Cables .....</b>	<b>118</b>
B.1	Mating Connectors and Cables .....	119

# Chapter 1

---

Product Specifications

## 1.1 Specifications

---

### System

<b>Form Factor</b>	3.5" SubCompact Board
<b>Processor</b>	12th Generation Intel® Core™/Celeron® SoC Intel® Core™ i7-1270PE (4PC+8EC/16T, 1.80 GHz, 28W) Intel® Core™ i7-1265UE (2PC+8EC/12T, 1.70 GHz, 15W) Intel® Core™ i5-1250PE (4PC+8EC/16T, 1.70 GHz, 28W) Intel® Core™ i3-1220PE (4PC+4EC/12T, 1.50 GHz, 28W) Intel® Celeron® Processor 7305E (1PC+4EC/5T, 1.00 GHz, 15W)
<b>Chipset</b>	Integrated with Intel® SoC
<b>Memory Type</b>	DDR5 4800, Dual Channel SODIMM x 2, up to 64GB
<b>BIOS</b>	UEFI
<b>Wake on LAN</b>	Yes
<b>Watchdog Timer</b>	255 Levels
<b>Security</b>	TPM 2.0 (Optional)
<b>RTC Battery</b>	Lithium Battery 3V/240mAH
<b>Dimension (L X W)</b>	5.75" x 4" (146mm x 101.7mm)
<b>OS Support</b>	Windows® 10/11 (64-bit) Linux Ubuntu 22.04/Kernel 5.15.0–25-generic



## Power

Power Requirement	+9 ~ 36V (Optional: +12V)
Power Supply Type	AT/ATX
Connector	Phoenix 2-pin Connector
Power Consumption	Intel® Core™ i7-1270 PE, DDR5 32GB x 2, 5.72A @+12V (Typical) Intel® Core™ i7-1270 PE, DDR5 32GB x 2, 7.95A @+12V (Max)

## Display

Controller	Intel® Iris® Xe Graphics Intel® UHD Graphics
LVDS/eDP	LVDS x 1, Dual-Channel 18/24bit, up to 1920 x 1080 eDP 1.4 x 1, up to 3840 x 2160 (Optional)
Display Interface	HDMI 2.1 x 1, up to 8K x 4K @60Hz or 4K x 2K @120Hz DP 1.4 x 1, up to 7680 x 4320 @60Hz 30bpp (supports DP++)
Multiple Display	Up to 4 Simultaneous Displays

## Audio

Codec	Realtek ALC897
Audio Interface	Line-in/Line-out/MIC
Speaker	-

## External I/O

<b>Ethernet</b>	Intel® Ethernet Connection I219-LM, 10/100/1000Base x 1 Intel® Ethernet Controller I226, 2.5GbE x 1
<b>USB</b>	USB 3.2 Gen 2 x 3 USB Type-C x 1 (USB 3.2 Gen 2, DP 1.4, PD 5V/3A)
<b>Serial Port</b>	-
<b>Video</b>	HDMI 2.1 x 1 DP 1.4 x 1

## Internal I/O

<b>USB</b>	USB 2.0 x 4
<b>Serial Port</b>	COM 1, COM 2 (RS-232/422/485, supports 5V/12V/RI) COM 3, COM 4 (RS-232/422/485)
<b>Video</b>	LVDS x 1 eDP x 1 Inverter x 1 (12V/2A)
<b>SATA</b>	SATA 6Gb/s x 1 +5V SATA Power Connector x 1
<b>Audio</b>	Audio Header x 1 (Optional)
<b>GPIO</b>	8-Bit GPIO
<b>SMBus/ I2C</b>	SMBus/I2C x1 (Default: SMBus)
<b>Touch</b>	-
<b>Fan</b>	4-pin Smart Fan x 1
<b>SIM</b>	Nano SIM x 1
<b>Front Panel</b>	PWR LED, HDD LED, PWR button, HW Reset
<b>Other</b>	-

## Expansion

Mini PCIe/ mSATA	-
M.2	M.2 2280 M-Key x 1 (PCIe 4.0 [x4] x 1) M.2 3052/3042/2242 B-Key x 1 (PCIe 3.0 [x2]/SATA + USB 3.2), Default: SATA (selected by BOM) M.2 2230 E-Key x 1 (PCIe 3.0 [x1] + USB 2.0)
Other	FPC x 1 (PCIe 4.0 [x4] x 1), only supports Graphic or NVMe


## Environmental

Operating Temperature	32°F ~ 140°F (0°C ~ 60°C) WiTAS 2: -40°F ~ 185°F (-40°C ~ 85°C) on selected CPU SKUs
Storage Temperature	-40°F ~ 185°F (-40°C ~ 85°C)
Operating Humidity	0% ~ 90% relative humidity, non-condensing
MTBF (Hours)	344,735

## Certification

EMC	CE/FCC Class A
-----	----------------

## 1.2 Block Diagram

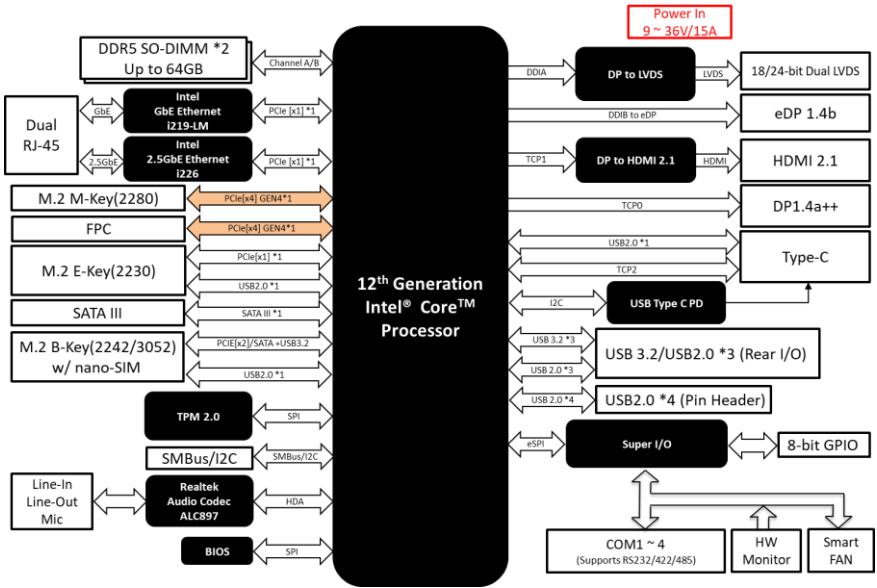


# Chapter 2

---


Hardware Information

## 2.1 Dimensions

Component Side:

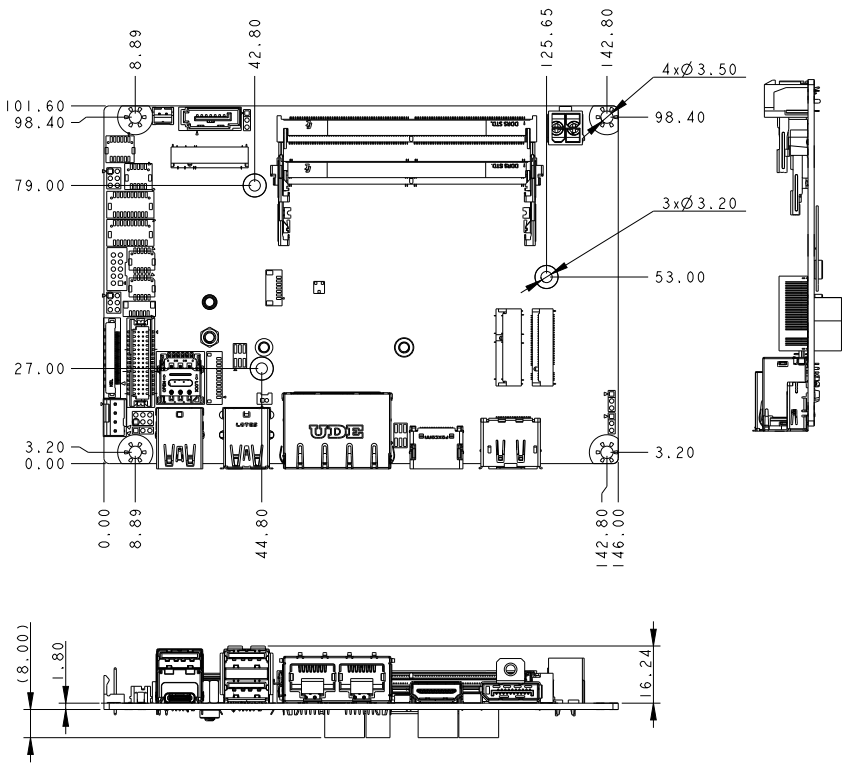


Solder Side:

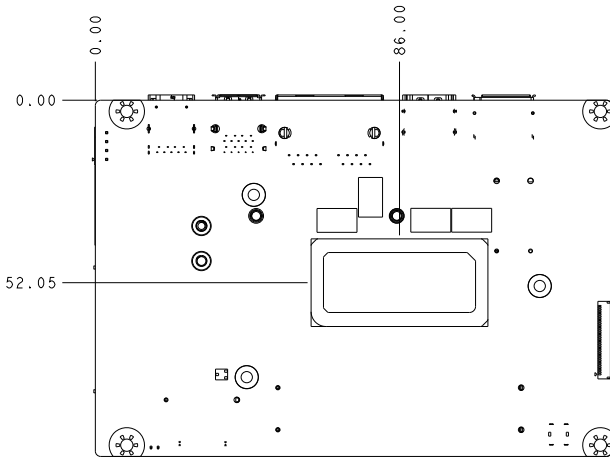


## 2.2 Jumpers and Connectors

### Top View

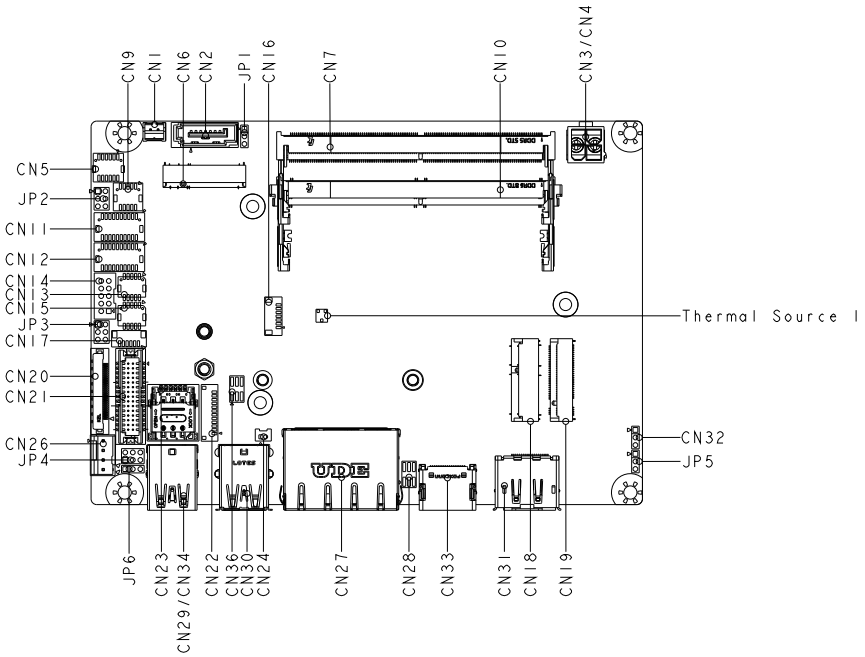


### Front I/O View

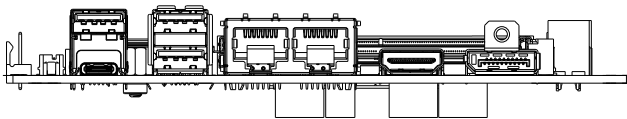



### Bottom View

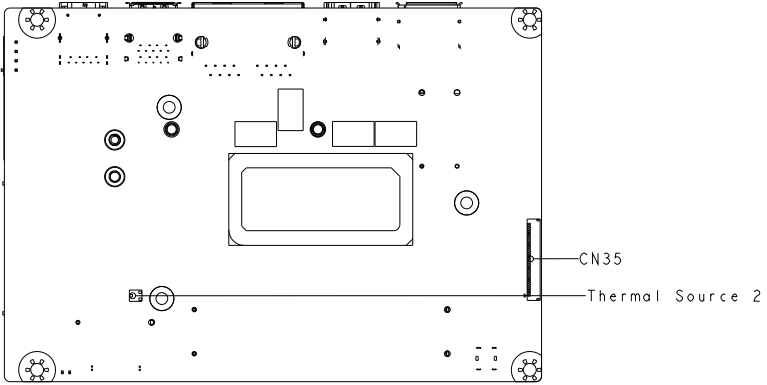


## 2.3 List of Jumpers

---


Please refer to the table below for all of the board's jumpers that you can configure for your application

Label	Function
JP1	Auto Power Button Enable/Disable Selection
JP2	COM1 Pin 9 Function Selection
JP3	COM2 Pin 9 Function Selection
JP4	LVDS Operating Voltage Selection LVDS Backlight Inverter Voltage Selection
JP5	Clear CMOS Jumper
JP6	LVDS Backlight Lightness Control Mode Selection

### 2.3.1 Auto Power Button Enable/Disable Selection (JP1)

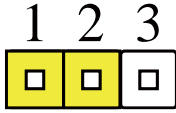


Disable Auto Power Button

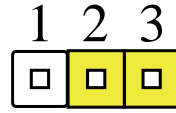


Enable Auto Power Button (Default)


### 2.3.2 COM 1 Pin 9 Function Selection (JP2)

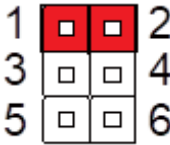

+12V

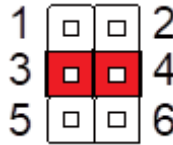


Ring (Default)

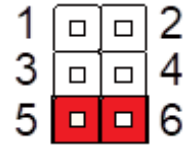


+5V


### 2.3.3 COM 2 Pin 9 Function Selection (JP3)

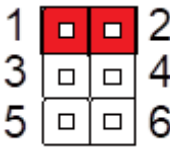

+12V

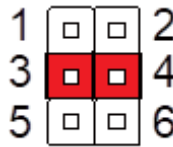


Ring (Default)

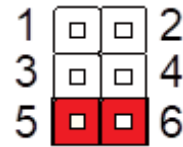


+5V

### 2.3.4 LVDS Backlight Inverter Voltage Selection (JP4)

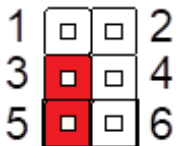


+5V (Default)

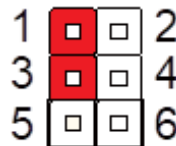


+12V

### 2.3.5 LVDS Operating Voltage Selection (JP4)

---

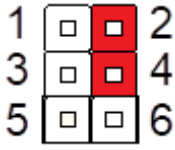


+3.3V (Default)

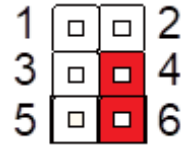


+5V

### 2.3.6 Clear CMOS Jumper (JP5)

---

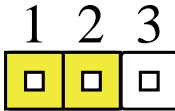


Normal (Default)

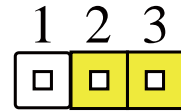


Clear CMOS

### 2.3.7 LVDS Backlight Lightness Control Mode Selection (JP6)

---

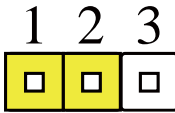

VR Mode

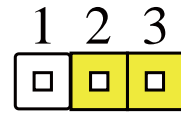

PWM mode (Default)


## 2.4 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application

Label	Function
CN1	+5V Output for SATA HDD
CN2	SATA
CN3	External +12V Input (Optional)
CN4	External Power Input
CN5	Audio I/O Port
CN6	M.2 3052/3042/2242 B-Key
CN7	DDR5 SODIMM Channel 1
CN9	Front Panel
CN10	DDR5 SODIMM Channel 2
CN11	COM Port 3/Port 4
CN12	COM Port 1/Port 2
CN13	USB 2.0 Port 5/Port 6
CN14	GPIO Port
CN15	USB 2.0 Port 7/Port 8
CN16	SPI Flash Programming Port
CN17	LVDS Inverter/Backlight Connector
CN18	M.2 2230 E-Key
CN19	M.2 2280 M-Key
CN20	eDP Connector
CN21	LVDS Connector
CN22	I2C/SMBus/Port 80 Debug Port
CN23	Nano SIM Card Socket
CN24	RTC Battery Connector
CN25	3-pin Fan Connector (Optional)
CN26	4-pin Fan Connector
CN27	RJ-45 LAN Port 1/Port 2
CN28	LAN Port 1 LED Connector
CN29	USB 3.2/USB 2.0 Port 3

Label	Function
CN30	USB 3.2/USB 2.0 Port 1/Port 2
CN31	DP Connector
CN33	HDMI Connector
CN34	USB Type-C
CN35	FPC Connector
CN36	LAN Port 2 LED Connector


### 2.4.1 +5V Output for SATA HDD (CN1)

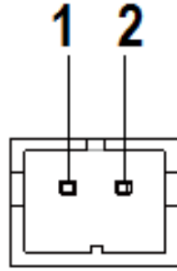

Pin	Pin Name	Signal Type	Signal Level
1	+V5S	PWR	+5V
2	GND	GND	-


**Note:** The driving current of +V5S supports up to 2A.

### 2.4.2 SATA (CN2)

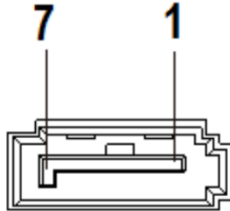


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	GND
2	SATA_TX+	DIFF	-
3	SATA_TX-	DIFF	-
4	GND	GND	GND
5	SATA_RX-	DIFF	-
6	SATA_RX+	DIFF	-
7	GND	GND	GND

### 2.4.3 External +12V Input (Optional) (CN3)

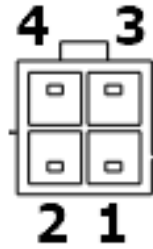

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	GND
2	GND	GND	GND
3	+12V	PWR	+12V
4	+12V	PWR	+12V


### 2.4.4 External Power Input (CN4)

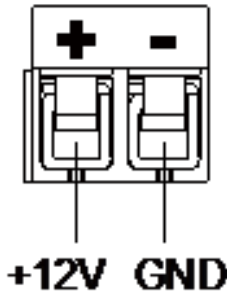

Pin	Pin Name	Signal Type	Signal Level
1	+12V	PWR	+12V
2	GND	GND	GND




## 2.4.5 Audio I/O Port (CN5)

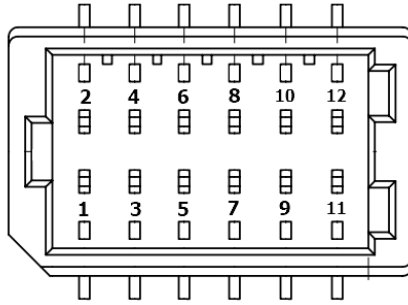

Pin	Pin Name	Signal Type	Signal Level
1	RIGHT_OUT	OUT	-
2	MIC_R	IN	-
3	LEFT_OUT	OUT	-
4	MIC_L	IN	-
5	JD_LOUT	IN	-
6	JD_MIC	IN	-
7	GND_AUDIO	GND	-
8	GND_AUDIO	GND	-
9	JD_LIN	IN	-
10	LINE_R_IN	IN	-
11	+5V_AUDIO	PWR	+5V
12	LINE_L_IN	IN	-

## 2.4.6 M.2 3052/3042/2242 B-Key Connector (CN6)

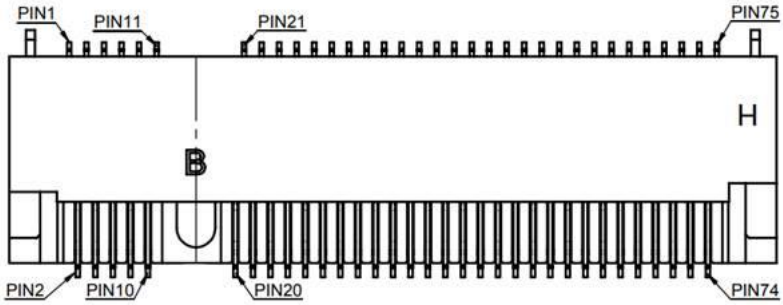


Pin	Pin Name	Signal Type	Signal Level
1	NC		
2	+V3P3S	PWR	+3.3V
3	GND	GND	GND
4	+V3P3S	PWR	+3.3V
5	GND	GND	GND
6	NC		
7	USB2_2_DP	DIFF	-
8	KEYB_DISABLE_N	IN	
9	USB2_2_DN	DIFF	-
10	PCH_SATA_LED_N	OUT	+3.3V
11	GND	GND	GND
20	NC	-	-
21	NC	-	-
22	NC	-	-
23	NC	-	-
24	NC	-	-
25	NC	-	-
26	NC	-	-
27	GND	GND	GND
28	NC	-	-
29	PCI_E_4_RXN/ USB3_2_RXN	DIFF	-

Pin	Pin Name	Signal Type	Signal Level
30	UIM_RST_M2B	OUT	-
31	PCIE4_1_RXP/ USB3_2_RXP	DIFF	-
32	UIM_CLK_M2B	-	-
33	GND	GND	GND
34	UIM_DAT_M2B	IN/OUT	-
35	PCIE4_TXN/ USB3_2_TXN	DIFF	-
36	UIM_PWR	PWR	-
37	PCIE4_TXP/ USB3_2_TXP	DIFF	-
38	NC	-	-
39	GND	GND	GND
40	NC	-	-
41	PCIE_3_RXN	DIFF	-
42	NC	-	-
43	PCIE_3_RXP	DIFF	-
44	NC	-	-
45	GND	GND	GND
46	NC	-	-
47	PCIE_3_TXN	DIFF	-
48	NC	-	-
49	PCIE_3_TXP	DIFF	-
50	BUF_PLT_RST#	OUT	-
51	GND	GND	GND
52	M2B_CLKREQ#	IN	-
53	PCIE_4_CLK_DN	DIFF	-
54	KEYB_WAKE_N	IN	-
55	PCIE_4_CLK_DN	DIFF	-
56	NC	-	-
57	GND	GND	GND
58	NC	-	-
59	NC	-	-
60	NC	-	-

Pin	Pin Name	Signal Type	Signal Level
61	NC	-	-
62	NC	-	-
63	NC	-	-
64	NC	-	-
65	NC	-	-
66	SIM_Detect	IN	-
67	KEYB_WWAN_RST_N	OUT	-
68	PCH_SUS_CLK	IN	-
69	NC	-	-
70	+V3P3A	PWR	+3.3V
71	GND	GND	GND
72	+V3P3A	PWR	+3.3V
73	GND	GND	GND
74	+V3P3A	PWR	+3.3V
75	NC	-	-

## 2.4.7 DDR5 SODIMM Channel 1 (CN7)

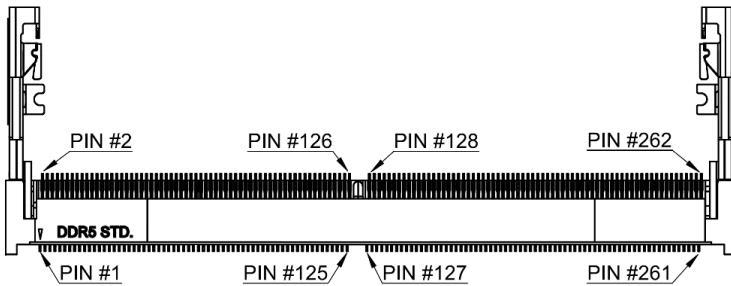

Pin	Pin Name	Signal Type	Signal Level
1	VIN_BULK	IN	+5V
2	HSA	IN	GND
3	VIN_BULK	IN	+5V
4	HSCL	IN	VPP or VDD
5	NC	-	-

Pin	Pin Name	Signal Type	Signal Level
6	HSDA	IN/OUT	VPP or VDD
7	PWR_GOOD	IN/OUT	VDDQ
8	PWR_EN	IN	VDDQ
9	VSS	GND	GND
10	VSS	GND	GND
11	DQ0_A	IN	VDDQ
12	DQ1_A	IN	VDDQ
13	VSS	GND	GND
14	VSS	GND	GND
15	DQ2_A	IN	VDDQ
16	DQ3_A	IN	VDDQ
17	VSS	GND	GND
18	VSS	GND	GND
19	DM0_A_n	IN	GND
20	DQS0_A_c	DIFF	-
21	VSS	GND	GND
22	DQS0_A_t	DIFF	-
23	DQ4_A	IN	VDDQ
24	VSS	GND	GND
25	VSS	GND	GND
26	DQ5_A	IN	VDDQ
27	DQ6_A	IN	VDDQ
28	VSS	GND	GND
29	VSS	GND	GND
30	DQ7_A	IN	VDDQ
31	DQ8_A	IN	VDDQ
32	VSS	GND	GND
33	VSS	GND	GND
34	DQ9_A	IN	VDDQ
35	DQ10_A	IN	VDDQ
36	VSS	GND	GND
37	VSS	GND	GND
38	DQ11_A	IN	VDDQ

Pin	Pin Name	Signal Type	Signal Level
39	DQS1_A_c	DIFF	-
40	VSS	GND	GND
41	DQS1_A_t	DIFF	-
42	DM1_A_n	IN	GND
43	VSS	GND	GND
44	VSS	GND	GND
45	DQ12_A	IN	VDDQ
46	DQ13_A	IN	VDDQ
47	VSS	GND	GND
48	VSS	GND	GND
49	DQ14_A	IN	VDDQ
50	DQ15_A	IN	VDDQ
51	VSS	GND	GND
52	VSS	GND	GND
53	DQ16_A	IN	VDDQ
54	DQ17_A	IN	VDDQ
55	VSS	GND	GND
56	VSS	GND	GND
57	DQ18_A	IN	VDDQ
58	DQ19_A	IN	VDDQ
59	VSS	GND	GND
60	VSS	GND	GND
61	DM2_A_n	IN	GND
62	DQS2_A_c	DIFF	-
63	VSS	GND	GND
64	DQS2_A_t	DIFF	-
65	DQ20_A	IN	VDDQ
66	VSS	GND	GND
67	VSS	GND	GND
68	DQ21_A	IN	VDDQ
69	DQ22_A	IN	VDDQ
70	VSS	GND	GND
71	VSS	GND	GND

Pin	Pin Name	Signal Type	Signal Level
72	DQ23_A	IN	VDDQ
73	DQ24_A	IN	VDDQ
74	VSS	GND	GND
75	VSS	GND	GND
76	DQ25_A	IN	VDDQ
77	DQ26_A	IN	VDDQ
78	VSS	GND	GND
79	VSS	GND	GND
80	DQ27_A	IN	VDDQ
81	DQS3_A_c	DIFF	-
82	VSS	GND	GND
83	DQS3_A_t	DIFF	-
84	DM3_A_n	IN	GND
85	VSS	GND	GND
86	VSS	GND	GND
87	DQ28_A	IN	VDDQ
88	DQ29_A	IN	VDDQ
89	VSS	GND	GND
90	VSS	GND	GND
91	DQ30_A	IN	VDDQ
92	DQ31_A	IN	VDDQ
93	VSS	GND	GND
94	VSS	GND	GND
95	CB0_A	IN	VDDQ
96	CB1_A	IN	VDDQ
97	VSS	GND	GND
98	VSS	GND	GND
99	CB2_A	IN	VDDQ
100	DQS4_A_c	DIFF	-
101	VSS	GND	GND
102	DQS4_A_t	DIFF	-
103	CB3_A	IN	VDDQ
104	VSS	GND	GND

Pin	Pin Name	Signal Type	Signal Level
105	VSS	GND	GND
106	CS0_A_n	IN	GND
107	CA0_A	IN	VDDQ
108	ALERT_n	IN/OUT	GND
109	CA1_A	IN	VDDQ
110	CS1_A_n	IN	GND
111	VSS	GND	GND
112	VSS	GND	GND
113	CA2_A	IN	VDDQ
114	CA3_A	IN	VDDQ
115	CA4_A	IN	VDDQ
116	CA5_A	IN	VDDQ
117	VSS	GND	GND
118	VSS	GND	GND
119	CA6_A	IN	VDDQ
120	CA7_A	IN	VDDQ
121	CA8_A	IN	VDDQ
122	CA9_A	IN	VDDQ
123	VSS	GND	GND
124	VSS	GND	GND
125	CA10_A	IN	VDDQ
126	CA11_A	IN	VDDQ
127	CA12_A	IN	VDDQ
128	NC	-	-
129	VSS	GND	GND
130	VSS	GND	GND
131	CK0_A_t	DIFF	-
132	CK1_A_t	DIFF	-
133	CK0_A_c	DIFF	-
134	CK1_A_c	DIFF	-
135	VSS	GND	GND
136	VSS	GND	GND
137	CK0_B_t	DIFF	-




Pin	Pin Name	Signal Type	Signal Level
138	CK1_B_t	DIFF	-
139	CK0_B_c	DIFF	-
140	CK1_B_c	DIFF	-
141	VSS	GND	GND
142	VSS	GND	GND
143	NC	-	-
144	CA12_B	IN	VDDQ
145	CA11_B	IN	VDDQ
146	CA10_B	IN	VDDQ
147	VSS	GND	GND
148	VSS	GND	GND
149	CA9_B	IN	VDDQ
150	CA8_B	IN	VDDQ
151	CA7_B	IN	VDDQ
152	CA6_B	IN	VDDQ
153	VSS	GND	GND
154	VSS	GND	GND
155	CA5_B	IN	VDDQ
156	CA4_B	IN	VDDQ
157	CA3_B	IN	VDDQ
158	CA2_B	IN	VDDQ
159	VSS	GND	GND
160	VSS	GND	GND
161	CS0_B_n	IN	GND
162	CA1_B	IN	VDDQ
163	RESET_n	IN	GND
164	CA0_B	IN	VDDQ
165	CS1_B_n	IN	GND
166	VSS	GND	GND
167	VSS	GND	GND
168	CB0_B	IN	VDDQ
169	DQS4_B_c	DIFF	-
170	VSS	GND	GND

Pin	Pin Name	Signal Type	Signal Level
171	DQS4_B_t	DIFF	-
172	CB1_B	IN	VDDQ
173	VSS	GND	GND
174	VSS	GND	GND
175	CB3_B	IN	VDDQ
176	CB2_B	IN	VDDQ
177	VSS	GND	GND
178	VSS	GND	GND
179	DQ0_B	IN	VDDQ
180	DQ1_B	IN	VDDQ
181	VSS	GND	GND
182	VSS	GND	GND
183	DQ2_B	IN	VDDQ
184	DQ3_B	IN	VDDQ
185	VSS	GND	GND
186	VSS	GND	GND
187	DM0_B_n	IN	GND
188	DQS0_B_c	DIFF	-
189	VSS	GND	GND
190	DQS0_B_t	DIFF	-
191	DQ4_B	IN	VDDQ
192	VSS	GND	GND
193	VSS	GND	GND
194	DQ5_B	IN	VDDQ
195	DQ6_B	IN	VDDQ
196	VSS	GND	GND
197	VSS	GND	GND
198	DQ7_B	IN	VDDQ
199	DQ8_B	IN	VDDQ
200	VSS	GND	GND
201	VSS	GND	GND
202	DQ9_B	IN	VDDQ
203	DQ10_B	IN	VDDQ

Pin	Pin Name	Signal Type	Signal Level
204	VSS	GND	GND
205	VSS	GND	GND
206	DQ11_B	IN	VDDQ
207	DQS1_B_c	DIFF	-
208	VSS	GND	GND
209	DQS1_B_t	DIFF	-
210	DM1_B_n	IN	GND
211	VSS	GND	GND
212	VSS	GND	GND
213	DQ12_B	IN	VDDQ
214	DQ13_B	IN	VDDQ
215	VSS	GND	GND
216	VSS	GND	GND
217	DQ14_B	IN	VDDQ
218	DQ15_B	IN	VDDQ
219	VSS	GND	GND
220	VSS	GND	GND
221	DQ16_B	IN	VDDQ
222	DQ17_B	IN	VDDQ
223	VSS	GND	GND
224	VSS	GND	GND
225	DQ18_B	IN	VDDQ
226	DQ19_B	IN	VDDQ
227	VSS	GND	GND
228	VSS	GND	GND
229	DM2_B_n	IN	GND
230	DQS2_B_c	DIFF	-
231	VSS	GND	GND
232	DQS2_B_t	DIFF	-
233	DQ20_B	IN	VDDQ
234	VSS	GND	GND
235	VSS	GND	GND
236	DQ21_B	IN	VDDQ

Pin	Pin Name	Signal Type	Signal Level
237	DQ22_B	IN	VDDQ
238	VSS	GND	GND
239	VSS	GND	GND
240	DQ23_B	IN	VDDQ
241	DQ24_B	IN	VDDQ
242	VSS	GND	GND
243	VSS	GND	GND
244	DQ25_B	IN	VDDQ
245	DQ26_B	IN	VDDQ
246	VSS	GND	GND
247	VSS	GND	GND
248	DQ27_B	IN	VDDQ
249	DQS3_B_c	DIFF	-
250	VSS	GND	GND
251	DQS3_B_t	DIFF	-
252	DM3_B_n	IN	GND
253	VSS	GND	GND
254	VSS	GND	GND
255	DQ28_B	IN	VDDQ
256	DQ29_B	IN	VDDQ
257	VSS	GND	GND
258	VSS	GND	GND
259	DQ30_B	IN	VDDQ
260	DQ31_B	IN	VDDQ
261	VSS	GND	GND
262	VSS	GND	GND

## 2.4.8 Front Panel (CN9)

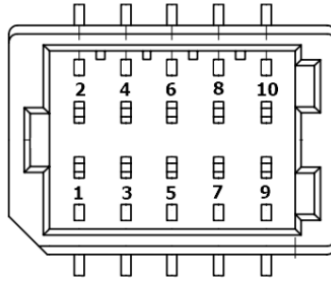


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	GND
2	EXT_PWRBTN#	IN	-
3	SATA_LED-	OUT	-
4	SATA_LED+	OUT	-
5	BUZZER-	OUT	-
6	BUZZER+	OUT	-
7	GND	GND	GND
8	PWR_LED+	OUT	-
9	GND	GND	GND
10	HWRST#	IN	-

## 2.4.9 DDR5 SODIMM Channel 2 (CN10)

Standard Specifications.

## 2.4.10 COM Port 3/Port 4 (CN11)

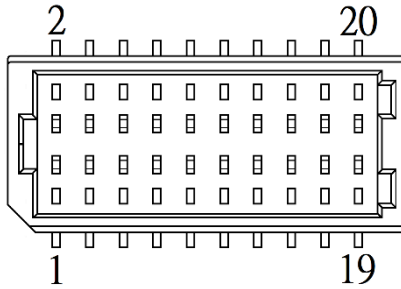

COM Port 3/Port 4 RS-232 (Default)

Pin	Pin Name	Signal Type	Signal Level
1	DCD3	IN	-
2	DCD4	IN	-
3	RX3	IN	-
4	RX4	IN	-
5	TX3	OUT	±9V
6	TX4	OUT	±9V
7	DTR3	OUT	±9V
8	DTR4	OUT	±9V
9	GND	GND	GND
10	GND	GND	GND
11	DSR3	IN	-
12	DSR4	IN	-
13	RTS3	OUT	±9V
14	RTS4	OUT	±9V
15	CTS3	IN	-
16	CTS4	IN	-
17	RI3/ +5V/ +12V	IN/ PWR	+5V/+12V
18	RI4/ +5V/ +12V	IN/ PWR	+5V/+12V
19	NC	NC	NC
20	NC	NC	NC

### 2.4.10.1 COM Port 3 RS-RS-422/RS-485

---

COM Port 3 RS-422			
Pin	Pin Name	Signal Type	Signal Level
9	GND	GND	GND
1	RS422_TX-	OUT	±9V
3	RS422_TX+	OUT	±9V
5	RS422_RX+	IN	-
7	RS422_RX-	IN	-

COM Port 3 RS-485			
Pin	Pin Name	Signal Type	Signal Level
9	GND	GND	GND
1	RS485_D-	I/O	±9V
3	RS485_D+	I/O	±9V

**Note:** COM 3 RS-232/422/485 can be set by BIOS setting. Default is RS-232.

### 2.4.10.2 COM Port 4 RS-422/RS-485

---


COM Port 4 RS-422			
Pin	Pin Name	Signal Type	Signal Level
10	GND	GND	GND
2	RS422_TX-	OUT	±9V
4	RS422_TX+	OUT	±9V
6	RS422_RX+	IN	-
8	RS422_RX-	IN	-

## COM Port 4 RS-485

Pin	Pin Name	Signal Type	Signal Level
10	GND	GND	GND
2	RS485_D-	I/O	±9V
4	RS485_D+	I/O	±9V

**Note:** COM 4 RS-232/422/485 can be set by BIOS setting. Default is RS-232.

## 2.4.11 COM Port 1/Port 2 (CN12)

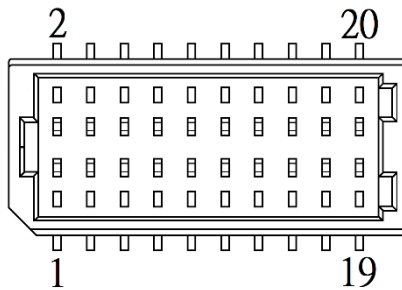

## COM Port 1/Port 2 RS-232 (Default)

Pin	Pin Name	Signal Type	Signal Level
1	DCD1	IN	-
2	DCD2	IN	-
3	RX1	IN	-
4	RX2	IN	-
5	TX1	OUT	±9V
6	TX2	OUT	±9V
7	DTR1	OUT	±9V
8	DTR2	OUT	±9V
9	GND	GND	GND
10	GND	GND	GND
11	DSR1	IN	-
12	DSR2	IN	-
13	RTS1	OUT	±9V



## COM Port 1/Port 2 RS-232 (Default)

Pin	Pin Name	Signal Type	Signal Level
14	RTS2	OUT	±9V
15	CTS1	IN	-
16	CTS2	IN	-
17	RI1/ +5V/ +12V	IN/ PWR	+5V/+12V
18	RI2/ +5V/ +12V	IN/ PWR	+5V/+12V
19	NC	NC	NC
20	NC	NC	NC

## 2.4.11.1 COM Port 1 RS-422/RS-485

## COM Port 1 RS-422

Pin	Pin Name	Signal Type	Signal Level
9	GND	GND	GND
1	RS422_TX-	OUT	±9V
3	RS422_TX+	OUT	±9V
5	RS422_RX+	IN	-
7	RS422_RX-	IN	-

## COM Port 1 RS-485

Pin	Pin Name	Signal Type	Signal Level
9	GND	GND	GND
1	RS485_D-	I/O	±9V
3	RS485_D+	I/O	±9V

**Note:** COM 1 RS-232/422/485 can be set by BIOS setting. Default is RS-232.

**Note:** Pin 17 function can be set by JP2.

### 2.4.11.2 COM Port 2 RS-422/RS-485


COM Port 2 RS-422			
Pin	Pin Name	Signal Type	Signal Level
10	GND	GND	GND
2	RS422_TX-	OUT	±9V
4	RS422_TX+	OUT	±9V
6	RS422_RX+	IN	
8	RS422_RX-	IN	

COM Port 2 RS-485			
Pin	Pin Name	Signal Type	Signal Level
10	GND	GND	GND
2	RS485_D-	I/O	±9V
4	RS485_D+	I/O	±9V

**Note:** COM 2 RS-232/422/485 can be set by BIOS setting. Default is RS-232.

**Note:** Pin 18 function can be set by JP3.

### 2.4.12 USB 2.0 Port 5/Port 6 (CN13)

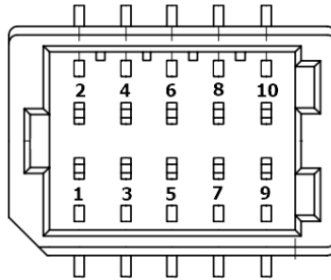


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	+5VSB	PWR	+5V
3	USB2_5_DN	DIFF	-
4	USB2_6_DN	DIFF	-
5	USB2_5_DP	DIFF	-

Pin	Pin Name	Signal Type	Signal Level
6	USB2_6_DP	DIFF	-
7	GND	GND	GND
8	GND	GND	GND
9	GND	GND	GND
10	GND	GND	GND

**Note:** The driving current of +5VSB supports up to 0.5A/Port.

### 2.4.13 GPIO Port (CN14)

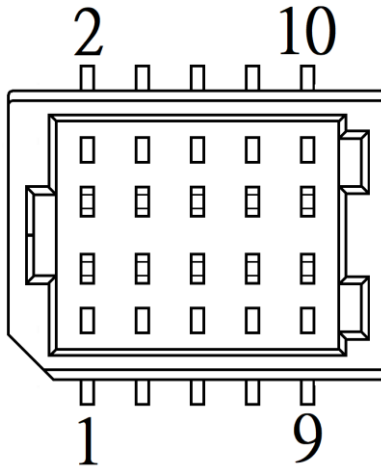


Pin	Pin Name	Signal Type	Signal Level
1	GPIO_0	IN/OUT	-
2	GPIO_1	IN/OUT	-
3	GPIO_2	IN/OUT	-
4	GPIO_3	IN/OUT	-
5	GPIO_4	IN/OUT	-
6	GPIO_5	IN/OUT	-
7	GPIO_6	IN/OUT	-

Pin	Pin Name	Signal Type	Signal Level
8	GPIO_7	IN/OUT	-
9	+V5S	PWR	+5V
10	GND	GND	GND

**Note:** The driving current of +V5S supports up to 0.5A.


#### 2.4.14 USB 2.0 Port 7/Port 8 (CN15)

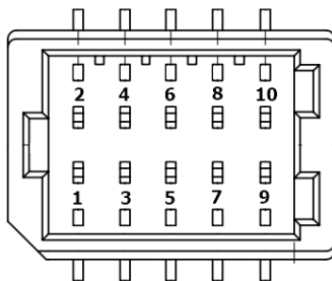

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	+5VSB	PWR	+5V
3	USB2_7_DN	DIFF	-
4	USB2_8_DN	DIFF	-
5	USB2_7_DP	DIFF	-
6	USB2_8_DP	DIFF	-
7	GND	GND	GND
8	GND	GND	GND
9	GND	GND	GND
10	GND	GND	GND


**Note:** The driving current of +5VSB supports up to 0.5A/Port.

## 2.4.15 SPI Flash Programming Port (CN16)

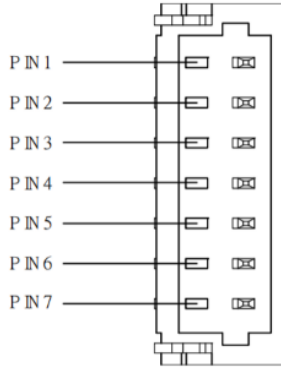

Pin	Pin Name	Signal Type	Signal Level
1	SPI_MISO	OUT	-
2	GND	GND	GND
3	SPI_CLK	IN	-
4	+V3P3A_SPI	PWR	+3.3V
5	SPI_MOSI	IN	-
6	SPI_CS	IN	-
7	NC	-	-

## 2.4.16 LVDS Inverter/Backlight Connector (CN17)

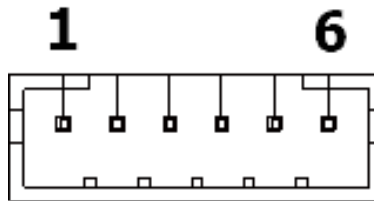

Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V(Default)/+12V
2	BKL_PWR	PWR	+5V(Default)/+12V


Pin	Pin Name	Signal Type	Signal Level
3	BKL_CONTROL	OUT	-
4	GND	GND	-
5	GND	GND	-
6	BKL_ENABLE	OUT	+3.3V

**Note:** LVDS/BKL\_PWR can be set to +12V or +5V by JP4.

**Note:** LVDS/BKL\_CONTROL can be set by JP6.

**Note:** The driving current of BKL\_PWR supports up to 2A.

### 2.4.17 M.2 2230 E-Key Connector (CN18)

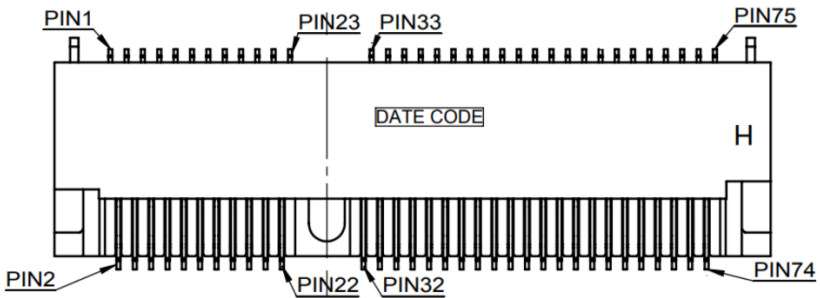


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	GND
2	+V3P3A	PWR	+3.3V
3	USB2_10_DP	DIFF	-
4	+V3P3A	PWR	+3.3V
5	USB2_10_DN	DIFF	-
6	NC	-	-
7	GND	GND	GND
8	NC	-	-
9	CNV_WR_D1_DN	DIFF	-
10	KEYE_CNV_RF_RST	IN	-

Pin	Pin Name	Signal Type	Signal Level
11	CNV_WR_D1_DP	DIFF	-
12	NC	-	-
13	GND	GND	GND
14	KEYE_CNV_CLKREQ	OUT	-
15	CNV_WR_D0_DN	DIFF	-
16	NC	-	-
17	CNV_WR_D0_DP	DIFF	-
18	GND	GND	GND
19	GND	GND	GND
20	KEYE_UART_WAKE_N	IN	-
21	CNV_WR_CLK_DN	DIFF	-
22	CNV_BRI_RSP	IN	-
23	CNV_WR_CLK_DP	DIFF	-
32	CNV_RGI_DT	IN	-
33	GND	GND	GND
34	CNV_RGI_RSP	OUT	-
35	PCIE_8_TXP	DIFF	-
36	CNV_BRI_DT	-	-
37	PCIE_8_TXN	DIFF	-
38	MLK_RST_N	IN	-
39	GND	GND	GND
40	MLK_DATA	IN/OUT	-
41	PCIE_8_RXP	DIFF	-
42	MLK_CLK	IN	-
43	PCIE_8_RXN	DIFF	-
44	NC	-	-
45	GND	GND	GND
46	NC	-	-
47	PCIE_3_CLK_DP	DIFF	-
48	NC	-	-
49	PCIE_3_CLK_DN	DIFF	-
50	SUS_CLK	IN	-
51	GND	GND	GND

Pin	Pin Name	Signal Type	Signal Level
52	BUF_PLT_RST#	IN	-
53	PCIE_CLKREQ#3	OUT	-
54	NC	-	-
55	PCIE_WAKE#	IN/OUT	-
56	NC	-	-
57	GND	GND	GND
58	NC	-	-
59	CNV_WT_D1_DN	DIFF	-
60	NC	-	-
61	CNV_WT_D1_DP	DIFF	-
62	NC	-	-
63	GND	GND	GND
64	NC	-	-
65	CNV_WT_D0_DN	DIFF	-
66	NC	-	-
67	CNV_WT_D0_DP	DIFF	-
68	NC	-	-
69	GND	GND	GND
70	NC	-	-
71	CNV_WT_CLK_DN	DIFF	-
72	+V3P3A	PWR	+3.3V
73	CNV_WT_CLK_DP	DIFF	-
74	+V3P3A	PWR	+3.3V
75	GND	GND	GND



## 2.4.18 M.2 2280 M-Key Connector (CN19)

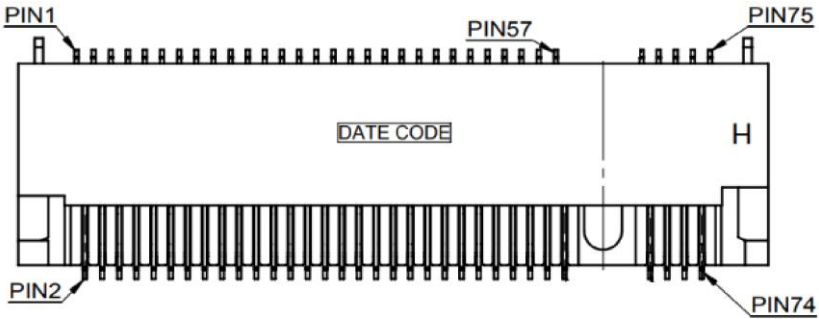


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	GND
2	+V3P3S	PWR	+3.3V
3	GND	GND	GND
4	+V3P3S	PWR	+3.3V
5	PCIE_12_RXN	DIFF	-
6	CARD_PWR_OFF_N	IN	-
7	PCIE_12_RXP	DIFF	-
8	NC	-	-
9	GND	GND	GND
10	PCH_SATA_LED_N	OUT	+3.3V
11	PCIE_12_TXN	DIFF	-
12	+V3P3S	PWR	+3.3V
13	PCIE_12_TXP	DIFF	-
14	+V3P3S	PWR	+3.3V
15	GND	GND	GND
16	+V3P3S	PWR	+3.3V
17	PCIE_11_RXN	DIFF	-
18	+V3P3S	PWR	+3.3V
19	PCIE_11_RXP	DIFF	-
20	NC	-	-
21	GND	GND	GND

Pin	Pin Name	Signal Type	Signal Level
22	KEYM_SSD_VIO	IN	-
23	PCIE_11_TXN	DIFF	-
24	NC	-	-
25	PCIE_11_TXP	DIFF	-
26	NC	-	-
27	GND	GND	GND
28	NC	-	-
29	PCIE_10_RXN	DIFF	-
30	NC	-	-
31	PCIE_10_RXP	DIFF	-
32	NC	-	-
33	GND	GND	GND
34	NC	-	-
35	PCIE_10_TXN	DIFF	-
36	NC	-	-
37	PCIE_10_TXP	DIFF	-
38	NC	-	-
39	GND	GND	GND
40	NC	-	-
41	PCIE_9_RXN/ SATA_1_RXP	DIFF	-
42	NC	-	-
43	PCIE_9_RXP/ SATA_1_RXN	DIFF	-
44	NC	-	-
45	GND	GND	GND
46	NC	-	-
47	PCIE_9_TXN/ SATA_1_TXN	DIFF	-
48	NC	-	-
49	PCIE_9_TXP/ SATA_1_TXP	DIFF	-
50	BUF_PLT_RST#	IN	-
51	GND	GND	GND

Pin	Pin Name	Signal Type	Signal Level
52	M2M_CLKREQ#	OUT	-
53	PCIE_5_CLK_DN	DIFF	-
54	PCIE_WAKE#	OUT	-
55	PCIE_5_CLK_DP	DIFF	-
56	NC	-	-
57	GND	GND	GND
58	NC	-	-
67	NC	-	-
68	SUS_CLK	IN	-
69	KEYM_DET	IN	-
70	+V3P3S	PWR	+3.3V
71	GND	GND	GND
72	+V3P3S	PWR	+3.3V
73	GND	GND	GND
74	+V3P3S	PWR	+3.3V
75	GND	GND	GND

### 2.4.19 eDP Connector (CN20)

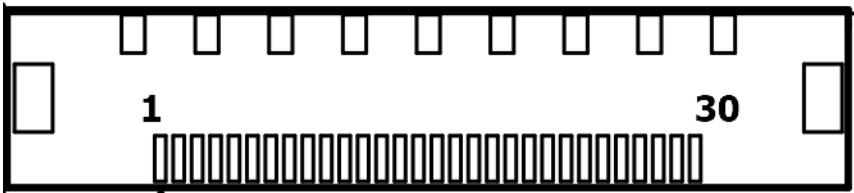


Pin	Pin Name	Signal Type	Signal Level
1	+VDD	PWR	+3.3V
2	+VDD	PWR	+3.3V
3	+VDD	PWR	+3.3V
4	GND	GND	-
5	EDP_LANE2_DN	DIFF	-
6	EDP_LANE2_DP	DIFF	-

Pin	Pin Name	Signal Type	Signal Level
7	GND	GND	-
8	EDP_LANE1_DN	DIFF	-
9	EDP_LANE1_DP	DIFF	-
10	GND	GND	-
11	EDP_LANE0_DN	DIFF	-
12	EDP_LANE0_DP	DIFF	-
13	GND	GND	-
14	EDP_LANE3_DN	DIFF	-
15	EDP_LANE3_DP	DIFF	-
16	GND	GND	-
17	EDP_AUX_DN	DIFF	-
18	EDP_AUX_DP	DIFF	-
19	GND	GND	-
20	EDP_BKLTCTL		-
21	N/A		-
22	EDP_BKLT_EN		-
23	EDP_HPD		-
24	GND	GND	-
25	GND	GND	-
26	GND	GND	-
27	+VCC_EDP_BKLT	PWR	+12V
28	+VCC_EDP_BKLT	PWR	+12V
29	+VCC_EDP_BKLT	PWR	+12V
30	+VCC_EDP_BKLT	PWR	+12V

**Note:** The driving current of +VCC\_EDP\_BKLT supports up to 1.2A.

**Note:** The driving current of +VDD supports up to 1A.


## 2.4.20 LVDS Connector (CN21)

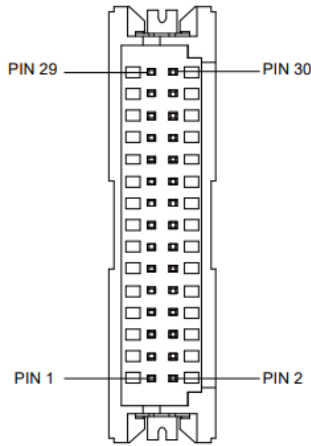

Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	-
2	BKL_CONTROL	OUT	-
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	-
5	LVDS_A_CLK-	DIFF	-
6	LVDS_A_CLK+	DIFF	-
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	-
9	LVDS_DA0-	DIFF	-
10	LVDS_DA0+	DIFF	-
11	LVDS_DA1-	DIFF	-
12	LVDS_DA1+	DIFF	-
13	LVDS_DA2-	DIFF	-
14	LVDS_DA2+	DIFF	-
15	LVDS_DA3-	DIFF	-
16	LVDS_DA3+	DIFF	-
17	DDC_DATA	I/O	+3.3V

Pin	Pin Name	Signal Type	Signal Level
18	DDC_CLK	I/O	+3.3V
19	LVDS_DB0-	DIFF	-
20	LVDS_DB0+	DIFF	-
21	LVDS_DB1-	DIFF	-
22	LVDS_DB1+	DIFF	-
23	LVDS_DB2-	DIFF	-
24	LVDS_DB2+	DIFF	-
25	LVDS_DB3-	DIFF	-
26	LVDS_DB3+	DIFF	-
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	-
29	LVDS_B_CLK-	DIFF	-
30	LVDS_B_CLK+	DIFF	-


## 2.4.21 I2C/SMBus/Port 80 Debug Port (CN22)

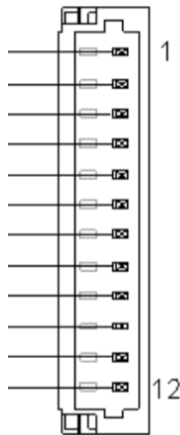

Pin	Pin Name	Signal Type	Signal Level
1	ESP_IO0	I/O	+1.8V
2	ESP_IO1	I/O	+1.8V


Pin	Pin Name	Signal Type	Signal Level
3	ESP_IO2	I/O	+1.8V
4	ESP_IO3	I/O	+1.8V
5	+V3P3S	PWR	+3.3V
6	ESPI_CS	IN	-
7	ESPI_RST	OUT	+3.3V
8	GND	GND	GND
9	ESPI_CLK	OUT	+1.8V
10	SMB_DATA/ I2C_SDA	I/O	+3.3V
11	SMB_CLK/ I2C_CLK	OUT	+3.3V
12	SMB_ALERT/ INT_SERIRQ	IN	+3.3V

## 2.4.22 Nano SIM Card Socket (CN23)

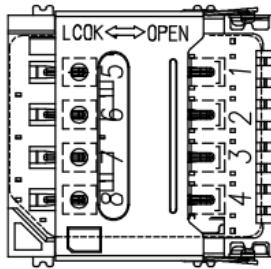


Pin	Pin Name	Signal Type	Signal Level
1	UIM_PWR	PWR	-
2	UIM_RST	IN	-
3	UIM_CLK	IN	-
4	N/A	N/A	-
5	GND	GND	GND
6	UIM_VPP	PWR	-
7	UIM_DATA	I/O	-
8	N/A	N/A	-

## 2.4.23 RTC Battery Connector (CN24)

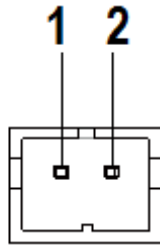

Pin	Pin Name	Signal Type	Signal Level
1	+3.3V	PWR	+3.3V
2	GND	GND	GND

## 2.4.24 4-Pin Fan Connector (CN26)

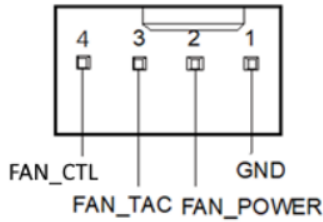


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	GND
2	FAN_POWER	PWR	+12V
3	FAN_TAC	IN	-
4	FAN_CTL	-	-

**Note:** The driving current of FAN\_POWER supports up to 1A.




## 2.4.25 RJ-45 LAN Port 1/Port 2 (CN27)

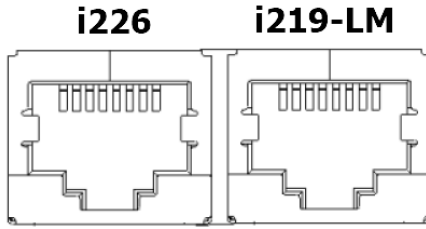


Pin	Pin Name	Signal Type	Signal Level
1P1	LAN2_MDI0_P	DIFF	-
1P2	LAN2_MDI0_N	DIFF	-
1P3	LAN2_MDI1_P	DIFF	-
1P4	LAN2_MDI1_N	DIFF	-
1P7	LAN2_MDI2_P	DIFF	-
1P8	LAN2_MDI2_N	DIFF	-
1P9	LAN2_MDI3_P	DIFF	-
1P10	LAN2_MDI3_N	DIFF	-
2P1	LAN1_MDI0_P	DIFF	-
2P2	LAN1_MDI0_N	DIFF	-
2P3	LAN1_MDI1_P	DIFF	-
2P4	LAN1_MDI1_N	DIFF	-
2P7	LAN1_MDI2_P	DIFF	-
2P8	LAN1_MDI2_N	DIFF	-
2P9	LAN1_MDI3_P	DIFF	-
2P10	LAN1_MDI3_N	DIFF	-

### 2.4.26 LAN Port 1 LED Connector (CN28)

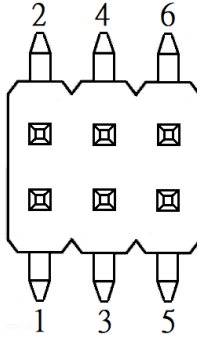

Pin	Pin Name	Signal Type	Signal Level
1	LINK1_ACT#	I/O	-
2	+V3P3A	PWR	+3.3V
3	LAN1_1000#	I/O	-
4	LAN1_100#	I/O	-
5	LAN1_100#	I/O	-
6	LAN1_1000#	I/O	-

### 2.4.27 USB 3.2/USB 2.0 Port 3 (CN29)

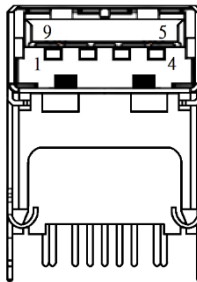


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB2_3_DN	DIFF	-
3	USB2_3_DP	DIFF	-

Pin	Pin Name	Signal Type	Signal Level
4	GND	GND	GND
5	USB3_3_RXN	DIFF	-
6	USB3_3_RXP	DIFF	-
7	GND	GND	GND
8	USB3_3_TXN	DIFF	-
9	USB3_3_TXP	DIFF	-

**Note:** The driving current of +5VSB supports up to 0.9A.

## 2.4.28 USB 3.2/USB 2.0 Port 1/Port 2 (CN30)

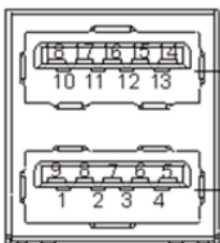


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB2_1_DN	DIFF	-
3	USB2_1_DP	DIFF	-
4	GND	GND	GND
5	USB3_1_RXN	DIFF	-
6	USB3_1_RXP	DIFF	-
7	GND	GND	GND
8	USB3_1_TXN	DIFF	-
9	USB3_1_TXP	DIFF	-
10	+5VSB	PWR	+5V
11	USB2_2_DN	DIFF	-
12	USB2_2_DP	DIFF	-
13	GND	GND	GND
14	USB3_2_RXN	DIFF	-

Pin	Pin Name	Signal Type	Signal Level
15	USB3_2_RXP	DIFF	-
16	GND	GND	GND
17	USB3_2_TXN	DIFF	-
18	USB3_2_TXP	DIFF	-

**Note:** The driving current of +5VSB supports up to 0.9A/Port.


### 2.4.29 DP Connector (CN31)

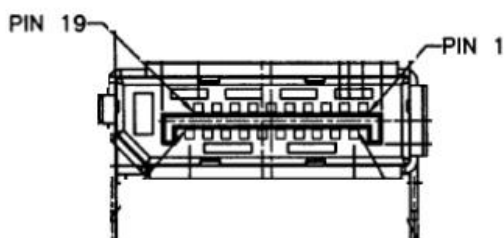

Pin	Pin Name	Signal Type	Signal Level
1	DP_TX0_DP	DIFF	-
2	GND	GND	GND
3	DP_TX0_DN	DIFF	-
4	DP_TX1_DP	DIFF	-
5	GND	GND	GND
6	DP_TX1_DN	DIFF	-
7	DP_TX2_DP	DIFF	-
8	GND	GND	GND
9	DP_TX2_DN	DIFF	-
10	DP_TX3_DP	DIFF	-
11	GND	GND	GND
12	DP_TX3_DN	DIFF	-
13	DP_OB_AUX_EN	IN	-
14	GND	GND	GND
15	DP_AUX_DP	I/O	-
16	GND	GND	GND

Pin	Pin Name	Signal Type	Signal Level
17	DP_AUX_DN	I/O	-
18	DP_HPD	I/O	-
19	GND	GND	GND
20	+3.3V	PWR	+3.3V


### 2.4.30 HDMI Connector (CN33)

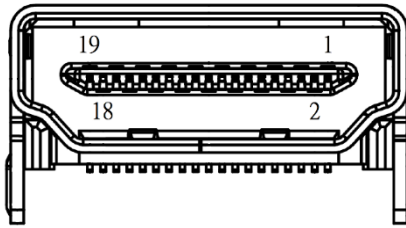

Pin	Pin Name	Signal Type	Signal Level
1	HDMI_TX2+	DIFF	-
2	GND	GND	GND
3	HDMI_TX2-	DIFF	-
4	HDMI_TX1+	DIFF	-
5	GND	GND	GND
6	HDMI_TX1-	DIFF	-
7	HDMI_TX0+	DIFF	-
8	GND	GND	GND
9	HDMI_TX0-	DIFF	-
10	HDMI_CLK+	DIFF	-
11	GND	GND	GND
12	HDMI_CLK-	DIFF	-
13	N/A	N/A	N/A
14	N/A	N/A	N/A
15	DDC_CLK	I/O	-
16	DDC_DATA	I/O	-
17	GND	GND	GND

Pin	Pin Name	Signal Type	Signal Level
18	+V5S	PWR	+5V
19	HDMI_HPD	IN	-

### 2.4.31 USB Type-C (CN34)

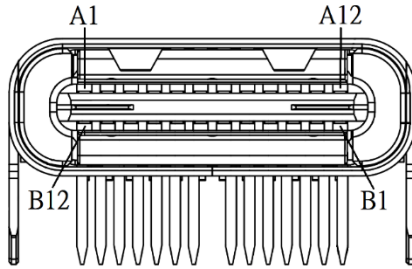

Pin	Pin Name	Signal Type	Signal Level
A1	GND	GND	GND
A2	TCP2_TX0_DP	DIFF	-
A3	TCP2_TX0_DN	DIFF	-
A4	+5VSB	PWR	+5V
A5	CONN_CC1	IN	-
A6	USB2_10_DP	DIFF	-
A7	USB2_10_DN	DIFF	-
A8	CONN_TYPEC1_SBU1	DIFF	-
A9	+5VSB	PWR	+5V
A10	TCP2_TXRX1_DN	DIFF	-
A11	TCP2_TXRX1_DP	DIFF	-
A12	GND	GND	GND
B1	GND	GND	GND
B2	TCP2_TX1_DP	DIFF	-
B3	TCP2_TX1_DN	DIFF	-
B4	+5VSB	PWR	+5V
B5	CONN_TYPEC1_CC2	IN	-
B6	USB2_10_DP	DIFF	-
B7	USB2_10_DN	DIFF	-

Pin	Pin Name	Signal Type	Signal Level
B8	CONN_TYPEC1_SBU2	DIFF	-
B9	+5VSB	PWR	+5V
B10	TCP2_TXRX0_DN	DIFF	-
B11	TCP2_TXRX0_DP	DIFF	-
B12	GND	GND	GND

**Note:** The driving current of +5VSB supports up to 3A.

### 2.4.32 FPC Connector (CN35)



Pin	Pin Name	Signal Type	Signal Level
1	+V3P3S	PWR	+3.3V
2	+V3P3S	PWR	+3.3V
3	+V3P3S	PWR	+3.3V
4	SMB_DATA	I/O	-
5	SMB_CLK	OUT	+3.3V
6	BUF_PLT_RST#	OUT	+3.3V
7	+V3P3A	PWR	+3.3V
8	GND	GND	GND
9	PCIE4_B_1_RXP	DIFF	-
10	PCIE4_B_1_RXN	DIFF	-
11	GND	GND	GND
12	PCIE4_B_3_RXP	DIFF	-
13	PCIE4_B_3_RXN	DIFF	-
14	GND	GND	GND
15	PCIE4_B_2_RXP	DIFF	-
16	PCIE4_B_2_RXN	DIFF	-
17	GND	GND	GND

Pin	Pin Name	Signal Type	Signal Level
18	PCIE4_B_0_RXP	DIFF	-
19	PCIE4_B_0_RXN	DIFF	-
20	GND	GND	GND
21	PCIE4_B_3_TXN	DIFF	-
22	PCIE4_B_3_TXP	DIFF	-
23	GND	GND	GND
24	PCIE4_B_2_TXN	DIFF	-
25	PCIE4_B_2_TXP	DIFF	-
26	GND	GND	GND
27	PCIE4_B_1_TXN	DIFF	-
28	PCIE4_B_1_TXP	DIFF	-
29	GND	GND	GND
30	PCIE_3_GEN4_CLK_DN	DIFF	-
31	PCIE_3_GEN4_CLK_DP	DIFF	-
32	GND	GND	GND
33	PCIE4_B_0_TXN	DIFF	-
34	PCIE4_B_0_TXP	DIFF	-
35	GND	GND	GND
36	+V12S	PWR	+12V
37	+V12S	PWR	+12V
38	+V12S	PWR	+12V
39	+V12S	PWR	+12V
40	+V12S	PWR	+12V


**Note:** The driving current of +V12S supports up to 2.1A.

**Note:** The driving current of +V3P3A supports up to 0.375A.

**Note:** The driving current of +V3P3S supports up to 3A.






### 2.4.33 LAN Port 2 LED Connector (CN36)

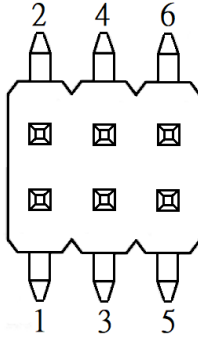

Pin	Pin Name	Signal Type	Signal Level
1	LINK2_ACT#	I/O	-
2	+V3P3A	PWR	+3.3V
3	LAN2_1000#	I/O	-
4	LAN2_2500#	I/O	-
5	LAN2_2500#	I/O	-
6	LAN2_1000#	I/O	-

## 2.5 Thermal Solutions


### 2.5.1 Active Cooling Fan - GENE-ADP6-FAN01

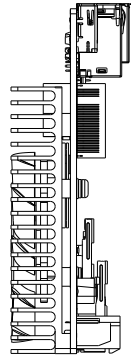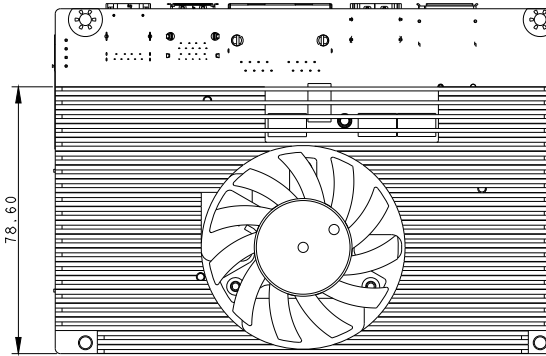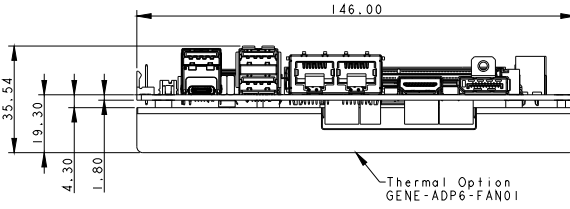




# GENE-ADP6-FAN01 Assembly

3.5" Subcompact Board


GENE-ADP6

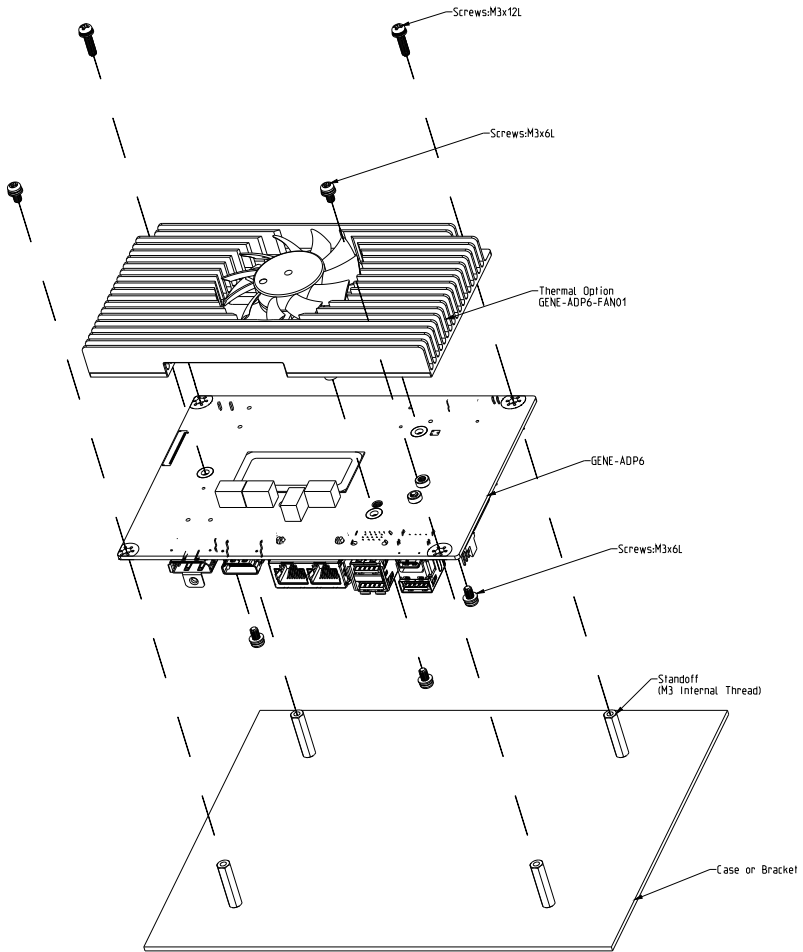




## 2.5.2 Heatspreader - GENE-ADP6-HSP01

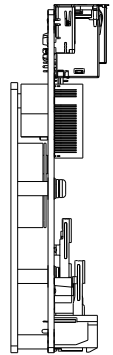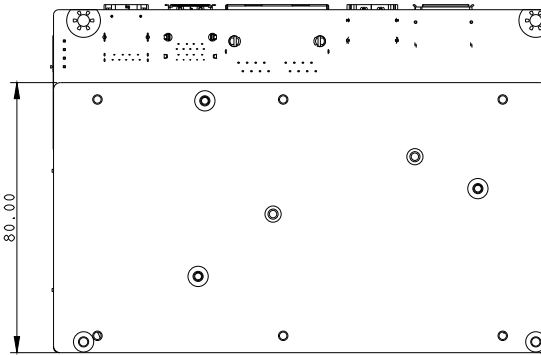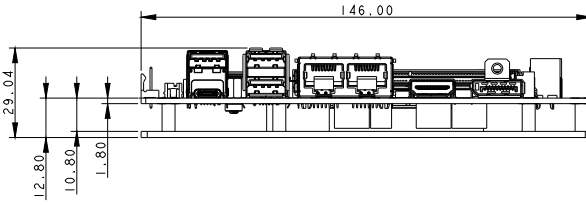

# GENE-ADP6-HSP01 Assembly

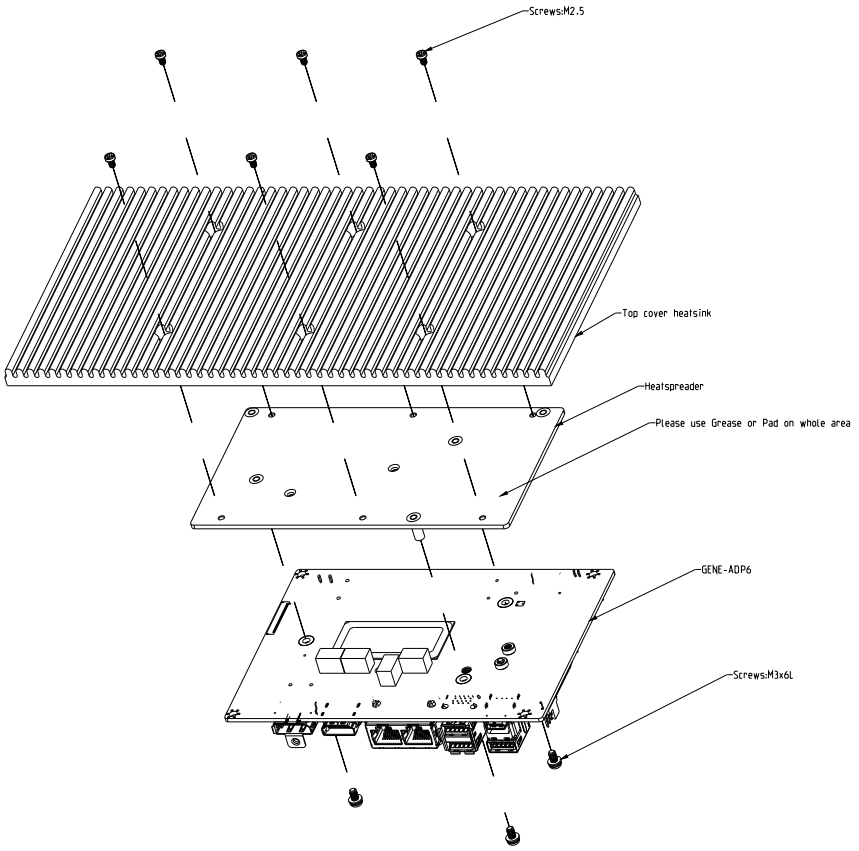


### 2.5.3 Heatsink -GENE-ADP6-HSK01

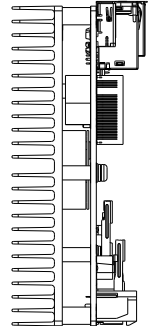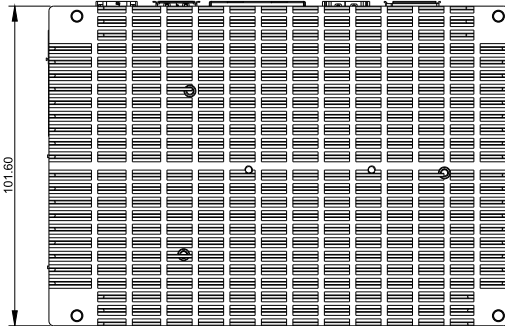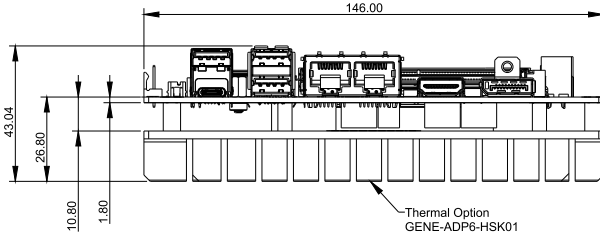

# GENE-ADP6-HSK01 Assembly

3.5" Subcompact Board

GENE-ADP6

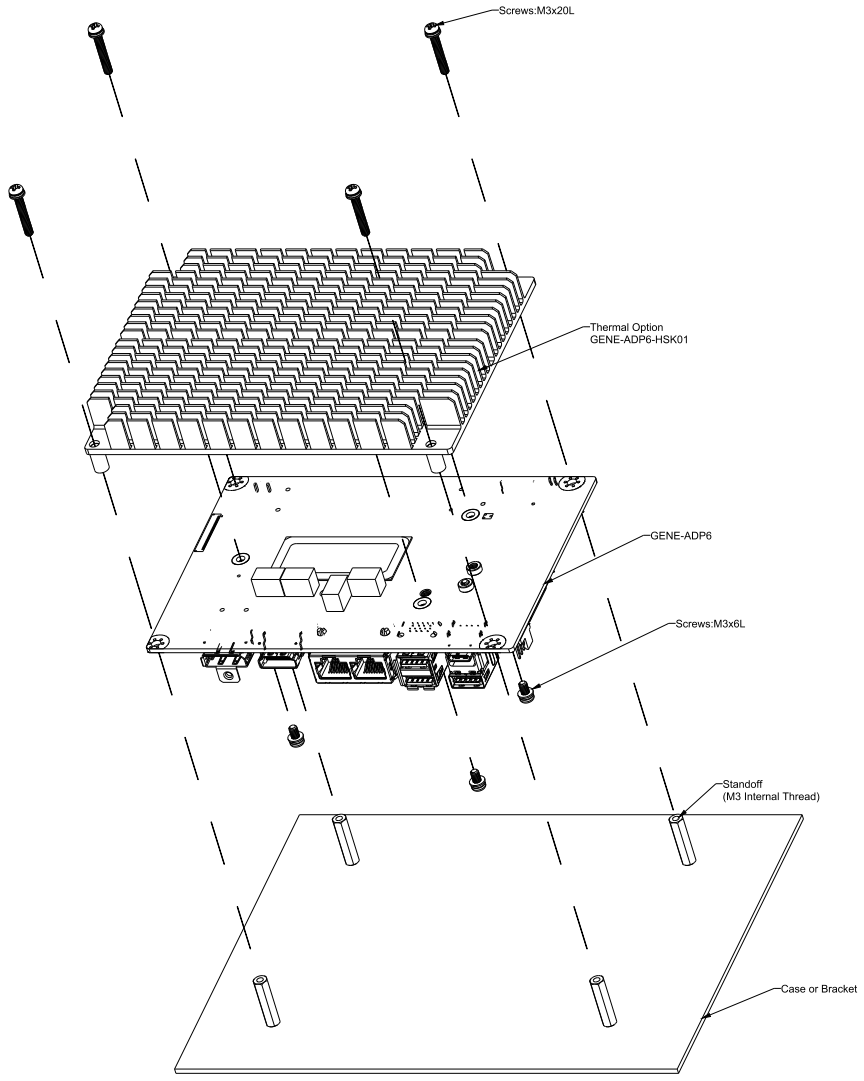

# Chapter 3

---

AMI BIOS Setup



## 3.1 System Test and Initialization

---

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

### System configuration verification

These routines check the current system configuration stored in the CMOS memory and BIOS NVRAM. If system configuration is not found or system configuration data error is detected, system will load optimized default and re-boot with this default system configuration automatically.

There are four situations in which you will need to setup system configuration:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The system configuration is reset by Clear-CMOS jumper
4. The CMOS memory has lost power and the configuration information has been erased.

The GENE-ADP6 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

## 3.2 AMI BIOS Setup

---

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM and BIOS NVRAM so that it retains the Setup information when the power is turned off.

### Entering Setup

Power on the computer and press <Del> or <ESC> immediately. This will allow you to enter Setup.

### Main

Set the date, use tab to switch between date elements.

### Advanced

Enable/disable boot option for legacy network devices.

### Chipset

Host bridge parameters.

### Security

Set setup administrator password.

### Boot

Enables/disables quiet boot option.


### Save & Exit

Exit system setup after saving the changes.


### Intel® AMT Configuration

Configure user content preferences.

### 3.3 Setup Submenu: Main

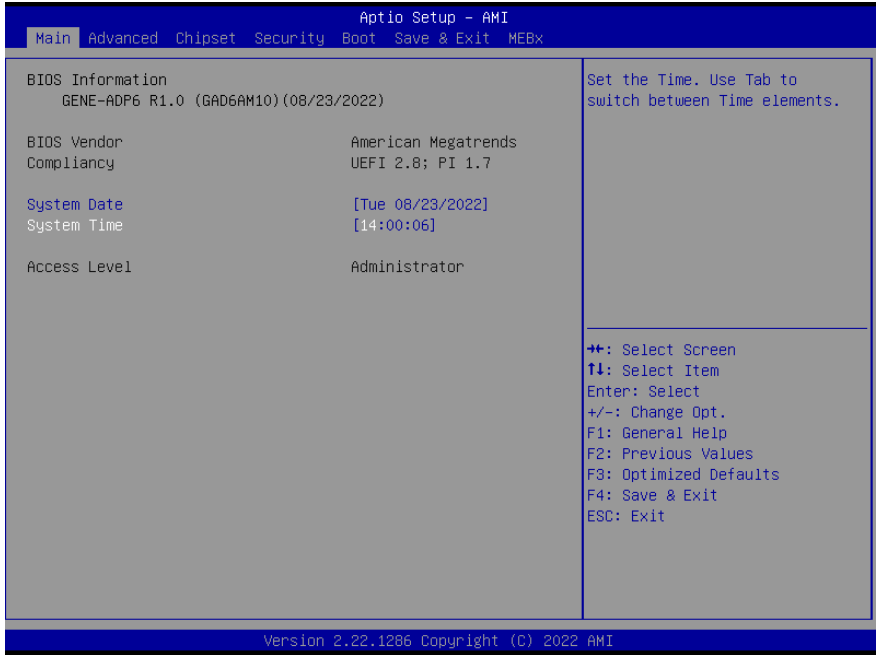

### 3.4 Setup Submenu: Advanced

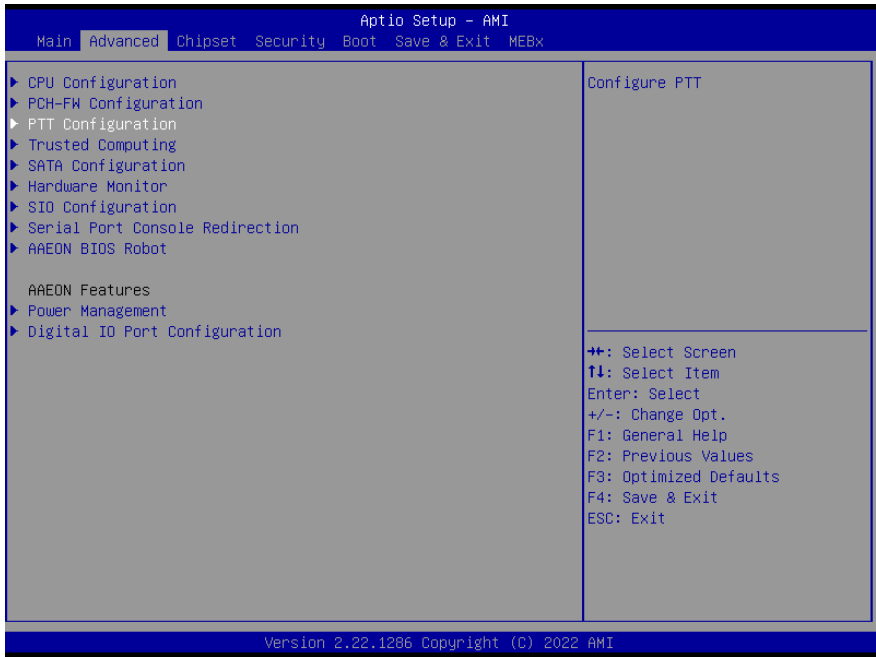

### 3.4.1 CPU Configuration

Aptio Setup - AMI

Advanced

CPU Configuration		When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Type	12th Gen Intel(R) Core(TM) i5-1245UE	
ID	0x906A4	
Microcode Revision	421	
Speed	1500 MHz	
VMX	Supported	
SMX/TXT	Supported	
L1 Data Cache	48 KB x 2	
L1 Instruction Cache	32 KB x 2	
L2 Cache	1280 KB x 2	
L3 Cache	12 MB	
Intel (VMX) Virtualization Technology	[Enabled]	
Hyper-Threading	[Enabled]	
Intel(R) SpeedStep(tm)	[Enabled]	
Turbo Mode	[Enabled]	
C states	[Enabled]	
		++: Select Screen T1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Version 2.22.1286 Copyright (C) 2022 AMI

Options Summary		
Intel (VMX) Virtualization Technology	Disabled	
	Enabled	Optimal Default, Failsafe Default
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.		
Hyper-Threading	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Hyper-Threading Technology.		
Intel® SpeedStep™	Disabled	
	Enabled	Optimal Default, Failsafe Default
Allows more than two frequency ranges to be supported.		
Turbo Mode	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable processor Turbo Mode (requires EMTTM enable too). AUTO means enabled.		

## Options Summary

C states	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100 utilized.		

### 3.4.2 PCH-FW Configuration


Aptio Setup - AMI

Advanced

ME Firmware Version	16.1.25.1865	Configure Management Engine Technology Parameters
ME Firmware Mode	Normal Mode	
ME Firmware SKU	Corporate SKU	
ME Firmware Status 1	0x90000255	
ME Firmware Status 2	0x3985810E	
▶ Firmware Update Configuration		
		++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit


Version 2.22.1286 Copyright (C) 2022 AMI

### 3.4.3 Firmware Update Configuration

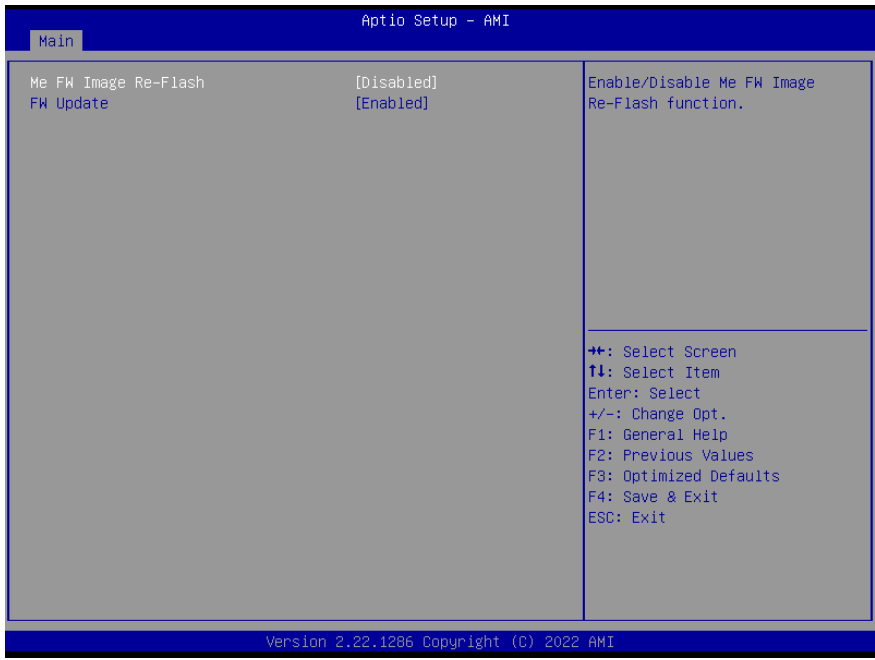

Options Summary		
Me FW Image Re-Flash	Enabled	
	Disabled	Optimal Default, Failsafe Default
Enable/Disable Me FW Image Re-Flash function.		
FW Update	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable ME FW Update function.		


### 3.4.4 PTT Configuration

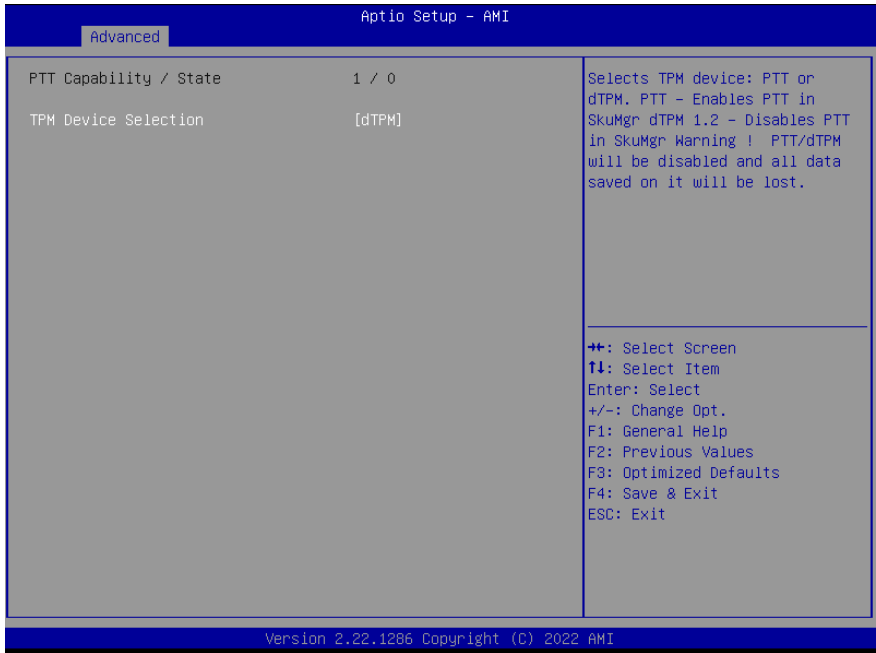

Options Summary		
TPM Device Selection	dTPM	Optimal Default, Failsafe Default
	PTT	
<p>Selects TPM device: PTT or discrete TPM.                      PTT - enables PTT in SkuMgr dTPM - disables PTT in SkuMgr.  <b>Warning:</b> PTT/dTPM will be disabled and all data saved on it will be lost.</p>		




### 3.4.5 Trusted Computing

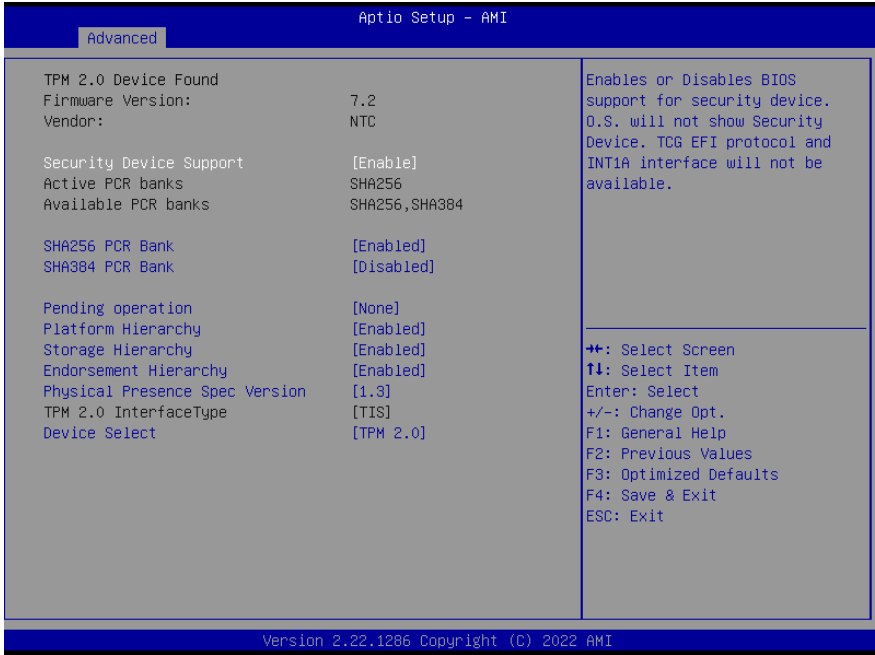

Options Summary		
Security Device Support	Enable	Optimal Default, Failsafe Default
	Disable	
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.		
SHA256 PCR Bank	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable SHA256 PCR Bank.		
SHA384 PCR Bank	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable SHA384 PCR Bank.		
Pending operation	None	Optimal Default, Failsafe Default
	TPM Clear	
Schedule an Operation for the Security Device. <b>NOTE:</b> Your Computer will reboot during restart in order to change State of Security Device.		


Options Summary		
Platform Hierarchy	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable Platform Hierarchy		
Storage Hierarchy	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable Storage Hierarchy		
Endorsement Hierarchy	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable Endorsement Hierarchy		
Physical Presence Spec Version	1.3	Optimal Default, Failsafe Default
	1.2	
Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3		
Device Select	Auto	
	TPM 1.2	
	TPM 2.0	Optimal Default, Failsafe Default
TPM 1.2 will restrict support to TPM 1.2 devices, TPM 2.0 will restrict support to TPM 2.0 devices, Auto will support both with the default set to TPM 2.0 devices if not found, TPM 1.2 devices will be enumerated.		

### 3.4.6 SATA Configuration

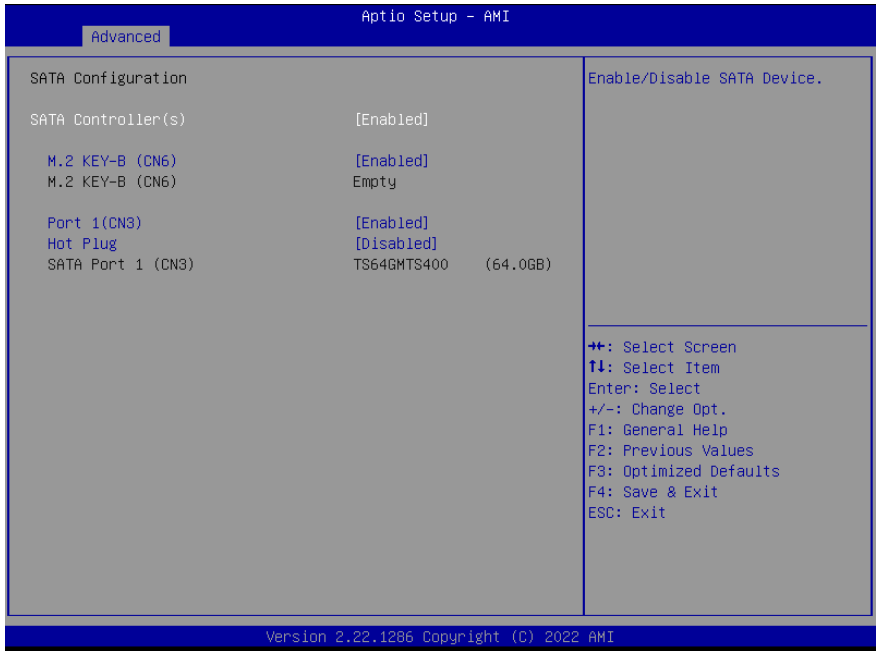


Options Summary		
SATA Controller(s)	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable SATA Device.		
M.2 KEY-B(CN6)	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable SATA Port.		
Port 1(CN3)	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable SATA Port.		
Hot Plug	Disabled	Optimal Default, Failsafe Default
	Enabled	
Designates this port as Hot Pluggable.		

### 3.4.7 Hardware Monitor

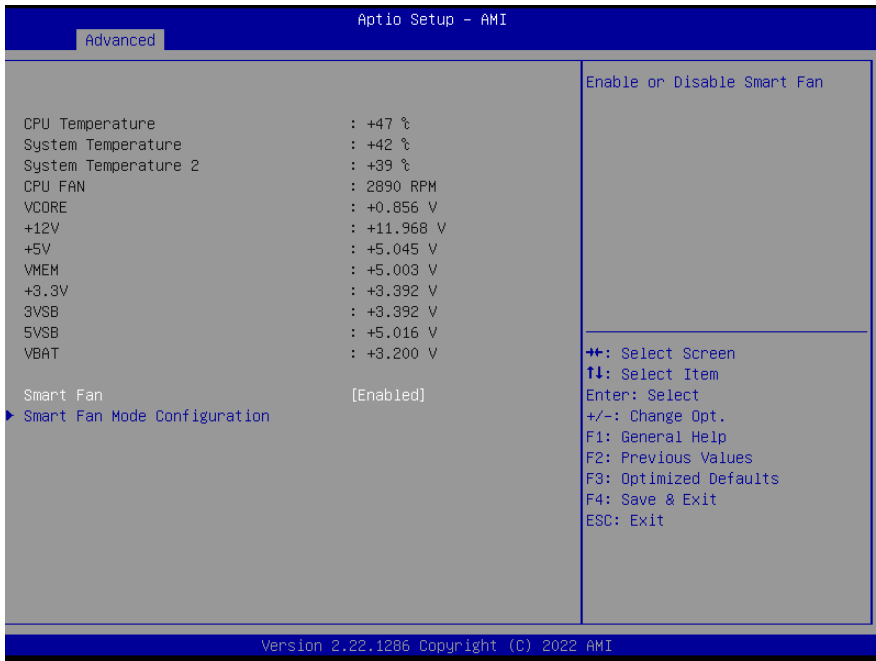

Options Summary		
Smart Fan	Disable	
	Enable	Optimal Default, Failsafe Default
Enables or Disables Smart Fan.		

### 3.4.7.1 Smart Fan Mode Configuration

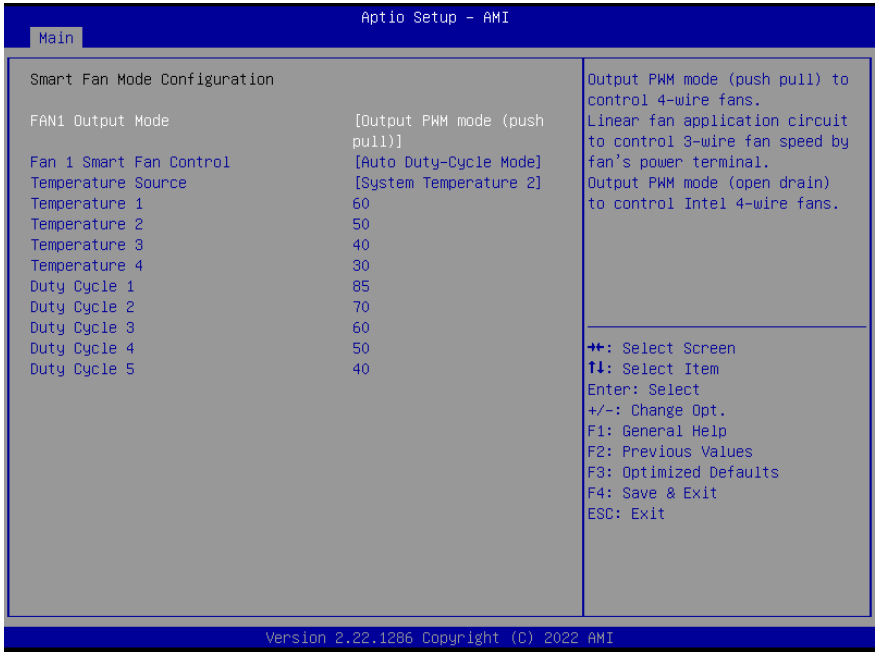

Options Summary		
FAN1 Output Mode	Output PWM mode (open drain)	
	Linear Fan Application	
	Output PWM mode (push pull)	Optimal Default, Failsafe Default
Fan 1 Smart Fan Control	Manual Duty Mode	
	Auto Duty-Cycle Mode	Optimal Default, Failsafe Default
Smart Fan Mode Select.		
Temperature Source	CPU Temperature	
	System Temperature	
	System Temperature 2	Optimal Default, Failsafe Default
Select the monitored temperature source for this fan.		
Temperature 1	60	
Duty Cycle 1	85	

## Options Summary


Auto fan speed control. Fan speed will follow different temperature by different duty cycle 1-100.

### 3.4.8 SIO Configuration

The screenshot shows the 'Advanced' tab of the 'Aptio Setup - AMI' BIOS. The main menu is titled 'Super IO Chip Logical Device(s) Configuration' and lists four serial ports, all marked as '[\*Active\*]'. A warning message is displayed below the list. On the right side, there is a help text box and a legend for navigation keys.


Aptio Setup - AMI	
Advanced	
AMI SIO Driver Version : A5.17.00  Super IO Chip Logical Device(s) Configuration ▶ [*Active*] Serial Port 1 ▶ [*Active*] Serial Port 2 ▶ [*Active*] Serial Port 3 ▶ [*Active*] Serial Port 4  WARNING: Logical Devices state on the left side of the control, reflects the current Logical Device state. Changes made during Setup Session will be shown after you restart the system.	View and Set Basic properties of the SIO Logical device. Like IO Base, IRQ Range, DMA Channel and Device Mode.  ⇐+: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.22.1286 Copyright (C) 2022 AMI	

### 3.4.8.1 Serial Port 1 Configuration

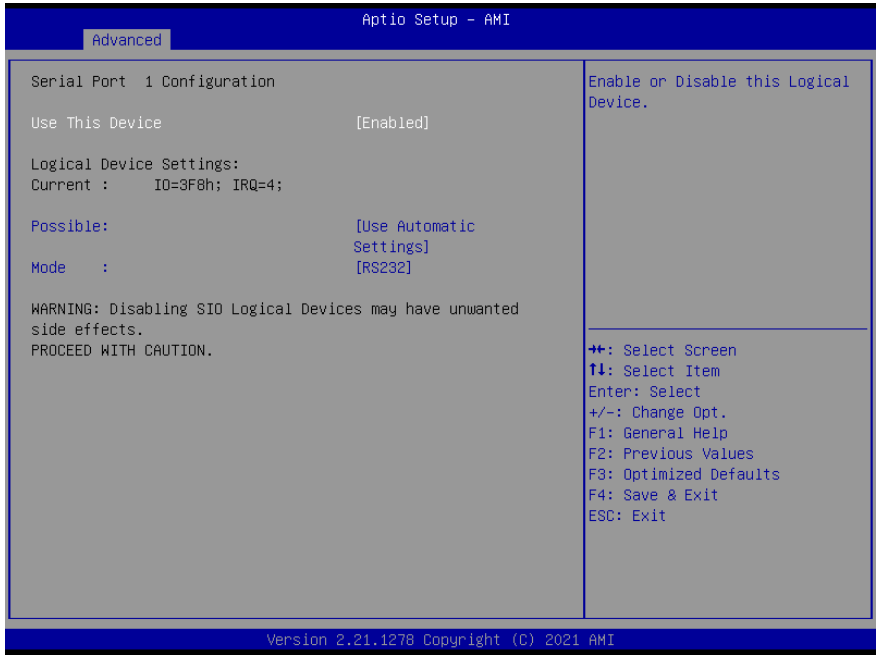

Options Summary		
Use This Device	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3F8h; IRQ=4	
	IO=2F8h; IRQ=3	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485 selection.		


### 3.4.8.2 Serial Port 2 Configuration

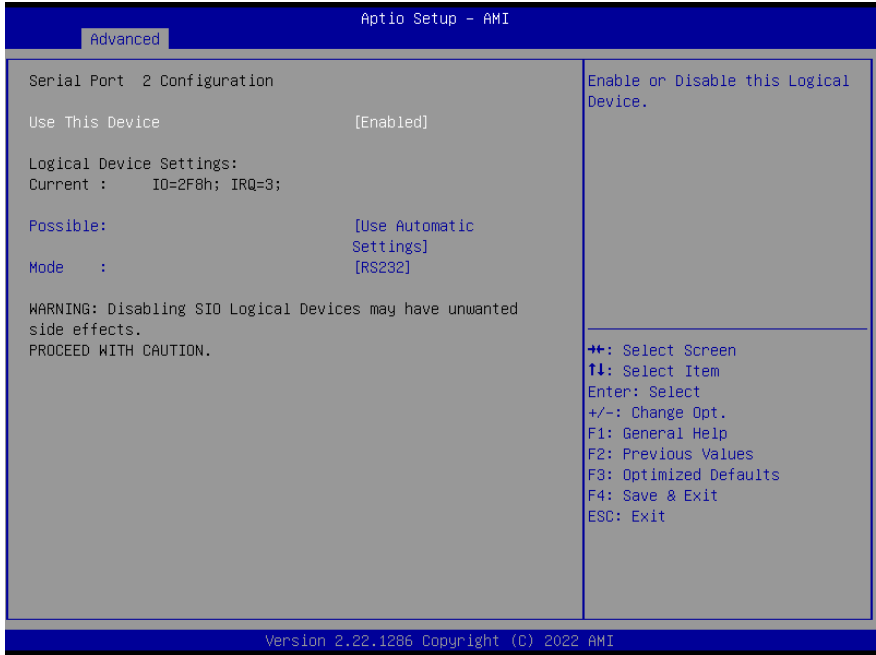

Options Summary		
Use This Device	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3F8h; IRQ=4	
	IO=2F8h; IRQ=3	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485 selection.		




### 3.4.8.3 Serial Port 3 Configuration

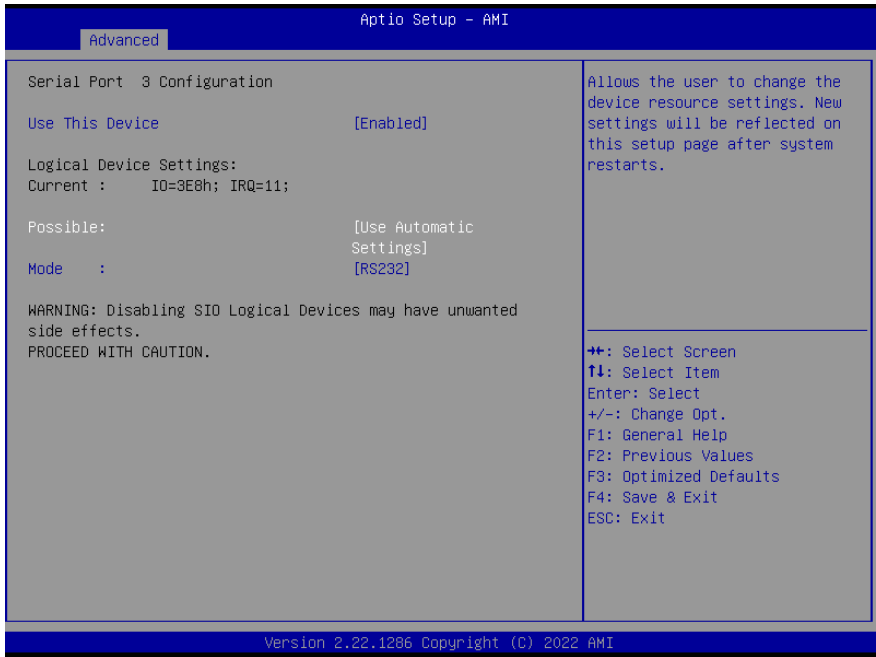


Options Summary		
Use This Device	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3E8h; IRQ=11	
	IO=2E8h; IRQ=11	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485 selection.		

### 3.4.8.4 Serial Port 4 Configuration

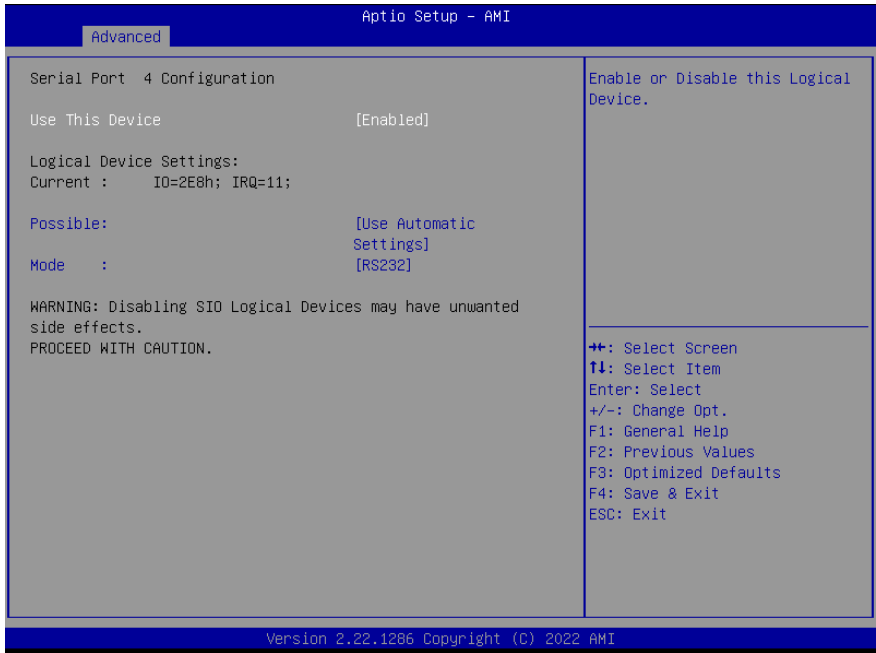


Options Summary		
Use This Device	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2E8h; IRQ=11	
	IO=3E8h; IRQ=11	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485 selection.		

### 3.4.9 Serial Port Console Redirection

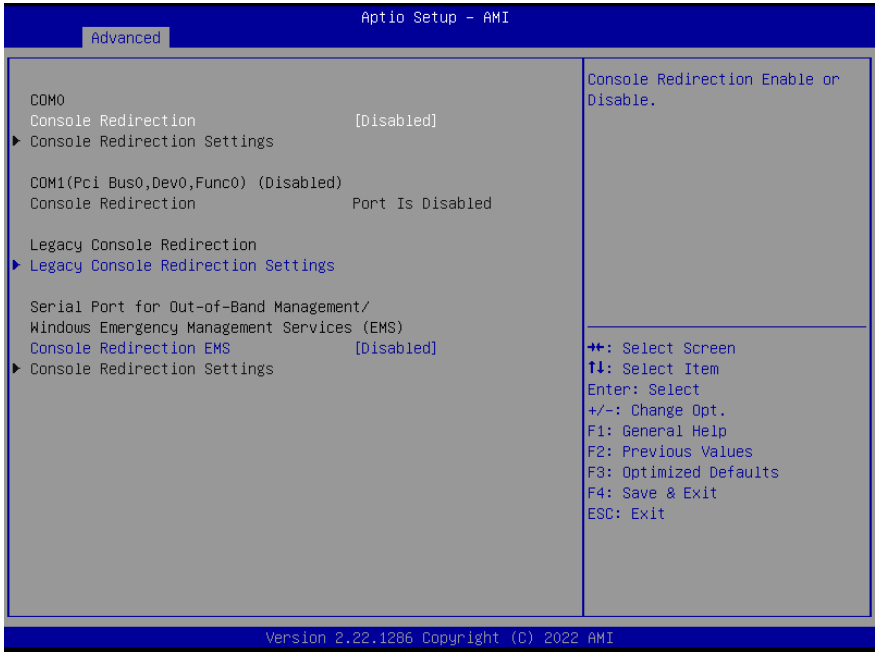


Options Summary		
Console Redirection	Disabled	Optimal Default, Failsafe Default
	Enabled	
Console Redirection Enable or Disable.		
Console Redirection EMS	Disabled	Optimal Default, Failsafe Default
	Enabled	
Console Redirection Enable or Disable.		

### 3.4.10 Legacy Console Redirection Settings

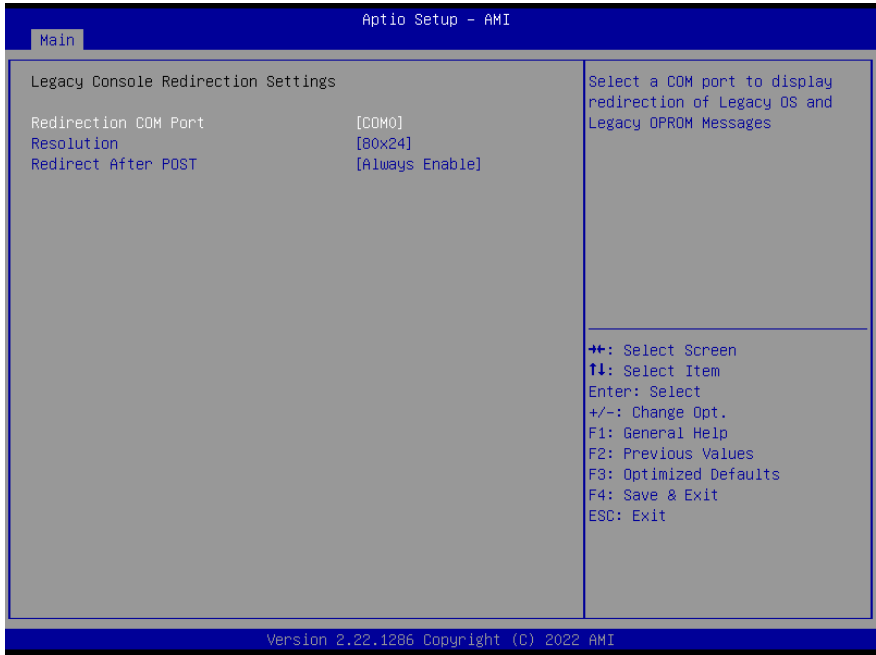

Options Summary		
Redirection COM Port	COM0	Optimal Default, Failsafe Default
	COM1(Pci Bus0, Dev0, Func0) (Disabled)	
Select a COM Port to display redirection of Legacy OS and Legacy OPRM message.		
Resolution	80x24	Optimal Default, Failsafe Default
	80x25	
On Legacy OS, the number of Rows and Columns supported redirection.		
Redirect After POST	Always Enable	Optimal Default, Failsafe Default
	BootLoader	
When Bootloader is selected, then Legacy Console Redirection is disabled before booting to legacy OS. When Always Enable is selected, then Legacy Console Redirection is enabled for legacy OS. Default setting for this option is set to Always Enable.		

### 3.4.11 AAEON BIOS Robot

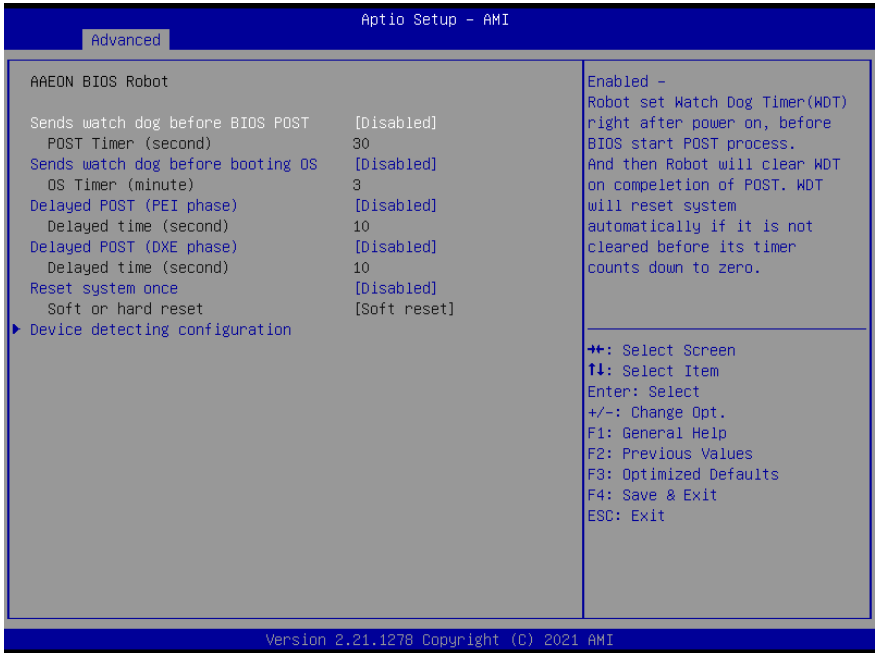

Options Summary		
Sends watch dog before BIOS POST	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled - Robot set Watch Dog Timer (WDT) right after power on, before BIOS start POST process. Then Robot will clear WDT on completion of POST. WDT will reset system automatically if it is not cleared before its timer counts down to zero.		
POST Timer (second)	30	Optimal Default, Failsafe Default
Timer count set to Watch Dog Timer for POST. WARNING: Do not set to a value equal or shorter than normal POST time, otherwise system may never complete POST unless clearing BIOS settings. More than 2x normal POST time is suggested.		
Sends watch dog before booting OS	Disabled	Optimal Default, Failsafe Default
	Enabled	

Options Summary		
Enabled - Robot set Watch Dog Timer (WDT) after POST completion, before BIOS transfer control to OS. <b>WARNING:</b> Before enabling this function, a program in OS must be in responsible for clearing WDT. Also, this function should be disabled if OS is going to update itself.		
OS Timer (minute)	3	Optimal Default, Failsafe Default
Timer count set to Watch Dog Timer for OS loading.		
Delayed POST (PEI phase)	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled - Robot holds BIOS from starting POST, right after power on. This allows BIOS POST to start with stable power or start after system is physically warmed-up. Note: Robot does this before 'Sends watch dog'.		
Delayed time (second)	10	Optimal Default, Failsafe Default
Period of time for Robot to hold BIOS from POST.		
Delayed POST (DXE phase)	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled - Robot holds BIOS before POST completion. This allows BIOS POST to start with stable power or start after system is physically warmed-up. Note: Robot does this after 'Sends watch dog before BIOS POST'.		
Delayed time (second)	10	Optimal Default, Failsafe Default
Period of time for Robot to hold BIOS from POST.		
Reset system once	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled - Robot resets system for one time on each boot. This will send a soft or hard reset to onboard devices, thus puts devices to more stable state.		
Soft or hard reset	Soft reset	Optimal Default, Failsafe Default
	Hard reset"	
Select reset type robot should send on each boot.		

### 3.4.12 Power Management



Options Summary		
Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select power supply mode.		
Restore AC Power Loss	Last State	Optimal Default, Failsafe Default
	Always On	
	Always Off	
Select power state when power is re-applied after a power failure.		
RTC wake system from S5	Disable	Optimal Default, Failsafe Default
	Fixed Time	
	Bypass	
Fixed Time: System will wake on the hr::min::sec specified. Bypass: BIOS will not control RTC wake function during system shutdown.		

### 3.4.13 GPIO Port Configuration



Options Summary		
GPIO Port*	Output	
	Input	
Set GPIO as Input or Output.		
Output Level	High	
	Low	
Set output level when GPIO pin is output.		



### 3.5 Setup Submenu: Chipset




### 3.5.1 System Agent (SA) Configuration




Options Summary		
VT-d	Disabled	Optimal Default, Failsafe Default
	Enabled	
VT-d capability.		

## 3.5.2 Memory Configuration

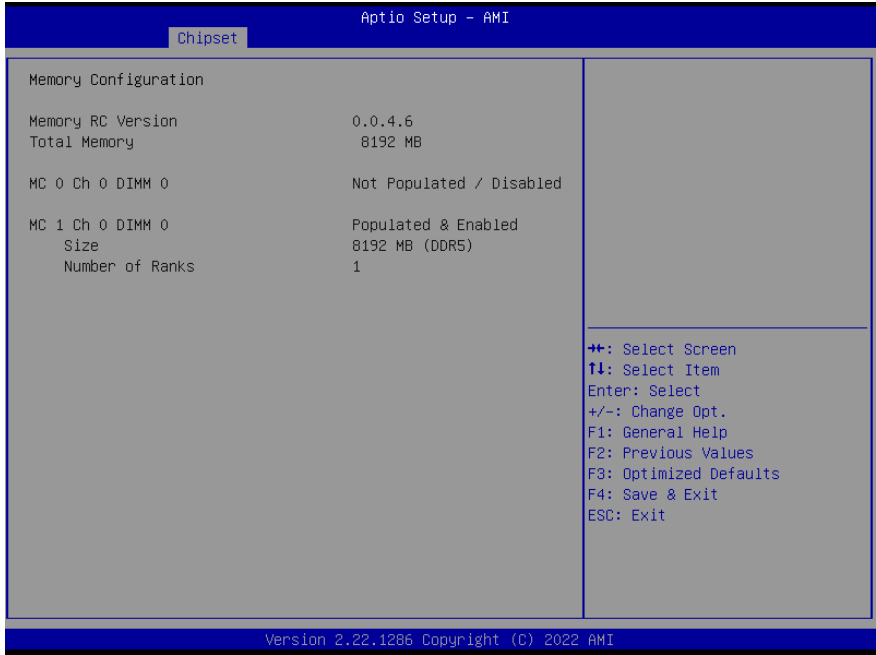


### 3.5.3 LVDS Panel Configuration

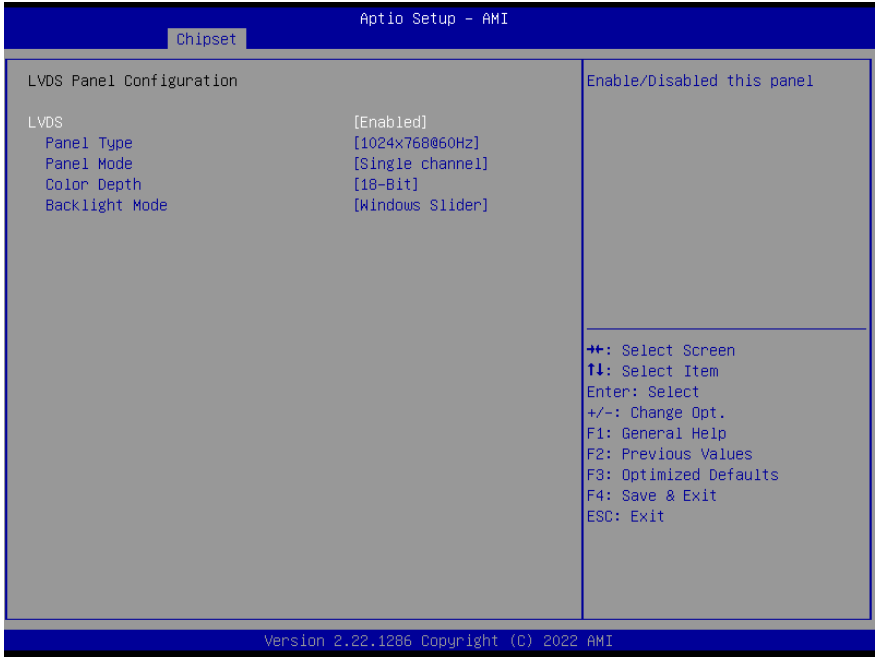

Options Summary		
LVDS	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disabled this panel.		
LVDS Panel Type	640x480,18bit,60Hz	
	800x480,18bit,60Hz	
	800x600,18bit,60Hz	
	1024x600,18bit,60Hz	
	1024x768,18bit,60Hz	
	1024x768,24bit,60Hz	Optimal Default, Failsafe Default
	1280x768,24bit,60Hz	
	1280x1024,48bit,60Hz	
	1366x768,24bit,60Hz	
	1440x900,48bit,60Hz	
	1600x1200,48bit,60Hz	
	1920x1080,48bit,60Hz	

Options Summary		
	1920x1200,48bit,60Hz	
Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item.		
<b>Panel Mode</b>	Single Channel	Optimal Default, Failsafe Default
	Dual Channel	
Panel mode selection for Single channel or Dual channel.		
<b>Color Depth</b>	18-bit	Optimal Default, Failsafe Default
	24-bit	
	36-bit	
	48-bit	
Select panel type.		
<b>Backlight Mode</b>	BIOS & Application	
	Windows Slider	Optimal Default, Failsafe Default
Select backlight control signal type.		

## 3.6 Setup Submenu: Security

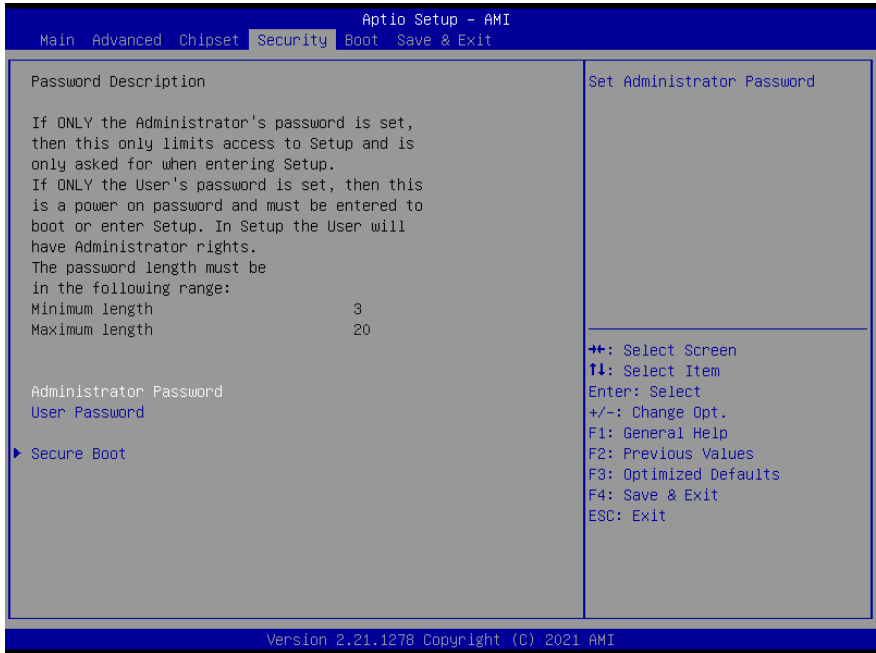

### Change User/Supervisor Password


You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

If you highlight these items and press Enter, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

### Removing the Password


Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

### 3.6.1 Secure Boot

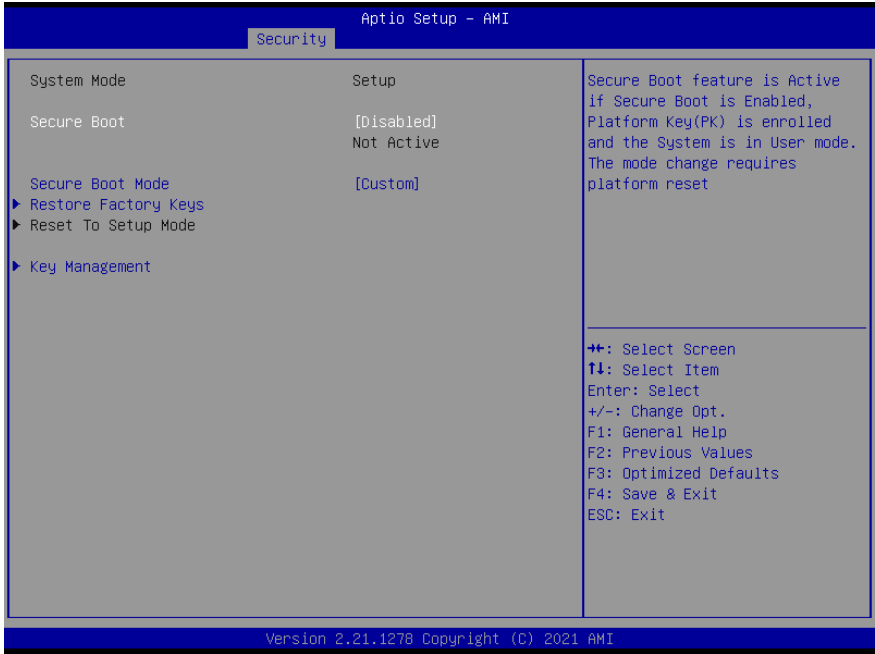

Options Summary		
Secure Boot	Disabled	Optimal Default, Failsafe Default
	Enabled	
Secure Boot feature is Active if Secure Boot is Enabled, Platform Key (PK) is enrolled and the System is in User mode. The mode change requires platform reset.		
Secure Boot Mode	Custom	Optimal Default, Failsafe Default
	Standard	
Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.		
<b>Restore Factory Keys</b>		
Force System to User Mode. Install factory default Secure Boot key databases.		
<b>Reset to Setup Mode</b>		
Delete all Secure Boot key databases from NVRAM.		

## 3.6.2 Key Management

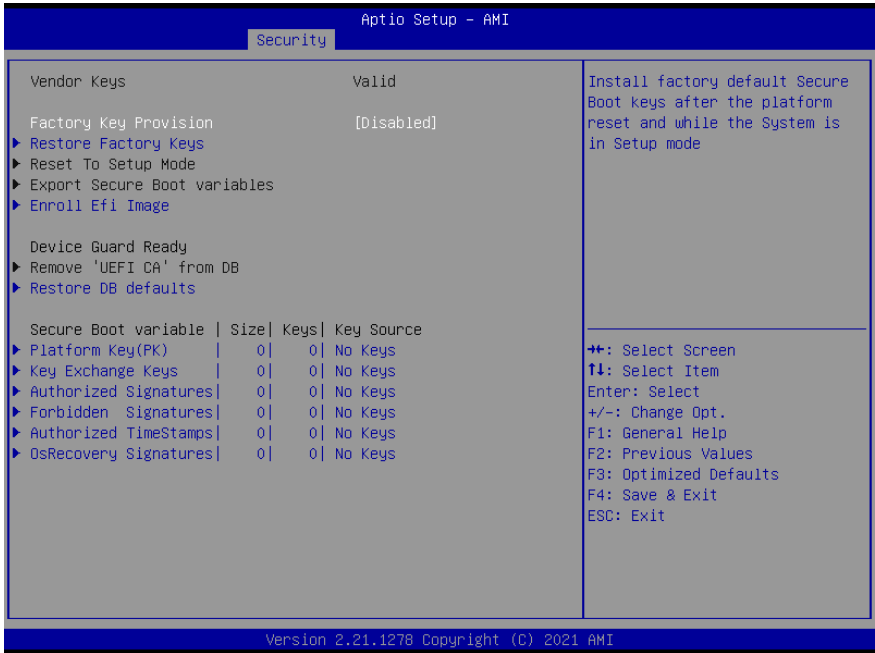

Options Summary		
Factory Key Provision	Disabled	Optimal Default, Failsafe Default
	Enabled	
Secure Boot feature is Active if Secure Boot is Enabled, Platform Key (PK) is enrolled and the System is in User mode. The mode change requires platform reset.		
<b>Restore Factory Keys</b>		
Force System to User Mode. Install factory default Secure Boot key databases.		
<b>Reset to Setup Mode</b>		
Delete all Secure Boot key databases from NVRAM.		
<b>Export Secure Boot variables</b>		
Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.		
<b>Enroll Efi Image</b>		
Allow the image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).		




Options Summary	
<b>Remove 'UEFI CA' from DB</b>	
Device Guard ready system must not list 'Microsoft UEFI CA' Certificate in Authorized Signature database (db).	
<b>Restore DB defaults</b>	
Restore DB variable to factory defaults.	
<b>Platform Key (PK)</b>	Details
	Export
	Update
	Delete
<b>Key Exchange Keys</b>	Details
	Export
	Update
	Append
	Delete
<b>Authorized Signatures</b>	Details
	Export
	Update
	Append
	Delete
<b>Forbidden Signatures</b>	Details
	Export
	Update
	Append
	Delete
<b>Authorized TimeStamps</b>	Update
	Append
<b>OsRecovery Signatures</b>	Update
	Append
Enroll Factory Defaults or load certificates from a file: <ol style="list-style-type: none"> <li>Public Key Certificate:               <ol style="list-style-type: none"> <li>EFI_SIGNATURE_LIST</li> <li>EFI_CERT_X509 (DER)</li> <li>EFI_CERT_RSA2048 (bin)</li> <li>EFI_CERT_SHAXXX</li> </ol> </li> <li>Authenticated UEFI Variable</li> <li>EFI PE/COFF Image (SHA256)</li> </ol> Key Source: Factory, External, Mixed.	

### 3.7 Setup Submenu: Boot




Options Summary		
Quiet Boot	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Quiet Boot option.		
UEFI PXE Support	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable UEFI Network Stack.		
FIXED BOOT ORDER Priorities		
Sets the system boot order.		

### 3.7.1 BBS Priorities

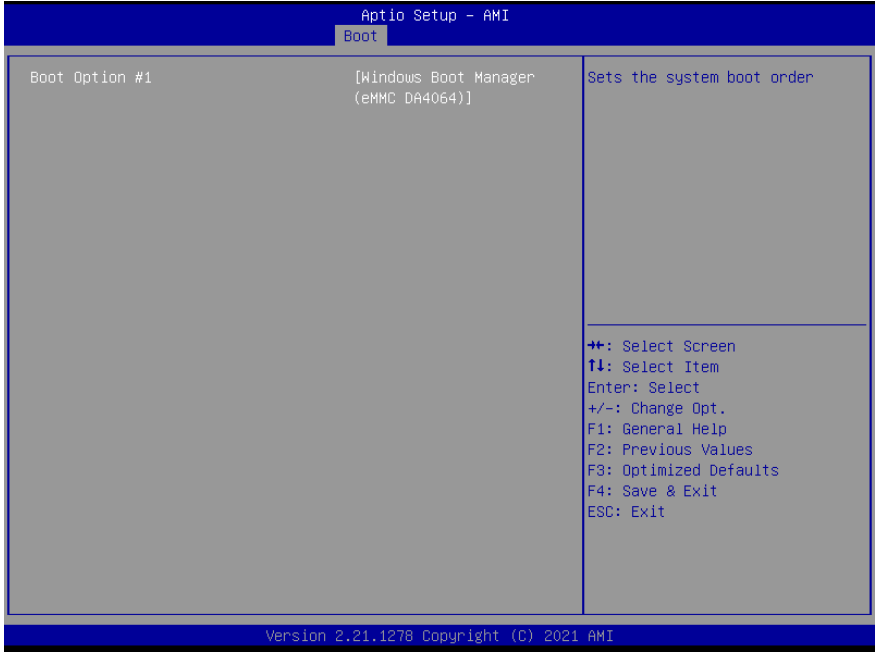

### 3.8 Setup Submenu: Save & Exit

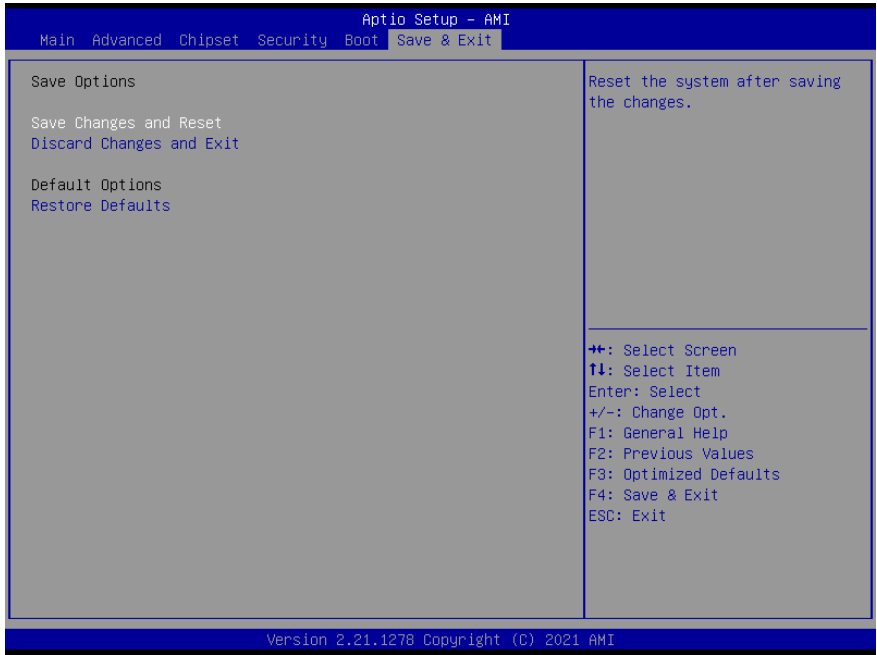


Options Summary	
Save Changes and Reset	Reset the system after saving the changes.
Discard Changes and Exit	Exit system setup without saving any changes.
Restore Defaults	Restore/Load Default values for all the setup options.

### 3.9 Setup Submenu: MEBx




### 3.9.1 Intel® AMT Configuration

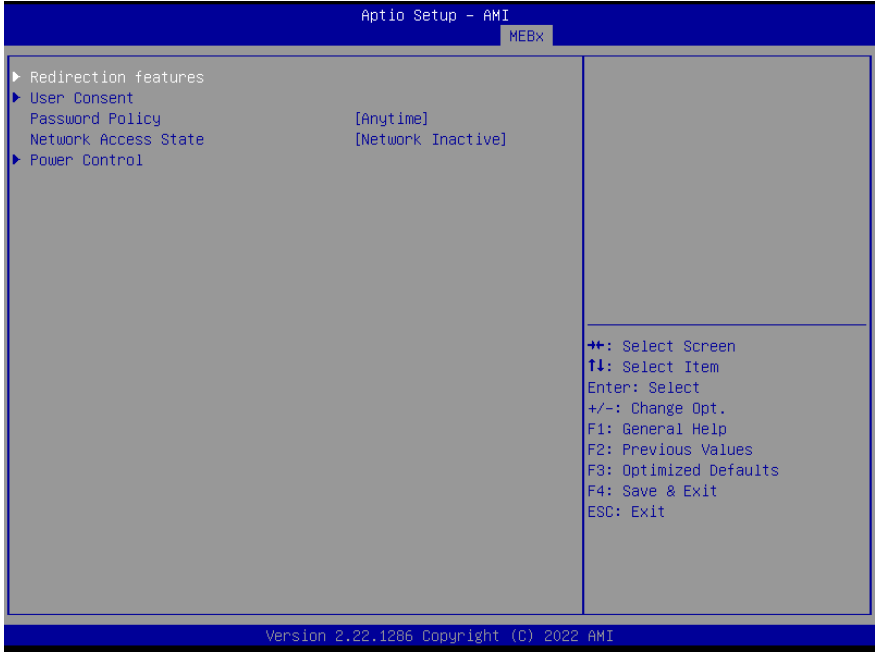


Options Summary		
Password Policy	Default Password Only	
	During Setup and Configuration	
	Anytime	Optimal Default, Failsafe Default
Network Access State	Network Active	
	Network Inactive	Optimal Default, Failsafe Default
	Full Unprovision	
Changes network state of ME. When disabling, it will also clear some other settings.		

### 3.9.2 Redirection features

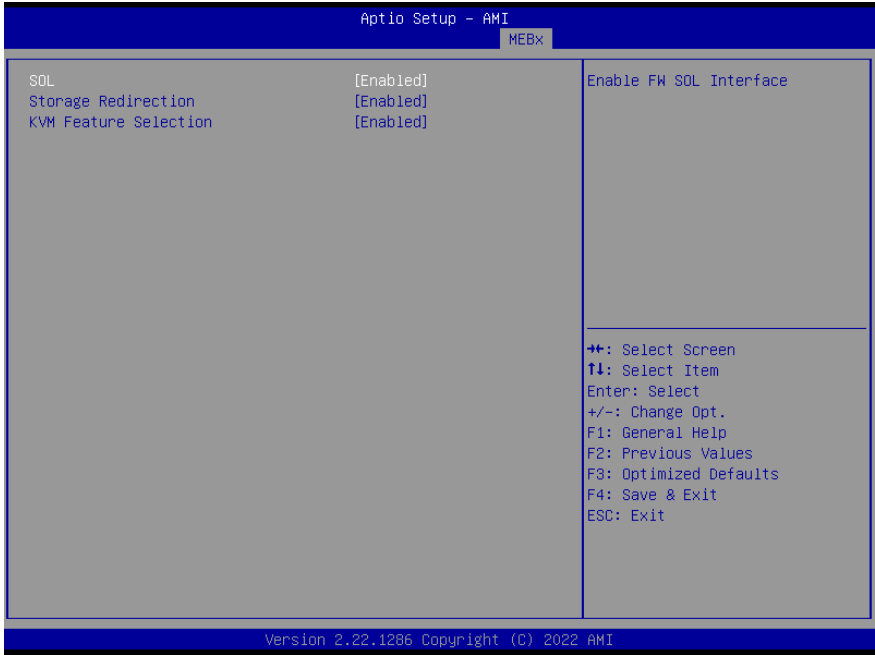

Options Summary		
SOL	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable FW SOL Interface.		
Storage Redirection	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable FW Remote – Storage Redirection.		
KVM Features Selection	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable FW KVM Feature.		


### 3.9.3 User Consent

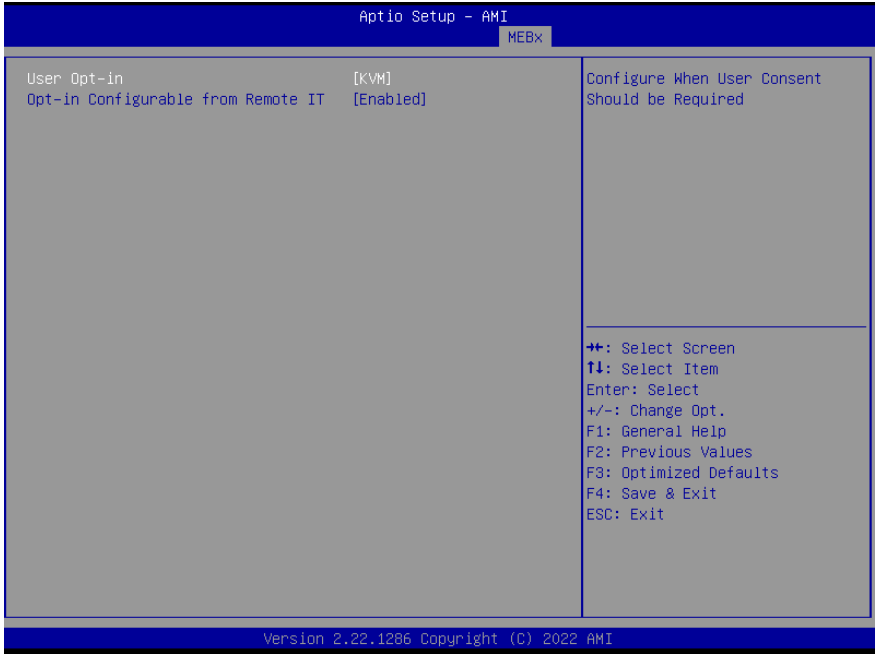

Options Summary		
User Opt-in	None	
	KVM	Optimal Default, Failsafe Default
	ALL	
Configure When User Consent Should be Required.		
Opt-in Configurable from Remote IT	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable Remote Change Capability of User Consent Feature.		



### 3.9.4 Power Control

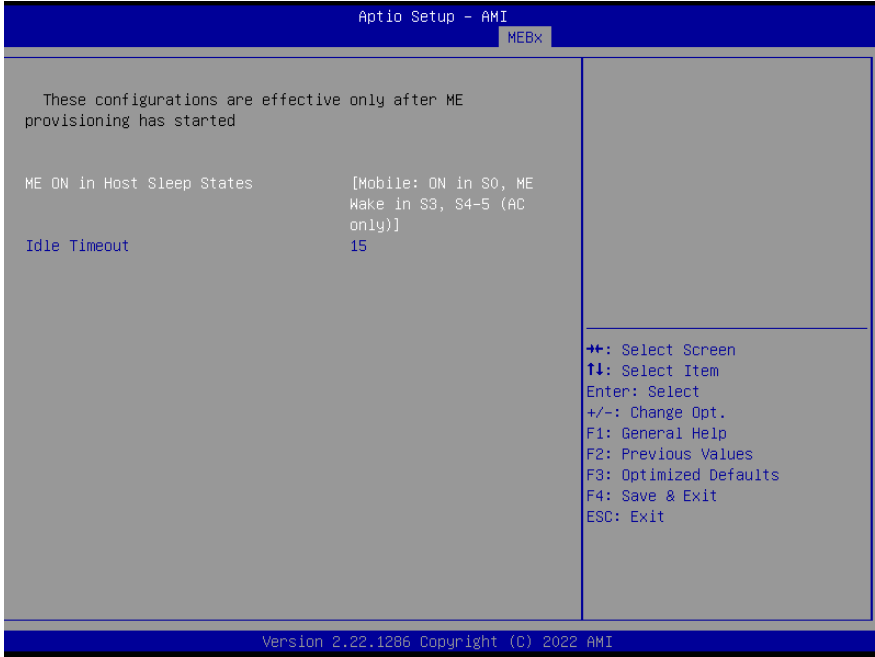

Options Summary		
ME ON in Host Sleep States	Mobile: ON in S0	Optimal Default, Failsafe Default
	Mobile: ON in S0, ME Wake in S3, S4-5(AC only)	
Idle Timeout	15	
Timeout Value (1-65536).		

# Chapter 4

---

Driver Installation

## 4.1 Driver Download/Installation

---

Drivers for the GENE-ADP6 can be downloaded from the product page on the AAEON website by following this link:

<https://www.aaeon.com/en/p/subcompact-boards-gene-adp6>

Download the driver(s) you need and follow the steps below to install them.

### Audio Driver (Windows 10)

1. Open the folder where you unzipped the **Audio Drivers**.
2. Run the **Setup.exe** in the folder.
3. Follow the instructions.
4. Drivers will be installed automatically.

### Chipset Driver (Windows 10/11)

1. Open the folder where you unzipped the **Chipset Drivers**.
2. Run the **SetupChipset.exe** file in the folder.
3. Follow the instructions.
4. Drivers will be installed automatically.

### Graphics Driver (Windows 10/11)

1. Open the folder where you unzipped the **Graphics Drivers**.
2. Run the **Installer.exe** file in the folder.
3. Follow the instructions.
4. Drivers will be installed automatically.
5. Refer to the ReadMe.txt for any assistance.

### LAN Drivers (Windows 10/11)

1. Open the folder where you unzipped the **LAN Drivers**.
2. Run the **Autorun.exe** file in the folder.
3. Follow the instructions.
4. Drivers will be installed automatically.

### Peripheral Driver (Windows 10/11)

1. Open the folder where you unzipped the **Peripheral Drivers**.
2. Run the **SetupSerialIO.exe** file in the folder.
3. Follow the instructions.
4. Drivers will be installed automatically.

### ME & TXE Drivers (Windows 10/11)

1. Open the folder where you unzipped the **ME & TXE Drivers**.
2. Run the **SetupME.exe** file in the folder.
3. Follow the instructions.
4. Drivers will be installed automatically.

### SST Drivers (Windows 10/11)

1. Open the folder where you unzipped the **SST Drivers**.
2. Follow the instructions contained within the user guides.















# Appendix A

---

I/O Information

## A.1 I/O Address Map

Input/output (IO)	
[0000000000000000 - 000000000000CF7]	PCI Express Root Complex
[0000000000000020 - 000000000000021]	Programmable interrupt controller
[0000000000000024 - 000000000000025]	Programmable interrupt controller
[0000000000000028 - 000000000000029]	Programmable interrupt controller
[000000000000002C - 00000000000002D]	Programmable interrupt controller
[000000000000002E - 00000000000002F]	Motherboard resources
[0000000000000030 - 000000000000031]	Programmable interrupt controller
[0000000000000034 - 000000000000035]	Programmable interrupt controller
[0000000000000038 - 000000000000039]	Programmable interrupt controller
[000000000000003C - 00000000000003D]	Programmable interrupt controller
[0000000000000040 - 000000000000043]	System timer
[000000000000004E - 00000000000004F]	Motherboard resources
[0000000000000050 - 000000000000053]	System timer
[0000000000000061 - 000000000000061]	Motherboard resources
[0000000000000063 - 000000000000063]	Motherboard resources
[0000000000000065 - 000000000000065]	Motherboard resources
[0000000000000067 - 000000000000067]	Motherboard resources
[0000000000000070 - 000000000000070]	Motherboard resources
[0000000000000080 - 000000000000080]	Motherboard resources
[0000000000000092 - 000000000000092]	Motherboard resources
[00000000000000A0 - 0000000000000A1]	Programmable interrupt controller
[00000000000000A4 - 0000000000000A5]	Programmable interrupt controller
[00000000000000A8 - 0000000000000A9]	Programmable interrupt controller
[00000000000000AC - 0000000000000AD]	Programmable interrupt controller
[00000000000000B0 - 0000000000000B1]	Programmable interrupt controller
[00000000000000B2 - 0000000000000B3]	Motherboard resources
[00000000000000B4 - 0000000000000B5]	Programmable interrupt controller
[00000000000000B8 - 0000000000000B9]	Programmable interrupt controller
[00000000000000BC - 0000000000000BD]	Programmable interrupt controller
[00000000000002E8 - 00000000000002EF]	Communications Port (COM4)
[00000000000002F8 - 00000000000002FF]	Communications Port (COM2)
[00000000000003E8 - 00000000000003EF]	Communications Port (COM3)
[00000000000003F8 - 00000000000003FF]	Communications Port (COM1)
[00000000000004D0 - 00000000000004D1]	Programmable interrupt controller
[0000000000000680 - 000000000000069F]	Motherboard resources
[0000000000000A00 - 0000000000000A0F]	Motherboard resources
[0000000000000A10 - 0000000000000A1F]	Motherboard resources
[0000000000000A20 - 0000000000000A2F]	Motherboard resources
[0000000000000D00 - 000000000000FFFF]	PCI Express Root Complex
[000000000000164E - 000000000000164F]	Motherboard resources




































	[000000000000680 - 00000000000069F] Motherboard resources
	[000000000000A00 - 000000000000A0F] Motherboard resources
	[000000000000A10 - 000000000000A1F] Motherboard resources
	[000000000000A20 - 000000000000A2F] Motherboard resources
	[000000000000D00 - 000000000000FFFF] PCI Express Root Complex
	[000000000000164E - 000000000000164F] Motherboard resources
	[0000000000001854 - 0000000000001857] Motherboard resources
	[0000000000002000 - 00000000000020FE] Motherboard resources
	[0000000000003000 - 000000000000303F] Intel(R) UHD Graphics
	[0000000000003060 - 000000000000307F] Standard SATA AHCI Controller
	[0000000000003080 - 0000000000003083] Standard SATA AHCI Controller
	[0000000000003090 - 0000000000003097] Standard SATA AHCI Controller
	[000000000000EFA0 - 000000000000EFBF] Intel(R) SMBus - 51A3
	[000000000000FF8 - 000000000000FFFF] Intel(R) Active Management Technology - SOL (COM5)

## A.2 Memory Address Map




































Memory	[00000000000A0000 - 0000000000BFFFFF]	PCI Express Root Complex
	[0000000050400000 - 00000000504FFFFF]	Intel(R) Ethernet Controller (3) I225-LM
	[0000000050400000 - 00000000505FFFFF]	Intel(R) PCI Express Root Port #8 - 51BF
	[0000000050400000 - 00000000BFFFFFFF]	PCI Express Root Complex
	[0000000050500000 - 0000000050503FFF]	Intel(R) Ethernet Controller (3) I225-LM
	[0000000050600000 - 000000005061FFFF]	Intel(R) Ethernet Connection (16) I219-LM
	[0000000050620000 - 0000000050621FFF]	Standard SATA AHCI Controller
	[0000000050622000 - 00000000506227FF]	Standard SATA AHCI Controller
	[0000000050623000 - 00000000506230FF]	Standard SATA AHCI Controller
	[00000000BFFFF000 - 00000000BFFFFFFF]	Intel(R) Active Management Technology - SOL (COM5)
	[00000000C0000000 - 00000000CFFFFFFF]	Motherboard resources
	[00000000FD690000 - 00000000FD69FFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1055
	[00000000FD6A0000 - 00000000FD6AFFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1055
	[00000000FD6D0000 - 00000000FD6DFFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1055
	[00000000FD6E0000 - 00000000FD6EFFFF]	Intel(R) Serial IO GPIO Host Controller - INTC1055
	[00000000FE010000 - 00000000FE010FFF]	Intel(R) SPI (flash) Controller - 51A4
	[00000000FED00000 - 00000000FED003FF]	High precision event timer
	[00000000FED20000 - 00000000FED7FFFF]	Motherboard resources
	[00000000FED40000 - 00000000FED44FFF]	Trusted Platform Module 2.0
	[00000000FED45000 - 00000000FED8FFFF]	Motherboard resources
	[00000000FED90000 - 00000000FED93FFF]	Motherboard resources
	[00000000FEDA0000 - 00000000FEDA0FFF]	Motherboard resources
	[00000000FEDA1000 - 00000000FEDA1FFF]	Motherboard resources
	[00000000FEDC0000 - 00000000FEDC7FFF]	Motherboard resources
	[00000000FEE00000 - 00000000FEEFFFFFFF]	Motherboard resources
	[0000004000000000 - 000000400FFFFFFF]	Intel(R) UHD Graphics
	[0000006000000000 - 0000006000FFFFFFF]	Intel(R) UHD Graphics
	[0000006001100000 - 000000600110FFFF]	Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft)
	[0000006001110000 - 000000600111FFFF]	Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft)
	[0000006001120000 - 0000006001127FFF]	Performance Monitor
	[0000006001130000 - 00000060011300FF]	Intel(R) SMBus - 51A3
	[0000007FFFEF8000 - 0000007FFFEF8FFF]	Intel(R) Serial IO I2C Host Controller - 51E8
	[0000007FFFEF9000 - 0000007FFFEF9FFF]	Intel(R) Serial IO I2C Host Controller - 51E9
	[0000007FFFEFA000 - 0000007FFFEFAFFF]	Intel(R) Serial IO I2C Host Controller - 51E8
	[0000007FFFEFB000 - 0000007FFFEFBFFF]	Intel(R) Management Engine Interface #1
	[0000007FFFEFC000 - 0000007FFFEFFFFF]	Intel® Smart Sound Technology BUS
	[0000007FFFEF0000 - 0000007FFFEFFFFF]	Intel® Smart Sound Technology BUS






































## A.3 IRQ Mapping Chart

▼  Interrupt request (IRQ)	
 (ISA) 0x00000000 (00)	System timer
 (ISA) 0x00000003 (03)	Communications Port (COM2)
 (ISA) 0x00000004 (04)	Communications Port (COM1)
 (ISA) 0x0000000B (11)	Communications Port (COM3)
 (ISA) 0x0000000B (11)	Communications Port (COM4)
 (ISA) 0x0000000E (14)	Intel(R) Serial IO GPIO Host Controller - INTC1055
 (ISA) 0x00000029 (41)	Trusted Platform Module 2.0
 (ISA) 0x00000037 (55)	Microsoft ACPI-Compliant System
 (ISA) 0x00000038 (56)	Microsoft ACPI-Compliant System
 (ISA) 0x00000039 (57)	Microsoft ACPI-Compliant System
 (ISA) 0x0000003A (58)	Microsoft ACPI-Compliant System
 (ISA) 0x0000003B (59)	Microsoft ACPI-Compliant System
 (ISA) 0x0000003C (60)	Microsoft ACPI-Compliant System
 (ISA) 0x0000003D (61)	Microsoft ACPI-Compliant System
 (ISA) 0x0000003E (62)	Microsoft ACPI-Compliant System
 (ISA) 0x0000003F (63)	Microsoft ACPI-Compliant System
 (ISA) 0x00000040 (64)	Microsoft ACPI-Compliant System
 (ISA) 0x00000041 (65)	Microsoft ACPI-Compliant System
 (ISA) 0x00000042 (66)	Microsoft ACPI-Compliant System
 (ISA) 0x00000043 (67)	Microsoft ACPI-Compliant System
 (ISA) 0x00000044 (68)	Microsoft ACPI-Compliant System
 (ISA) 0x00000045 (69)	Microsoft ACPI-Compliant System
 (ISA) 0x00000046 (70)	Microsoft ACPI-Compliant System
 (ISA) 0x00000047 (71)	Microsoft ACPI-Compliant System
 (ISA) 0x00000048 (72)	Microsoft ACPI-Compliant System
 (ISA) 0x00000049 (73)	Microsoft ACPI-Compliant System
 (ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System
 (ISA) 0x0000004B (75)	Microsoft ACPI-Compliant System
 (ISA) 0x0000004C (76)	Microsoft ACPI-Compliant System
 (ISA) 0x0000004D (77)	Microsoft ACPI-Compliant System
 (ISA) 0x0000004E (78)	Microsoft ACPI-Compliant System
 (ISA) 0x0000004F (79)	Microsoft ACPI-Compliant System
 (ISA) 0x00000050 (80)	Microsoft ACPI-Compliant System
 (ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System

---

 (ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
 (ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
 (ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
 (ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
 (ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
 (ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
 (ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
 (ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
 (ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
 (ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
 (ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
 (ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
 (ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
 (ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
 (ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
 (ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
 (ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
 (ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
 (ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
 (ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
 (ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
 (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
 (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System

---

 (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
 (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
 (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
 (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
 (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
 (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
 (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
 (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
 (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
 (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
 (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
 (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
 (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
 (ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
 (ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
 (ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
 (ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
 (ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
 (ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
 (ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
 (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
 (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
 (ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System

# Appendix B

---

Mating Connectors and Cables

## B.1 Mating Connectors and Cables

Connector Label	Function	Mating Connector		Cable P/N
		Vendor	Model no	
CN1	SATA Power	JST	PHR-2	1702150155
CN2	SATA	Molex	887505318	N/A
CN4	Power	N/A	N/A	170204010R
CN5	Audio with detect	ACES	50247-012H0H0-001	170X000156
CN9	Front Panel	ACES	50247-010H0H0-001	1709100108
CN11	COM Port 3/4	JST	SHDR-20V-S-B	170X000231
CN12	COM Port 1/2	JST	SHDR-20V-S-B	170X000231
CN13	USB Port 1/2	ACES	50247-010H0H0-001	170010010D
CN14	GPIO	MOLEX	51110-1050	N/A
CN15	USB Port 3/4	ACES	50247-010H0H0-001	170010010D
CN17	LVDS Inverter	JST	SHR-06V-S-B	170X000152
CN20	eDP	KEL	SSL20-30S	N/A
CN21	LVDS	Hirose	DF13-30DS-1.25C	170430030Y
CN22	I2C/SMBUS/Debug	JST	SHR-12V-S-B	1703120130
CN24	External RTC	Molex	51021-0200	175011301K
CN26	CPU FAN	Molex	47054-1000	N/A
CN28	LAN1 LED	Samtec	SFMC-103-01-L-D	N/A
CN35	FPC	N/A	N/A	170X000367
CN36	LAN2 LED	Samtec	SFMC-103-01-L-D	N/A