

GENE-BT06

3.5" Subcompact Board

User's Manual 8th Ed

Copyright Notice

This document is copyrighted, 2022. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgements

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel®, Pentium®, Celeron®, and Xeon® are registered trademarks of Intel Corporation
- Intel Core™ and Intel Atom™ are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● GENE-BT06 MB	1
● Heatspreader	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
<p>○: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限, 系指在一般正常使用状况下。</p>						

China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products

AAEON Main Board/ Daughter Board/ Backplane

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	X	○	○	○	○	○
Wires & Connectors for External Connections	X	○	○	○	○	○
<p>O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.</p> <p>X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.</p> <p>Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only</p>						

Table of Contents

Chapter 1 – Product Specifications	1
1.1 Specifications	2
1.2 Function Block Diagram	6
Chapter 2 – Hardware Information	7
2.1 Dimensions	8
2.2 Jumpers and Connectors.....	12
2.3 Assembly Options	16
2.4 List of Jumpers	18
2.4.1 COM3 Pin8 Function Selection (JP1)	18
2.4.2 COM2 Pin8 Function Selection (JP2).....	18
2.4.3 LVDS Port Operating VDD Selection (JP3).....	19
2.4.4 LVDS Port Backlight Inverter VCC Selection (JP4)	19
2.4.5 LVDS Port Backlight Lightness Control Mode Selection (JP5).....	19
2.4.6 Auto Power Button Enable/ Disable Selection (JP6)	19
2.4.7 Front Panel Connector (JP7).....	20
2.4.8 Clear CMOS Jumper (JP8)	20
2.4.9 Touch Screen 4,5,8 Wire Selection (JP9).....	20
2.5 List of Connectors.....	21
2.5.1 Amplifier R-Channel Output (CN1).....	22
2.5.2 Amplifier L-Channel Output (CN2).....	22
2.5.3 +5VSB Output w/ SMBus (CN3).....	23
2.5.4 Digital I/O Port (CN4).....	23
2.5.5 External +5VSB Input (CN5).....	24
2.5.6 +5V Output for SATA HDD (CN6).....	25
2.5.7 SATA Port 1 (CN7)	25
2.5.8 External Power Input (CN8).....	26

2.5.9	Audio I/O Port (CN9).....	26
2.5.10	COM Port 4 (CN10).....	27
2.5.11	LCP Port (CN11).....	28
2.5.12	COM Port 3 (CN12).....	29
2.5.13	UIM Card Socket (CN13).....	31
2.5.14	Mini Card Slot (Half-Size Card) (CN14).....	32
2.5.15	COM Port 2 (CN15).....	34
2.5.16	SPI Debug Port (CN16).....	36
2.5.17	Mini Card Slot (Full-Size Card) (CN17).....	37
2.5.18	USB 2.0 Port 3 (CN18).....	39
2.5.19	USB 2.0 Port 2 (CN19).....	40
2.5.20	LVDS Port (CN21).....	40
2.5.21	PS/2 Keyboard/ Mouse Combo Port (CN22).....	42
2.5.22	Touch Screen Connector (CN23).....	43
2.5.23	LVDS Port Inverter/ Backlight Connector (CN24).....	45
2.5.24	CPU Fan (CN25).....	45
2.5.25	LAN (RJ-45) Port 2 (CN26).....	46
2.5.26	LAN (RJ-45) Port 1 (CN27).....	46
2.5.27	USB Port 0 and Port 1 (CN28).....	47
2.5.28	DP Port (CN29).....	48
2.5.29	COM Port 1 (D-SUB 9) (CN30).....	49
2.5.30	HDMI Port (CN31).....	49
2.5.31	Battery (CN32).....	50
2.5.32	VGA Port (CN33).....	51
Chapter 3 - AMI BIOS Setup		52
3.1	System Test and Initialization	53
3.2	AMI BIOS Setup	54
3.3	Setup submenu: Main	55

3.4	Setup submenu: Advanced	56
3.4.1	Advanced: Power Management	57
3.4.1.1	Power Management: S5 RTC Wake Settings	59
3.4.2	Advanced: Super IO Configuration	61
3.4.2.1	Super IO Configuration: Serial Port 1 Configuration	62
3.4.2.2	Super IO Configuration: Serial Port 2 Configuration	63
3.4.2.3	Super IO Configuration: Serial Port 3 Configuration	64
3.4.2.4	Super IO Configuration: Serial Port 4 Configuration	65
3.4.2.5	Super IO Configuration: Smart Fan Function	68
3.4.2.6	Super IO Configuration: Smart Fan Mode Configuration	69
3.4.3	Advanced: Digital IO	70
3.4.4	Advanced: H/W Monitor	71
3.4.4	Advanced: CPU Configuration	72
3.4.4.1	CPU Configuration: Socket 0 CPU Information	73
3.4.5	Advanced: IDE Configuration	74
3.4.6	Advanced: CSM Configuration	76
3.4.7	Advanced: Trusted Computing	77
3.4.8	Advanced: USB Configuration	78
3.4.9	Advanced: Touch Device	80
3.5	Setup submenu: Chipset	81
3.5.1	Chipset: Host Bridge	82
3.5.1.1	Host Bridge: IGD - LCD Control	83
3.5.2	Chipset: South Bridge	85
3.5.2.1	South Bridge: Azalia HD Audio	86
3.5.2.2	South Bridge: USB Configuration	88
3.5.2.3	South Bridge: PCI Express Configuration	90
3.6	Setup submenu: Security	91
3.7	Setup submenu: Boot	93

3.8	Setup submenu: Exit	94
Chapter 4 – Drivers Installation.....		95
4.1	Driver Download/Installation	96
Appendix A – Mating Connectors		106
A.1	List of Mating Connectors and Cables.....	107
Appendix B – Electrical Specifications for I/O Ports		109
B.1	Electrical Specifications for I/O Ports.....	110

Chapter 1

Product Specifications

1.1 Specifications

System

FORM FACTOR	3.5" SubCompact Board
CPU	Intel® Atom™/ Celeron® Processor: Celeron® J1900 (4C/4T, 2.00GHz, up to 2.42GHz) Celeron® N2930 (4C/4T, 1.83GHz, up to 2.16GHz) Celeron® N2807 (2C/2T, 1.58GHz, up to 2.16GHz) Atom™ E3845 (4C/4T, 1.91 GHz) Atom™ E3825 (2C/2T, 1.33 GHz)
CPU TDP	Celeron® J1900 10W Celeron® N2930 7.5W Celeron® N2807 4.3W Atom™ E3845 10W Atom™ E3825 6.0W
CHIPSET	Integrated with Intel® SoC
MEMORY TYPE	On Board DDR3L 1066/1333MHz, up to 4GB, Non-ECC
BIOS	UEFI
WAKE ON LAN	Yes
WATCHDOG TIMER	255 Levels
SECURITY	TPM 2.0 (BOM optional)
RTC Battery	Lithium Battery 3V/240mAh
DIMENSION (L X W)	5.75" x 4" (146mm x 101.7mm)

Power

POWER REQUIREMENT	+9~24V
POWER SUPPLY TYPE	AT/ATX
CONNECTOR	Phoenix 2-pin Connector
POWER CONSUMPTION	Intel® E3845,DDR3L on board RAM 4GB,2.10A @ +12V(TYPICAL) Intel® E3845,DDR3L on board RAM 4GB,2.26A @ +12V(MAX)

Display

CONTROLLER	Intel® HD Graphics for Intel Atom® Processor Z3700 Series
LVDS/eDP	LVDS Dual Channel 18/24bit x 1
Display Interface	HDMI 1.4a (Optional: DP1.1a) VGA x 1
Multiple Display	Up to 3 Simultaneous Displays

Audio

CODEC	Realtek ALC897/892
AUDIO INTERFACE	Line-in/Line-out/MIC
Speaker	2W Amplifier(Optional)

External I/O

ETHERNET	Intel® i210, 10/100/1000Base, RJ-45 x 2
USB	USB 3.2 Gen1 x 1 USB2.0 x 1
SERIAL PORT	COM1(RS232)

External I/O

VIDEO	VGA x 1 HDMI 1.4a x 1(Optional)
-------	------------------------------------

Internal I/O

USB	USB2.0 x 2
SERIAL PORT	COM2, COM3 (RS232/422/485, supports 5V/12V/RI) COM4 (RS232)
VIDEO	LVDS x1
SATA	SATA II x 1 +5V SATA Power Connector x 1
AUDIO	Audio Header x 1
DIO/GPIO	8-bit
SMBus/I2C	SMBus x 1
Touch	4/5/8 wire Touch Controller x 1 (Optional)
FAN	DC Fan x 1 (optional: Smart Fan)
SIM	SIM x 1
Front Panel	HDD LED, PWR LED, Power Button, Buzzer, Reset
Others	—


Expansion

Mini PCI-E/mSATA	Full-size mPCIe/USB2.0 x 1 Half-size mSATA/mPCIe x 1(BOM optional)
M.2	—
Others	—

Environment

OPERATING TEMPERATURE	32°F ~ 140°F (0°C ~ 60°C) or WiTAS 2 -40°F ~ 185°F (-40°C ~ 85°C)
STORAGE TEMPERATURE	-40°F ~ 176°F (-40°C ~ 80°C)
OPERATING HUMIDITY	0% ~ 90% relative humidity, non-condensing
MTBF (HOURS)	403,079
EMC	CE/FCC Class A

1.2 Function Block Diagram

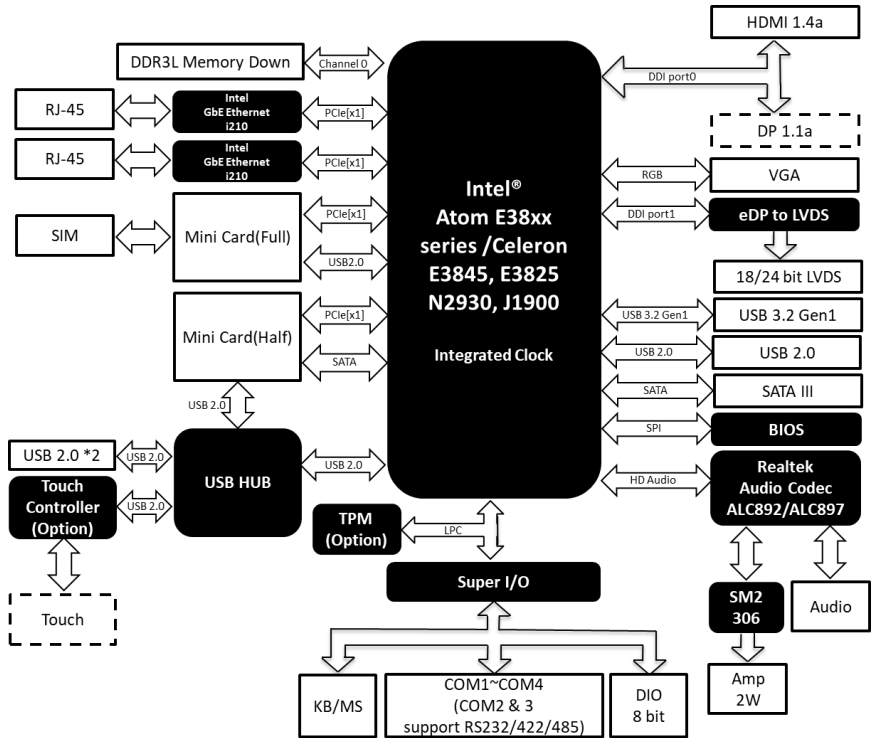


Chapter 2


Hardware Information

2.1 Dimensions



Standard Ver. - Component Side

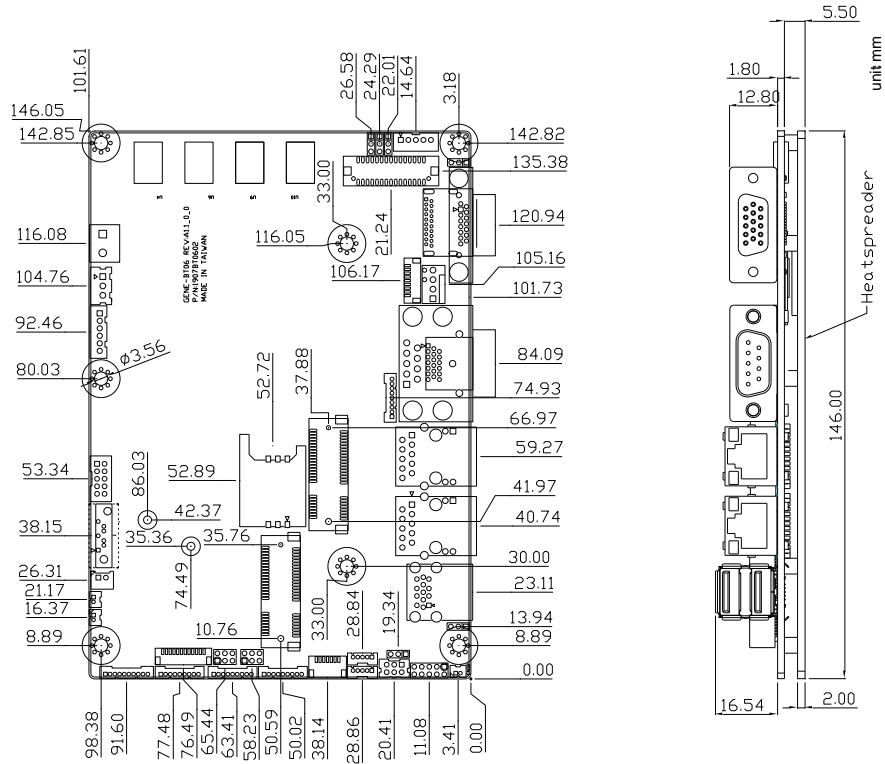


Standard Ver. - Solder Side

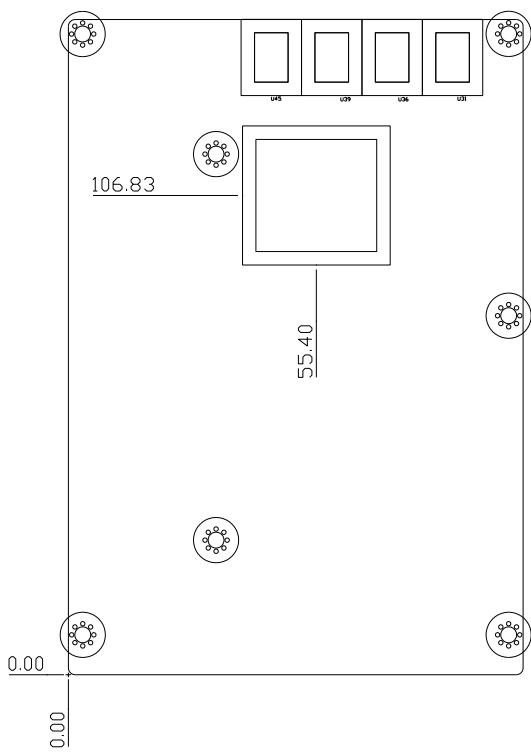

Advanced Ver. - Component Side

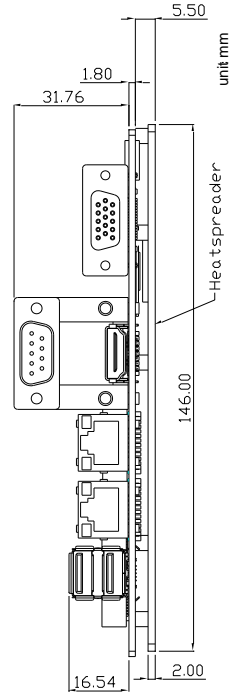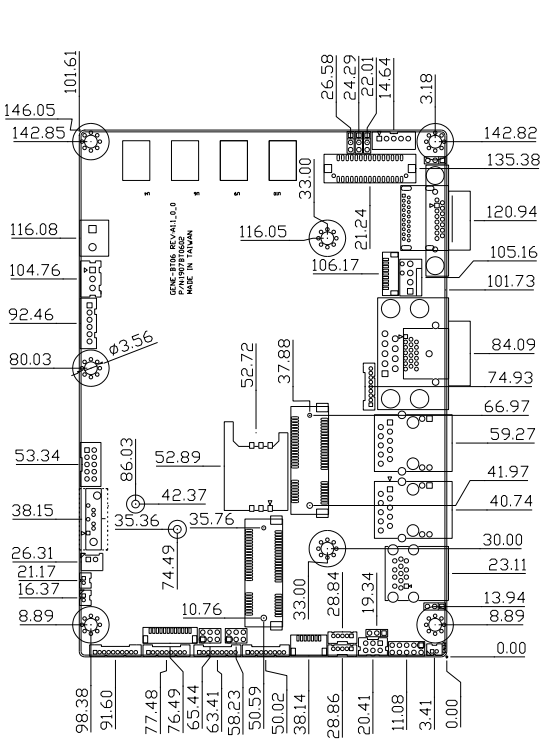


Advanced Ver. - Solder Side

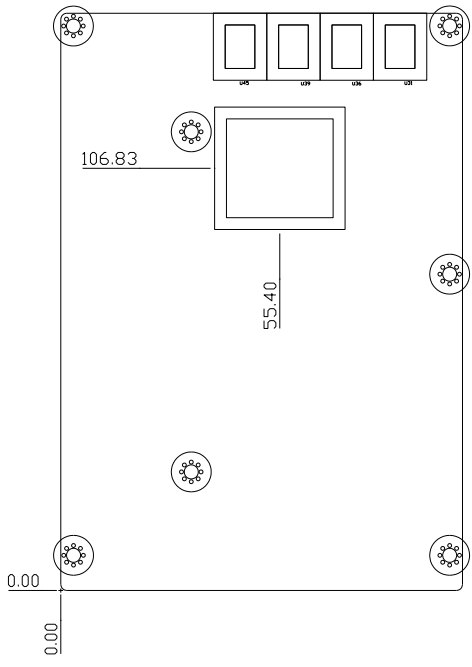


2.2 Jumpers and Connectors



Standard Ver. - Component Side

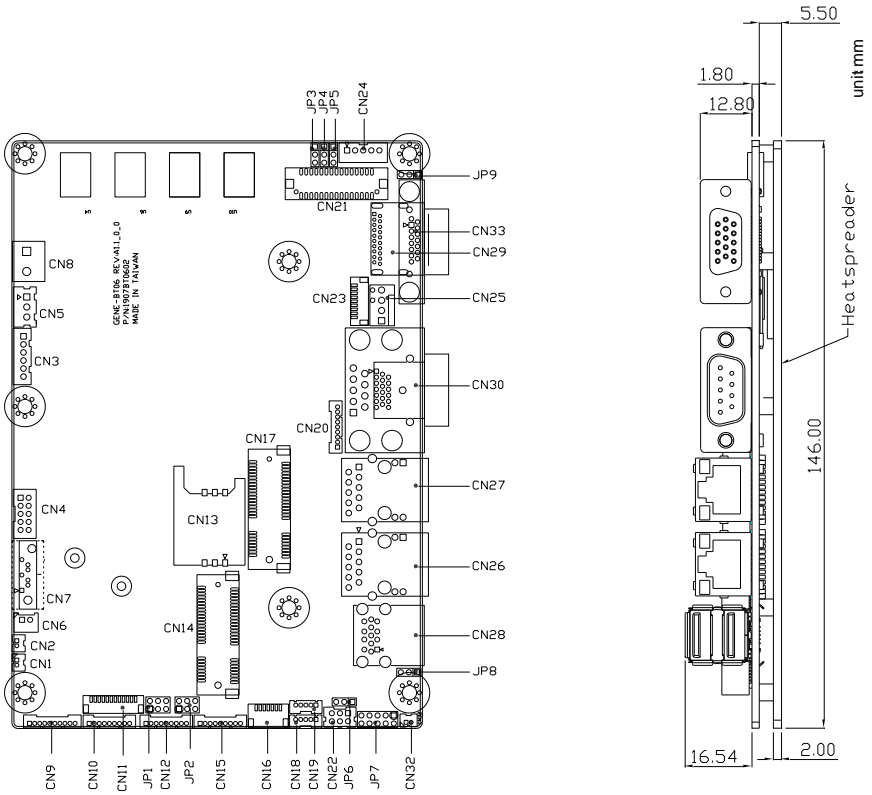


Standard Ver. - Solder Side

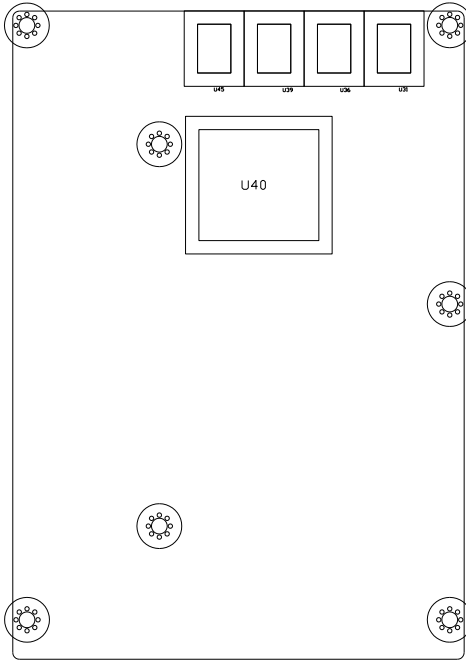

Advanced Ver. - Component Side

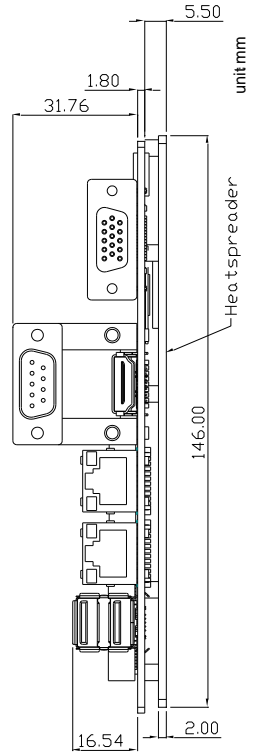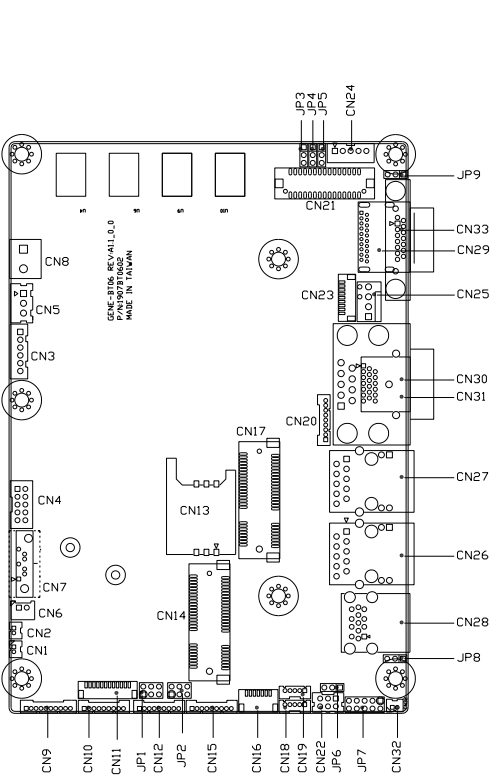


Advanced Ver. - Solder Side

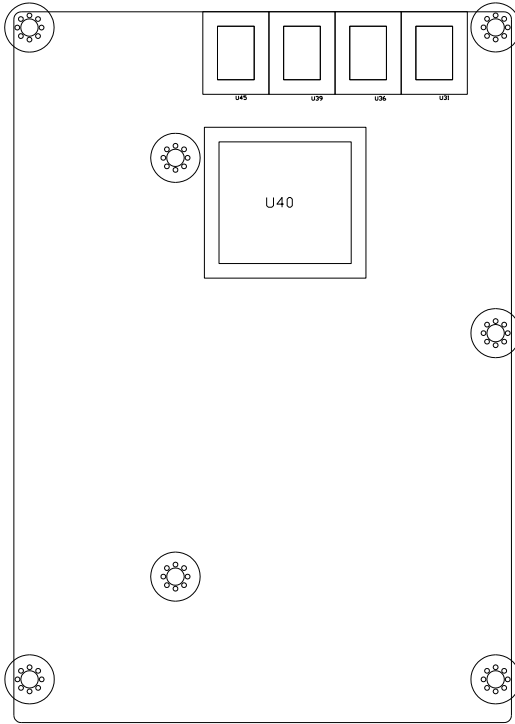


2.3 Assembly Options

Option 1

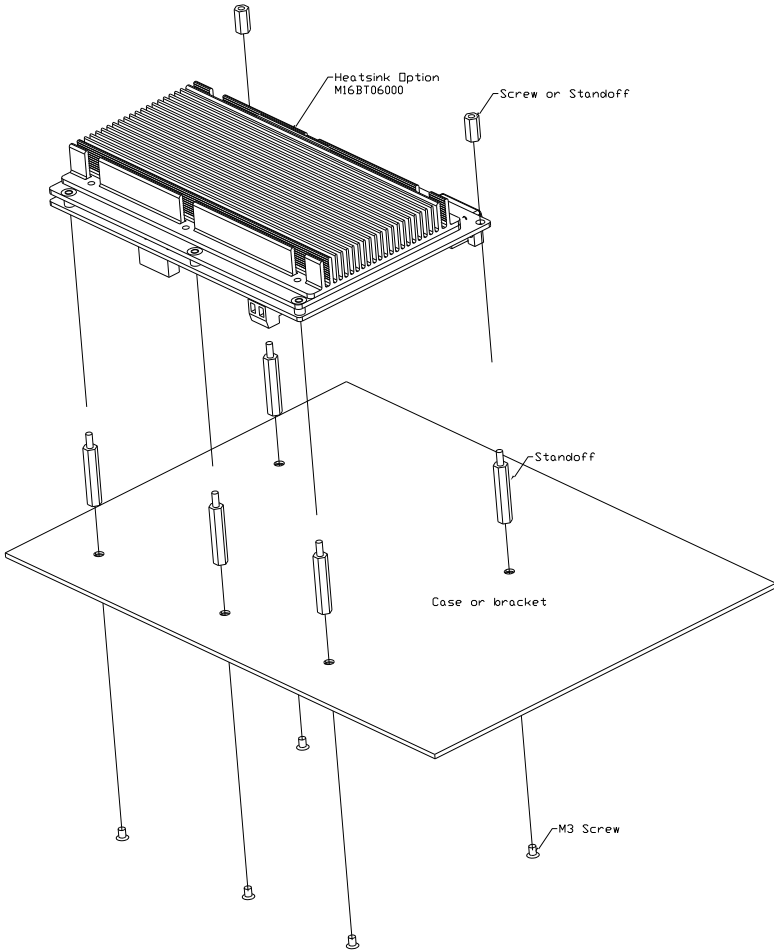

Option 2

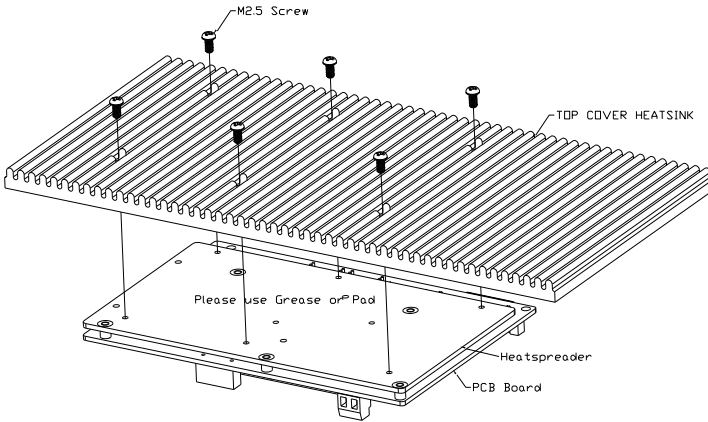


2.4 List of Jumpers


Please refer to the table below for all of the board's jumpers that you can configure for your application

Label	Function
JP1	COM3 Pin8 Function Selection
JP2	COM2 Pin8 Function Selection
JP3	LVDS Port Operating VDD Selection
JP4	LVDS Port Backlight Inverter VCC Selection
JP5	LVDS Port Backlight Lightness Control Mode Selection
JP6	Auto Power Button Enable/Disable Selection
JP7	Front Panel Connector
JP8	Clear CMOS Jumper
JP9	Touch Screen 4/5/8-wire Mode Selection


2.4.1 COM3 Pin8 Function Selection (JP1)



+12V




Ring (Default)




+5V


2.4.2 COM2 Pin8 Function Selection (JP2)



+12V





Ring (Default)





+5V



2.4.3 LVDS Port Operating VDD Selection (JP3)





2.4.4 LVDS Port Backlight Inverter VCC Selection (JP4)



2.4.5 LVDS Port Backlight Lightness Control Mode Selection (JP5)




2.4.6 Auto Power Button Enable/ Disable Selection (JP6)





Note: When disabled, the Power Button (JP7 pins 1-2) must be used to power on the system.

2.4.7 Front Panel Connector (JP7)


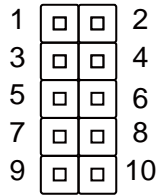


Pin	Signal	Pin	Signal
1	PWR_BTN-	2	PWR_BTN+
3	HDD_LED-	4	HDD_LED+
5	SPEAKER-	6	SPEAKER+
7	PWR_LED-	8	PWR_LED+
9	H/W RESET-	10	H/W RESET+

2.4.8 Clear CMOS Jumper (JP8)

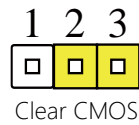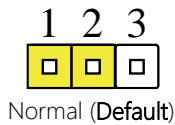

2.4.9 Touch Screen 4,5,8 Wire Selection (JP9)



2.5 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application

Label	Function
CN1	Amplifier R-channel output
CN2	Amplifier L-channel output
CN3	+5VSB Output w/ SMBus
CN4	Digital I/O Port
CN5	External +5VSB Input
CN6	+5V Output for SATA HDD
CN7	SATA Port 1
CN8	External Power Input
CN9	Audio I/O Port
CN10	COM Port 4
CN11	LPC Port
CN12	COM Port 3
CN13	UIM Card Socket
CN14	Mini Card Slot (Half-Size Card)
CN15	COM Port 2
CN16	SPI Debug Port
CN17	Mini Card Slot (Full-Size Card)
CN18	USB2.0 Port 3
CN19	USB2.0 Port 2
CN20	COM Port 1 (Wafer)
CN21	LVDS Port
CN22	PS/2 Keyboard/Mouse Combo Port
CN23	Touch Screen Connector

Label	Function
CN24	LVDS Port Inverter / Backlight Connector
CN25	CPU Fan (Optional)
CN26	LAN (RJ-45) Port 2
CN27	LAN (RJ-45) Port 1
CN28	USB Dual Connector Port 0, Port 1 (USB3.2 Gen 1 and USB2.0)
CN29	DP Port
CN30	COM Port 1 (D-SUB 9)
CN31	HDMI Port
CN32	Battery
CN33	VGA Port


2.5.1 Amplifier R-Channel Output (CN1)

Pin	Pin Name	Signal Type	Signal Level
1	SKR_R+	OUT	
2	SKR_R-	OUT	

2.5.2 Amplifier L-Channel Output (CN2)


Pin	Pin Name	Signal Type	Signal Level
1	SKR_L+	OUT	
2	SKR_L-	OUT	

2.5.3 +5VSB Output w/ SMBus (CN3)

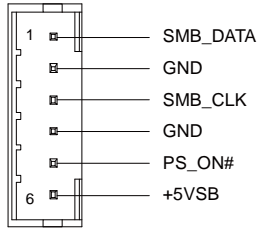

Pin	Pin Name	Signal Type	Signal Level
1	SMB_DATA	I/O	+3.3V
2	GND	GND	
3	SMB_CLK	I/O	+3.3V
4	GND	GND	
5	PS_ON#	OUT	+3.3V
6	+5VSB	PWR	+5V

2.5.4 Digital I/O Port (CN4)

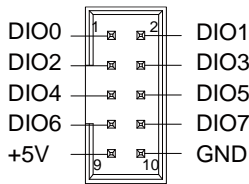


Pin	Pin Name	Signal Type	Signal Level
1	DIO0	I/O	+5V
2	DIO1	I/O	+5V
3	DIO2	I/O	+5V

Pin	Pin Name	Signal Type	Signal Level
4	DIO3	I/O	+5V
5	DIO4	I/O	+5V
6	DIO5	I/O	+5V
7	DIO6	I/O	+5V
8	DIO7	I/O	+5V
9	+5V	PWR	+5V
10	GND	GND	


Note: Pin 9 +5V max current is 0.5A

2.5.5 External +5VSB Input (CN5)

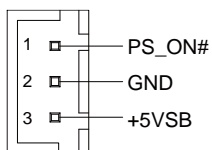

Pin	Pin Name	Signal Type	Signal Level
1	PS_ON#	OUT	+3.3V
2	GND	GND	
3	+5VSB	PWR	+5V


2.5.6 +5V Output for SATA HDD (CN6)

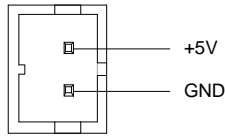

Pin	Pin Name	Signal Type	Signal Level
1	+5V	PWR	+5V
2	GND	GND	


Note: Pin 1 +5V max current is 0.5A

2.5.7 SATA Port 1 (CN7)

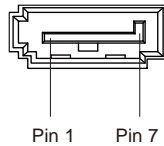


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX+	DIFF	
3	SATA_TX-	DIFF	
4	GND	GND	
5	SATA_RX-	DIFF	
6	SATA_RX+	DIFF	
7	GND	GND	

2.5.8 External Power Input (CN8)

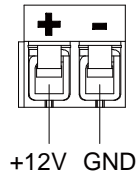

Pin	Pin Name	Signal Type	Signal Level
1	+12V	PWR	+9 ~ 24V (or +12V)
2	GND	GND	


2.5.9 Audio I/O Port (CN9)

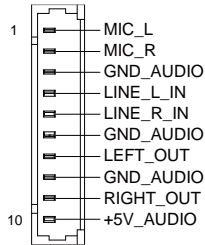

Pin	Pin Name	Signal Type	Signal Level
1	MIC_L	IN	
2	MIC_R	IN	
3	GND_AUDIO	GND	
4	LINE_L_IN	IN	
5	LINE_R_IN	IN	
6	GND_AUDIO	GND	
7	LEFT_OUT	OUT	
8	GND_AUDIO	GND	
9	RIGHT_OUT	OUT	


Pin	Pin Name	Signal Type	Signal Level
10	+5V_AUDIO	PWR	+5V

2.5.10 COM Port 4 (CN10)

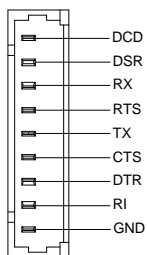

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.5.11 LCP Port (CN11)

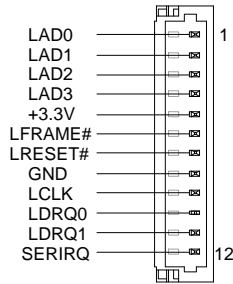


Pin	Pin Name	Signal Type	Signal Level
1	LAD0	I/O	+3.3V
2	LAD1	I/O	+3.3V
3	LAD2	I/O	+3.3V
4	LAD3	I/O	+3.3V
5	+3.3V	PWR	+3.3V
6	LFRAME#	IN	
7	LRESET#	OUT	+3.3V
8	GND	GND	
9	LCLK	OUT	
10	LDRQ0	IN	
11	LDRQ1	IN	
12	SERIRQ	I/O	+3.3V

2.5.12 COM Port 3 (CN12)

Note 1: COM3 RS232/422/485 can be set by BIOS. Default is RS-232


Note 2: Pin 8 Function can be set by JP1. Max current is 0.5A

RS-232 Mode

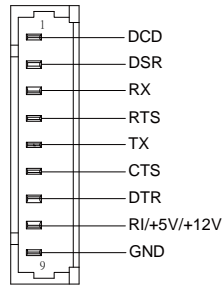


Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±5V
5	TX	OUT	±5V
6	CTS	IN	
7	DTR	OUT	±5V
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

RS-422 Mode

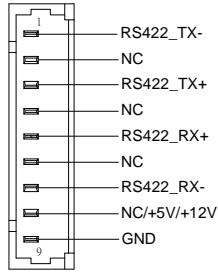

Pin	Pin Name	Signal Type	Signal Level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_TX+	OUT	±5V
4	NC		
5	RS422_RX+	IN	
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

RS-485 Mode

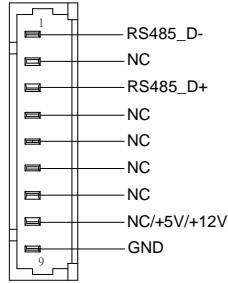

Pin	Pin Name	Signal Type	Signal Level
1	RS485_D-	I/O	±5V
2	NC		
3	RS485_D+	I/O	±5V
4	NC		
5	NC		
6	NC		
7	NC		
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

2.5.13 UIM Card Socket (CN13)

Pin	Pin Name	Signal Type	Signal Level
1	UIM_PWR	PWR	
2	UIM_RST	IN	
3	UIM_CLK	IN	
4	GND	GND	
5	UIM_VPP	PWR	
6	UIM_DATA	I/O	

2.5.14 Mini Card Slot (Half-Size Card) (CN14)

Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	
8	NC		
9	GND	GND	
10	NC		
11	PCIE_REF_CLK-	DIFF	
12	NC		
13	PCIE_REF_CLK+	DIFF	
14	NC		
15	GND	GND	
16	NC		
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-	DIFF	
24	+3.3VSB	PWR	+3.3V

Pin	Pin Name	Signal Type	Signal Level
25	PCIE_RX+	DIFF	
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
51	NC		
52	+3.3VSB	PWR	+3.3V

Note 1: CN14 can be selected for Mini Card or mSATA by changing BOM


Note 2: Only mSATA or CFast can be chosen on the motherboard

2.5.15 COM Port 2 (CN15)

Note 1: COM2 RS232/422/485 can be set by BIOS settings. Default is RS-232

Note 2: Pin 8 Function can be set by JP2. Max current is 0.5A


RS-232 Mode

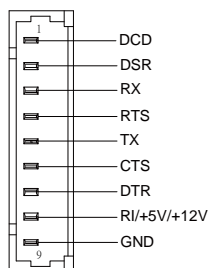

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±5V
5	TX	OUT	±5V
6	CTS	IN	
7	DTR	OUT	±5V


Pin	Pin Name	Signal Type	Signal Level
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

RS-422 Mode

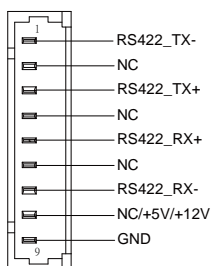

Pin	Pin Name	Signal Type	Signal Level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_TX+	OUT	±5V
4	NC		
5	RS422_RX+	IN	
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

RS-485 Mode

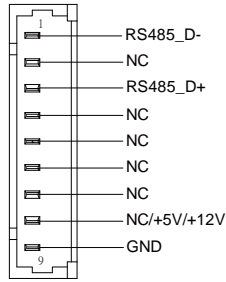

Pin	Pin Name	Signal Type	Signal Level
1	RS485_D-	I/O	±5V
2	NC		
3	RS485_D+	I/O	±5V
4	NC		
5	NC		
6	NC		
7	NC		
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

2.5.16 SPI Debug Port (CN16)

Pin	Pin Name	Signal Type	Signal Level
1	SPI_MISO	OUT	
2	GND	GND	
3	SPI_CLK	IN	
4	+3.3VSB	PWR	+3.3V
5	SPI_MOSI	IN	

Pin	Pin Name	Signal Type	Signal Level
6	SPI_CS	IN	
7	NC		


2.5.17 Mini Card Slot (Full-Size Card) (CN17)

Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	
8	UIM_PWR	PWR	
9	GND	GND	
10	UIM_DATA	I/O	
11	PCIE_REF_CLK-	DIFF	
12	UIM_CLK	IN	
13	PCIE_REF_CLK+	DIFF	
14	UIM_RST	IN	
15	GND	GND	
16	UIM_VPP	PWR	
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V

Pin	Pin Name	Signal Type	Signal Level
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-	DIFF	
24	+3.3VSB	PWR	+3.3V
25	PCIE_RX+	DIFF	
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		
46	NC		


Pin	Pin Name	Signal Type	Signal Level
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3VSB	PWR	+3.3V

2.5.18 USB 2.0 Port 3 (CN18)

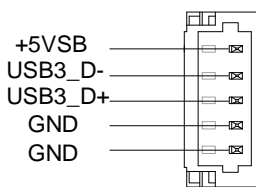


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB3_D-	DIFF	
3	USB3_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.5.19 USB 2.0 Port 2 (CN19)

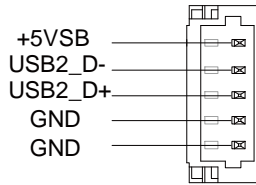

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB2_D-	DIFF	
3	USB2_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.5.20 LVDS Port (CN21)

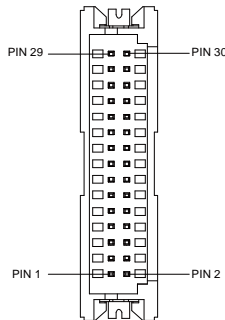


Note: LVDS LCD_PWR can be set to 3.3V or +5V by JP3. Max current is 2A

Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	

Pin	Pin Name	Signal Type	Signal Level
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	LVDS_A_CLK-	DIFF	
6	LVDS_A_CLK+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	LVDS_DA0-	DIFF	
10	LVDS_DA0+	DIFF	
11	LVDS_DA1-	DIFF	
12	LVDS_DA1+	DIFF	
13	LVDS_DA2-	DIFF	
14	LVDS_DA2+	DIFF	
15	LVDS_DA3-	DIFF	
16	LVDS_DA3+	DIFF	
17	DDC_DATA	I/O	+3.3V
18	DDC_CLK	I/O	+3.3V
19	LVDS_DB0-	DIFF	
20	LVDS_DB0+	DIFF	
21	LVDS_DB1-	DIFF	
22	LVDS_DB1+	DIFF	
23	LVDS_DB2-	DIFF	
24	LVDS_DB2+	DIFF	
25	LVDS_DB3-	DIFF	
26	LVDS_DB3+	DIFF	
27	LCD_PWR	PWR	+3.3V/+5V

Pin	Pin Name	Signal Type	Signal Level
28	GND	GND	
29	LVDS_B_CLK-	DIFF	
30	LVDS_B_CLK+	DIFF	


2.5.21 PS/2 Keyboard/ Mouse Combo Port (CN22)

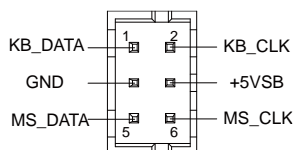

Pin	Pin Name	Signal Type	Signal Level
1	KB_DATA	I/O	+5V
2	KB_CLK	I/O	+5V
3	GND	GND	
4	+5VSB	PWR	+5V
5	MS_DATA	I/O	+5V
6	MS_CLK	I/O	+5V


2.5.22 Touch Screen Connector (CN23)

4-Wire Mode

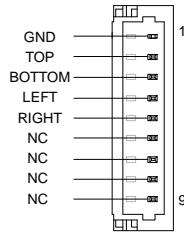

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP	IN	
3	BOTTOM	IN	
4	LEFT	IN	
5	RIGHT	IN	
6	NC		
7	NC		
8	NC		
9	NC		


5-Wire Mode

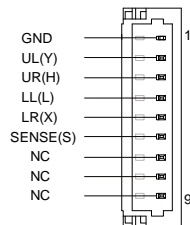

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
2	UL(Y)	IN	
3	UR(H)	IN	
4	LL(L)	IN	
5	LR(X)	IN	
6	SENSE(S)	IN	
7	NC		
8	NC		
9	NC		


8-Wire Mode

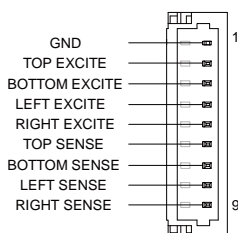

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP EXCITE	IN	
3	BOTTOM EXCITE	IN	
4	LEFT EXCITE	IN	
5	RIGHT EXCITE	IN	
6	TOP SENSE	IN	
7	BOTTOM SENSE	IN	
8	LEFT SENSE	IN	
9	RIGHT SENSE	IN	

Note: Touch mode can be set by JP9

2.5.23 LVDS Port Inverter/ Backlight Connector (CN24)

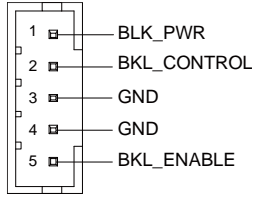


Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	+5V

Note 1: Pin 1 LVDS BKL_PWR can be set to +5V or +12V by JP4. Max current is 2A


Note 2: LVDS BKL_CONTROL can be set by JP5

2.5.24 CPU Fan (CN25)

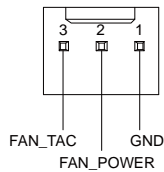


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	FAN_POWER	PWR	+12V
3	FAN_TAC	IN	

2.5.25 LAN (RJ-45) Port 2 (CN26)

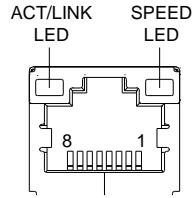

Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	


2.5.26 LAN (RJ-45) Port 1 (CN27)

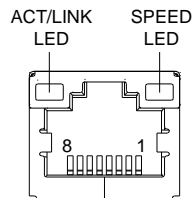

Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	

Pin	Pin Name	Signal Type	Signal Level
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	

2.5.27 USB Port 0 and Port 1 (CN28)

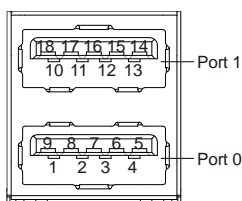

Note: Only Port 0 supports USB3.0 Function


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB0_D-	DIFF	
3	USB0_D+	DIFF	
4	GND	GND	
5	USB0_SSRX-	DIFF	
6	USB0_SSRX+	DIFF	
7	GND	GND	
8	USB0_SSTX-	DIFF	
9	USB0_SSTX+	DIFF	
10	+5VSB	PWR	+5V
11	USB1_D-	DIFF	
12	USB1_D+	DIFF	

Pin	Pin Name	Signal Type	Signal Level
13	GND	GND	

2.5.28 DP Port (CN29)

Pin	Pin Name	Signal Type	Signal Level
1	DP_D0+	DIFF	
2	GND	GND	
3	DP_D0-	DIFF	
4	DP_D1+	DIFF	
5	GND	GND	
6	DP_D1-	DIFF	
7	DP_D2+	DIFF	
8	GND	GND	
9	DP_D2-	DIFF	
10	DP_D3+	DIFF	
11	GND	GND	
12	DP_D3-	DIFF	
13	GND	GND	
14	GND	GND	
15	DP_AUX+	DIFF	
16	GND	GND	
17	DP_AUX-	DIFF	
18	HPLG_DETECT	IN	
19	GND	GND	
20	+5V	I/O	+5V


2.5.29 COM Port 1 (D-SUB 9) (CN30)



Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	RX	IN	
3	TX	OUT	±9V
4	DTR	OUT	±9V
5	GND	GND	
6	DSR	IN	
7	RTS	OUT	±9V
8	CTS	IN	
9	RI	IN	

Note: COM port 1 can be selected for D-SUB 9 or Wafer Box Connector by CN20

2.5.30 HDMI Port (CN31)




Pin	Pin Name	Signal Type	Signal Level
1	TMDS_DAT2+	DIFF	
2	GND	GND	
3	TMDS_DAT2-	DIFF	
4	TMDS_DAT1+	DIFF	
5	GND	GND	

6	TMDS_DAT1-	DIFF	
7	TMDS_DAT0+	DIFF	
8	GND	GND	
9	TMDS_DAT0-	DIFF	
10	TMDS_CLK+	DIFF	
11	GND	GND	
12	TMDS_CLK-	DIFF	
13	NC		
14	NC		
15	DDC_CLK	I/O	+5V
16	DDC_DATA	I/O	+5V
17	GND	GND	
18	+5V	I/O	+5V
19	HPLG_DETECT	IN	

2.5.31 Battery (CN32)

Pin	Pin Name	Signal Type	Signal Level
1	+3.3V	PWR	3.3V
2	GND	GND	

2.5.32 VGA Port (CN33)



Pin	Pin Name	Signal Type	Signal Level
1	RED	OUT	
2	GREEN	OUT	
3	BLUE	OUT	
4	NC		
5	GND	GND	
6	RED_GND_RTN	GND	
7	GREEN_GND_RTN	GND	
8	BLUE_GND_RTN	GND	
9	+5V	PWR	+5V
10	CRT_PLUG#		
11	NC		
12	DDC_DATA	I/O	+5V
13	HSYNC	OUT	
14	VSYNC	OUT	
15	DDC_CLK	I/O	+5V

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The board uses certain routines to perform testing and initialization. If an error, fatal or non-fatal, is encountered, a few short beeps or an error message will be outputted. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be outputted, in which case you will need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- You are starting your system for the first time
- You have changed your system's hardware
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention, which is to be replaced once emptied.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Enable/ Disable boot option for legacy network devices

Chipset – For hosting bridge parameters

Boot – Enable/ Disable quiet Boot Option

Security – The setup administrator password can be set here


Save & Exit – Save your changes and exit the program

3.3 Setup submenu: Main


Press 'Delete' Key to enter Setup



3.4 Setup submenu: Advanced

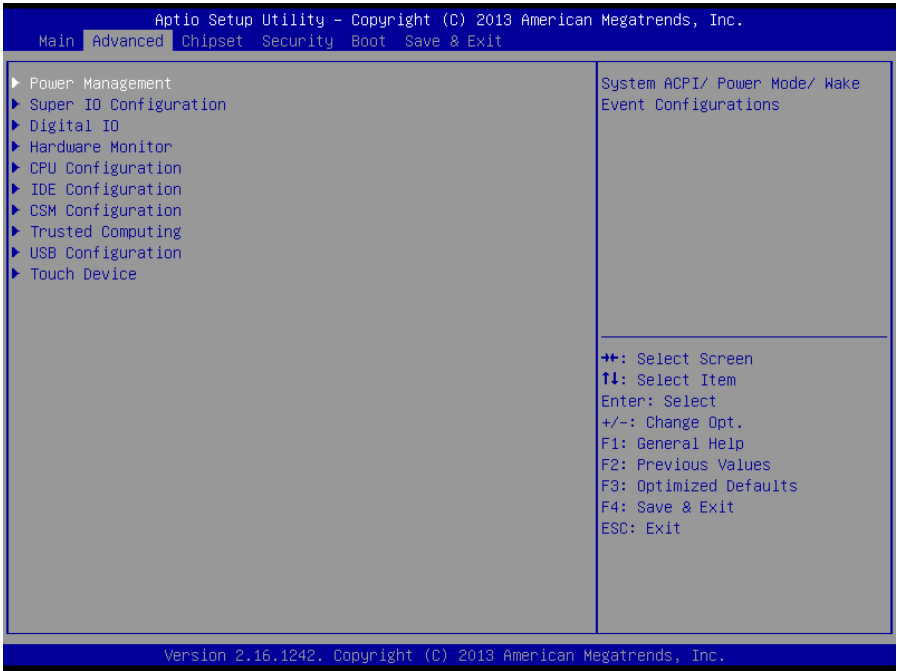

3.4.1 Advanced: Power Management

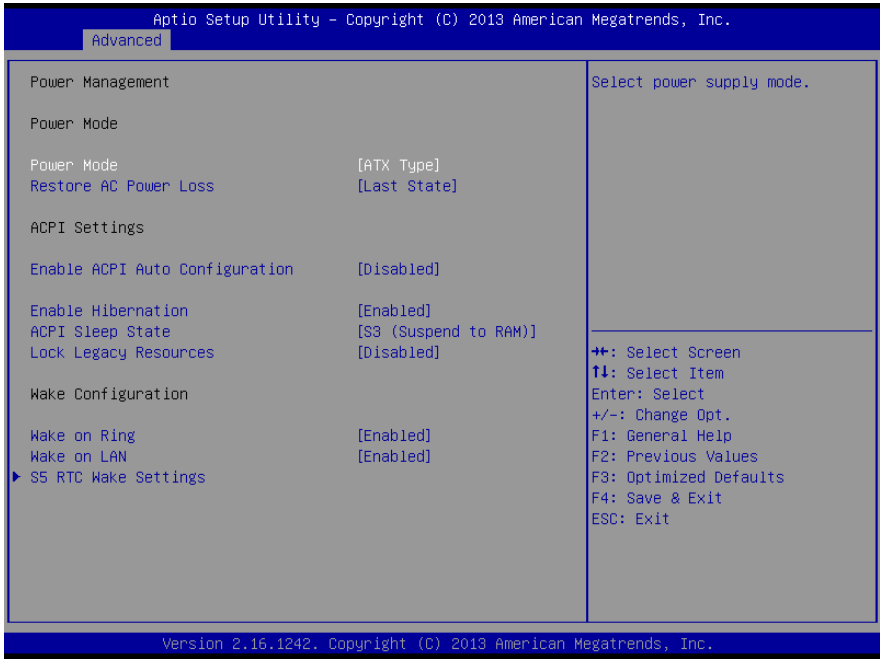


Options summary:

Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select power supply mode		
Restore AC Power Loss	Power Off	Optimal Default, Failsafe Default
	Power On	
	Last State	
Select AC power state when power is re-applied after a power failure		
Enable ACPI Auto Configuration	Enable	Optimal Default, Failsafe Default
	Disable	
Enables or Disables BIOS ACPI Auto Configuration		

Enable Hibernation	Enable	Optimal Default, Failsafe Default
	Disable	
Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS		
ACPI Sleep State	Suspend Disabled	Optimal Default, Failsafe Default
	S3 only(Suspend to RAM)	
Select highest ACPI sleep state the System will enter when the Suspend button is pressed		
Lock Legacy Resources	Enable	Optimal Default, Failsafe Default
	Disable	
Enables or Disables Lock of Legacy Resources		
Wake on Ring	Enable	Optimal Default, Failsafe Default
	Disable	
Enabled/Disabled wake from Ring		
Wake on LAN	Enable	Optimal Default, Failsafe Default
	Disable	
Enabled/Disabled wake from LAN		
S5 RTC Wake Settings		
Enable system to wake from S5 using RTC alarm.		

3.4.1.1 Power Management: S5 RTC Wake Settings

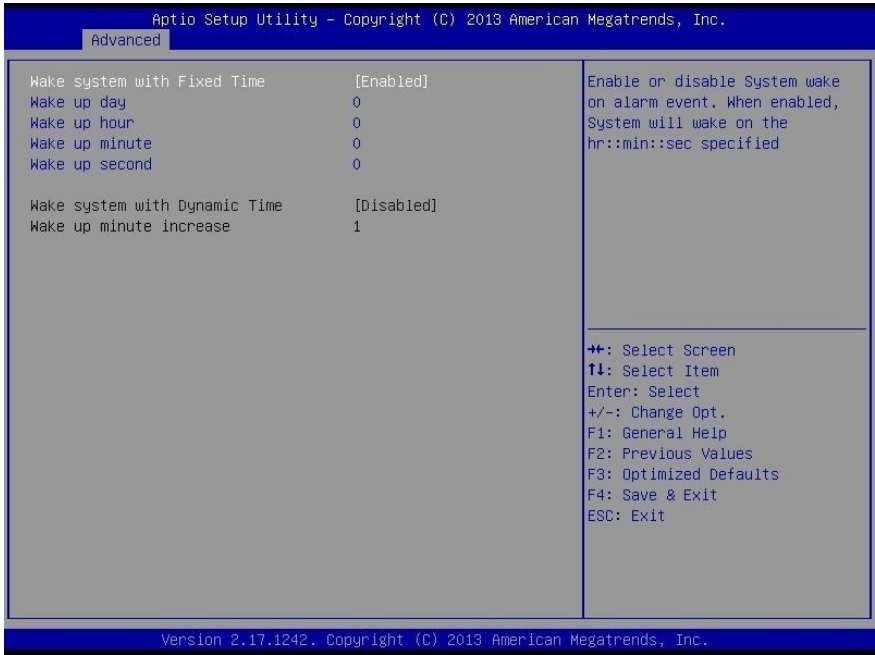


Options summary:


Wake system with Fixed Time	Enable	
	Disable	Optimal Default, Failsafe Default
Enable or disable System wake on alarm event. Wake up time is setting by following settings.		
Wake up day	0-31	
Select 0 for daily system wake up 1-31 for which day of the month that you would like the system to wake up		
Wake up hour	0-23	
Wake up minute	0-59	
Wake up second	0-59	

Wake system with Dynamic Time	Enable	
	Disable	Optimal Default, Failsafe Default
Enable or disable System wake on alarm event. Wake up time is current time + Increase minutes.		
Wake up minute increase	1-15	


3.4.2 Advanced: Super IO Configuration

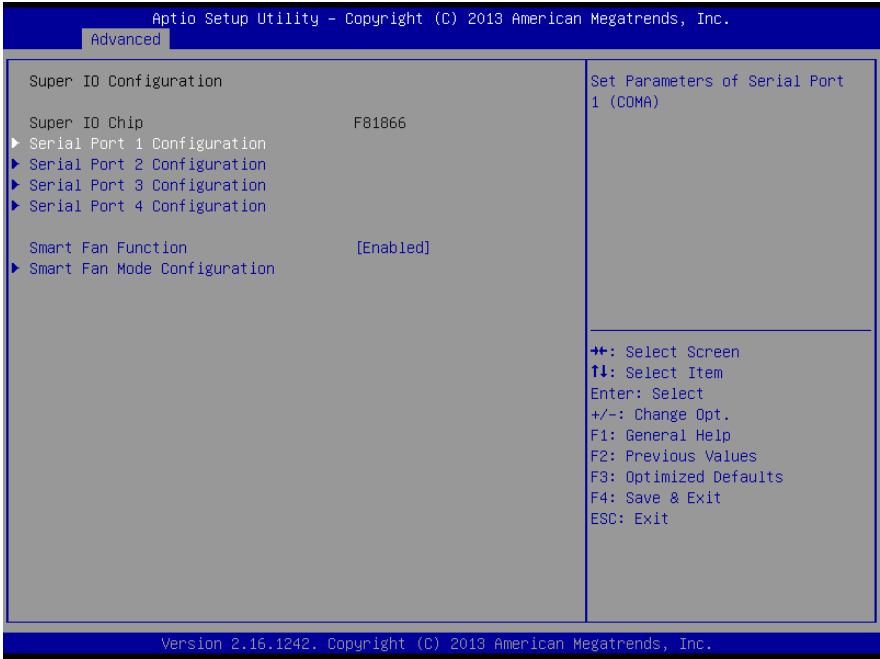


3.4.2.1 Super IO Configuration: Serial Port 1 Configuration

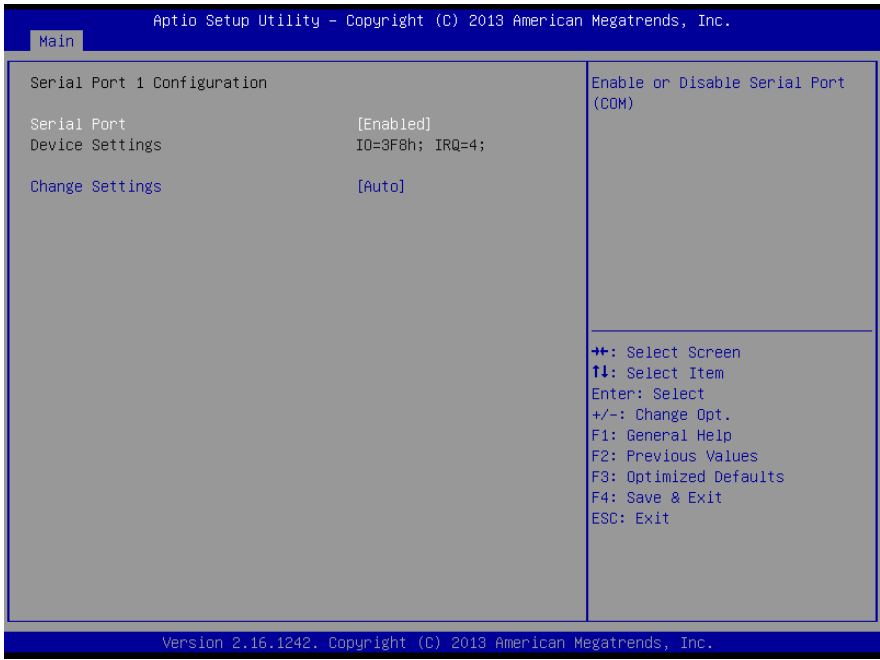


3.4.2.2 Super IO Configuration: Serial Port 2 Configuration

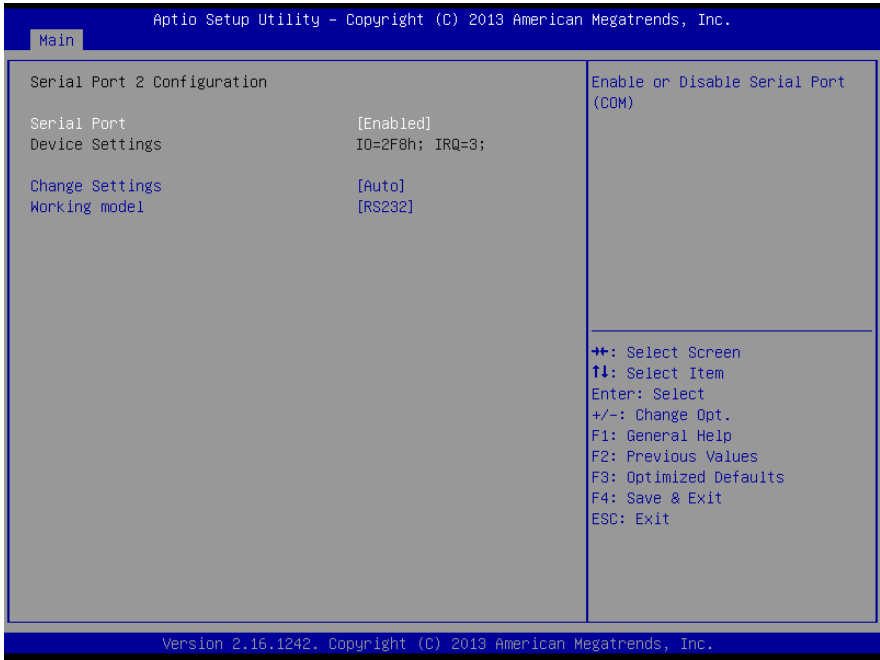

3.4.2.3 Super IO Configuration: Serial Port 3 Configuration

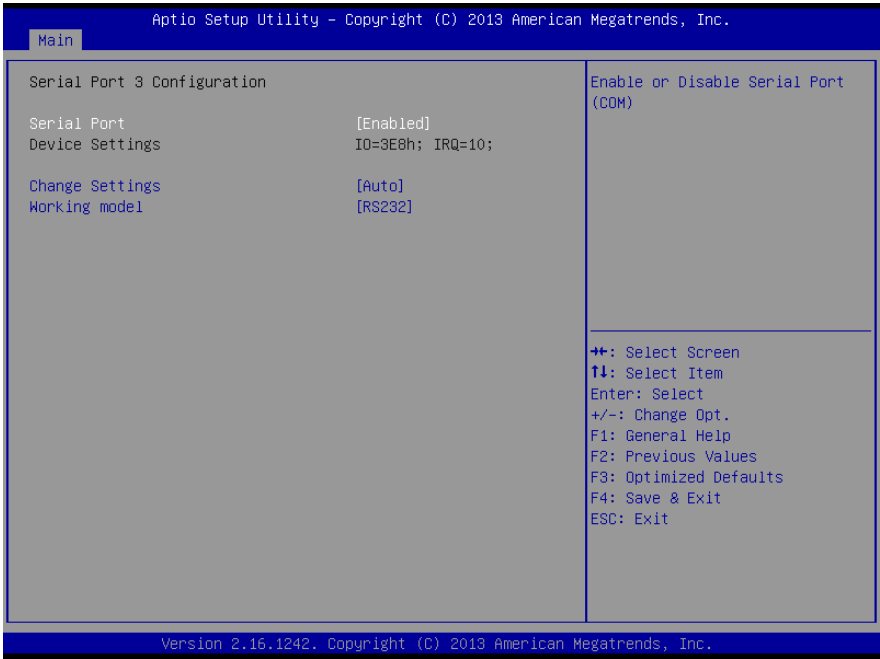

3.4.2.4 Super IO Configuration: Serial Port 4 Configuration

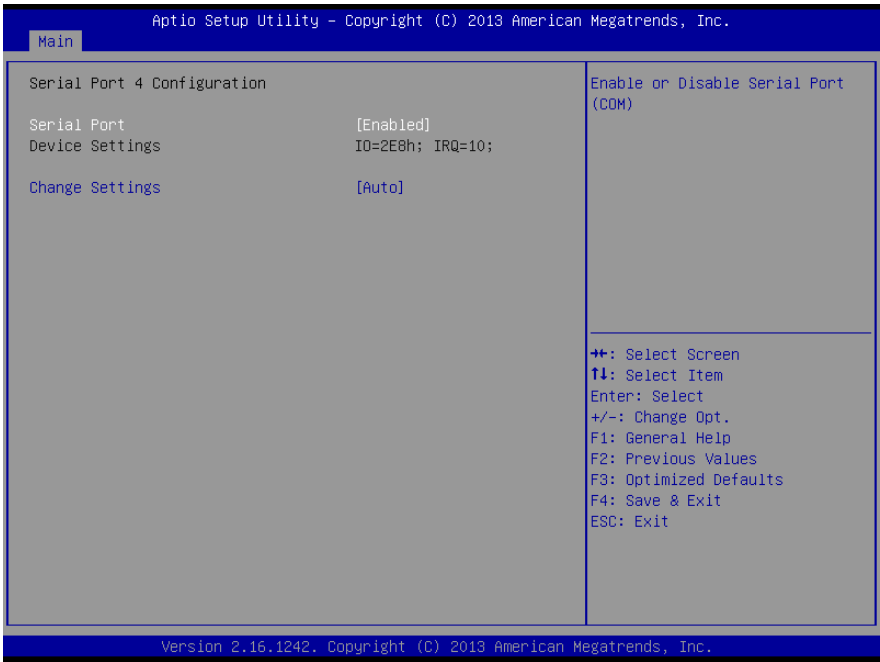

Options summary:

Serial Port	Disabled	
	Enabled	Default
Allows BIOS to En/Disable correspond serial port.		
Change Settings (Serial Port 1)	Auto	Default
	IO=3F8h; IRQ=4;	
	IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;	

	IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;			
Allows BIOS to Select Serial Port resource.				
Change Settings (Serial Port 2)	Auto	Default		
	IO=2F8h; IRQ=3;			
	IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;			
	Working model		RS232	Default
			RS422	
	RS485			
Select Working model				
Change Settings (Serial Port 3)	Auto	Default		
	IO=3E8h; IRQ=7;			
	IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;			
	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;			


	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;	
Working model	RS232	Default
	RS422	
	RS485	
Select Working model		
Change Settings (Serial Port 4)	Auto	Default
	IO=2E8h; IRQ=7;	
	IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2F0h; IRQ=3,4,5,6,7,9,10,11,12;	
	IO=2E0h; IRQ=3,4,5,6,7,9,10,11,12;	

3.4.2.5 Super IO Configuration: Smart Fan Function

Options summary:

Smart Fan Function	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enabled or Disabled Smart Fan		


3.4.2.6 Super IO Configuration: Smart Fan Mode Configuration

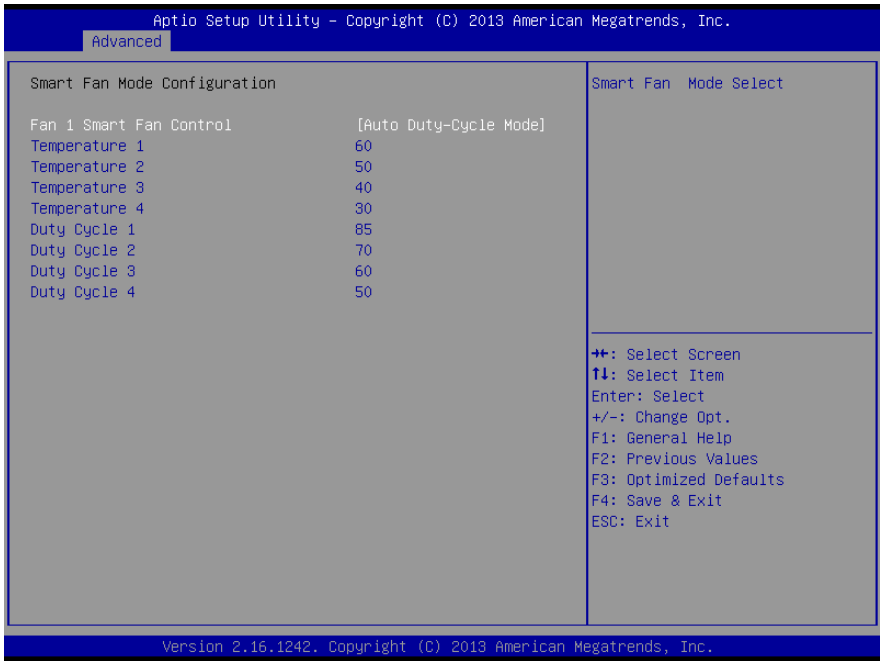

Options summary:

Fan 1 Smart Fan Control	Manual RPM Mode	
	Manual Duty Mode	
	Auto RPM Mode	
	Auto Duty-Cycle Mode	Optimal Default, Failsafe Default
Smart Fan Mode Select		


3.4.3 Advanced: Digital IO

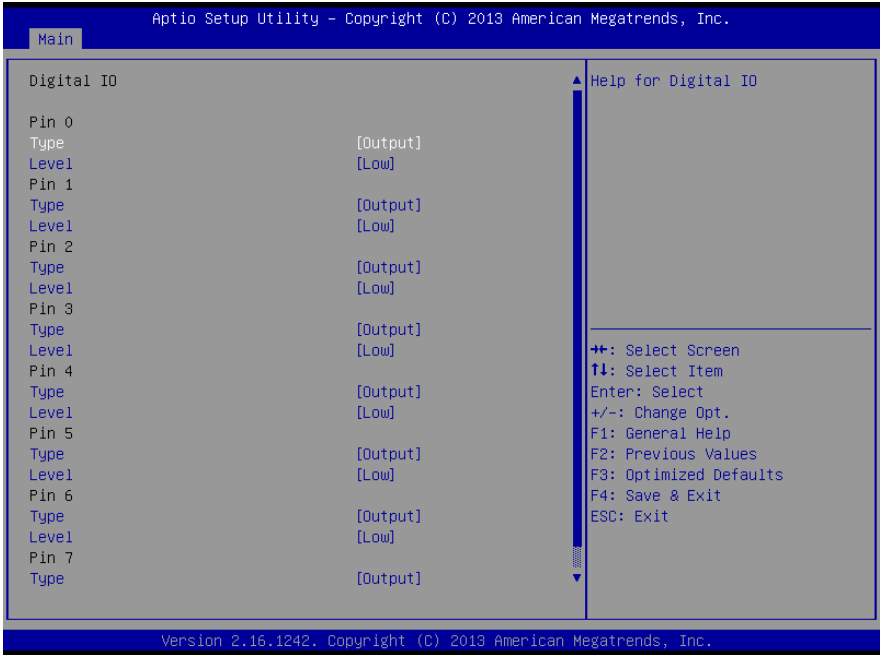


Options summary:

Pin 0~7	Input	Optimal Default, Failsafe Default
	Output	
Set DIO Port 0~7 as Input or Output		
Output Level	Low	Optimal Default, Failsafe Default
	Hi	
Set GPIO Level when used as Output		

3.4.4 Advanced: H/W Monitor

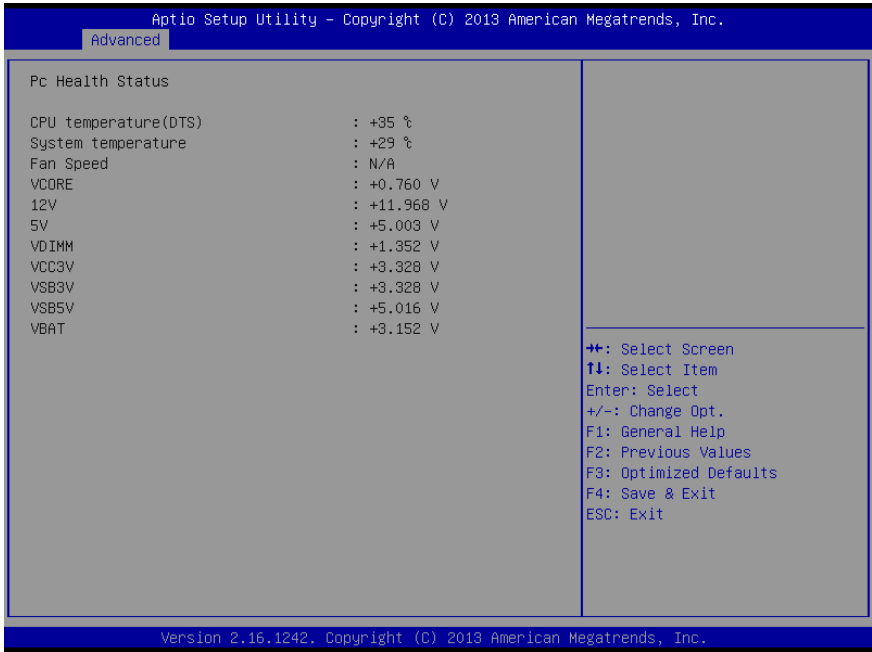

3.4.4 Advanced: CPU Configuration

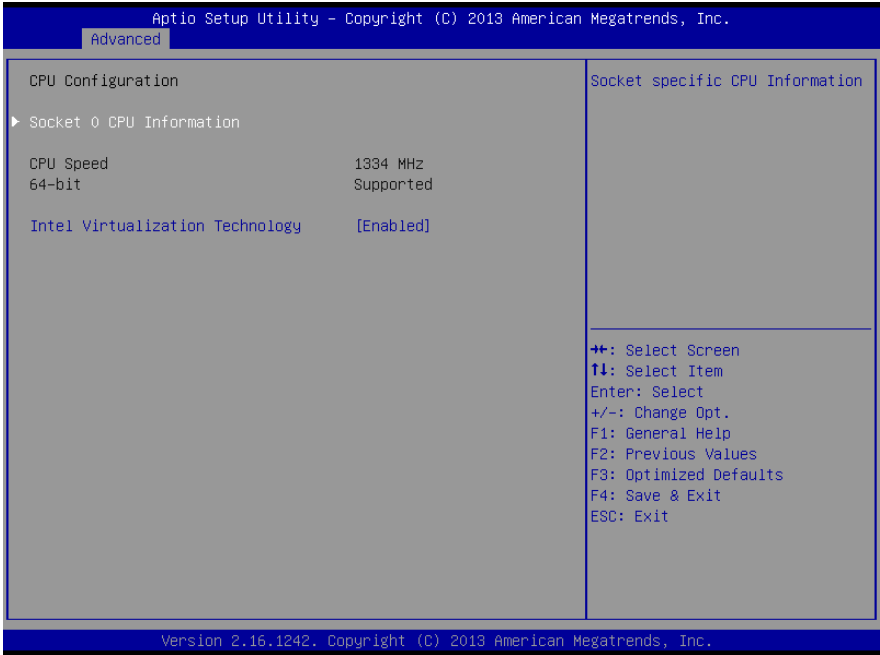

Options summary:

Intel Virtualization	Disabled	Optimal Default, Failsafe Default
Technology	Enabled	
When enabled, a VMM can utilize the additional hardware capabilities provided by Vander pool Technology		

3.4.4.1 CPU Configuration: Socket 0 CPU Information

The screenshot displays the Aptio Setup Utility interface. At the top, it reads "Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc." Below this is a "Main" menu bar. The main content area is titled "Socket 0 CPU Information" and lists the following details:


Intel(R) Atom(TM) CPU E3825 @ 1.33GHz	
CPU Signature	30679
Microcode Patch	901
Max CPU Speed	1330 MHz
Min CPU Speed	533 MHz
Processor Cores	2
Intel HT Technology	Not Supported
Intel VT-x Technology	Supported
L1 Data Cache	24 KB x 2
L1 Code Cache	32 KB x 2
L2 Cache	1024 KB x 1
L3 Cache	Not Present

On the right side of the screen, a list of navigation keys is provided:

- +: Select Screen
- ↑↓: Select Item
- Enter: Select
- +/-: Change Opt.
- F1: General Help
- F2: Previous Values
- F3: Optimized Defaults
- F4: Save & Exit
- ESC: Exit

At the bottom of the screen, it reads "Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc."

3.4.5 Advanced: IDE Configuration

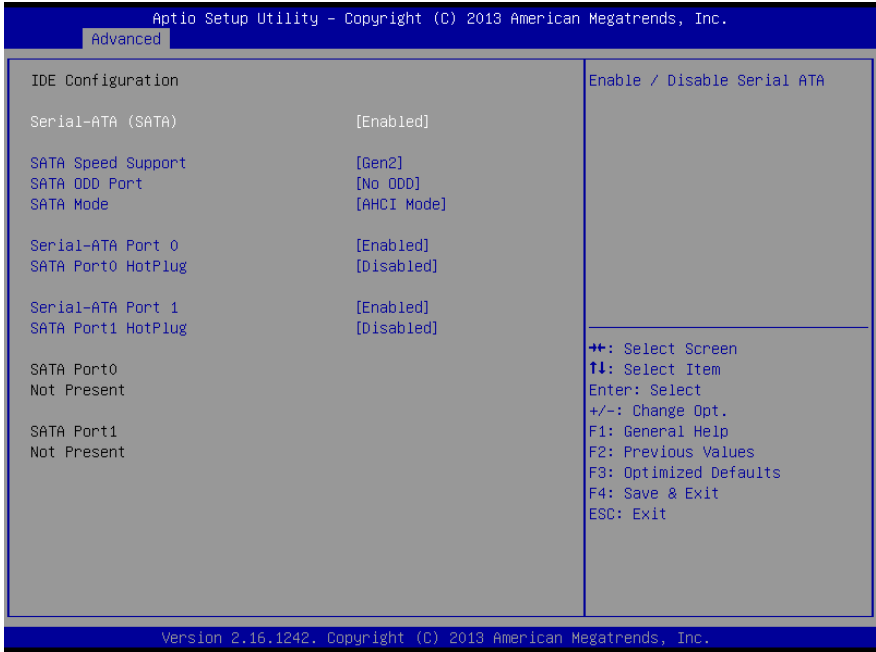


Options summary:

Serial-ATA(SATA)	Enabled	Default
	Disable	
SATA Speed Support	Gen1	
	Gen2	Default
SATA ODD Port	Port0 ODD	
	Port1 ODD	
	No ODD	Default
SATA Mode	IDE	
	AHCI	Default

IDE: Configure SATA controllers as legacy IDE		
AHCI: Configure SATA controllers to operate in AHCI mode		
Serial-ATA Port0/1	Enabled	Default
	Disable	
SATA Port0/1 HotPlug	Enabled	
	Disable	Default


3.4.6 Advanced: CSM Configuration

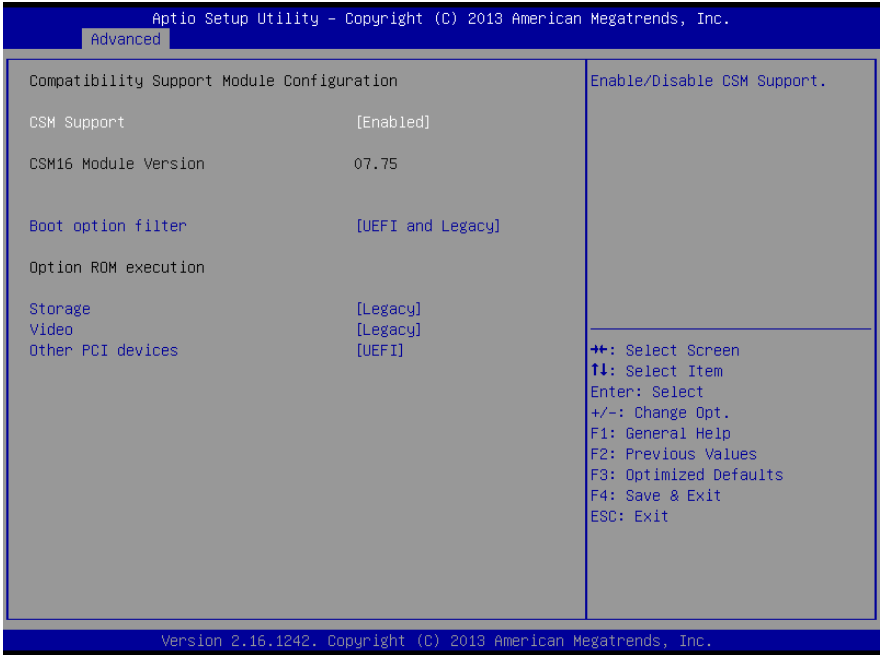

Options summary:

CSM Support	Disable	Default
	Enabled	
Boot option filter	UEFI and Legacy	Default
	Legacy only	
	UEFI only	
Storage & Video	Do not launch	Default
	UEFI	
	Legacy	
Other PCI devices	UEFI	Default
	Legacy	


3.4.7 Advanced: Trusted Computing

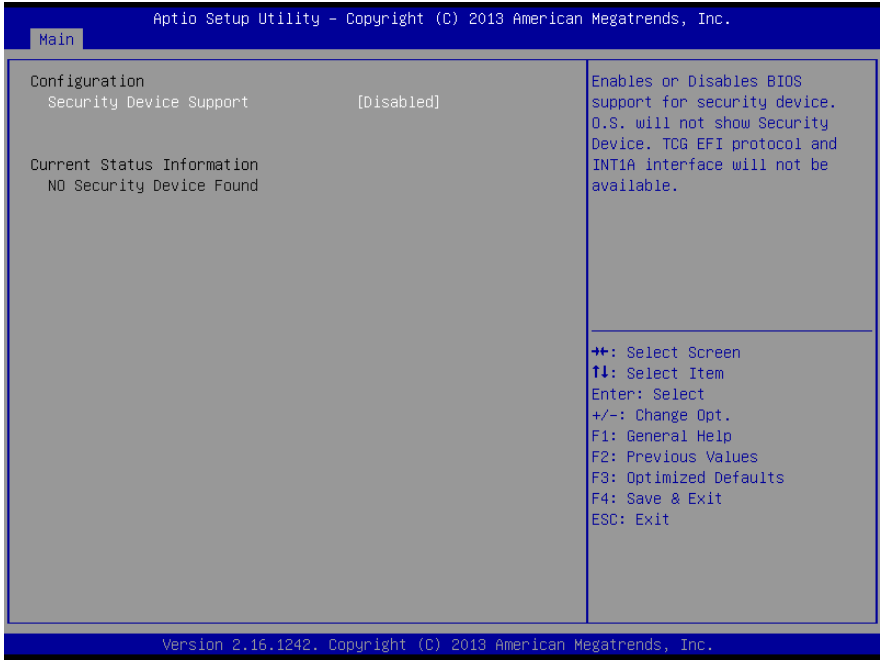

Options summary:

Security Device Support	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enabled or Disabled BIOS Support for Security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available		

3.4.8 Advanced: USB Configuration

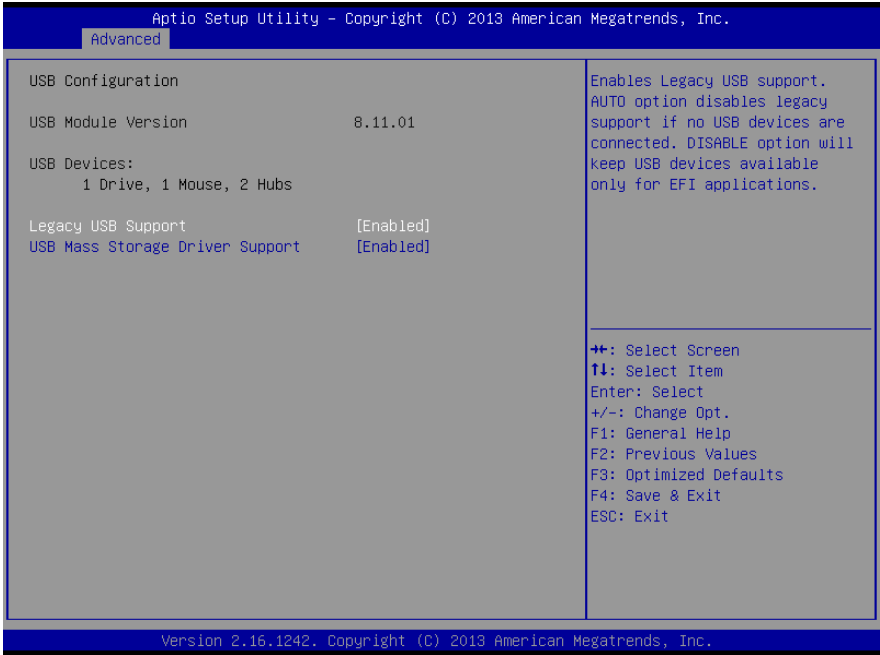


Options summary:

Legacy USB Support	Enabled	Optimal Default, Failsafe Default
	Disabled	
	Auto	
Enables BIOS Support for Legacy USB Support. When enabled, USB can be functional in legacy environment like DOS. AUTO option disables legacy support if no USB devices are connected		
USB Mass Storage Driver Support	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable USB Mass Storage Driver Support		
Device Name (Emulation)	Auto	Optimal Default, Failsafe Default

Type)	Floppy	
	Forced FDD	
	Hard Disk	
	CDROM	
If Auto. USB devices less than 530MB will be emulated as Floppy and remaining as Floppy and remaining as hard drive. Forced FDD option can be used to force a HDD formatted drive to boot as FDD(Ex. ZIP drive)		


3.4.9 Advanced: Touch Device

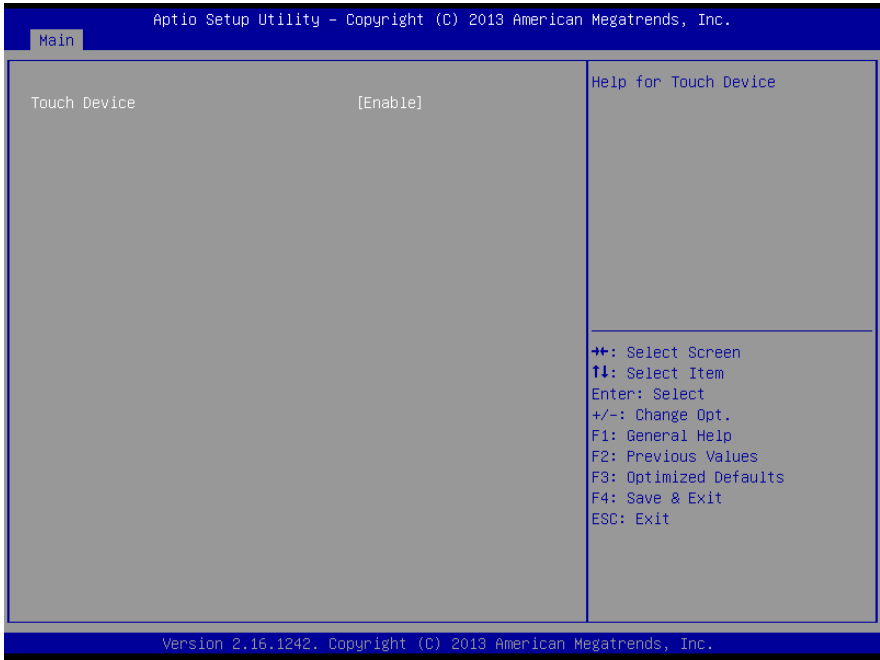


Options summary:

Touch Device	Disable	Default
	Enable	
Help for Touch Device		

3.5 Setup submenu: Chipset

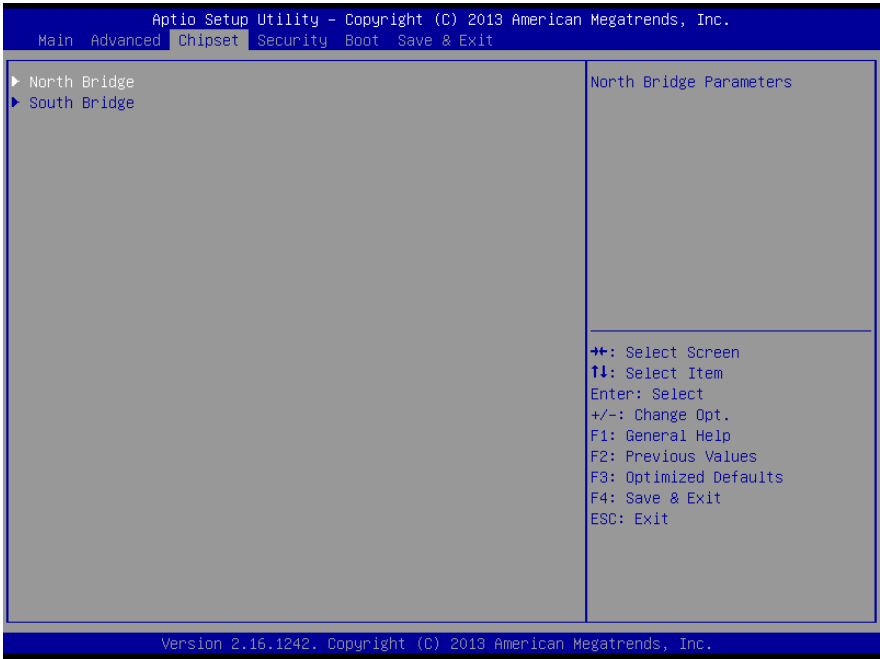


3.5.1 Chipset: Host Bridge

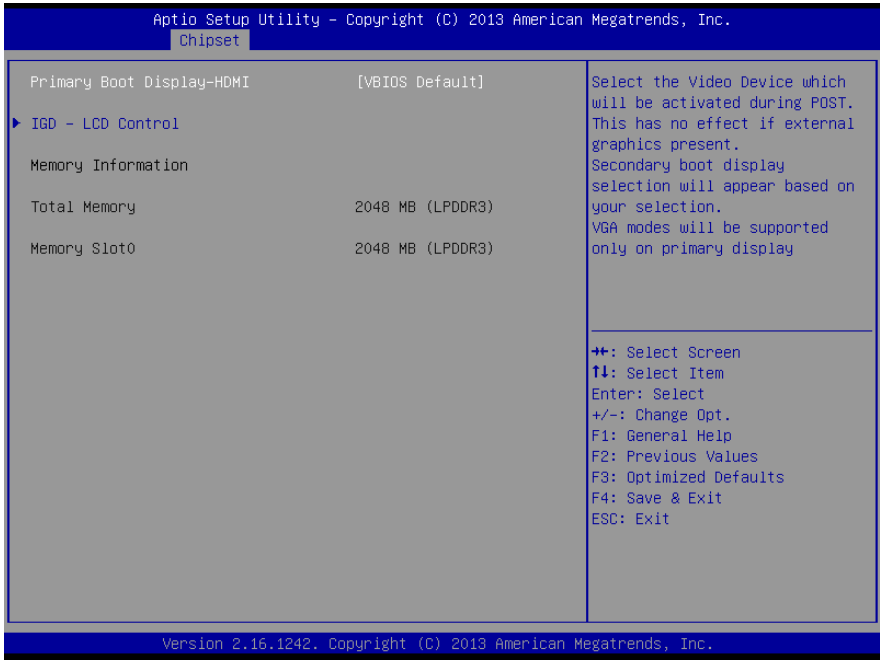

Options summary:

Primary Boot Display	VBIOS Default	Default
	CRT	
	DP/HDMI	
	LVDS	

3.5.1.1 Host Bridge: IGD - LCD Control

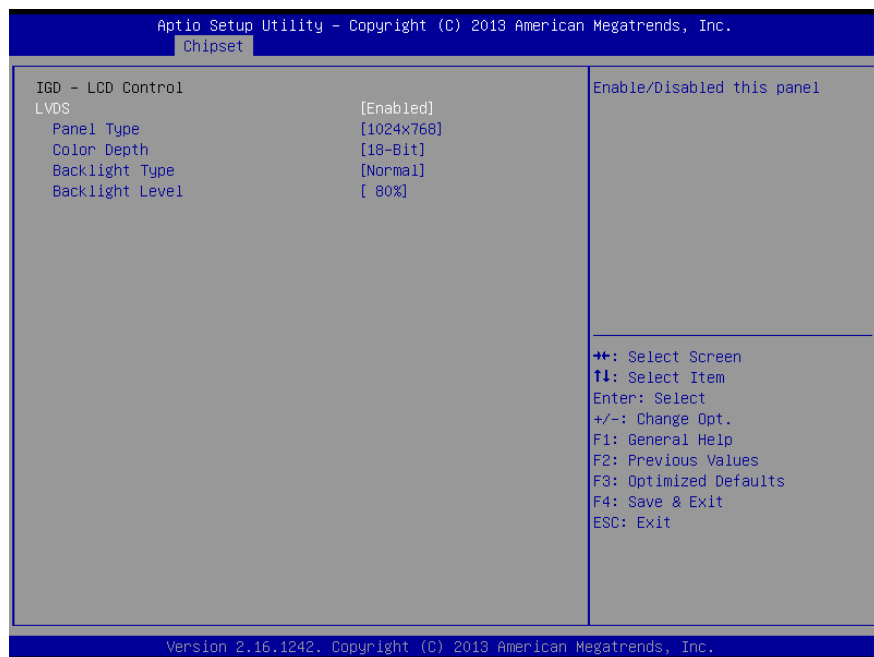


Options summary:


LVDS	Disabled	
	Enabled	Default
Enable or Disable LVDS interface		
Panel Type	640x480	Default
	800x480	
	800x600	
	1024x600	
	1024x768	
	1280x768	
	1280x1024	
	1366x768	

	1440x900	
	1600x1200	
	1920x1080	
	1920x1200	
Select panel resolution.		
Color Depth	18-Bit	Default
	24-Bit	
	36-Bit	
	48-Bit	
Select color depth of the panel		
Backlight Type	Normal	Default
	Inverted	
Select Backlight control type.		
Inverted: Brightest for low PWM duty cycle and low voltage.		
Normal: Brightest for high PWM duty cycle and high voltage.		
Backlight Level	0%	Default
	10%	
	20%	
	30%	
	40%	
	50%	
	60%	
	70%	
	80%	
	90%	
	100%	
Select Backlight Level		

3.5.2 Chipset: South Bridge

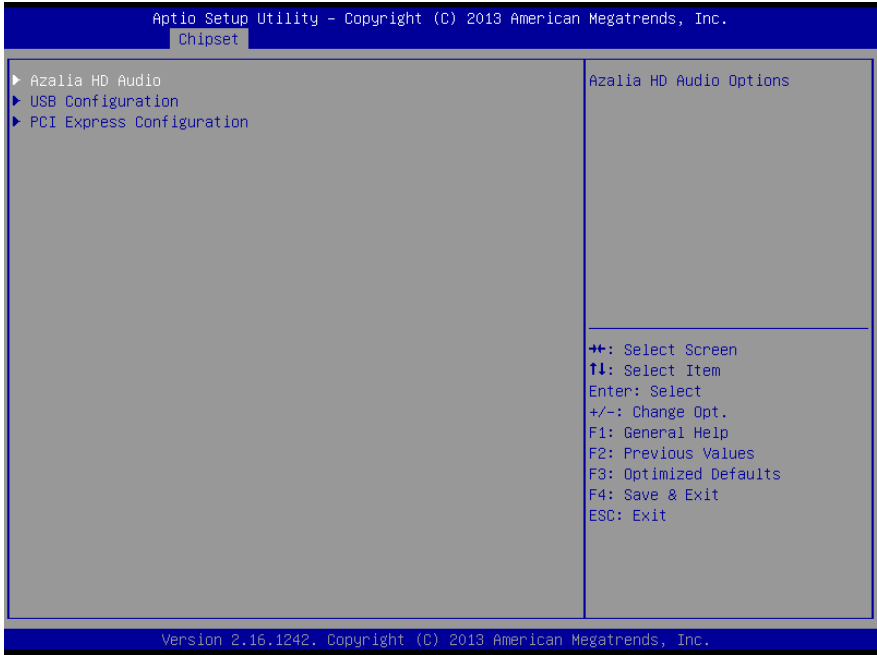

3.5.2.1 South Bridge: Azalia HD Audio

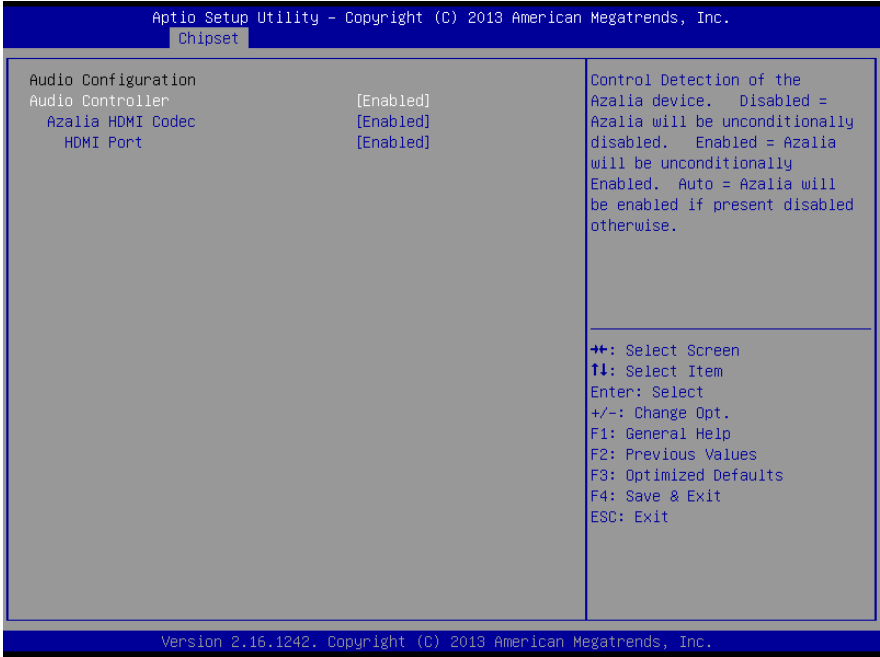


Options summary:

Audio Controller	Disabled	Default
	Enabled	
Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled. Enabled = Azalia will be unconditionally Enabled. Auto = Azalia will be enabled if present disabled otherwise.		
Azalia HDMI codec	Disabled	Default
	Enabled	
Enable/Disable internal HDMI codec for Azalia		
HDMI Port	Disabled	

	Enabled	Default
Enable/Disable HDMI Port		

3.5.2.2 South Bridge: USB Configuration

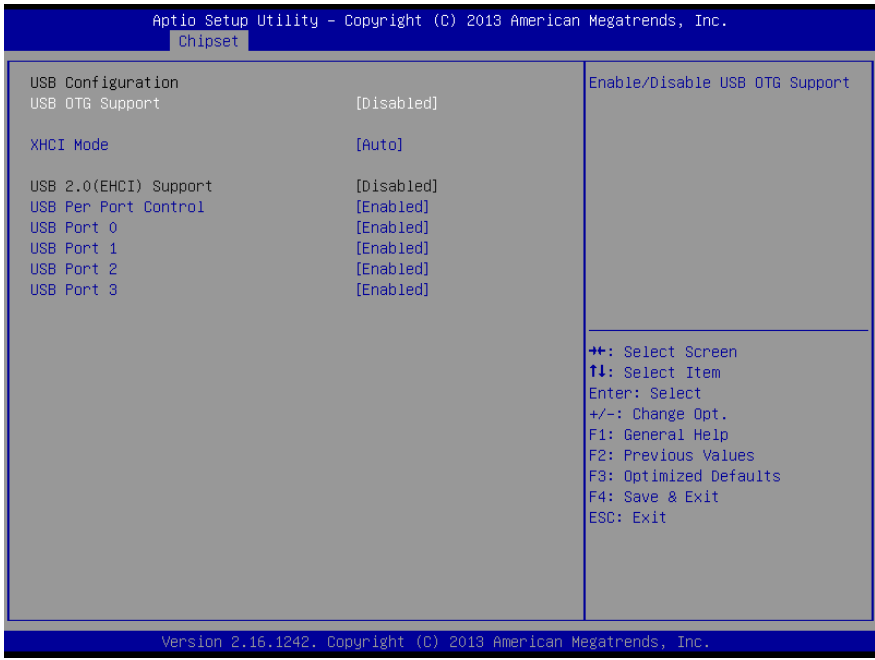


Options summary:

USB OTG Support	PCI mode	Default
	Disabled	
Enable/Disable USB OTG Support		
XHCI Mode	Enabled	Default
	Disabled	
	Auto	
	Smart Auto	
Mode of operation of XHCI controller		
USB Per Port Control	Enabled	Default
	Disabled	

Control each of the USB ports (0~3).		
Enable: Enable USB per port		
Disable: Use USB port X settings		
USB Port0/1/2/3	Enabled	Default
	Disabled	
Enable/Disable USB Port0/1/2/3		


3.5.2.3 South Bridge: PCI Express Configuration

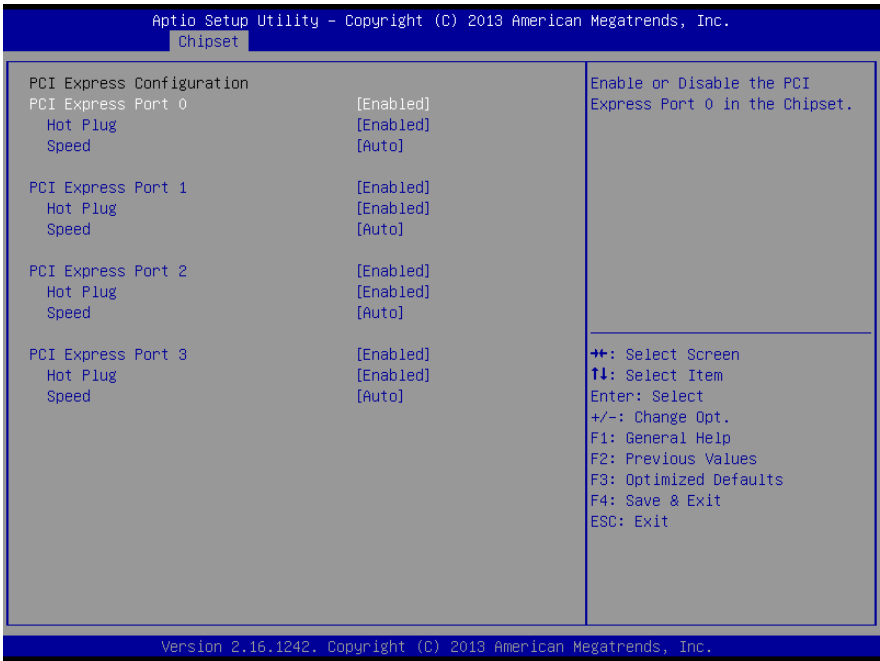

Options summary:

PCI Express Root Port 0/1/2/3	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enabling/Disabling the PCI Express root ports		
Hot Plug	Disabled	Default
	Enabled	
Enabling/Disabling the PCI Express Hot Plug		
Speed	Auto	Default
	Gen2	
	Gen1	
Configure PCIe Port Speed		

3.6 Setup submenu: Security

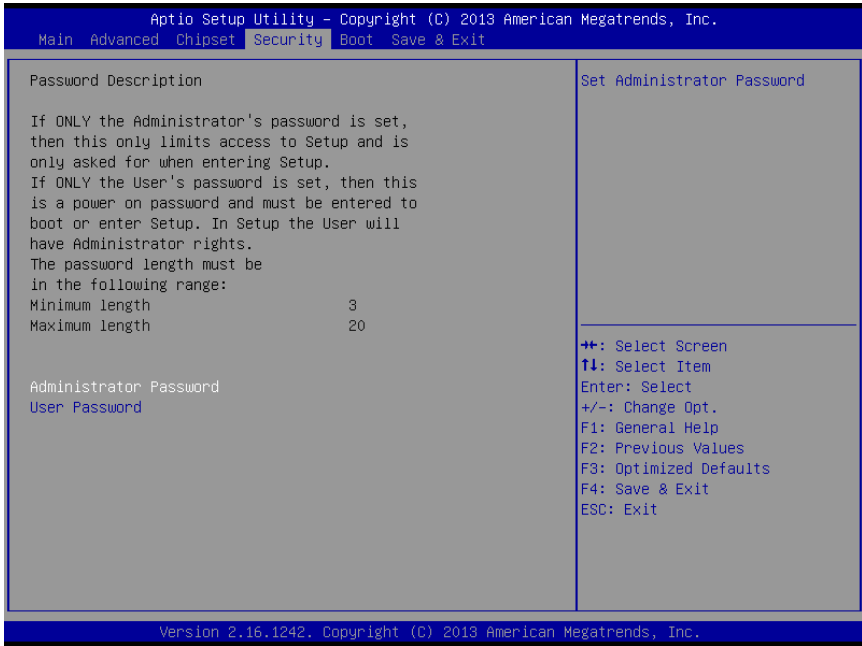

Change User/Administrator Password


You can set a User Password once an Administrator Password is set. The password will be required during boot up, or when the user enters the Setup utility. Please Note that a User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, press Enter to open a dialog box to enter your password (you can enter no more than six letters or numbers). Press Enter to confirm your entry, after which you will be prompted to retype your password for a final confirmation. Press Enter again after you have retyped it correctly.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.


3.7 Setup submenu: Boot

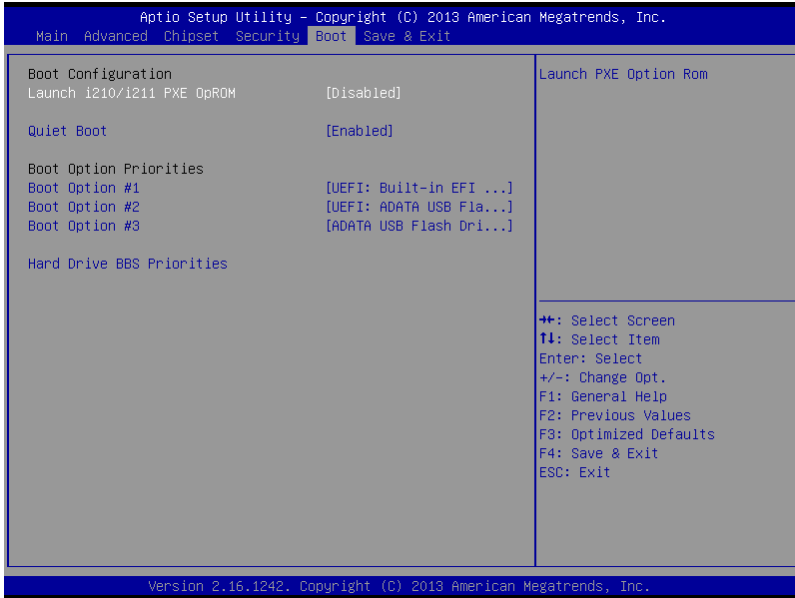

Options summary:

Launch i210/i211 PXE	Disabled	Default
OpROM	Enabled	
Launch PXE Option Rom		
Quiet Boot	Disabled	Default
	Enabled	
En/Disables Quiet Boot option		

3.8 Setup submenu: Exit

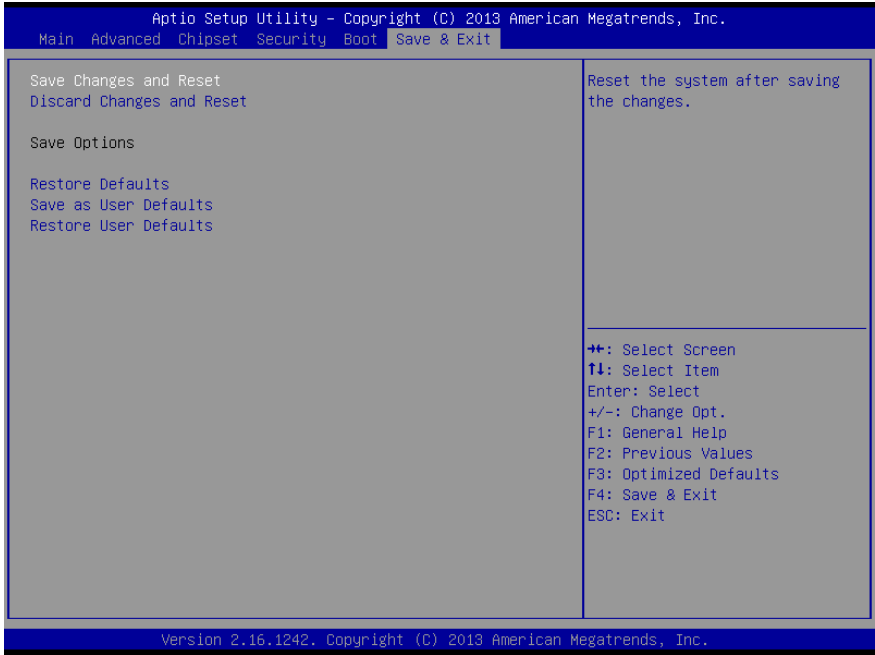

Chapter 4

Drivers Installation

4.1 Driver Download/Installation

Drivers for the GENE-BT06 can be downloaded from the product page on the AAEON website by following this link:

<https://www.aaeon.com/en/p/3and-half-inches-subcompact-boards-gene-bt06>

Download the driver(s) you need and follow the steps below to install them.

Step 1 – Install Chipset Driver

1. Open the **Step 1 - Chipset** folder and select your OS
2. Open the **SetupChipset.exe** in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 2 – Install Graphics Driver

1. Open the **Step 2 - Graphics** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 3 – Install LAN Driver

1. Click on the **Step 3 - LAN** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 4 – Install Audio Driver

1. Open the **Step 4 - Audio** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 5 – Install TXE Driver (Windows 8.1/10 only)

1. Open the **Step 5 – TXE Device** folder and select your OS
2. Open the **SetupTXE.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 6 – Install PenMount Touch 6000 Driver

1. Open the **Step 6 – PenMount Touch 6000** folder and select your OS
2. Open the **Setup.exe file** in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 7 – Install TPM Driver

1. Open the **Step 7 - TPM** folder followed by **Atmel TPM Driver Installer 3.0.3.15.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Step 8 – Install MBI Driver (Optional, Windows 8.1/10 only)

1. Open the **Step 8 – MBI (Optional)** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically


Step 9 – Install USB 3.0 Driver (Windows 7 only)

1. Open the **Step 9 – USB 3.0** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically


Step 10 – Install Serial Port Driver (Optional)

For Windows 7:


1. Change User Account Control settings to **Never notify**

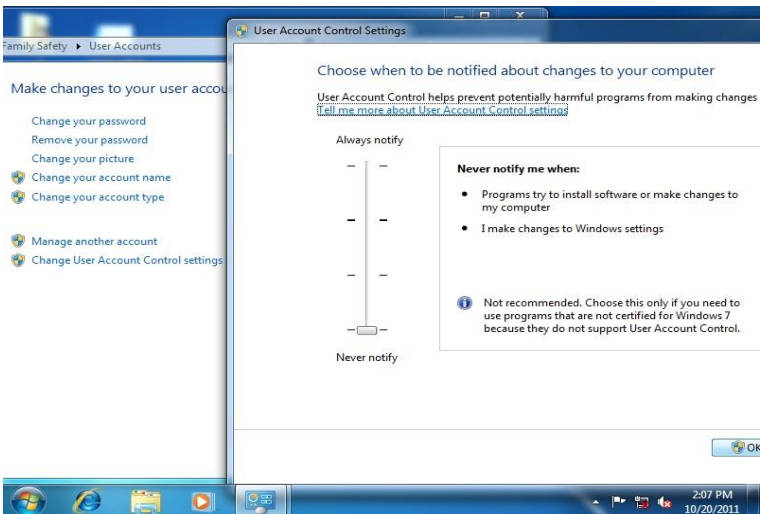

2. Reboot and log in as administrator

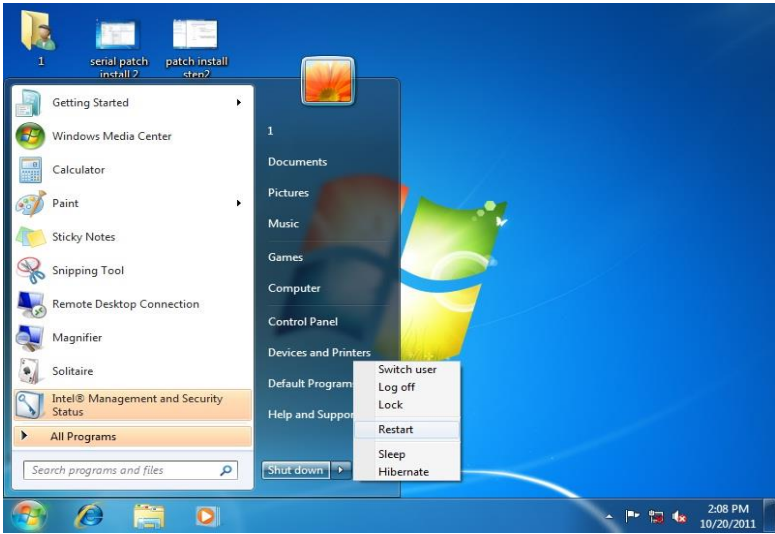


3. Run patch.bat as administrator

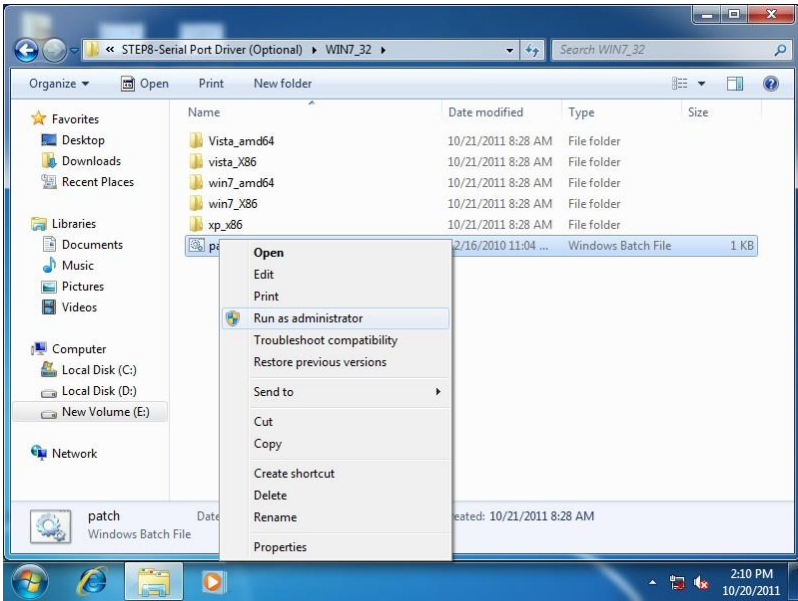


For Windows 8:


1. Open the Apps Screen, right click on the **Command Prompt** tile and select **Run as Administrator**

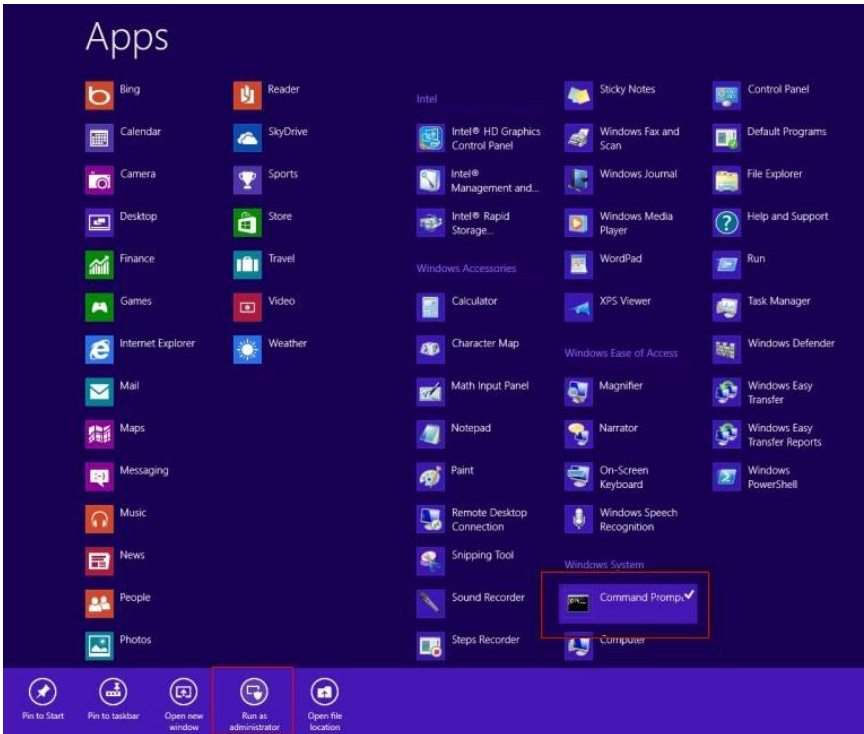

2. To install the driver (patch.bat), you will first have to locate the file in command prompt. To do that, go to the folder in which the file resides by entering **cd (file path)** eg: if the file is in a folder named abc in c drive, enter `cd c:\abc` (screenshot for reference only)
3. You are now at the folder where the file is located. Enter the **patch.bat** to open and install the drivers.

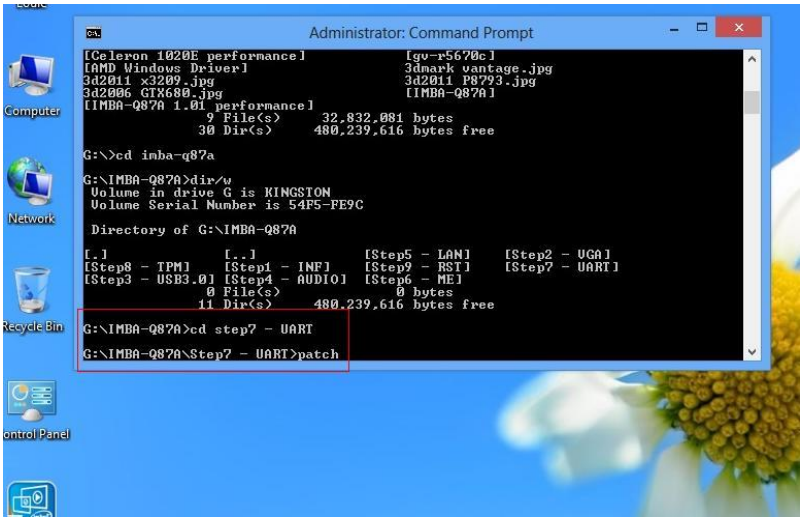


4. Reboot after installation completes.
5. To confirm the installation, go to Device Manager, expand the Ports (COM & LPT) tree and double click on any of the COM ports to open its properties. Go to the Driver tab, select Driver Details and click on **serial.sys**, you should see its provider as **Windows (R) Win 7 DDK Provider**.

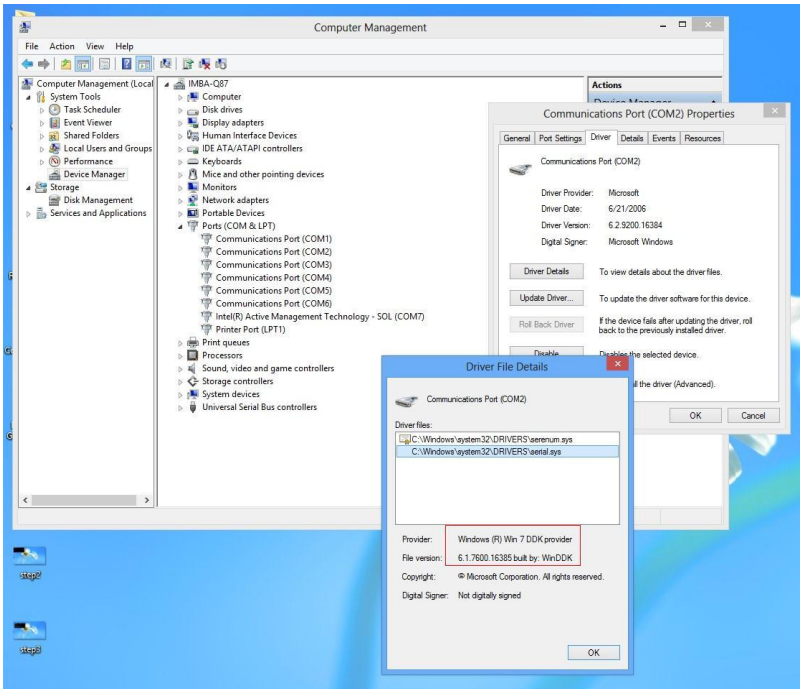


For Windows 10:

1. You will need administrator rights to install the drivers. To get it, first go to **Computer Management** in **Control Panel** and double-click on **Administrator**

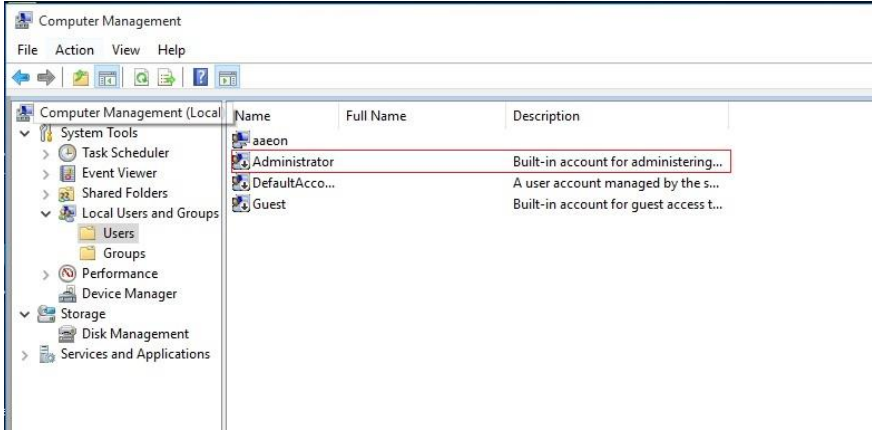


2. In the dialog box, **uncheck** the **Account is disabled** option to enable administrator account.

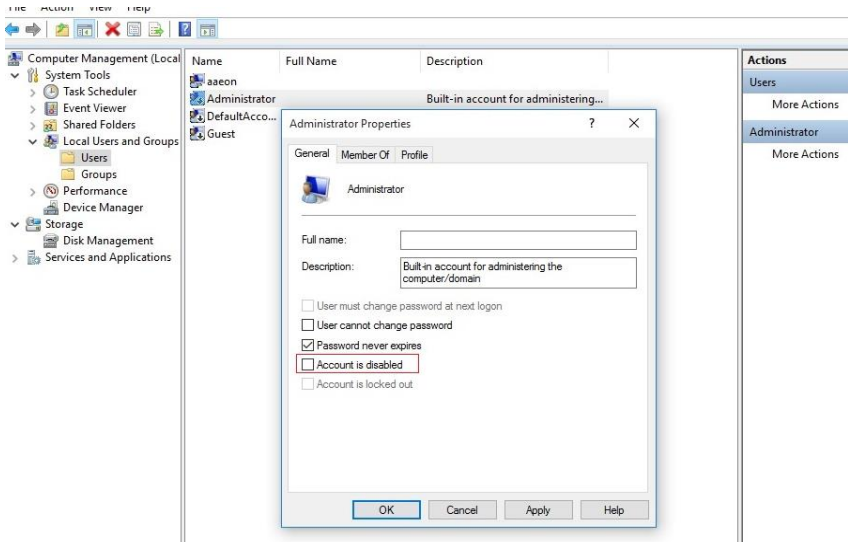

- Restart and sign in as the administrator (not password-protected by default)



- Go back to the Windows 10 Serial Port drivers directory and run patch.bat as administrator.

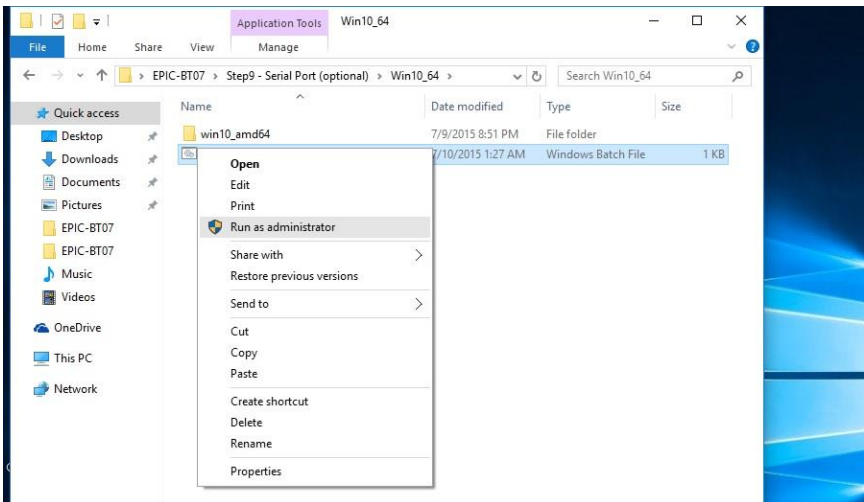

Appendix A

Mating Connectors

A.1 List of Mating Connectors and Cables

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
CN1	Amplifier right channel output	Molex	51021-0200	N/A	N/A
CN2	Amplifier left channel output	Molex	51021-0200	N/A	N/A
CN3	External +5VSB Power output and PS_ON#	Catch Electronics	2418HJ-06	N/A	N/A
CN4	Digital I/O Connector	Neltron	2026B-10	N/A	N/A
CN5	External +5VSB Power Input and PS_ON#	JST	PHR-3	ATX Cable	170220020B
CN6	+5Vout Connector	JST	PHR-2	2 Pins For HDD Power	1702150155
CN8	+9~24V Vin Connector	N/A	N/A	Power Cable	1702002010
CN9	Audio Connector	Molex	51021-1000	Audio Cable	1709100254
CN10	COM Port 4 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN12	COM Port 3 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN15	COM Port 2 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN18	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN19	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN20	COM Port 1 Connector	Molex	51021-0900	Serial Port Cable	1701090150

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
CN21	LVDS Connector	HIROSE	DF13-30DS-1.25C	N/A	N/A
CN22	P/S2 KB/MS Connector	JST	PHDR-06VS	P/S2 KB/MS Cable	1700060157
CN23	Touch Screen Connector	JST	SHR-9V-S-B	N/A	N/A
CN24	LVDS Inverter Connector	JST	PHR-5	N/A	N/A
CN25	CPU Fan Connector	Molex	22-01-2035	N/A	N/A

Appendix B

Electrical Specifications for I/O Ports

B.1 Electrical Specifications for I/O Ports

I/O	Reference	Signal Name	Output Level
Digital IO Port	CN4	+5V	+5V/1A
+5V Output for SATA HDD	CN6	+5V	+5V/1A
Audio I/O Port	CN9	+5V	+5V/1A
LPC Port	CN11	+3.3V	+3.3V/0.5A
COM Port 3	CN12	+5V/+12V	+5V/1A or +12V/1A
Mini Card Slot (Half-Size)	CN14	+3.3VSB +1.5V	+3.3V/1.1A +1.5V/0.375A
COM Port 2	CN15	+5V/+12V	+5V/1A or +12V/1A
Mini Card Slot (Full-Size)	CN17	+3.3VSB +1.5V	+3.3V/1.1A +1.5V/0.375A
USB 2.0 Ports 3	CN18	+5VSB	+5V/0.5A (per channel)
USB 2.0 Ports 2	CN19	+5VSB	
LVDS Port	CN21	+3.3V/+5V	+3.3V/2A or +5V/2A
PS/2 Keyboard/Mouse Combo Port	CN22	+5VSB	+5V/1A
LVDS Port Inverter/ Backlight Connector	CN24	+5V/+12V	+5V/1.5A or +12V/1.5A
CPU FAN	CN25	+12V	+12V/0.5A
USB Ports 0 and 1	CN28	+5VSB	+5V/1A (per channel)
DP port	CN29	+3.3V	+3.3V/1A
HDMI Port	CN31	+5V	+5V/1A
VGA Port	CN33	+5V	+5V/1A (reserved)