

ICS-6280

Industrial Network Appliance

User's Manual 2nd Ed

Copyright Notice

This document is copyrighted, 2022. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation
- Core, Atom are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

| Item | Quantity |
|--------------------|----------|
| ● ICS-6280 | 1 |
| ● SATA Cable | 1 |
| ● SATA Power Cable | 1 |
| ● DIN Rail Kit | 1 |

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

产品中有毒有害物质或元素名称及含量

AAEON System

QO4-381 Rev.A0

| 部件名称 | 有毒有害物质或元素 | | | | | |
|-----------------|-----------|-----------|-----------|-----------------|---------------|-----------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 印刷电路板 及其电子组件 | × | ○ | ○ | ○ | ○ | ○ |
| 外部信号 连接器及线材 | × | ○ | ○ | ○ | ○ | ○ |
| 外壳 | ○ | ○ | ○ | ○ | ○ | ○ |
| 中央处理器 与内存 | × | ○ | ○ | ○ | ○ | ○ |
| 硬盘 | × | ○ | ○ | ○ | ○ | ○ |
| 液晶模块 | × | ○ | ○ | ○ | ○ | ○ |
| 光驱 | × | ○ | ○ | ○ | ○ | ○ |
| 触控模块 | × | ○ | ○ | ○ | ○ | ○ |
| 电源 | × | ○ | ○ | ○ | ○ | ○ |
| 电池 | × | ○ | ○ | ○ | ○ | ○ |

本表格依据 SJ/T 11364 的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

×：表示该有害物质的某一均质材料超出了 GB/T 26572 的限量要求，然而该部件仍符合欧盟指令 2011/65/EU 的规范。

备注：

- 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。
- 二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。
- 三、上述部件物质液晶模块、触控模块仅一体机产品适用。

China RoHS Requirement (EN)

Hazardous and Toxic Materials List

AAEON System

QQ4-381 Rev.A0

| Component Name | Hazardous or Toxic Materials or Elements | | | | | |
|--|--|--------------|--------------|------------------------------|---------------------------------|--|
| | Lead (Pb) | Mercury (Hg) | Cadmium (Cd) | Hexavalent Chromium (Cr(VI)) | Polybrominated biphenyls (PBBS) | Polybrominated ethers diphenyl (PBDES) |
| PCB and Components | X | O | O | O | O | O |
| Wires & Connectors for Ext.Connections | X | O | O | O | O | O |
| Chassis | O | O | O | O | O | O |
| CPU & RAM | X | O | O | O | O | O |
| HDD Drive | X | O | O | O | O | O |
| LCD Module | X | O | O | O | O | O |
| Optical Drive | X | O | O | O | O | O |
| Touch Control Module | X | O | O | O | O | O |
| PSU | X | O | O | O | O | O |
| Battery | X | O | O | O | O | O |

This form is prepared in compliance with the provisions of SJ/T 11364.

O: The level of toxic or hazardous materials present in this component and its parts is below the limit specified by GB/T 26572.

X: The level of toxic or hazardous materials present in the component exceed the limits specified by GB/T 26572, but is still in compliance with EU Directive 2011/65/EU (RoHS 2).

Notes:

1. The Environment Friendly Use Period indicated by labelling on this product is applicable only to use under normal conditions.
2. Individual components including the CPU, RAM/memory, HDD, optical drive, and PSU are optional.
3. LCD Module and Touch Control Module only applies to certain products which feature these components.

Table of Contents

| | |
|---|-----------|
| Chapter 1 – Product Specifications | 1 |
| 1.1 Specifications | 2 |
| Chapter 2 – Hardware Information | 5 |
| 2.1 Dimensions | 6 |
| 2.2 Jumpers and Connectors..... | 10 |
| 2.3 List of Jumpers | 12 |
| 2.3.1 Jumper Settings..... | 12 |
| 2.4 List of Connectors..... | 13 |
| 2.4.1 Digital I/O (CN10)..... | 14 |
| Chapter 3 – AMI BIOS Setup..... | 15 |
| 3.1 System Test and Initialization | 16 |
| 3.2 AMI BIOS Setup | 17 |
| 3.3 Setup Submenu: Main..... | 18 |
| 3.4 Setup Submenu: Advanced..... | 19 |
| 3.4.1 CPU Configuration | 20 |
| 3.4.2 PCH-FW Configuration | 21 |
| 3.4.3 Firmware Update Configuration | 22 |
| 3.4.4 Trusted Computing | 23 |
| 3.4.5 SATA Configuration..... | 25 |
| 3.4.6 Hardware Monitor..... | 26 |
| 3.4.7 System FAN Setting..... | 27 |
| 3.4.8 SIO Configuration | 29 |
| 3.4.8.1 Serial Port 1 Configuration..... | 30 |
| 3.4.8.2 Serial Port 2 Configuration..... | 31 |
| 3.4.9 Serial Port Console Redirection..... | 32 |
| 3.4.10 Power Management..... | 33 |

| | | |
|--|---------------------------------------|-----------|
| 3.4.11 | Digital IO Port Configuration | 34 |
| 3.4.12 | LAN Bypass Configuration | 35 |
| 3.4.13 | Case Open Configuration | 36 |
| 3.5 | Setup Submenu: Chipset | 37 |
| 3.5.1 | System Agent (SA) Configuration | 38 |
| 3.5.2 | Memory Configuration | 39 |
| 3.5.3 | Graphics Configuration | 40 |
| 3.5.4 | PCH-IO Configuration..... | 41 |
| 3.5.5 | PCI Express Configuration | 42 |
| 3.6 | Setup Submenu: Boot | 43 |
| 3.7 | Setup Submenu: Security..... | 44 |
| 3.7.1 | Secure Boot | 45 |
| 3.7.2 | Key Management | 47 |
| 3.8 | Setup Submenu: Save & Exit..... | 48 |
| Chapter 4 – Driver Installation | | 49 |
| 4.1 | Driver Installation..... | 50 |
| Appendix B - I/O Information | | 52 |
| B.1 | I/O Address Map | 53 |
| B.2 | Memory Address Map | 54 |
| B.3 | IRQ Mapping Chart..... | 55 |

Chapter 1

Product Specifications

1.1 Specifications

System

| | |
|---------------------|---|
| Form Factor | DIN Rail/ Desktop |
| Processor | Intel® Elkhart lake SoC Processor |
| System Memory | 260-pin DDR4 3200Mhz SODIMM with IB ECC support x 1 |
| Chipset | SoC |
| Ethernet | Intel® i210 Gigabit Ethernet x 4 |
| Bypass | Supports up to 2 Pairs LAN Bypass (Optional) |
| BIOS | AMI SPI Flash BIOS |
| Serial ATA | SATA III port x 1 for 2.5" SSD support |
| CFast/mSATA | mSATA (Full size) socket colay SATA III port x 1 |
| Expansion Interface | Supports Mini-Card slot x 1 with SIM socket |
| USB | USB 3.2 Gen 1 x 2 |
| Serial Port | Supports up to RS-232/422/485 COM port x 2 |
| Watchdog Timer | 1~255 steps by software programmable |
| RTC | Internal RTC |
| System Fan | Fanless |
| Color | Black |

System

| | |
|-------------------|--|
| Power Supply | Dual 2-Pin Phoenix terminal block |
| Dimension | 5.12" x 4.96" x 2.83" (130mm x 126mm x 72mm) |
| Power Requirement | Redundant 9~48Vdc power input |
| MTBF (Hours) | TBD |

Display

| | |
|-----------|-----------------------------|
| Chipset | Intel® HD Graphics |
| Interface | HDMI port x 1, VGA port x 1 |

I/O

| | |
|-----------------|---|
| Front I/O Panel | RJ-45 GbE x 4 RS-232/422/485 COM Ports x 2 HDMI port x 1 VGA port x 1 USB 3.2 Gen 1 x 2 Micro SIM slot x 1 Software programmable button x 1 Power LED x 1 HDD LED x 1 Status LED x 1 |
| Rear I/O Panel | DIN Rail/ Wallmount Lock |
| Top Panel | 2-Pin Terminal Block +9~48Vdc x 2 |

Environmental Parameters and Dimensions


| | |
|-----------------------|--|
| Operating Temperature | -40°F ~ 167°F (-40°C ~ 75°C) |
| Storage Temperature | -40°F ~ 185°F (-40°C ~ 85°C) |
| Operating Humidity | 10% ~ 80% relative humidity, non-condensing |
| Storage Humidity | 10% ~ 80% @40°C; non-condensing |
| Vibration | 0.5 Grms/ 5 ~ 500Hz / operation (2.5" SSD) 1.5 Grms/ 5 ~ 500Hz / non operation |
| Shock | 10 G peak acceleration (11 m sec. duration), operation 20 G peak acceleration (11 m sec. duration), non operation |



Chapter 2

Hardware Information


2.1 Dimensions

System

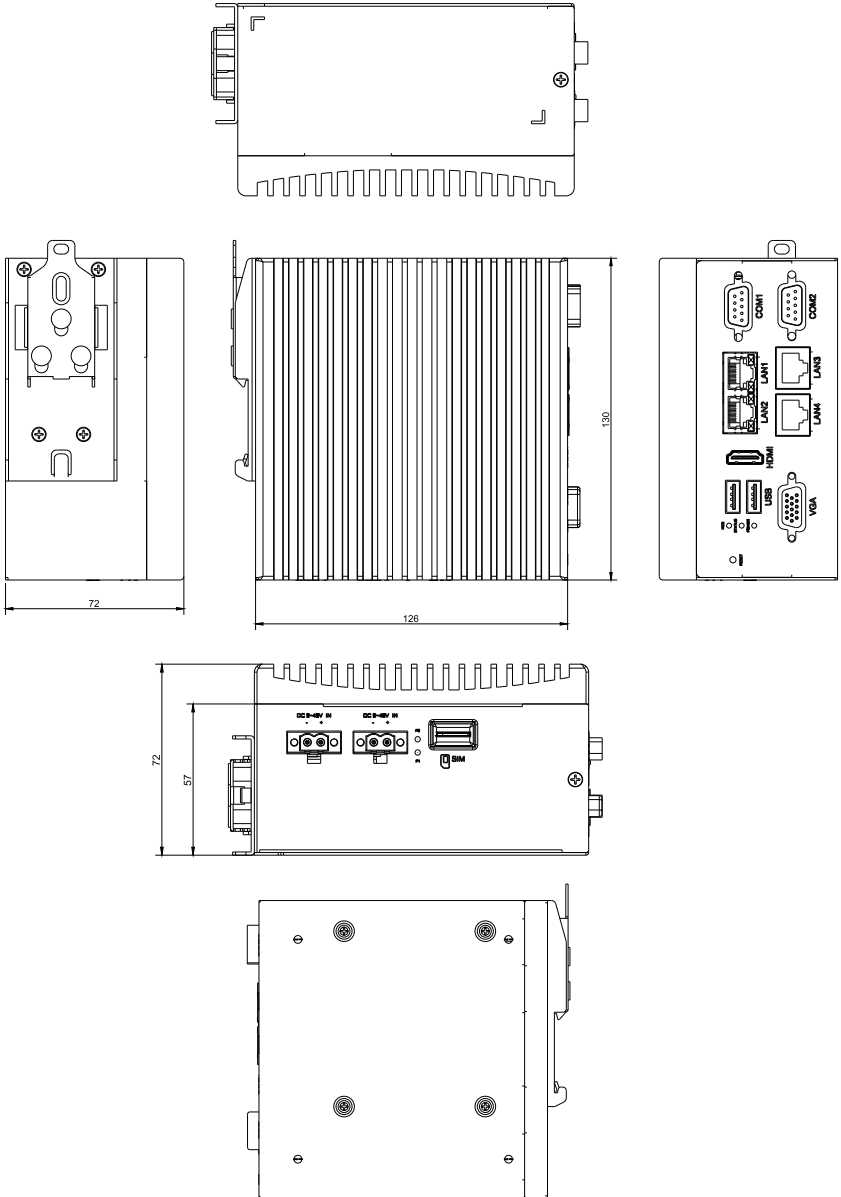


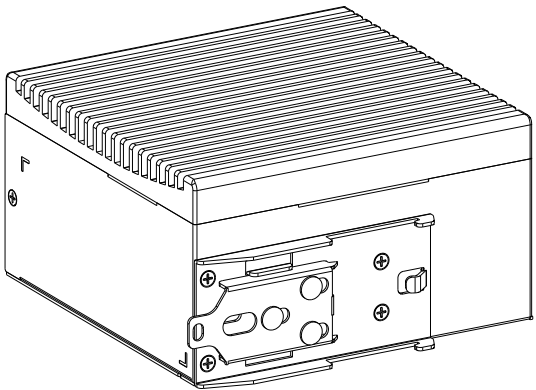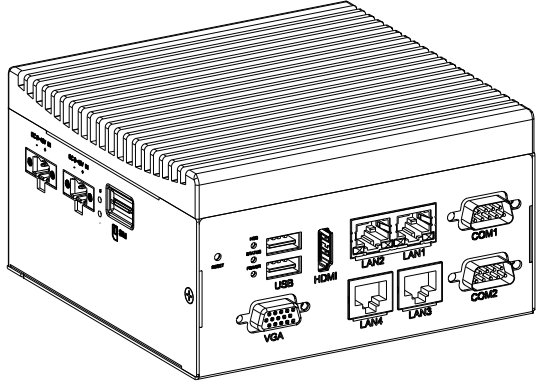

Board
Component Side

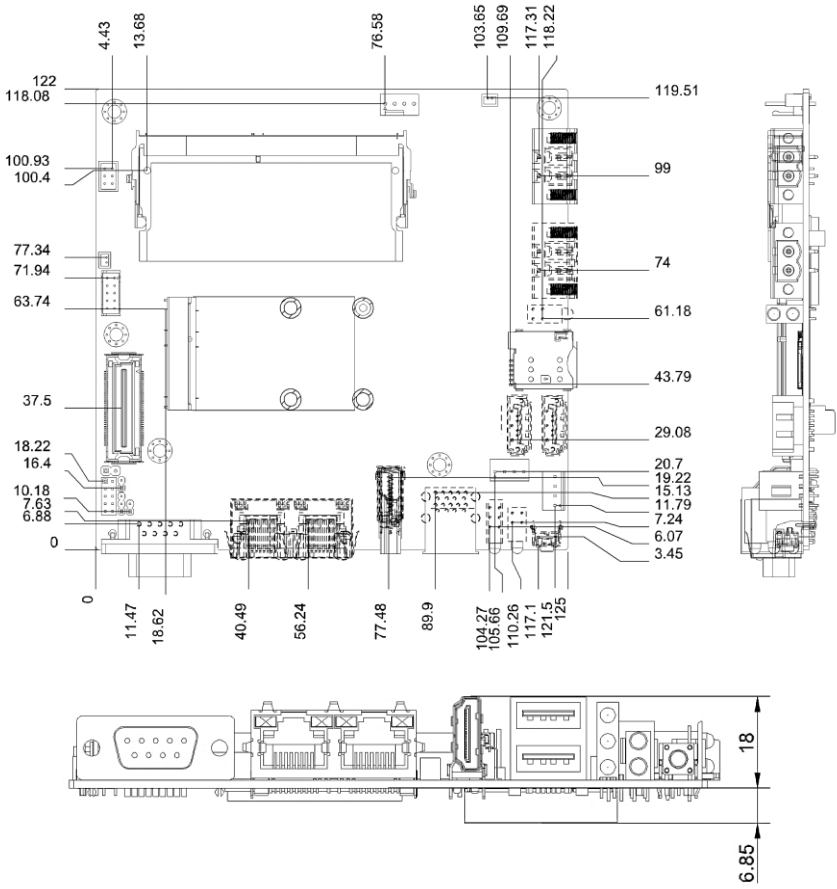


Solder Side

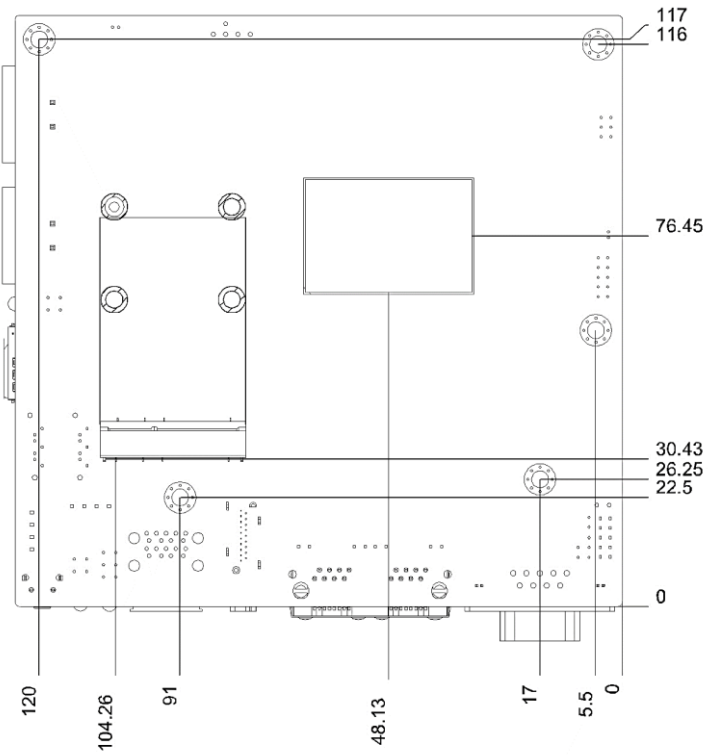


2.2 Jumpers and Connectors

Component Side

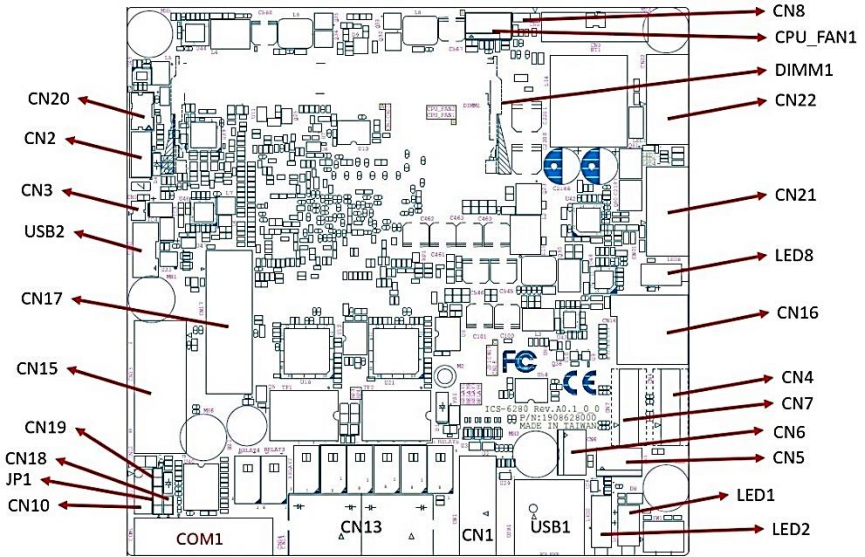

Solder Side

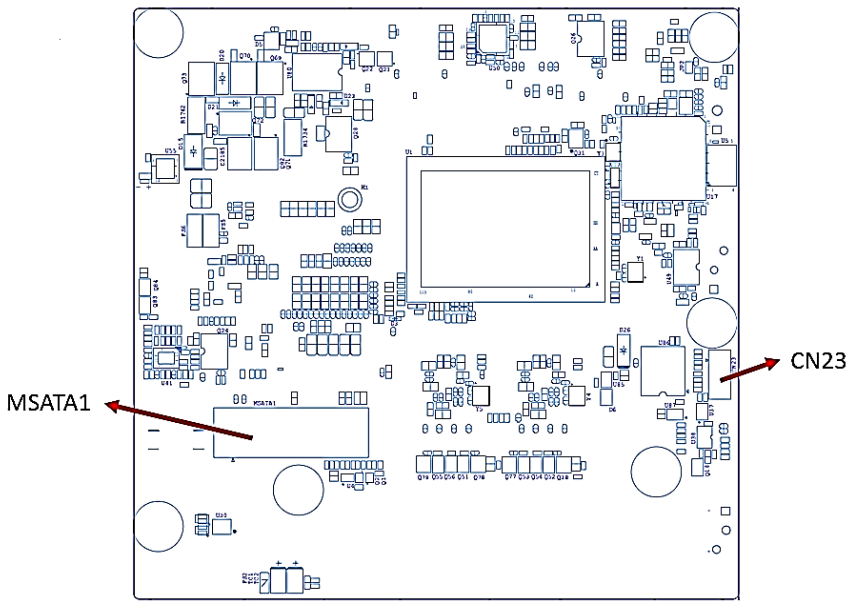

2.3 List of Jumpers

Please refer to the table below for all of the board's jumpers that you can configure for your application.

| Label | Function |
|-------|-----------------|
| CN8 | Clear CMOS |
| JP1 | Power-on states |

2.3.1 Jumper Settings

Clear CMOS (CN8)

| | |
|------------------|-----|
| Normal (Default) | 1-2 |
| Clear CMOS | 2-3 |

Auto Power Button (JP1)

| | |
|--|-----|
| Power-on via AC Power. (AUTO power button) (Default) | 2-3 |
| Power-on via Power Button. | 1-2 |

2.4 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application

| Label | Function |
|-------|-----------------------|
| CN20 | PS/2 keyboard & mouse |
| CN2 | SPI Flash |
| CN3 | Debug port |
| USB2 | USB2.0 |
| CN17 | Mini card |
| CN15 | Board-to-board |
| CN19 | Reset pin |
| CN18 | Power button |
| JP1 | Auto power button |
| CN10 | DIO |
| CN1 | COM port |
| CN13 | LAN port |
| CN1 | HDMI |
| USB1 | USB3.0 |
| LED2 | System Status LED |
| LED1 | LAN Bypass Status LED |
| CN5 | SATA power |
| CN6 | SATA power |
| CN7 | SATA |
| CN4 | SATA |
| CN16 | SIM card |
| LED8 | PSU Status LED |
| CN21 | Power connector |

| | |
|----------|-----------------|
| CN22 | Power connector |
| CN8 | Clear CMOS |
| CPU_FAN1 | CPU fan |
| DIMM1 | Memory |
| CN23 | MCU Flash |
| mSATA | mSATA slot |

2.4.1 Digital I/O (CN10)

This connector offers 5 pairs of digital I/O functions. The pin definitions are illustrated below:

| PIN | Signal | PIN | Signal |
|-----|------------------|-----|------------------|
| 1 | Digital I/O bit1 | 2 | Digital I/O bit2 |
| 3 | Digital I/O bit3 | 4 | Digital I/O bit4 |
| 5 | Digital I/O bit5 | 6 | Digital I/O bit6 |
| 7 | Digital I/O bit7 | 8 | Digital I/O bit8 |
| 9 | +3.3V | 10 | GND |

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration stored in the CMOS memory and BIOS NVRAM. If system configuration is not found or system configuration data error is detected, system will load optimized default and re-boot with this default system configuration automatically.

There are four situations in which you will need to setup system configuration:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The system configuration is reset by Clear-CMOS jumper
4. The CMOS memory has lost power and the configuration information has been erased.

The ICS-6280 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM and BIOS NVRAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press or <ESC> immediately. This will allow you to enter Setup.

Main

Set the date, use tab to switch between date elements.

Advanced

In here, can set power mode, USB configuration and check CPU type and speed

Chipset

Host bridge parameters.

Boot

Enables/disable quiet boot option.


Security

Set setup administrator/user password.


Save & Exit

Exit system setup after saving the changes.

3.3 Setup Submenu: Main

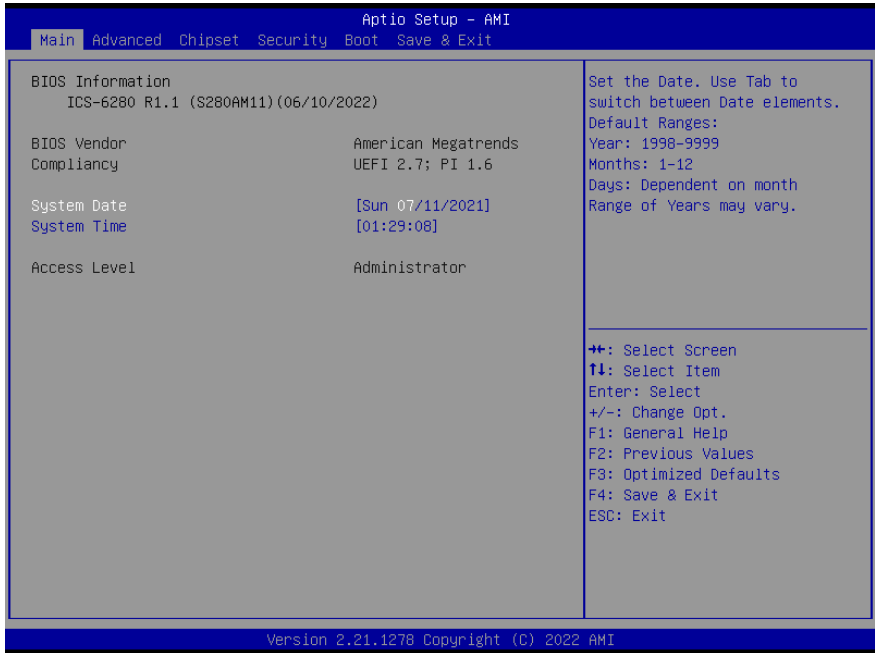

3.4 Setup Submenu: Advanced

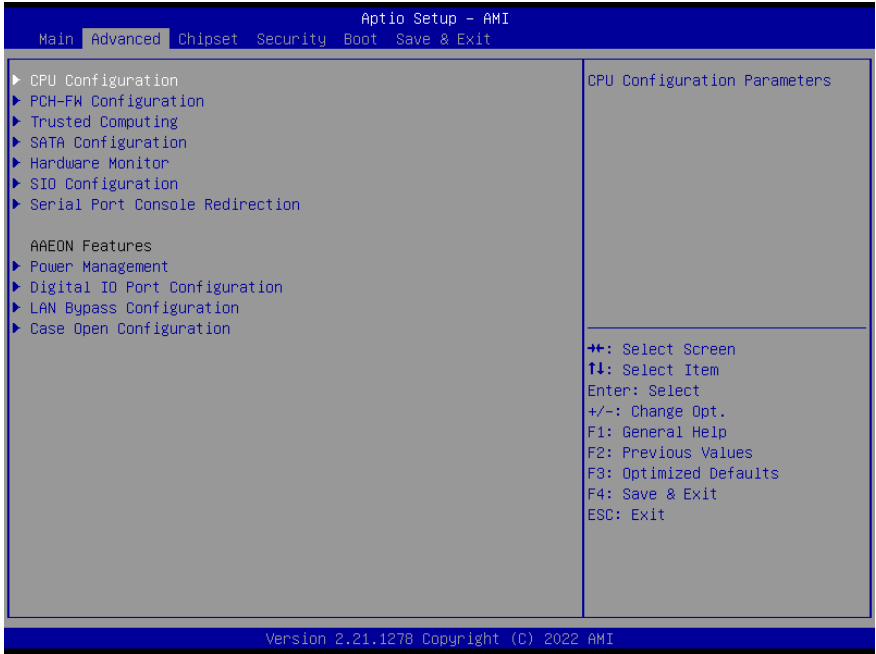

3.4.1 CPU Configuration




Options summary:


| | | |
|------------------------|-----|------------------------------------|
| Active Processor Cores | All | Optimal Default, Fail-Safe Default |
| | 1 | - |
| | 2 | - |
| | 3 | - |

Number of cores to enable in each processor package.

3.4.2 PCH-FW Configuration

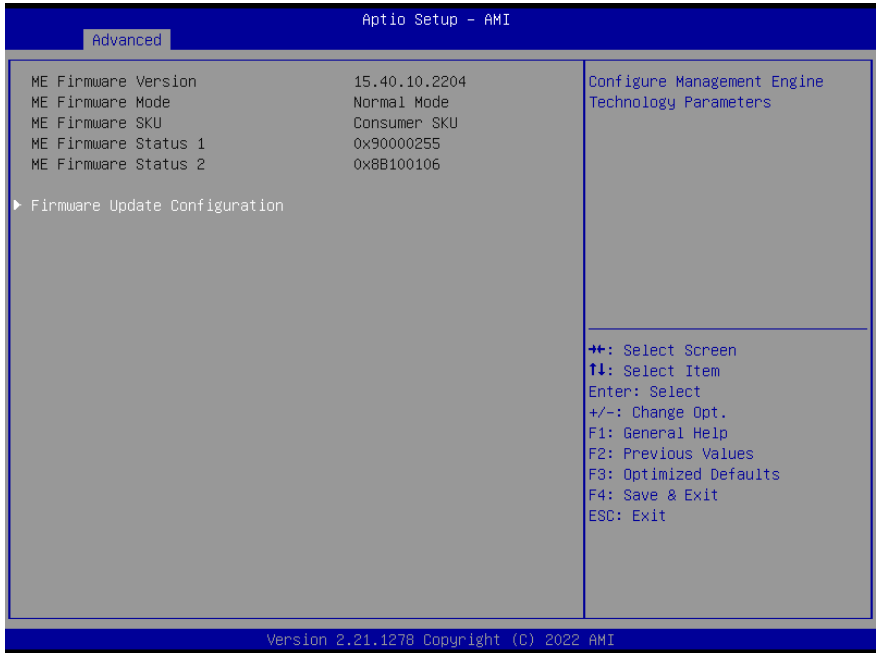

3.4.3 Firmware Update Configuration

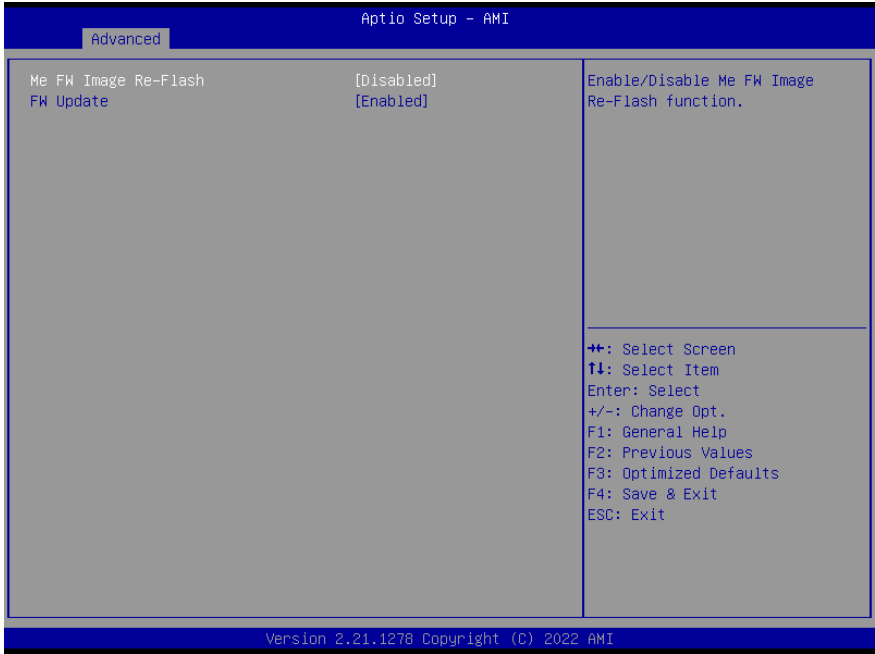

Options summary:

| | | |
|--|----------|------------------------------------|
| Me FW Image Re-Flash | Enabled | |
| | Disabled | Optimal Default, Fail-Safe Default |
| Enable/Disable Me FW Image Re-Flash function | | |
| FW Update | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | |
| Enable/Disable Me FW update function | | |

3.4.4 Trusted Computing




Options summary:

| | | |
|---|-----------|------------------------------------|
| Security Device Support | Enable | Optimal Default, Fail-Safe Default |
| | Disable | - |
| Enables or disables BIOS support for security device. OS will not show Security Device. TCG EFI protocol and INT1A interface will not be available. | | |
| SHA-1 PCR Bank | Enabled | - |
| | Disabled | Optimal Default, Fail-Safe Default |
| Enables or disables SHA-1 PCR Bank | | |
| SHA256 PCR Bank | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | - |
| Enables or disables SHA256 PCR Bank. | | |
| Pending operation | None | Optimal Default, Fail-Safe Default |
| | TPM Clear | - |
| Schedule an operation for the Security Device. NOTE: Your computer will reboot during restart in order to change State of Security Device. | | |

| | | |
|---|----------|------------------------------------|
| Platform Hierarchy | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | - |
| Enables or disables Platform Hierarchy | | |
| Storage Hierarchy | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | - |
| Enables or disables Storage Hierarchy | | |
| Endorsement Hierarchy | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | - |
| Enables or disables Endorsement Hierarchy | | |
| TPM 2.0 UEFI Spec Version | TCG_2 | Optimal Default, Fail-Safe Default |
| | TCG_1_2 | - |
| Select the TCH2 Spec Version Support. TCG_1_2: The compatible mode for Win8/Win10 TCG_2: Support new TCG2 protocol and event format for Win10 or later | | |
| Physical Presence Spec Version | 1.3 | Optimal Default, Fail-Safe Default |
| | 1.2 | - |
| Select to tell OS to support PPI spec version 1.2 or 1.3. NOTE: some HCK tests might not support version 1.3. | | |
| Device Select | Auto | Optimal Default, Fail-Safe Default |
| | TPM 1.2 | - |
| | TPM 2.0 | - |
| TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices if not found. TPM 1.2 devices will be enumerated. | | |

3.4.5 SATA Configuration

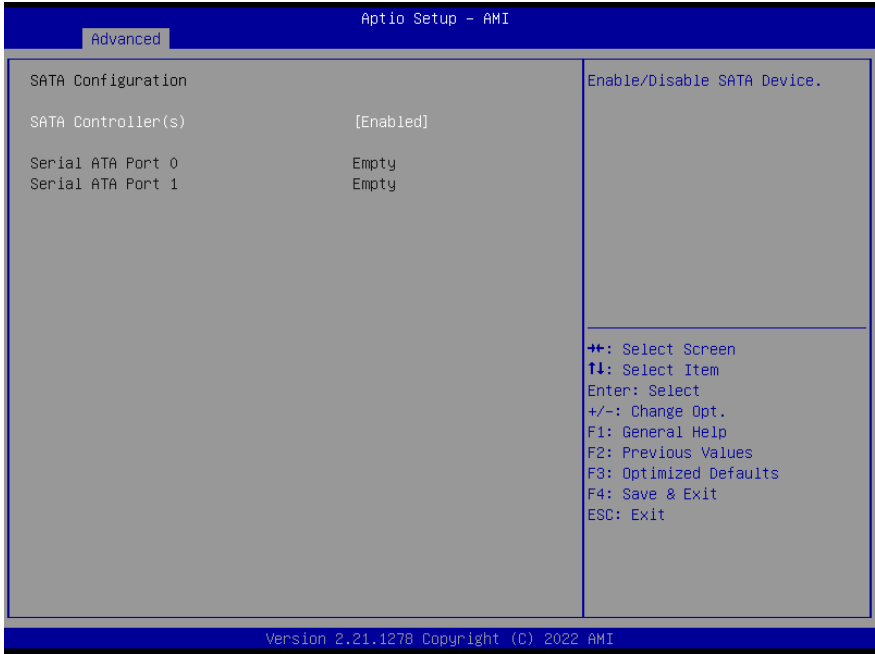

Options summary:

| | | |
|----------------------------|----------|------------------------------------|
| SATA Controller(s) | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | |
| Enable/Disable SATA Device | | |

3.4.6 Hardware Monitor

The screenshot shows the 'Advanced' menu of the Aptio Setup - AMI BIOS. The 'System FAN Setting' section displays various temperature and voltage readings. The 'Smart Fan function setting' section provides navigation instructions for the fan settings.


| System FAN Setting | |
|---------------------|-------------|
| CPU DTS Temperature | : +56 ℃ |
| System Temperature | : +49 ℃ |
| System FAN | : N/A |
| VCCORE | : +1.689 V |
| VMEM | : +1.188 V |
| +12V | : +12.033 V |
| +3.3V | : +3.289 V |
| +5V | : +4.932 V |
| +48V1 | : +11.380 V |
| +48V2 | : +11.810 V |
| VSB3V | : +3.248 V |
| VBAT | : +3.030 V |
| AVCC3 | : +3.248 V |

Smart Fan function setting

⚡: Select Screen
⚡: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.21.1278 Copyright (C) 2022 AMI


3.4.7 System FAN Setting

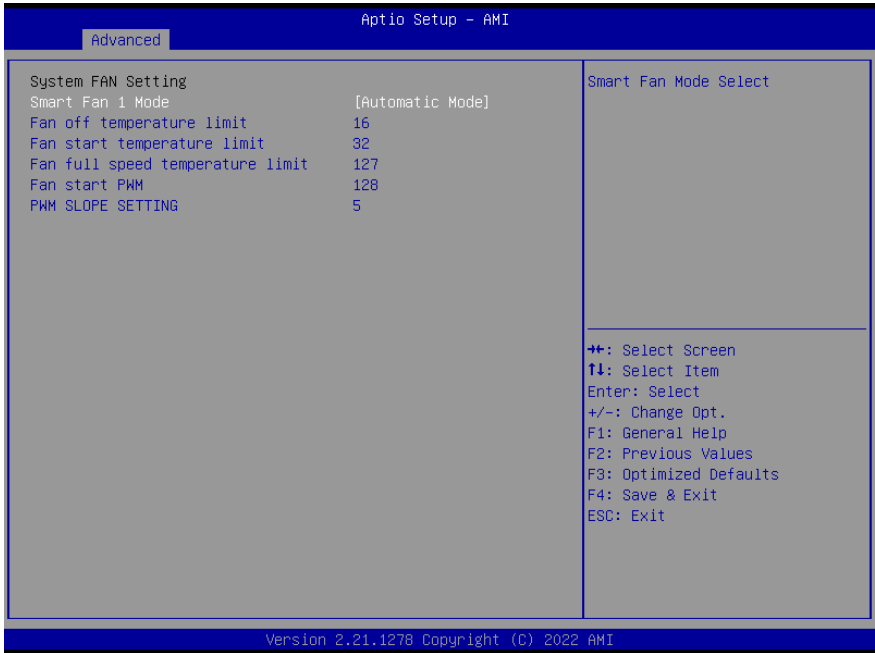

Options summary:

| | | |
|---|----------------|------------------------------------|
| Smart Fan 1 Mode | Automatic Mode | Optimal Default, Fail-Safe Default |
| | Software Mode | |
| Smart Fan Mode Select | | |
| Fan off temperature limit | 16 | Optimal Default, Fail-Safe Default |
| Fan will off when temperature lower then this limit | | |
| Fan start temperature limit | 32 | Optimal Default, Fail-Safe Default |
| Fan will work when temperature higher then this limit | | |
| Fan full speed temperature limit | 127 | Optimal Default, Fail-Safe Default |
| Fan will full speed when temperature higher then this limit | | |
| Fan start PWM | 128 | Optimal Default, Fail-Safe Default |
| Fan will full start with this PWM value | | |

| | | |
|---|---|-----------------------------------|
| PWM SLOPE SETTING | 5 | Optimal Default, Failsafe Default |
| PWM SLOPE Selection Slope = PWM value / °C | | |

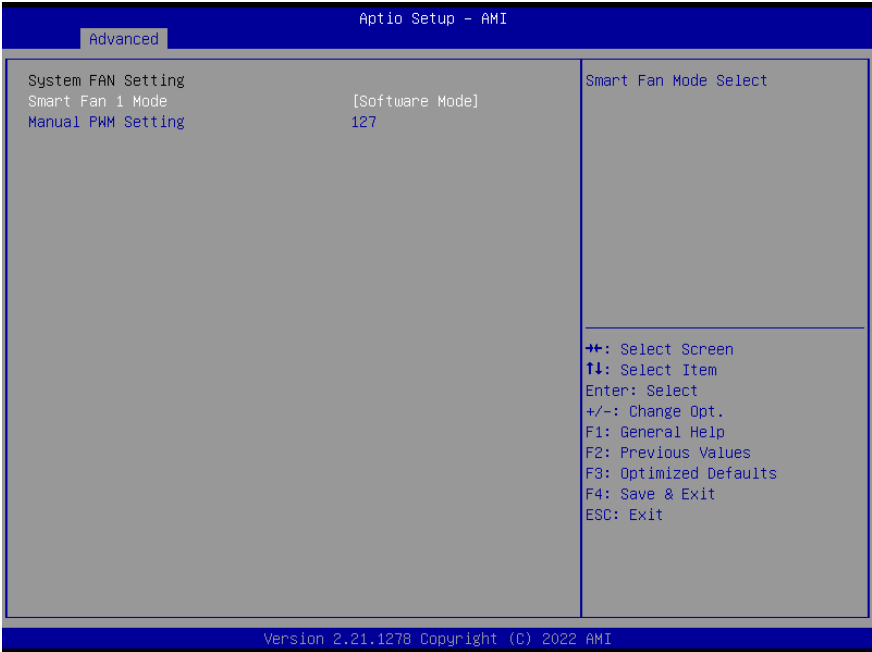

Options summary:

| | | |
|--|-----|------------------------------------|
| Manual PWM Setting | 127 | Optimal Default, Fail-Safe Default |
| Fan will work with this Manual PWM Value | | |

3.4.8 SIO Configuration



3.4.8.1 Serial Port 1 Configuration



Options summary:

| | | |
|---|-----------------------|------------------------------------|
| Use This Device | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | |
| Enable or Disable this Logical Device | | |
| Possible | Use Automatic setting | Optimal Default, Fail-Safe Default |
| | IO=3F8h; IRQ=4 | |
| | IO=2F8h; IRQ=3 | |
| Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts | | |
| Mode | RS232 | Optimal Default, Fail-Safe Default |
| | RS422 | |
| | RS485 | |
| UART RS232, 422, 485 select | | |


3.4.8.2 Serial Port 2 Configuration



Options summary:

| | | |
|---|-----------------------|------------------------------------|
| Use This Device | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | |
| Enable or Disable this Logical Device | | |
| Possible | Use Automatic setting | Optimal Default, Fail-Safe Default |
| | IO=3F8h; IRQ=4 | |
| | IO=2F8h; IRQ=3 | |
| Allows the user to change the device resource settings. New settings will be reflected on this setup page after system restarts | | |
| Mode | RS232 | Optimal Default, Fail-Safe Default |
| | RS422 | |
| | RS485 | |
| UART RS232, 422, 485 select | | |


3.4.9 Serial Port Console Redirection

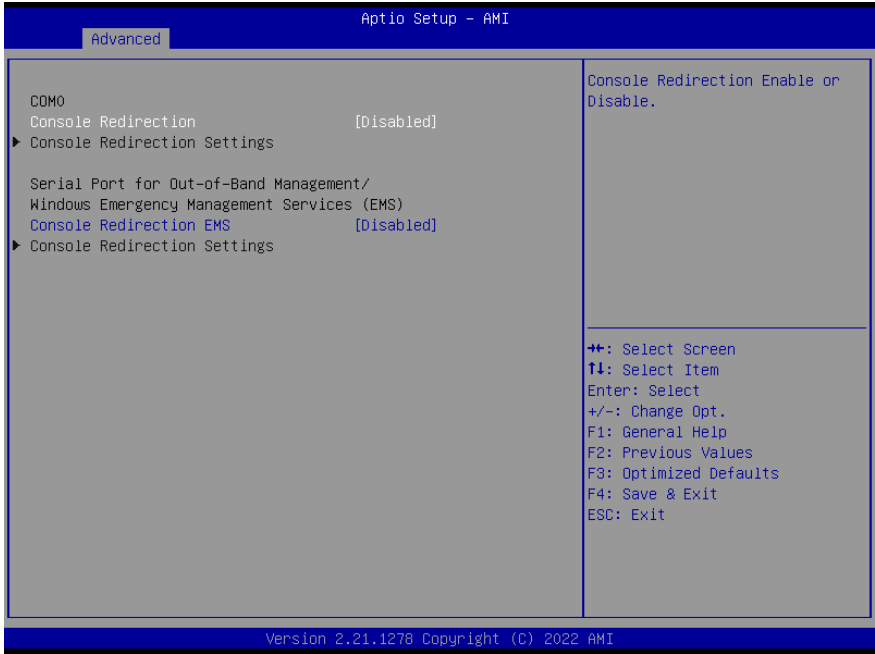

Options summary:

| | | |
|---------------------------------------|----------|------------------------------------|
| Console Redirection | Enabled | |
| | Disabled | Optimal Default, Fail-Safe Default |
| Enable or Disable Console Redirection | | |
| Console Redirection EMS | Enabled | |
| | Disabled | Optimal Default, Fail-Safe Default |
| Enable or Disable Console Redirection | | |


3.4.10 Power Management

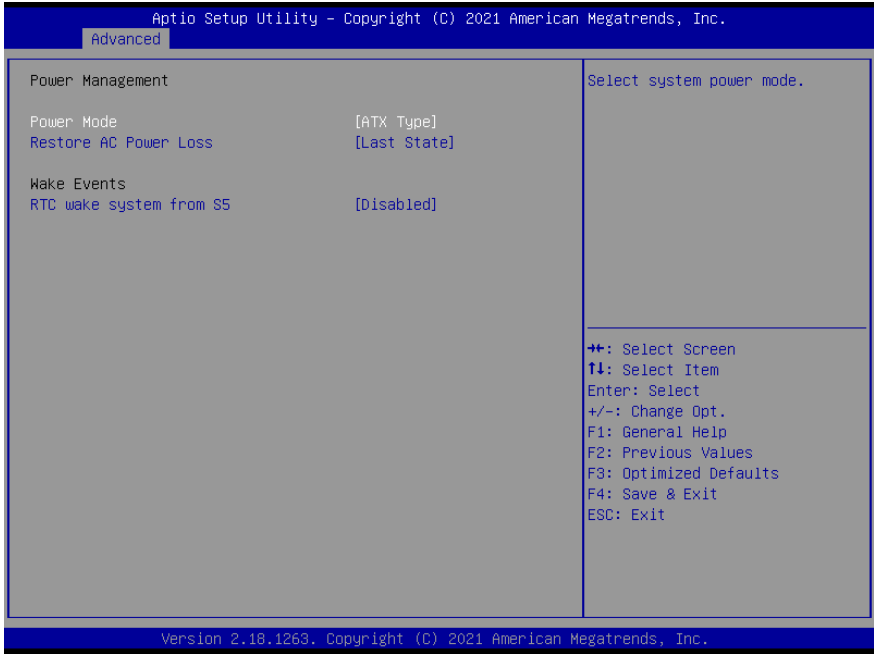

Options summary:

| | | |
|--|--------------|------------------------------------|
| Power Mode | ATX Type | Optimal Default, Fail-Safe Default |
| | AT Type | - |
| Select power supply mode. | | |
| Restore AC Power Loss | Last State | Optimal Default, Fail-Safe Default |
| | Always On | - |
| | Always Off | - |
| RTC wake system from S5 | Disabled | Optimal Default, Fail-Safe Default |
| | Fixed Time | - |
| | Dynamic Time | - |
| | Bypass | - |
| Fixed Time: System will wake on the hr :: min :: sec specified | | |
| Dynamic Time : System will wake on the current time + increase minutes(s). | | |
| Bypass: BIOS will not control RTC wake function during system shutdown | | |


3.4.11 Digital IO Port Configuration

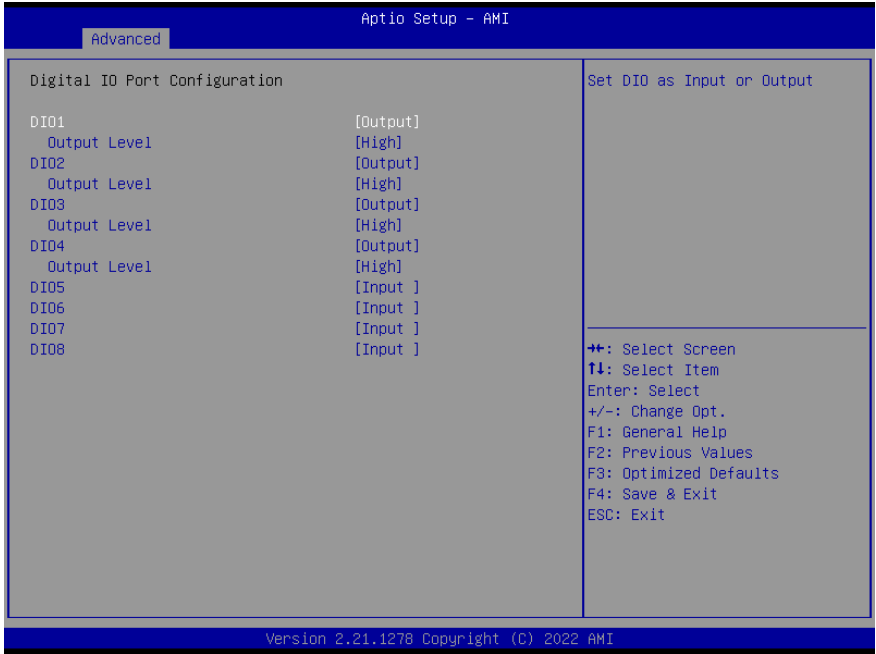

Options summary:

| | | |
|---|--------|------------------------------------|
| DIO | Input | Optimal Default, Fail-Safe Default |
| | Output | |
| Set DIO as Input or Output | | |
| Output Level | High | Optimal Default, Fail-Safe Default |
| | Low | |
| Set output level when DIO pin is output | | |

3.4.12 LAN Bypass Configuration

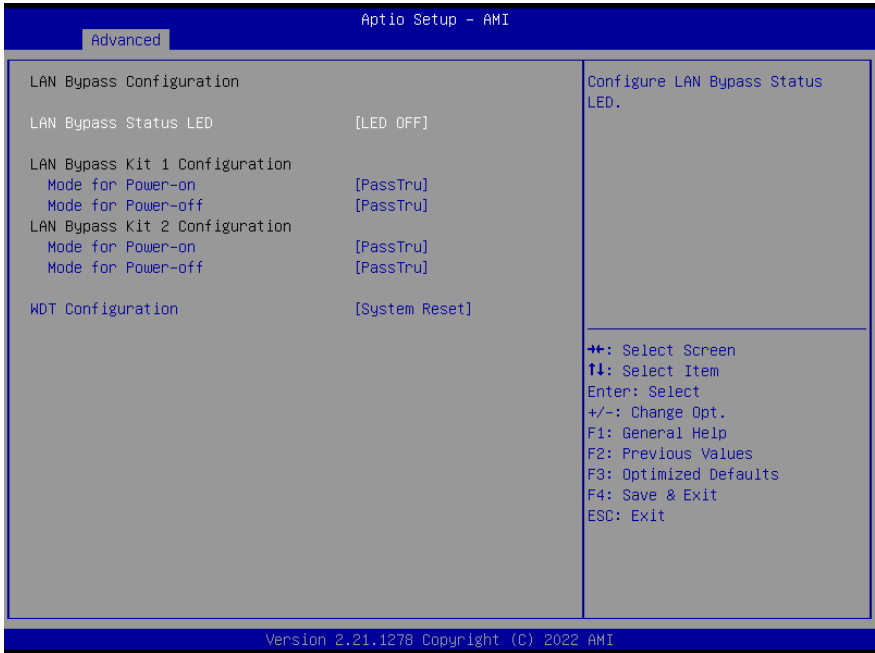

Options summary:

| | | |
|--|----------------------|------------------------------------|
| Lan Bypass Status LED | LED OFF | Optimal Default, Fail-Safe Default |
| | RED LED ON | - |
| | RED LED BLINK | - |
| | RED LED FAST BLINK | - |
| | GREEN LED ON | - |
| | GREEN LED BLINK | - |
| | GREEN LED FAST BLINK | - |
| Configure LAN Bypass status LED | | |
| Mode for Power-on | PassTru | Optimal Default, Fail-Safe Default |
| | Bypass | |
| Configure LAN kit behavior when system in power-on state. (Bypass/Pass Through) | | |
| Mode for Power-off | PassTru | Optimal Default, Fail-Safe Default |
| | Bypass | |
| Configure LAN kit behavior when system in power-off state. (Bypass/Pass Through) | | |

| | | |
|---|--------------|------------------------------------|
| WDT Configuration | System Reset | Optimal Default, Fail-Safe Default |
| | Force Bypass | |
| Configure LAN kit behavior when WDT is triggered. (Bypass/Pass Through) | | |


3.4.13 Case Open Configuration




Options summary:

| | | |
|------------------------------|----------|------------------------------------|
| Case Open Warning | Disabled | Optimal Default, Fail-Safe Default |
| | Enabled | |
| | Clear | |
| Case Open detecting function | | |

3.5 Setup Submenu: Chipset

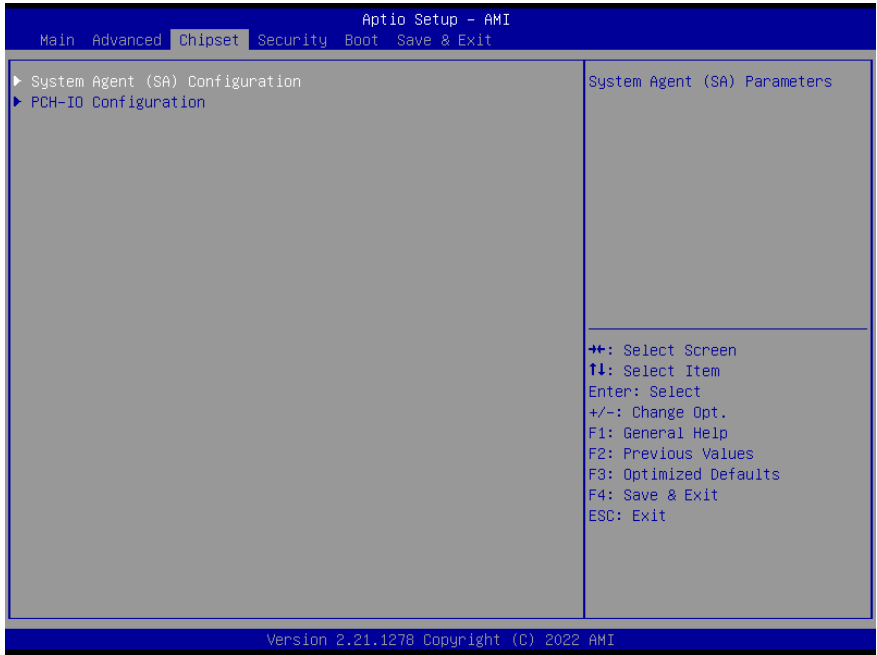


3.5.1 System Agent (SA) Configuration

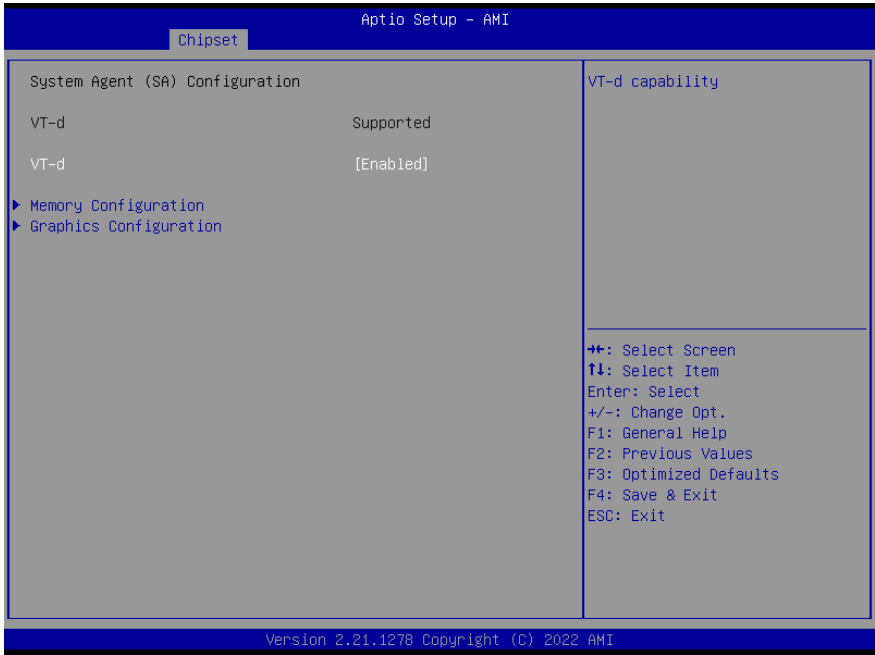

Options summary:

| | | |
|-----------------|----------|------------------------------------|
| VT-d | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | |
| VT-d capability | | |


3.5.2 Memory Configuration

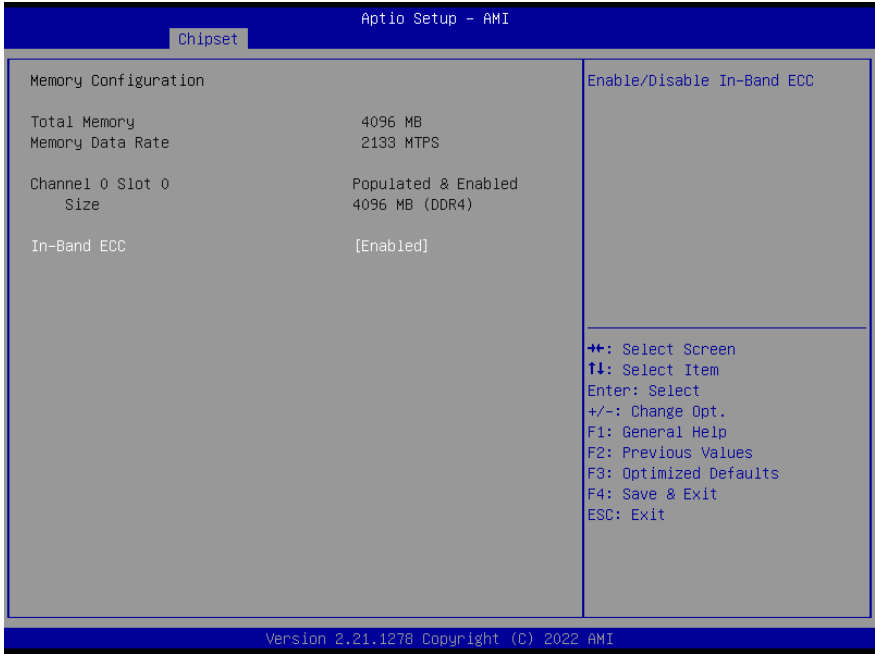

Options summary:

| | | |
|----------------------------|----------|------------------------------------|
| In-Band ECC | Enabled | Optimal Default, Fail-Safe Default |
| | Disabled | - |
| Enable/Disable In-Band ECC | | |

3.5.3 Graphics Configuration

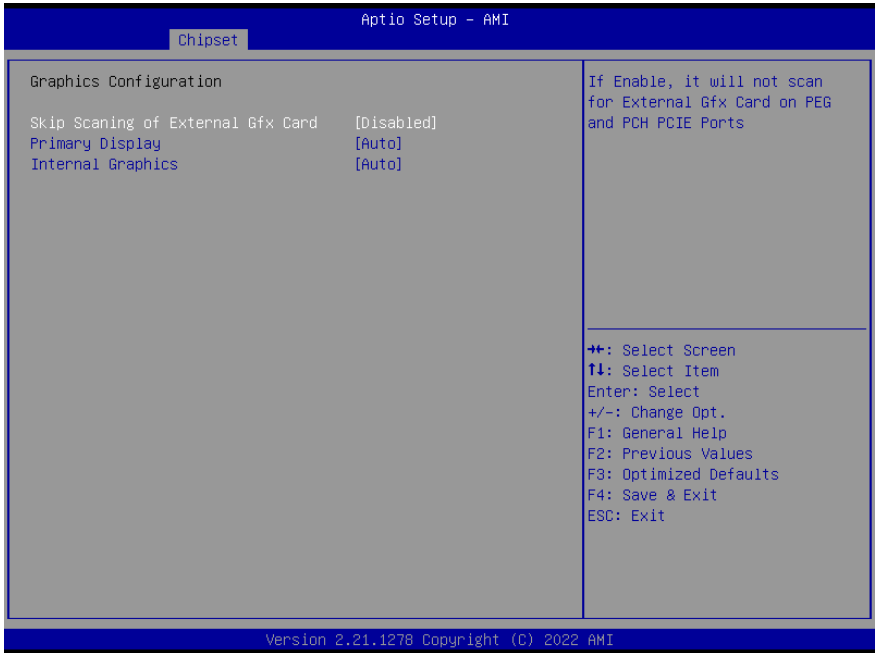


Options summary:

| | | |
|--|----------|------------------------------------|
| Skip Scanning of External Gfx Card | Enabled | - |
| | Disabled | Optimal Default, Fail-Safe Default |
| If Enable, it will not scan for External Gfx Card on PEG and PCH PCIE Ports | | |
| Primary Display | Auto | Optimal Default, Fail-Safe Default |
| | IGFX | - |
| | PEG | - |
| | PCI | - |
| Select which of IGFX/PEG/PCI Graphics Device should be Primary Display or select HG for Hybrid Gfx | | |
| Internal Graphics | Auto | Optimal Default, Fail-Safe Default |
| | Disabled | - |
| | Enabled | - |
| Keep IGFX enabled based on the setup options | | |

3.5.4 PCH-IO Configuration




3.5.5 PCI Express Configuration

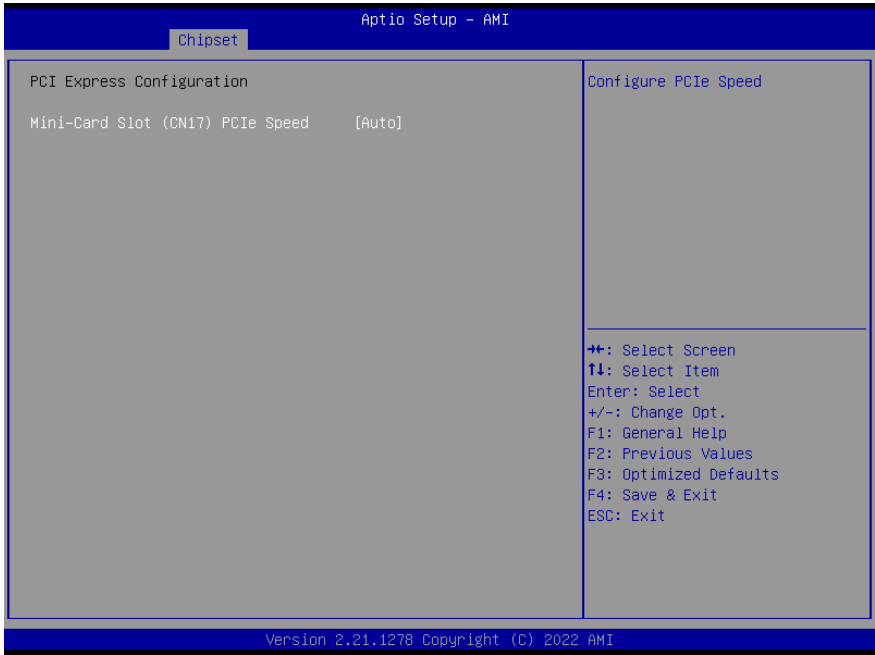

Options summary:

| | | |
|-----------------------|-------|------------------------------------|
| Mini-Card Slot (CN17) | Auto | Optimal Default, Fail-Safe Default |
| PCIe speed | Gen 1 | - |
| | Gen 2 | - |
| | Gen 3 | - |
| Configure PCIe Speed | | |


3.6 Setup Submenu: Boot

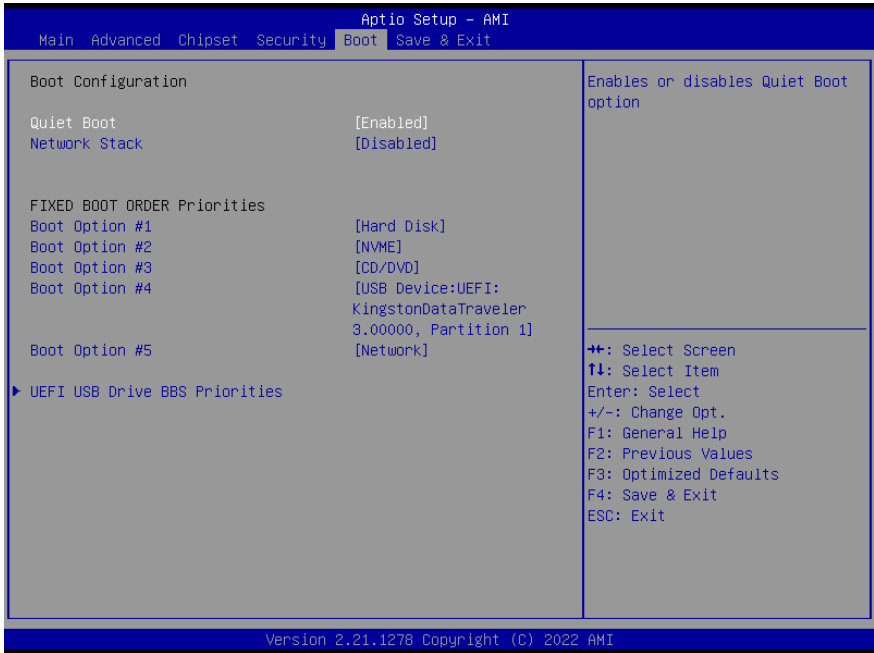

Options summary:

| | | |
|--------------------------------------|---|------------------------------------|
| Quiet Boot | Disabled | |
| | Enabled | Optimal Default, Fail-Safe Default |
| Enable or Disable Quiet Boot option. | | |
| Network Stack | Disabled | Optimal Default, Fail-Safe Default |
| | Enabled | |
| Enable/Disable UEFI Network Stack. | | |
| UEFI Hard Disk Drive BBS Priorities. | Specifies the Boot Device Priority sequence from available UEFI Hard Disk Drives. | |
| USB Drive BBS Priorities | Specifies the Boot Device Priority sequence from available USB Drives. | |
| SD Drive BBS Priorities | Specifies the Boot Device Priority sequence from available SD Drives. | |

3.7 Setup Submenu: Security

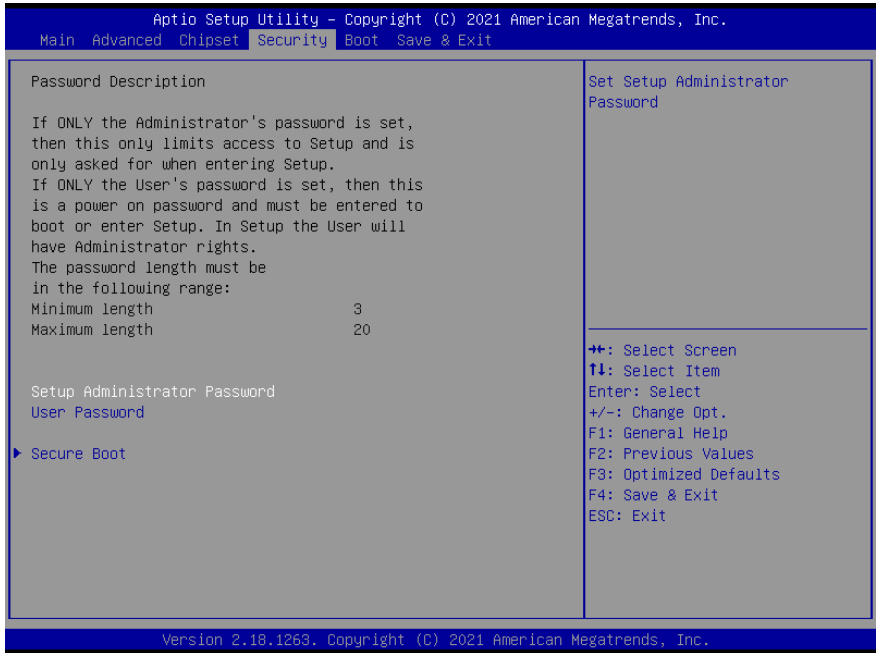

Change User/Administrator Password


You can install an Administrator password, and if you install an administrator password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

If you highlight these items and press Enter, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.7.1 Secure Boot

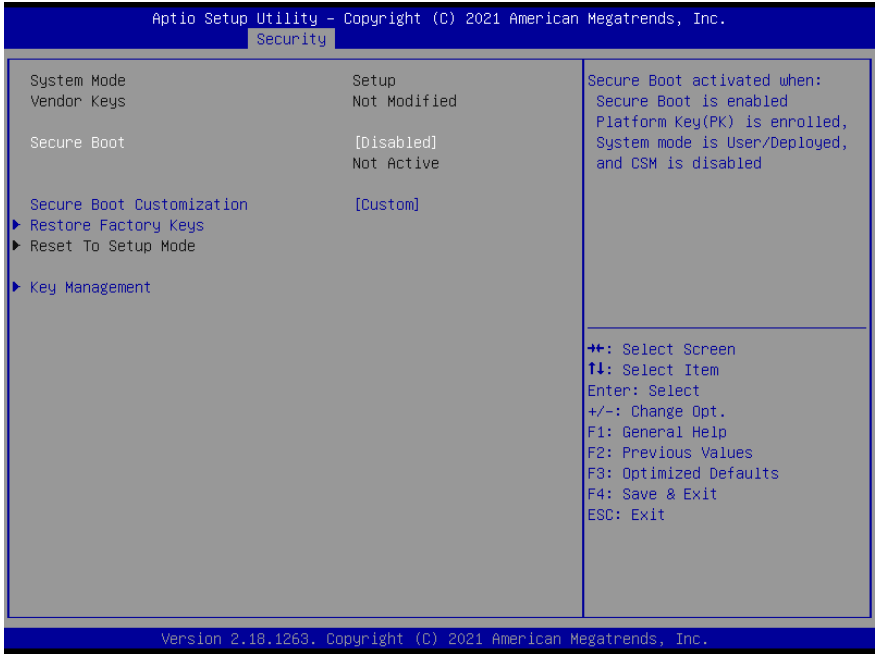

Options summary:

| | | |
|---|--|------------------------------------|
| Secure Boot | Disabled | Optimal Default, Fail-Safe Default |
| | Enabled | |
| Secure Boot activated when: Secure Boot is enabled Platform Key (PK) is enrolled, System mode is User/Deployed, and CSM is disabled | | |
| Secure Boot Customization | Standard | Optimal Default, Fail-Safe Default |
| | Custom | |
| Secure Boot Mode - Custom & Standard, Set UEFI Secure Boot Mode to STANDARD mode or CUSTOM mode, this change is effect after save. And after reset, the mode will return to STANDARD mode | | |
| Restore Factory Keys | Force System to User Mode. Configure NVRAM to contain OEM-defined factory default Secure Boot keys | |

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX


2. Authenticated UEFI Variable

3. EFI PE/COFF Image (SHA256)

Key Source:

Default, External, Mixed


3.7.2 Key Management

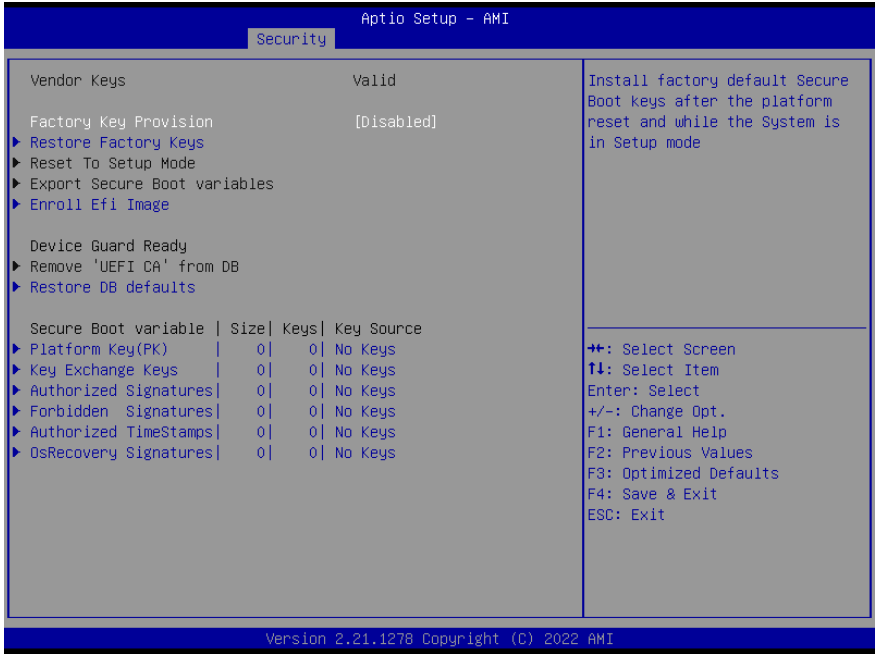

Options summary:

| | | |
|---|--|------------------------------------|
| Factory Key Provision | Disabled | Optimal Default, Fail-Safe Default |
| | Enabled | |
| Provision factory default keys on next re-boot only when System in Setup Mode | | |
| Restore Factory Keys | Force System to User Mode. Configure NVRAM to contain OEM-defined factory default Secure Boot keys | |
| Enroll Efi Image | Allow the image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (DB) | |
| Restore DB defaults | Restore DB variable to factory defaults | |

3.8 Setup Submenu: Save & Exit

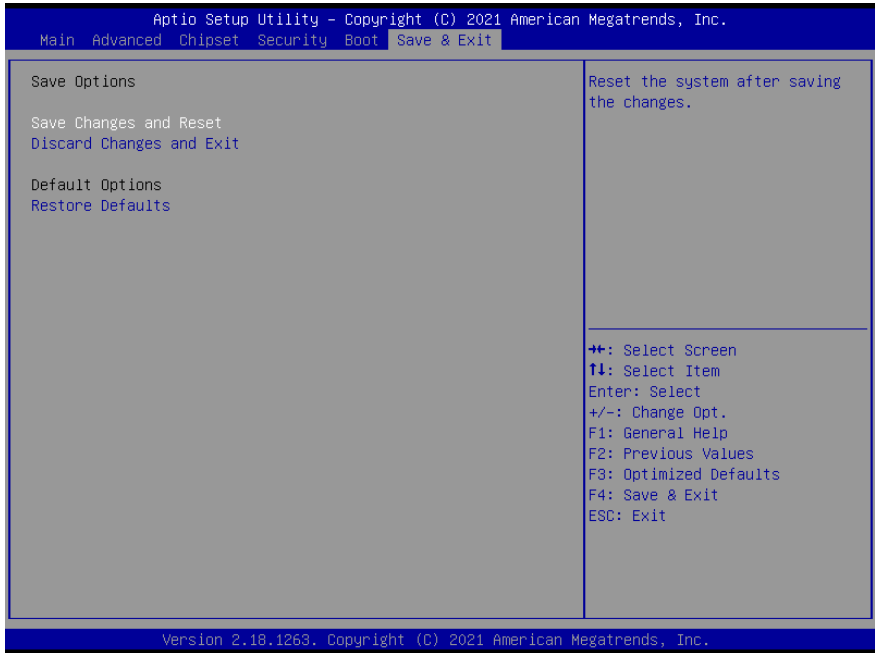

Chapter 4

Driver Installation

4.1 Driver Installation

Please download the driver from AAEON website. It contains all the drivers and utilities you need to setup your product. Follow the steps below to install the drivers.

<https://www.aaeon.com/en/p/din-rail-industrial-grade-network-appliances-ics-6280>.

Step 1 – Install Chipset Drivers

1. Open the **Chipset** folder followed by the **SetupChipset.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Step 2 – Install Graphics Driver

1. Open the **Graphics** folder followed by **Installer.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Step 3 – Install ME Driver

1. Open the **Intel CSE** folder, followed by the **SetupME.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Step 4 – Install LAN Driver

1. Open the **LAN** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 5 – Install Serial IO Driver

1. Open the **Serial IO** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Appendix A

I/O Information













































B.1 I/O Address Map















































| | |
|---------------------------------------|--|
| Input/output (IO) | |
| [0000000000000000 - 000000000000CF7] | PCI Express Root Complex |
| [0000000000000020 - 000000000000021] | Programmable interrupt controller |
| [0000000000000024 - 000000000000025] | Programmable interrupt controller |
| [0000000000000028 - 000000000000029] | Programmable interrupt controller |
| [000000000000002C - 00000000000002D] | Programmable interrupt controller |
| [000000000000002E - 00000000000002F] | Motherboard resources |
| [0000000000000030 - 000000000000031] | Programmable interrupt controller |
| [0000000000000034 - 000000000000035] | Programmable interrupt controller |
| [0000000000000038 - 000000000000039] | Programmable interrupt controller |
| [000000000000003C - 00000000000003D] | Programmable interrupt controller |
| [0000000000000040 - 000000000000043] | System timer |
| [000000000000004E - 00000000000004F] | Motherboard resources |
| [0000000000000050 - 000000000000053] | System timer |
| [0000000000000061 - 000000000000061] | Motherboard resources |
| [0000000000000063 - 000000000000063] | Motherboard resources |
| [0000000000000065 - 000000000000065] | Motherboard resources |
| [0000000000000067 - 000000000000067] | Motherboard resources |
| [0000000000000070 - 000000000000070] | Motherboard resources |
| [0000000000000080 - 000000000000080] | Motherboard resources |
| [0000000000000092 - 000000000000092] | Motherboard resources |
| [00000000000000A0 - 00000000000000A1] | Programmable interrupt controller |
| [00000000000000A4 - 00000000000000A5] | Programmable interrupt controller |
| [00000000000000A8 - 00000000000000A9] | Programmable interrupt controller |
| [00000000000000AC - 00000000000000AD] | Programmable interrupt controller |
| [00000000000000B0 - 00000000000000B1] | Programmable interrupt controller |
| [00000000000000B2 - 00000000000000B3] | Motherboard resources |
| [00000000000000B4 - 00000000000000B5] | Programmable interrupt controller |
| [00000000000000B8 - 00000000000000B9] | Programmable interrupt controller |
| [00000000000000BC - 00000000000000BD] | Programmable interrupt controller |
| [00000000000002F8 - 00000000000002FF] | Communications Port (COM2) |
| [00000000000003F8 - 00000000000003FF] | Communications Port (COM1) |
| [00000000000004D0 - 00000000000004D1] | Programmable interrupt controller |
| [0000000000000680 - 000000000000069F] | Motherboard resources |
| [0000000000000A00 - 0000000000000A0F] | Motherboard resources |
| [0000000000000A10 - 0000000000000A1F] | Motherboard resources |
| [0000000000000A20 - 0000000000000A2F] | Motherboard resources |
| [0000000000000D00 - 000000000000FFFF] | PCI Express Root Complex |
| [000000000000164E - 000000000000164F] | Motherboard resources |
| [0000000000001800 - 00000000000018FE] | Motherboard resources |
| [0000000000001854 - 0000000000001857] | Motherboard resources |
| [0000000000002000 - 00000000000020FE] | Motherboard resources |
| [0000000000003000 - 0000000000003FFF] | Intel(R) PCI Express Root Port #3 - 4B3B |
| [0000000000004000 - 0000000000004FFF] | Intel(R) PCI Express Root Port #2 - 4B3A |
| [0000000000005000 - 0000000000005FFF] | Intel(R) PCI Express Root Port #1 - 4B39 |
| [0000000000006000 - 0000000000006FFF] | Intel(R) PCI Express Root Port #0 - 4B38 |
| [0000000000007000 - 000000000000703F] | Intel(R) UHD Graphics |
| [0000000000007060 - 000000000000707F] | Standard SATA AHCI Controller |
| [0000000000007080 - 0000000000007083] | Standard SATA AHCI Controller |
| [0000000000007090 - 0000000000007097] | Standard SATA AHCI Controller |
| [000000000000EFA0 - 000000000000EFBF] | Intel(R) SMBus Controller - 4B23 |



















































B.2 Memory Address Map















































| | |
|---|---|
| ▼ | Large Memory |
| ▼ | Memory |
| | [0000004000000000 - 0000007FFFFFFF] PCI Express Root Complex |
| | [000000000A0000 - 0000000000BFFFF] PCI Express Root Complex |
| | [000000007FC00000 - 000000007FCFFFF] Intel(R) PCI Express Root Port #3 - 4B3B |
| | [000000007FC00000 - 00000000BFFFFFF] PCI Express Root Complex |
| | [000000007FDC0000 - 000000007FCDFFFF] Intel(R) I211 Gigabit Network Connection #2 |
| | [000000007FCE0000 - 000000007FCFFFF] Intel(R) I211 Gigabit Network Connection #2 |
| | [000000007FD00000 - 000000007FDFFFF] Intel(R) PCI Express Root Port #2 - 4B3A |
| | [000000007FDDC000 - 000000007FDDFFFF] Intel(R) I211 Gigabit Network Connection |
| | [000000007FDE0000 - 000000007FDFFFF] Intel(R) I211 Gigabit Network Connection |
| | [000000007FE00000 - 000000007FE1FFFF] Intel(R) I211 Gigabit Network Connection #4 |
| | [000000007FE00000 - 000000007FEFFFF] Intel(R) PCI Express Root Port #1 - 4B39 |
| | [000000007FE20000 - 000000007FE23FFF] Intel(R) I211 Gigabit Network Connection #4 |
| | [000000007FF00000 - 000000007FF1FFFF] Intel(R) I211 Gigabit Network Connection #3 |
| | [000000007FF00000 - 000000007FFFFFF] Intel(R) PCI Express Root Port #0 - 4B38 |
| | [000000007FF20000 - 000000007FF23FFF] Intel(R) I211 Gigabit Network Connection #3 |
| | [0000000080000000 - 0000000080001FFF] Standard SATA AHCI Controller |
| | [0000000080002000 - 00000000800027FF] Standard SATA AHCI Controller |
| | [0000000080003000 - 00000000800030FF] Standard SATA AHCI Controller |
| | [00000000C0000000 - 00000000CFFFFFF] Motherboard resources |
| | [00000000FD000000 - 00000000FD68FFFF] Motherboard resources |
| | [00000000FD690000 - 00000000FD69FFFF] Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| | [00000000FD6A0000 - 00000000FD6AFFFF] Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| | [00000000FD6B0000 - 00000000FD6BFFFF] Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| | [00000000FD6B0000 - 00000000FD6CFFFF] Motherboard resources |
| | [00000000FD6C0000 - 00000000FD6CFFFF] Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| | [00000000FD6D0000 - 00000000FD6DFFFF] Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| | [00000000FD6E0000 - 00000000FD6EFFFF] Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| | [00000000FD6F0000 - 00000000FDFFFFFF] Motherboard resources |
| | [00000000FE000000 - 00000000FE01FFFF] Motherboard resources |
| | [00000000FE010000 - 00000000FE010FFF] Intel(R) SPI (flash) Controller - 4B24 |
| | [00000000FE200000 - 00000000FE7FFFF] Motherboard resources |
| | [00000000FEC80000 - 00000000FECFFFF] Motherboard resources |
| | [00000000FED00000 - 00000000FED003FF] High precision event timer |
| | [00000000FED20000 - 00000000FED7FFFF] Motherboard resources |
| | [00000000FED40000 - 00000000FED44FFF] Trusted Platform Module 2.0 |
| | [00000000FED45000 - 00000000FED8FFFF] Motherboard resources |
| | [00000000FED90000 - 00000000FED93FFF] Motherboard resources |
| | [00000000FEDA0000 - 00000000FEDA0FFF] Motherboard resources |
| | [00000000FEDA1000 - 00000000FEDA1FFF] Motherboard resources |
| | [00000000FEE00000 - 00000000FEEFFFF] Motherboard resources |
| | [00000000FF000000 - 00000000FFFFFF] Motherboard resources |
| | [0000004000000000 - 0000004000FFFFFF] Intel(R) UHD Graphics |
| | [0000006000000000 - 0000006000FFFFFF] Intel(R) UHD Graphics |
| | [0000006001100000 - 000000600110FFFF] Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft) |
| | [0000006001118000 - 00000060011180FF] Intel(R) SMBus Controller - 4B23 |
| | [00000077FFEF8000 - 00000077FFEFBFFF] Intel(R) Management Engine Interface #1 |
| | [00000077FFFEFC000 - 00000077FFFEFFFF] High Definition Audio Controller |
| | [00000077FFFF00000 - 00000077FFFFFFFFFF] High Definition Audio Controller |



















































B.3 IRQ Mapping Chart


















































| | | |
|---|---|--|
| ▼ |  Interrupt request (IRQ) | |
| |  (ISA) 0x00000000 (00) | System timer |
| |  (ISA) 0x00000003 (03) | Communications Port (COM2) |
| |  (ISA) 0x00000004 (04) | Communications Port (COM1) |
| |  (ISA) 0x0000000E (14) | Intel(R) Serial IO GPIO Host Controller - INTC1020 |
| |  (ISA) 0x00000036 (54) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000037 (55) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000038 (56) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000039 (57) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000003A (58) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000003B (59) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000003C (60) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000003D (61) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000003E (62) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000003F (63) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000040 (64) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000041 (65) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000042 (66) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000043 (67) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000044 (68) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000045 (69) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000046 (70) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000047 (71) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000048 (72) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000049 (73) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000004A (74) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000004B (75) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000004C (76) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000004D (77) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000004E (78) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000004F (79) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000050 (80) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000051 (81) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000052 (82) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000053 (83) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000054 (84) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000055 (85) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000056 (86) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000057 (87) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000058 (88) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x00000059 (89) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000005A (90) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000005B (91) | Microsoft ACPI-Compliant System |
| |  (ISA) 0x0000005C (92) | Microsoft ACPI-Compliant System |
| | (ISA) 0x0000005D (93) | Microsoft ACPI-Compliant System |
| | (ISA) 0x0000005E (94) | Microsoft ACPI-Compliant System |
| | (ISA) 0x0000005F (95) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000060 (96) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000061 (97) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000062 (98) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000063 (99) | Microsoft ACPI-Compliant System |



















































| | | |
|---|------------------------|---------------------------------|
|  | (ISA) 0x00000064 (100) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000065 (101) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000066 (102) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000067 (103) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000068 (104) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000069 (105) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000006A (106) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000006B (107) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000006C (108) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000006D (109) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000006E (110) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000006F (111) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000070 (112) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000071 (113) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000072 (114) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000073 (115) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000074 (116) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000075 (117) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000076 (118) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000077 (119) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000078 (120) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000079 (121) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007A (122) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007B (123) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007C (124) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007D (125) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007E (126) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000007F (127) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000080 (128) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000081 (129) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000082 (130) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000083 (131) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000084 (132) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000085 (133) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000086 (134) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000087 (135) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000088 (136) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000089 (137) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008A (138) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008B (139) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008C (140) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008D (141) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008E (142) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000008F (143) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000090 (144) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000091 (145) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000092 (146) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000093 (147) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000094 (148) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000095 (149) | Microsoft ACPI-Compliant System |















































| | | |
|---|------------------------|---------------------------------|
|  | (ISA) 0x00000096 (150) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000097 (151) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000098 (152) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000099 (153) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009A (154) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009B (155) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009C (156) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009D (157) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009E (158) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000009F (159) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A0 (160) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A1 (161) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A2 (162) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A3 (163) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A4 (164) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A5 (165) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A6 (166) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A7 (167) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A8 (168) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000A9 (169) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AA (170) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AB (171) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AC (172) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AD (173) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AE (174) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000AF (175) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B0 (176) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B1 (177) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B2 (178) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B3 (179) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B4 (180) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B5 (181) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B6 (182) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B7 (183) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B8 (184) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000B9 (185) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BA (186) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BB (187) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BC (188) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BD (189) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BE (190) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000BF (191) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C0 (192) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C1 (193) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C2 (194) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C3 (195) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C4 (196) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C5 (197) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C6 (198) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C7 (199) | Microsoft ACPI-Compliant System |














































| | | |
|---|------------------------|---------------------------------|
|  | (ISA) 0x000000C8 (200) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000C9 (201) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000CA (202) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000CB (203) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000000CC (204) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000100 (256) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000101 (257) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000102 (258) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000103 (259) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000104 (260) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000105 (261) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000106 (262) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000107 (263) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000108 (264) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000109 (265) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000010A (266) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000010B (267) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000010C (268) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000010D (269) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000010E (270) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000010F (271) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000110 (272) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000111 (273) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000112 (274) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000113 (275) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000114 (276) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000115 (277) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000116 (278) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000117 (279) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000118 (280) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000119 (281) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000011A (282) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000011B (283) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000011C (284) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000011D (285) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000011E (286) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000011F (287) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000120 (288) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000121 (289) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000122 (290) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000123 (291) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000124 (292) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000125 (293) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000126 (294) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000127 (295) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000128 (296) | Microsoft ACPI-Compliant System |
| | (ISA) 0x00000129 (297) | Microsoft ACPI-Compliant System |
| | (ISA) 0x0000012A (298) | Microsoft ACPI-Compliant System |
| | (ISA) 0x0000012B (299) | Microsoft ACPI-Compliant System |
| | (ISA) 0x0000012C (300) | Microsoft ACPI-Compliant System |

| | | |
|---|------------------------|---------------------------------|
|  | (ISA) 0x0000012C (300) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000012D (301) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000012E (302) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000012F (303) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000130 (304) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000131 (305) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000132 (306) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000133 (307) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000134 (308) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000135 (309) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000136 (310) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000137 (311) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000138 (312) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000139 (313) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000013A (314) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000013B (315) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000013C (316) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000013D (317) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000013E (318) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000013F (319) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000140 (320) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000141 (321) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000142 (322) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000143 (323) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000144 (324) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000145 (325) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000146 (326) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000147 (327) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000148 (328) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000149 (329) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000014A (330) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000014B (331) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000014C (332) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000014D (333) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000014E (334) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000014F (335) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000150 (336) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000151 (337) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000152 (338) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000153 (339) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000154 (340) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000155 (341) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000156 (342) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000157 (343) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000158 (344) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000159 (345) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000015A (346) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000015B (347) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000015C (348) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000015D (349) | Microsoft ACPI-Compliant System |

| | |
|--|---------------------------------|
|  (ISA) 0x0000015E (350) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000015F (351) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000160 (352) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000161 (353) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000162 (354) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000163 (355) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000164 (356) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000165 (357) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000166 (358) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000167 (359) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000168 (360) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000169 (361) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000016A (362) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000016B (363) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000016C (364) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000016D (365) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000016E (366) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000016F (367) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000170 (368) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000171 (369) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000172 (370) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000173 (371) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000174 (372) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000175 (373) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000176 (374) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000177 (375) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000178 (376) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000179 (377) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000017A (378) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000017B (379) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000017C (380) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000017D (381) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000017E (382) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000017F (383) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000180 (384) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000181 (385) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000182 (386) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000183 (387) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000184 (388) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000185 (389) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000186 (390) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000187 (391) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000188 (392) | Microsoft ACPI-Compliant System |
|  (ISA) 0x00000189 (393) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000018A (394) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000018B (395) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000018C (396) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000018D (397) | Microsoft ACPI-Compliant System |
|  (ISA) 0x0000018E (398) | Microsoft ACPI-Compliant System |
| (ISA) 0x0000018F (399) | Microsoft ACPI-Compliant System |

| | | |
|---|------------------------|---------------------------------|
|  | (ISA) 0x00000190 (400) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000191 (401) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000192 (402) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000193 (403) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000194 (404) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000195 (405) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000196 (406) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000197 (407) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000198 (408) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x00000199 (409) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000019A (410) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000019B (411) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000019C (412) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000019D (413) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000019E (414) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x0000019F (415) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A0 (416) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A1 (417) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A2 (418) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A3 (419) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A4 (420) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A5 (421) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A6 (422) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A7 (423) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A8 (424) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001A9 (425) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001AA (426) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001AB (427) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001AC (428) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001AD (429) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001AE (430) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001AF (431) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B0 (432) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B1 (433) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B2 (434) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B3 (435) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B4 (436) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B5 (437) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B6 (438) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B7 (439) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B8 (440) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001B9 (441) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001BA (442) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001BB (443) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001BC (444) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001BD (445) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001BE (446) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001BF (447) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001C0 (448) | Microsoft ACPI-Compliant System |
|  | (ISA) 0x000001C1 (449) | Microsoft ACPI-Compliant System |

| | |
|--|---------------------------------|
|  (ISA) 0x000001C2 (450) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C3 (451) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C4 (452) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C5 (453) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C6 (454) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C7 (455) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C8 (456) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001C9 (457) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001CA (458) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001CB (459) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001CC (460) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001CD (461) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001CE (462) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001CF (463) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D0 (464) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D1 (465) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D2 (466) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D3 (467) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D4 (468) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D5 (469) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D6 (470) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D7 (471) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D8 (472) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001D9 (473) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001DA (474) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001DB (475) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001DC (476) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001DD (477) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001DE (478) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001DF (479) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E0 (480) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E1 (481) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E2 (482) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E3 (483) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E4 (484) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E5 (485) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E6 (486) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E7 (487) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E8 (488) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001E9 (489) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001EA (490) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001EB (491) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001EC (492) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001ED (493) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001EE (494) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001EF (495) | Microsoft ACPI-Compliant System |
| (ISA) 0x000001F0 (496) | Microsoft ACPI-Compliant System |
| (ISA) 0x000001F1 (497) | Microsoft ACPI-Compliant System |
| (ISA) 0x000001F2 (498) | Microsoft ACPI-Compliant System |
| (ISA) 0x000001F3 (499) | Microsoft ACPI-Compliant System |

| | |
|---|---|
|  (ISA) 0x000001F4 (500) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001F5 (501) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001F6 (502) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001F7 (503) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001F8 (504) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001F9 (505) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001FA (506) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001FB (507) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001FC (508) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001FD (509) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001FE (510) | Microsoft ACPI-Compliant System |
|  (ISA) 0x000001FF (511) | Microsoft ACPI-Compliant System |
|  (PCI) 0x00000010 (16) | High Definition Audio Controller |
|  (PCI) 0xFFFFFDF (-33) | Intel(R) Management Engine Interface #1 |
|  (PCI) 0xFFFFFE0 (-32) | Intel(R) I211 Gigabit Network Connection |
|  (PCI) 0xFFFFFE1 (-31) | Intel(R) I211 Gigabit Network Connection |
|  (PCI) 0xFFFFFE2 (-30) | Intel(R) I211 Gigabit Network Connection |
|  (PCI) 0xFFFFFE3 (-29) | Intel(R) I211 Gigabit Network Connection |
|  (PCI) 0xFFFFFE4 (-28) | Intel(R) I211 Gigabit Network Connection |
|  (PCI) 0xFFFFFE5 (-27) | Intel(R) I211 Gigabit Network Connection |
|  (PCI) 0xFFFFFE6 (-26) | Intel(R) I211 Gigabit Network Connection #2 |
|  (PCI) 0xFFFFFE7 (-25) | Intel(R) I211 Gigabit Network Connection #2 |
|  (PCI) 0xFFFFFE8 (-24) | Intel(R) I211 Gigabit Network Connection #2 |
|  (PCI) 0xFFFFFE9 (-23) | Intel(R) I211 Gigabit Network Connection #2 |
|  (PCI) 0xFFFFFEA (-22) | Intel(R) I211 Gigabit Network Connection #2 |
|  (PCI) 0xFFFFFEB (-21) | Intel(R) I211 Gigabit Network Connection #2 |
|  (PCI) 0xFFFFFEC (-20) | Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft) |
|  (PCI) 0xFFFFFED (-19) | Intel(R) UHD Graphics |
|  (PCI) 0xFFFFFEE (-18) | Intel(R) I211 Gigabit Network Connection #3 |
|  (PCI) 0xFFFFFEF (-17) | Intel(R) I211 Gigabit Network Connection #3 |
|  (PCI) 0xFFFFFF0 (-16) | Intel(R) I211 Gigabit Network Connection #3 |
|  (PCI) 0xFFFFFF1 (-15) | Intel(R) I211 Gigabit Network Connection #3 |
|  (PCI) 0xFFFFFF2 (-14) | Intel(R) I211 Gigabit Network Connection #3 |
|  (PCI) 0xFFFFFF3 (-13) | Intel(R) I211 Gigabit Network Connection #3 |
|  (PCI) 0xFFFFFF4 (-12) | Intel(R) I211 Gigabit Network Connection #4 |
|  (PCI) 0xFFFFFF5 (-11) | Intel(R) I211 Gigabit Network Connection #4 |
|  (PCI) 0xFFFFFF6 (-10) | Intel(R) I211 Gigabit Network Connection #4 |
|  (PCI) 0xFFFFFF7 (-9) | Intel(R) I211 Gigabit Network Connection #4 |
|  (PCI) 0xFFFFFF8 (-8) | Intel(R) I211 Gigabit Network Connection #4 |
|  (PCI) 0xFFFFFF9 (-7) | Intel(R) I211 Gigabit Network Connection #4 |
|  (PCI) 0xFFFFFFA (-6) | Standard SATA AHCI Controller |
|  (PCI) 0xFFFFFFB (-5) | Intel(R) PCI Express Root Port #3 - 4B3B |
|  (PCI) 0xFFFFFFC (-4) | Intel(R) PCI Express Root Port #2 - 4B3A |
|  (PCI) 0xFFFFFFD (-3) | Intel(R) PCI Express Root Port #1 - 4B39 |
|  (PCI) 0xFFFFFFE (-2) | Intel(R) PCI Express Root Port #0 - 4B38 |