

OMNI-SKU Series

Industrial Modular Touch Panel PC

User's Manual 6th Ed

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows® is a registered trademark of Microsoft Corp.
- Intel® and Celeron® are registered trademarks of Intel Corporation
- Core™ is a trademark of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
OMNI-SKU Series Panel PC (Panel size from 10.4" to 21.5")	1
Phoenix Power Connector	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls.
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running.
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arises, please contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON System

QO4-381 Rev.A2

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
液晶模块	×	○	○	○	○	○
光驱	×	○	○	○	○	○
触控模块	×	○	○	○	○	○
电源	×	○	○	○	○	○
电池	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

×：表示该有害物质的某一均质材料超出了 GB/T 26572 的限量要求，然而该部件仍符合欧盟指令 2011/65/EU 的规范。

环保使用期限(EFUP (Environmental Friendly Use Period))：10 年

备注：

一、此产品所标示之环保使用期限，系指在一般正常使用状况下。

二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。

三、上述部件物质液晶模块、触控模块仅一体机产品适用。

China RoHS Requirement (EN)

Name and content of hazardous substances in product

AAEON System

QO4-381 Rev.A2

Part Name	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB Assemblies	×	○	○	○	○	○
Connector and Cable	×	○	○	○	○	○
Chassis	○	○	○	○	○	○
CPU and Memory	×	○	○	○	○	○
Hard Disk	×	○	○	○	○	○
LCD Modules	×	○	○	○	○	○
CD-ROM/DVD-ROM	×	○	○	○	○	○
Touch Modules	×	○	○	○	○	○
Power	×	○	○	○	○	○
Battery	×	○	○	○	○	○
The table is prepared in accordance with the provisions of SJ/T 11364. ○ : Indicates that said hazardous substance contained in all of the homogenous materials for this product is below the limit requirement of GB/T 26572. × : Indicates that said hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement of GB/T 26572. But this product still be compliance with 2011/65/EU Directive (allowed with 2011/65/EU Annex III of RoHS exemption with number 6(c),7(a),7(c)-1). EFUP (Environment Friendly Use Period) value: 10 years. Notes: 1. This product defined period of use is under normal condition. 2. In above part, CPU/Memory/ Hard Disk/CD-ROM/DVD-ROM/ Power are optional. 3. In above part, LCD Modules/ Touch Modules are for all-in-one product model.						

Table of Contents

Chapter 1 - Product Specifications	1
1.1 Specifications.....	2
1.1.1 OMNI-3105-SKU	4
1.1.2 OMNI-3125-SKU	6
1.1.3 OMNI-3155-SKU	8
1.1.4 OMNI-2155-SKU	10
1.1.5 OMNI-3175-SKU	12
1.1.6 OMNI-3195-SKU	14
1.1.7 OMNI-2215-SKU	16
1.2 OMNI Modules	18
1.2.1 USB/ COM/ LAN Module	18
1.2.2 Dual LAN Module.....	18
1.2.3 Mini Card and SIM Card Module	19
1.2.4 RS-232/422/485 Module	19
1.2.5 Isolated RS-232/422/485 Module.....	20
1.2.6 Digital I/O Module	20
1.2.7 CAN Bus Module.....	20
1.2.8 Audio Module	21
1.2.9 HMS Module	21
1.2.10 COM x 4 + DIO x 16 Module	21
Chapter 2 – Hardware Information	22
2.1 Dimensions	23
2.1.1 Dimensions: OMNI-2155-SKU Main Panels.....	23
2.1.2 Dimensions: OMNI Modules.....	24
2.1.3 Dimensions: Cables.....	27

2.2	List of Jumpers	28
2.2.1	mSATA/Mini Card Operating VCC Selection (JP1).....	29
2.2.2	Resistive Touch Mode (JP2)	29
2.2.3	LVDS Port Backlight Lightness Control Mode Selection (JP3)	29
2.2.4	LVDS Port Backlight Inverter VCC Selection (JP4).....	29
2.2.5	Auto Power Button Enable/Disable Selection (JP5).....	30
2.2.6	Clear CMOS (JP7)	30
2.2.7	COM 2 Pin 8 Function Selection (JP9).....	30
2.2.8	COM 1 Pin 8 Function Selection (JP10).....	31
2.3	List of Connectors	32
2.3.1	Front Panel Connector (JP6).....	34
2.3.2	Mini Card Slot (Full-size Mini Card) (CN2)	34
2.3.3	Touch Screen Connector (CN3)	36
2.3.4	Micro SIM Card Socket (CN4)	38
2.3.5	eDP/LVDS Port (CN5)	39
2.3.6	LVDS Port Inverter/Backlight Connector (CN8)	42
2.3.7	LPC Port (CN11).....	43
2.3.8	+5V Output for SATA HDD (CN12)	44
2.3.9	SATA Port (CN13)	44
2.3.10	BIOS Debug Port (CN14).....	45
2.3.11	HDMI Connector (CN15)	45
2.3.12	USB 3.0 Ports (CN19)	46
2.3.13	Battery (CN20)	47
2.3.14	CPU FAN (Optional) (CN21).....	47
2.3.15	LAN (RJ-45) Connector (CN23).....	48
2.3.16	External Power Input (CN25).....	48
2.3.17	COM Port 2 (CN26).....	48
2.3.18	COM Port 1 (CN27)	50

2.4	Module Assembly.....	52
2.4.1	Installing a Module.....	52
2.4.2	Detaching a Module	54
2.5	Hard Disk Drive Installation	56
2.6	DRAM Installation.....	58
2.7	Wall Mount Installation	59
2.8	Assemble the OMNI Panel and the CPU Box.....	61
2.9	P-CAP Touch Screen Operation.....	64
Chapter 3 - AMI BIOS Setup.....		65
3.1	System Test and Initialization	66
3.2	AMI BIOS Setup.....	67
3.3	Setup Submenu: Main.....	68
3.4	Setup Submenu: Advanced	69
3.4.1	CPU Configuration	70
3.4.2	SATA Configuration	72
3.4.3	Hardware Monitor	73
3.4.4	SIO Configuration.....	74
3.4.4.1	Serial Port 1 Configuration.....	75
3.4.4.2	Serial Port 2 Configuration	76
3.4.5	USB Configuration.....	77
3.4.6	Digital IO Port Configuration	78
3.4.7	Power Management	79
3.5	Setup Submenu: Chipset	81
3.5.1	System Agent (SA) Configuration	82
3.5.1.1	Graphics Configuration	83
3.5.1.1.1	LVDS Panel Configuration.....	84
3.5.2	PCH-IO Configuration.....	85
3.6	Setup Submenu: Security	86

3.7	Setup Submenu: Boot.....	87
3.7.1	BBS Priorities.....	88
3.8	Setup Submenu: Save & Exit	89
Chapter 4 – Drivers Installation & Touchscreen Settings		90
4.1	Product CD/DVD.....	91
4.2	PCAP Dual Monitor Touch Settings.....	98
Appendix A - Watchdog Timer Programming.....		100
A.1	Watchdog Timer Initial Program.....	101
Appendix B - I/O Information.....		103
B.1	I/O Address Map.....	104
B.2	Memory Address Map	106
B.3	IRQ Mapping Chart	108
Appendix C – CANBus Utility (for CANBus Module).....		121
C.1	CANBus Driver Installation	122
C.2	CANBus Utility.....	127
C.3	Mask and Filter Function.....	129
Appendix D –DI/O Utility (for DI/O Module)		130
D.1	Digital I/O Register.....	131
D.2	Digital I/O Sample Program.....	132

Chapter 1

Product Specifications

1.1 Specifications

Specifications for System and Power Supply are same for all models/SKUs of OMNI-SKU series. All other specifications are listed by SKU in the following sub-sections.

System	
Processor	Intel® Core™ i5-6300U Processor, 2.4 GHz Intel® Celeron® Processor 3955U, 2.0 GHz
System Memory	260-pin DDR4 SODIMM x 1, up to 16 GB
LCD/CRT Controller	Integrated
Ethernet	Intel® Ethernet Controller I211, 10/100/1000Base-TX x 1
I/O Port	USB 3.0 (Type-A) x 4 SMA Antenna Hole x 1 HDMI x 1 DB-9 for RS-232/422/485 x 2 RJ-45 10/100/1000Base-TX x 1 3-pin Terminal Block x 1 for 9~30Vdc Power Input LED Power on/off Switch x 1 (Power on = Orange, Power off = N/A)
Storage Disk Drive	2.5" SATA HDD Bay x 1
Expansion Slot	Full-size Mini Card x 1 SIM Card x 1 OMNI I/O Connector x 1
OS Support	Windows® 8.1 Windows® 10 (64-bit) Linux Kernel 2.6.x or higher

Power Supply

DC Input	DC 9V ~ 30V via 3-pin Terminal Block, ATX power function
----------	--

1.1.1 OMNI-3105-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	11.02" x 9.41" x 2.87" (280mm x 239mm x 73 mm)
Carton Dimension	16.34" x 7.05" x 15.39" (415mm x 179mm x 391mm)
Gross Weight	8.82 lb. (4Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	10.4" TFT-LCD, LED
Max Resolution	800(H) x 600(V)
Max. Colors	16.2M colors
Luminance	230 cd/m2
Viewing Angle	120 (H), 100 (V)
Back Light	LED
Back Light MTBF (Hours)	50,000

Touchscreen

Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (90% ± 3%), 5-wire Resistive (80% ± 3%)

1.1.2 OMNI-3125-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	12.95" x 11.34" x 2.72" (329mm x 288mm x 69 mm)
Carton Dimension	20.87" x 17.52" x 7.87" (530mm x 445mm x 200mm)
Gross Weight	12.34 lb. (5.6Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	12.1" TFT-LCD, LED
Max Resolution	1024(H) x 768(V)
Max. Colors	16.2M colors
Luminance	500 cd/m2
Viewing Angle	160° (H), 160° (V)
Back Light	LED
Back Light MTBF (Hours)	50,000

Touchscreen

Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (90% ± 3%), 5-wire Resistive (80% ± 3%)

1.1.3 OMNI-3155-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	14.53" x 12.36" x 2.79" (369mm x 314mm x 71 mm)
Carton Dimension	20.08" x 9.84" x 18.11" (510mm x 250mm x 460mm)
Gross Weight	14.3 lb. (6.5Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	15" TFT-LCD, LED
Max Resolution	1024(H) x 768(V)
Max. Colors	16.2M (8bit/color)
Luminance	300 cd/m2
Viewing Angle	176° (H), 176° (V)
Back Light	LED
Back Light MTBF (Hours)	70,000

Touchscreen

Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (90%± 2%), 5-wire Resistive (80% ± 2%)

1.1.4 OMNI-2155-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	16.54" x 10.43" x 2.87" (420 mm x 265 mm x 73 mm)
Carton Dimension	20.87" x 17.52" x 7.87" (530mm x 445mm x 200mm)
Gross Weight	14.96 lb. (6.8Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	15.6" TFT-LCD, LED
Max Resolution	1366(H) x 768(V)
Max. Colors	16.7M (8 bit/color)
Luminance	400 cd/m2
Viewing Angle	160 (H), 140 (V)
Back Light	LED
Back Light MTBF (Hours)	50,000

Touchscreen

Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (90% ± 3%), 5-wire Resistive (80% ± 2%)

1.1.5 OMNI-3175-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	16.14" x 14.57" x 2.32" (410mm x 370mm x 59mm)
Carton Dimension	20.55" x 10.31" x19.29"(522mm x 262mm x 490mm)
Gross Weight	16.28 lb. (7.4Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	17" TFT-LCD, LED
Max Resolution	1280(H) x 1024(V)
Max. Colors	16.7M colors (RGB 6-bits + Hi-FRC data)
Luminance	350 cd/m2
Viewing Angle	170 (H), 160 (V)
Back Light	LED
Back Light MTBF (Hours)	50,000

Touchscreen

Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (90% ± 3%), 5-wire Resistive (80% ± 3%)

1.1.6 OMNI-3195-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	18.14" x 16.14" x 2.83" (460.8mm x 410mm x 72 mm)
Carton Dimension	26.02" x 8.11" x 19.53" (661mm x 206mm x 496mm)
Gross Weight	20.06 lb. (9.1Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	17" TFT-LCD, LED
Max Resolution	1280(H) x 1024(V)
Max. Colors	16.7M colors (RGB 6-bits + Hi-FRC data)
Luminance	350 cd/m2
Viewing Angle	170 (H), 160 (V)
Back Light	LED
Back Light MTBF (Hours)	50,000

Touchscreen

Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (90% ± 3%), 5-wire Resistive (80% ± 3%)

1.1.7 OMNI-2215-SKU

Mechanical

Construction	Aluminum Design (IP65 Front Frame)
Mounting	VESA 100/Panel Mount
Dimension	21.7" x 14.7" x 2.6" (550mm x 373mm x 66mm)
Carton Dimension	26.38" x 7.87" x 20.67" (670mm x 200mm x 525mm)
Gross Weight	20.02 lb. (9.1Kg)

Environmental

Operating Temperature	-4°F ~ 131°F (-20°C ~ 55°C) with 0.5 m/s airflow (Industrial Grade HDD)
Storage Temperature	-4°F ~ 158°F (-20°C ~ 70°C)
Storage Humidity	90% @40°C; non-condensing
Vibration	1 Grms/ 5~ 500Hz/ operation – with HDD
Shock	-
EMC	CE/FCC Class A

LCD

Display Type	21.5" TFT-LCD, LED
Max Resolution	1920(H) x 1080(V)
Max. Colors	16.7M colors
Luminance	250 cd/m2
Viewing Angle	178 (H), 178 (V)
Back Light	LED
Back Light MTBF (Hours)	50,000

Touchscreen


Type	P-CAP/ 5-wire resistive
Light Transmission	P-CAP (85%), 5-wire Resistive (80% ± 5%)

1.2 OMNI Modules

Featuring a modular design, the OMNI-SKU Series Panel PC can be fitted with a number of modules to expand its base capabilities. Please refer to the sections below for their features.

Note: The interface between the CPU box and the module is VIA PCIe signal.


1.2.1 USB/ COM/ LAN Module

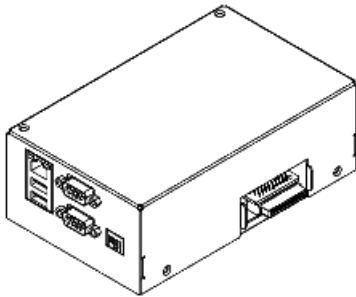

Features

- USB 2.0 x 2
- RS-232/422/485 x 2 (Selectable by external switch)
- 10/100/1000 Giga LAN x 1


1.2.2 Dual LAN Module

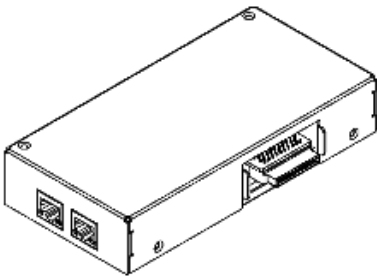

Features

- 10/100/1000 Giga LAN x 2


1.2.3 Mini Card and SIM Card Module

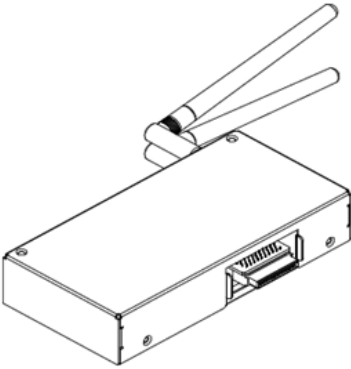

Features

- Mini Card x 2
- SIM Card x 2


1.2.4 RS-232/422/485 Module

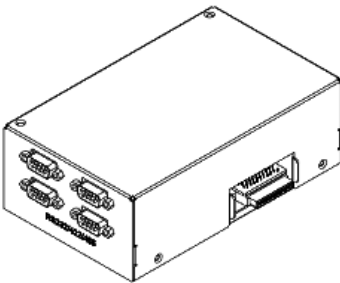

Features

- RS-232/422/485 x 4
(Selectable by jumper)


1.2.5 Isolated RS-232/422/485 Module

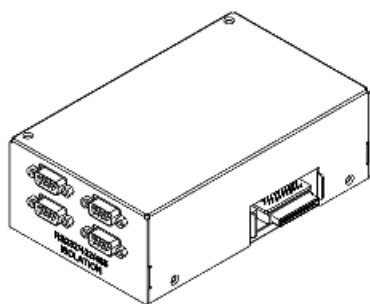

Features

- Isolated RS-232/422/485 x 4
(Selectable by jumper)
- 2k Vdc Isolation


1.2.6 Digital I/O Module

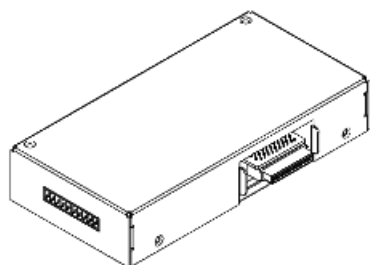

Features

- Digital I/O x 8


1.2.7 CAN Bus Module

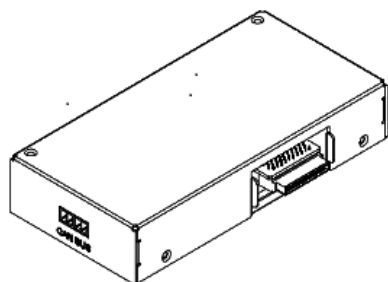

Features

- CANBus with Phoenix Connectors
- 2k Vdc Isolation
- Supports plug-and-play after installing driver


1.2.8 Audio Module

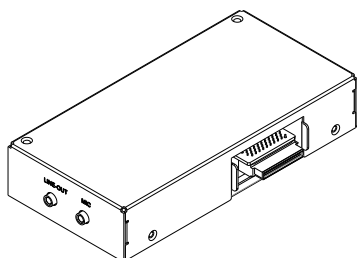

Features

- Mic-in
- Line-out
- Supports plug-and-play after installing driver & reboot


1.2.9 HMS Module

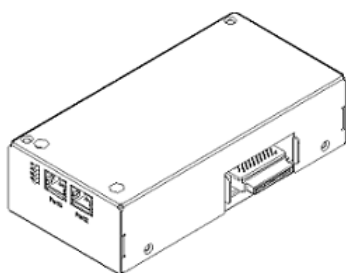

Features

- 10/100 Ethernet x 2

1.2.10 COM x 4 + DIO x 16 Module

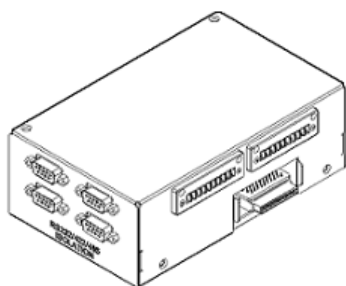

Features


- Isolated RS-232/422/485 x 4
- Digital I/O x 8

Chapter 2

Hardware Information


2.1 Dimensions

2.1.1 Dimensions: OMNI-2155-SKU Main Panels

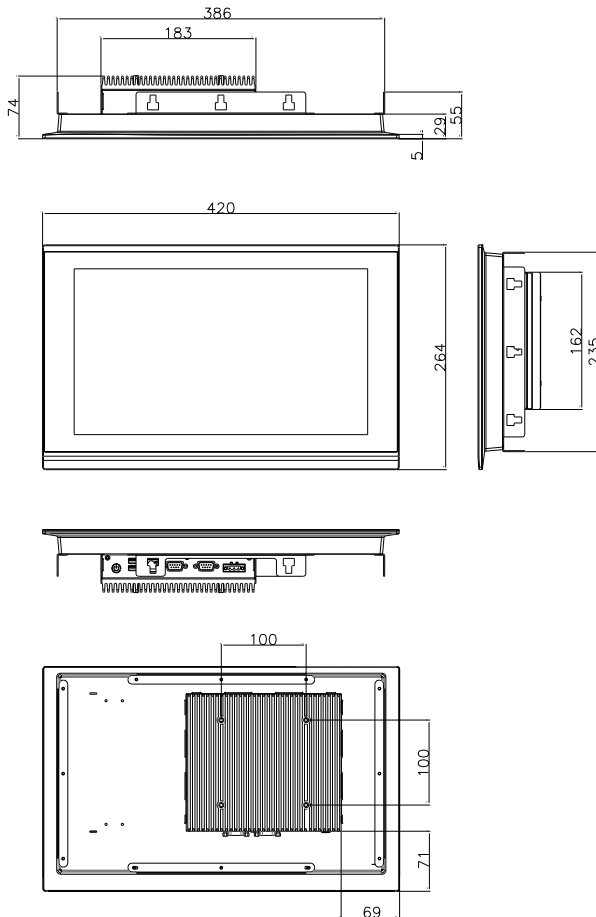


2.1.2 Dimensions: OMNI Modules


USB/ CAN/ LAN Module

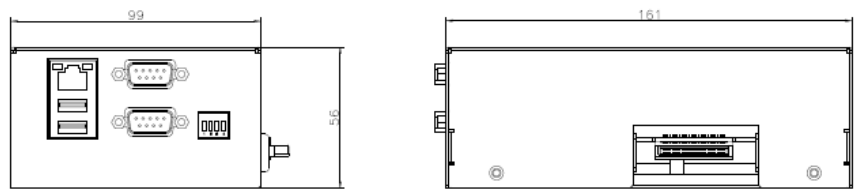


Dual LAN Module

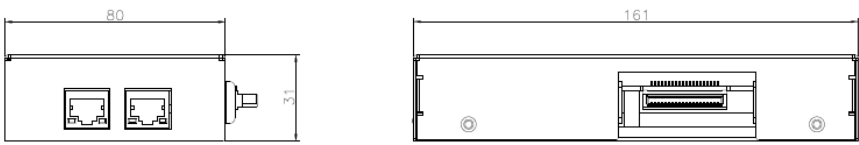


Mini Card & SIM Card Module




RS-232/422/485 Module

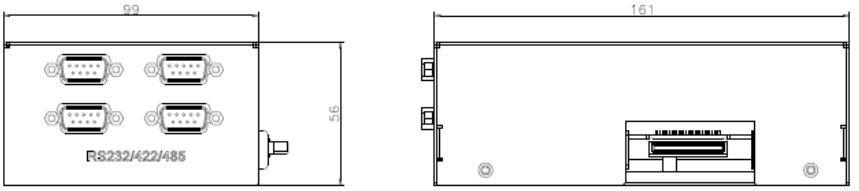


Isolated RS-232/422/485 Module

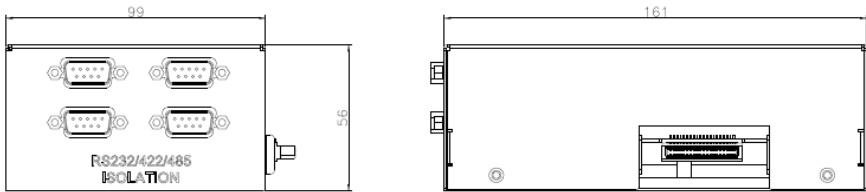


Digital I/O Module

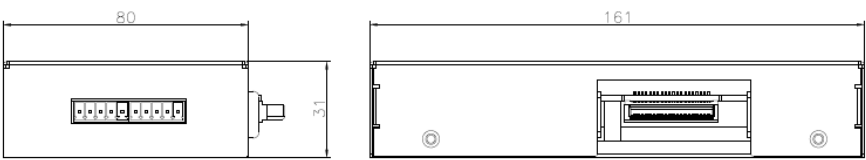



CAN Bus Module

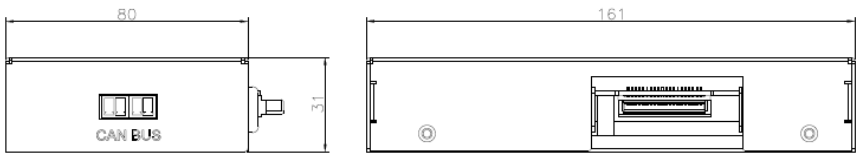



Audio Module

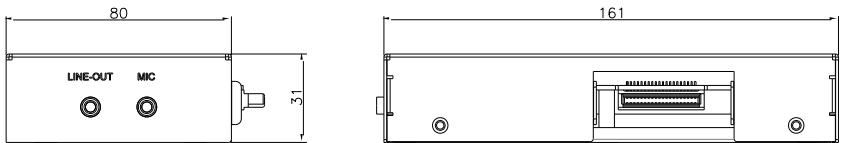

HMS Module

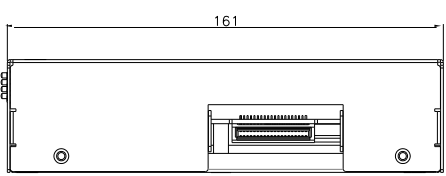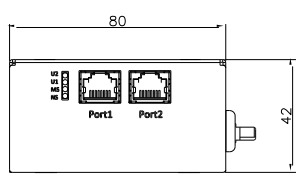


COM x 4 + DIO x 16 Module

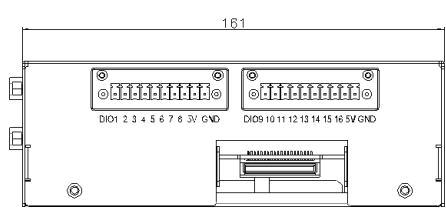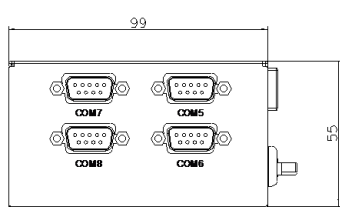


2.1.3 Dimensions: Cables

Touch and Panel Select Cable

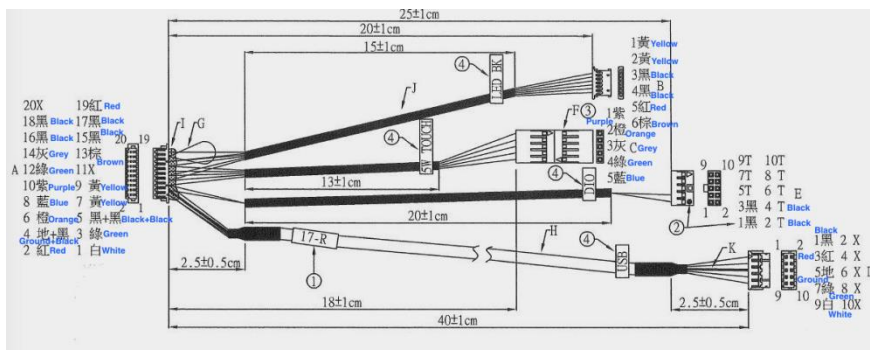

LVDS Cable

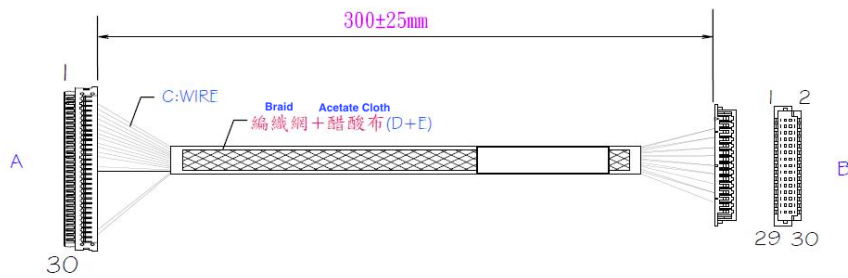


2.2 List of Jumpers


Please refer to the table below for all of the system's jumpers that you can configure for your application

Label	Function
JP1	mSATA/Mini Card Operating VCC Selection
JP2	Resistive Touch Mode
JP3	LVDS Port Backlight Lightness Control Mode Selection
JP4	LVDS Port Backlight Inverter VCC Selection
JP5	Auto Power Button Enable/Disable Selection
JP7	Clear CMOS Jumper
JP8	Panel Select ID (Auto detect by LCD kit cable)
JP9	COM 2 Pin 8 Function Selection
JP10	COM 1 Pin 8 Function Selection

2.2.1 mSATA/Mini Card Operating VCC Selection (JP1)




mSATA




Mini-Card (Default)

2.2.2 Resistive Touch Mode (JP2)




4/8 Wires Mode



5 Wires Mode (Default)

2.2.3 LVDS Port Backlight Lightness Control Mode Selection (JP3)




VR Mode




PWM Mode (Default)

2.2.4 LVDS Port Backlight Inverter VCC Selection (JP4)




+12V (Default)




+5V

2.2.5 Auto Power Button Enable/Disable Selection (JP5)




Disable (**Default**)




Enable

2.2.6 Clear CMOS (JP7)




Normal (**Default**)




Clear CMOS


2.2.7 COM 2 Pin 8 Function Selection (JP9)

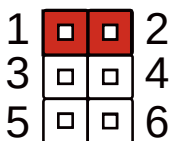

+12V

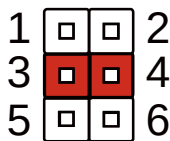


Ring (**Default**)

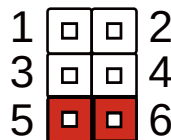


+5V


2.2.8 COM 1 Pin 8 Function Selection (JP10)

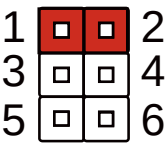

+12V

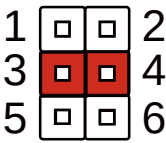

Ring (Default)

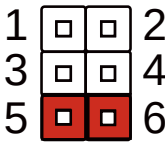

+5V


2.3 List of Connectors

Please refer to the table below for all of the system's connectors that you can configure for your application

Label	Function
JP6	Front Panel Connector
CN1	VGA Connector (Optional)
CN2	Mini Card Slot (Full-size Mini Card)
CN3	Touch Screen Connector
CN4	Micro SIM Card Socket
CN5	eDP/LVDS Port
CN6	Omni Panel Wire Type
CN7	LVDS Port Inverter/Backlight Connector Ext. I/O
CN8	LVDS Port Inverter/Backlight Connector
CN9	USB 2.0
CN10	USB 2.0
CN11	LPC Port
CN12	+5V Output for SATA HDD
CN13	SATA Port
CN14	SPI Debug Port
CN15	HDMI
CN16	Speaker R
CN17	Speaker L
CN18	Audio I/O Port
CN19	USB 3.0/2.0 Port
CN20	Battery
CN21	Smart FAN
CN23	LAN Port (RJ-45)
CN24	USB 3.0/2.0 Port
CN25	External Power Input

Label	Function
CN26	COM Port 2
CN27	COM Port 1

2.3.1 Front Panel Connector (JP6)

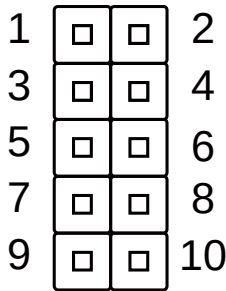

Pin	Signal	Pin	Signal
1	PWR_BTN-	2	PWR_BTN+
3	HDD_LED-	4	HDD_LED+
5	SPEAKER-	6	SPEAKER+
7	PWR_LED-	8	PWR_LED+
9	H/W RESET-	10	H/W RESET+

2.3.2 Mini Card Slot (Full-size Mini Card) (CN2)


Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	
8	NC	PWR	
9	GND	GND	
10	NC	I/O	
11	PCIE_REF_CLK-	DIFF	

Pin	Pin Name	Signal Type	Signal Level
12	NC	IN	
13	PCIE_REF_CLK+	DIFF	
14	NC		
15	GND	GND	
16	NC	PWR	
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-/MSATA_RX+	DIFF	
24	+3.3VSB	PWR	+3.3V
25	PCIE_RX+/MSATA_RX-	DIFF	
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-/MSATA_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+/MSATA_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3VSB	PWR	+3.3V

2.3.3 Touch Screen Connector (CN3)


8 Wires

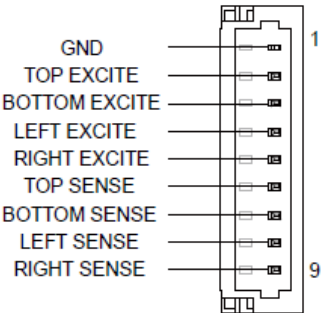

Pin	Signal	Pin	Signal
1	GND	2	TOP EXCITE
3	BOTTOM EXCITE	4	LEFT EXCITE
5	RIGHT EXCITE	6	TOP SENSE
7	BOTTOM SENSE	8	LEFT SENSE


Pin	Signal	Pin	Signal
9	RIGHT SENSE		

4 Wires

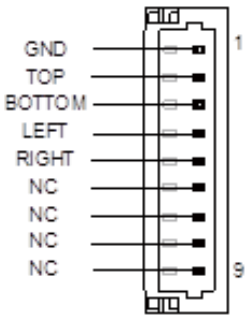

Pin	Signal	Pin	Signal
1	GND	2	TOP
3	BOTTOM	4	LEFT
5	RIGHT	6	NC
7	NC	8	NC
9	NC		

5 Wires

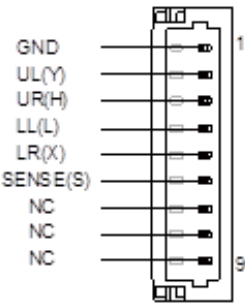


Pin	Signal	Pin	Signal
1	GND	2	UL(Y)
3	UR(H)	4	LL(L)
5	LR(X)	6	SENSE(S)
7	NC	8	NC
9	NC		

2.3.4 Micro SIM Card Socket (CN4)

Pin	Pin Name	Signal Type	Signal Level
1	UIM_PWR	PWR	
2	UIM_RST	IN	
3	UIM_CLK	IN	
4	NC		
5	GND	GND	
6	UIM_VPP	PWR	
7	UIM_DATA	I/O	
8	NC		

2.3.5 eDP/LVDS Port (CN5)

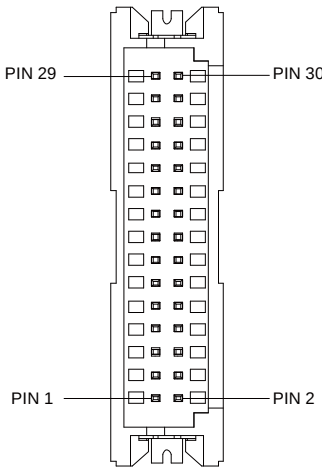

LVDS Function			
Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	LVDS_A_CLK-	DIFF	
6	LVDS_A_CLK+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	LVDS_DA0-	DIFF	
10	LVDS_DA0+	DIFF	
11	LVDS_DA1-	DIFF	
12	LVDS_DA1+	DIFF	
13	LVDS_DA2-	DIFF	
14	LVDS_DA2+	DIFF	


LVDS Function			
Pin	Pin Name	Signal Type	Signal Level
15	LVDS_DA3-	DIFF	
16	LVDS_DA3+	DIFF	
17	DDC_DATA	I/O	+3.3V
18	DDC_CLK	I/O	+3.3V
19	LVDS_DB0-	DIFF	
20	LVDS_DB0+	DIFF	
21	LVDS_DB1-	DIFF	
22	LVDS_DB1+	DIFF	
23	LVDS_DB2-	DIFF	
24	LVDS_DB2+	DIFF	
25	LVDS_DB3-	DIFF	
26	LVDS_DB3+	DIFF	
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	LVDS_B_CLK-	DIFF	
30	LVDS_B_CLK+	DIFF	

Note: LVDS LCD_PWR can be set to +3.3V or +5V by cable.

eDP Function			
Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	eDP_TX3_D-	DIFF	
6	eDP_TX3_D+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V

eDP Function			
Pin	Pin Name	Signal Type	Signal Level
8	GND	GND	
9	eDP_TX2_D-	DIFF	
10	eDP_TX2_D+	DIFF	
11	eDP_TX1_D-	DIFF	
12	eDP_TX1_D+	DIFF	
13	eDP_TX0_D-	DIFF	
14	eDP_TX0_D+	DIFF	
15	NC		
16	eDP_HPD	DIFF	
17	eDP_AUX_D-	I/O	+3.3V
18	eDP_AUX_D+	I/O	+3.3V
19	NC		
20	NC		
21	NC		
22	NC		
23	NC		
24	NC		
25	NC		
26	NC		
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	NC		
30	NC		

2.3.6 LVDS Port Inverter/Backlight Connector (CN8)

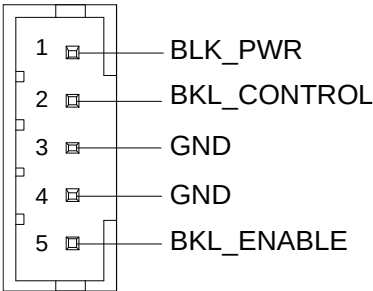


Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	+5V

Note: LVDS BKL_PWR can be set to +5V or +12V by JP4.


Note: LVDS BKL_CONTROL can be set by JP3.

2.3.7 LPC Port (CN11)

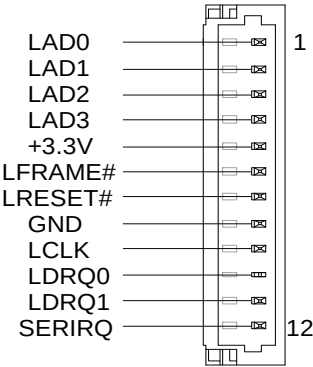


Pin	Pin Name	Signal Type	Signal Level
1	LAD0	I/O	+3.3V
2	LAD1	I/O	+3.3V
3	LAD2	I/O	+3.3V
4	LAD3	I/O	+3.3V
5	+3.3V	PWR	+3.3V
6	LFRAME#	IN	
7	LRESET#	OUT	+3.3V
8	GND	GND	
9	LCLK	OUT	
10	LDRQ0	IN	
11	LDRQ1	IN	
12	SERIRQ	I/O	+3.3V

2.3.8 +5V Output for SATA HDD (CN12)

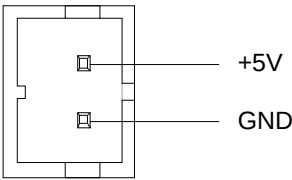

Pin	Pin Name	Signal Type	Signal Level
1	+5V	PWR	+5V
2	GND	GND	

2.3.9 SATA Port (CN13)

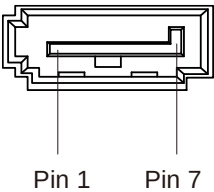

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX+	DIFF	
3	SATA_TX-	DIFF	
4	GND	GND	
5	SATA_RX-	DIFF	
6	SATA_RX+	DIFF	
7	GND	GND	

2.3.10 BIOS Debug Port (CN14)

Pin	Pin Name	Signal Type	Signal Level
1	SPI_MISO	OUT	
2	GND	GND	
3	SPI_CLK	IN	
4	+3.3VSB	PWR	+3.3V
5	SPI_MOSI	IN	
6	SPI_CS	IN	
7	NC		


2.3.11 HDMI Connector (CN15)



Pin	Pin Name	Signal Type	Signal Level
1	DVI_D2+	OUT	
2	GND	GND	
3	DVI_D2-	OUT	
4	DVI_D1+	OUT	
5	GND	GND	
6	DVI_D1-	OUT	
7	DVI_D0+	OUT	
8	GND	GND	
9	DVI_D0-	OUT	
10	DVI_CLK+	OUT	
11	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
12	DVI_CLK-	OUT	
13	NC		
14	NC		
15	SCL	I/O	
16	SDA	I/O	
17	GND	GND	
18	+5V	PWR	
19	HPD	IN	

2.3.12 USB 3.0 Ports (CN19)

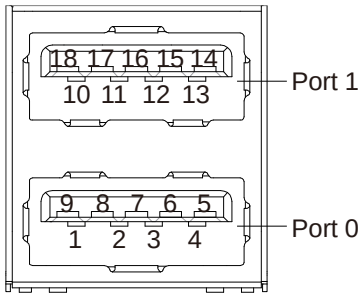


Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB_D-	DIFF	
3	USB_D+	DIFF	
4	GND	GND	
5	USB_SSRX-	DIFF	
6	USB_SSRX+	DIFF	
7	GND	GND	
8	USB_SSTX-	DIFF	
9	USB_SSTX+	DIFF	
10	+5VSB	PWR	+5V

Pin	Pin Name	Signal Type	Signal Level
11	USB_D-	DIFF	
12	USB_D+	DIFF	
13	GND	GND	
14	USB_SSRX-	DIFF	
15	USB_SSRX+	DIFF	
16	GND	GND	
17	USB_SSTX-	DIFF	
18	USB_SSTX+	DIFF	

2.3.13 Battery (CN20)


Pin	Pin Name	Signal Type	Signal Level
1	+3.3V	PWR	3.3V
2	GND	GND	

2.3.14 CPU FAN (Optional) (CN21)

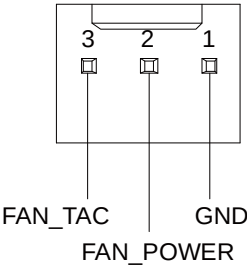

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	FAN_POWER	PWR	+12V
3	FAN_TAC	IN	

2.3.15 LAN (RJ-45) Connector (CN23)

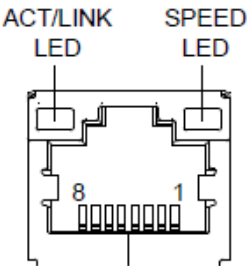

Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	2	MDI0-
3	MDI1+	4	MDI2+
5	MDI2-	6	MDI1-
7	MDI3+	8	MDI3-

2.3.16 External Power Input (CN25)

Pin	Pin Name	Signal Type	Signal Level
1	+12V	PWR	+9~+24V (or +12V)
2	GND	GND	

2.3.17 COM Port 2 (CN26)

RS-232			
Pin	Pin Name	Signal Type	Signal level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±5V

RS-232			
Pin	Pin Name	Signal Type	Signal level
5	TX	OUT	±5V
6	CTS	IN	
7	DTR	OUT	±5V
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

RS-422			
Pin	Pin Name	Signal Type	Signal level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_TX+	OUT	±5V
4	NC		
5	RS422_RX+	IN	
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

RS-485			
Pin	Pin Name	Signal Type	Signal level
1	RS485_D-	I/O	±5V
2	NC		
3	RS485_D+	I/O	±5V
4	NC		
5	NC		
6	NC		
7	NC		

RS-485			
Pin	Pin Name	Signal Type	Signal level
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

Note: COM 2 RS-232/422/485 can be set through BIOS setting. Default is RS-232.

Note: Pin 8 function can be set by JP11.

2.3.18 COM Port 1 (CN27)

RS-232			
Pin	Pin Name	Signal Type	Signal level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±5V
5	TX	OUT	±5V
6	CTS	IN	
7	DTR	OUT	±5V
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

RS-422			
Pin	Pin Name	Signal Type	Signal level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_TX+	OUT	±5V
4	NC		
5	RS422_RX+	IN	

RS-422			
Pin	Pin Name	Signal Type	Signal level
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

RS-485			
Pin	Pin Name	Signal Type	Signal level
1	RS485_D-	I/O	±5V
2	RS485_D+	I/O	±5V
3	NC		
4	NC		
5	NC		
6	NC		
7	NC		
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	


Note: COM 1 RS-232/422/485 can be set through BIOS setting. Default is RS-232.

Note: Pin 8 function can be set by JP9.


2.4 Module Assembly

2.4.1 Installing a Module


Step 1 – Insert the connector to the OMNI slot by the side of the PCB box.

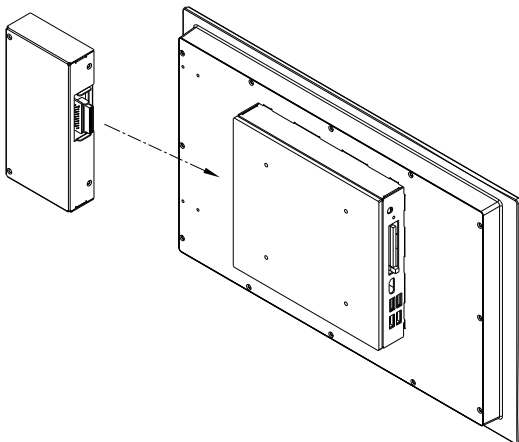

Step 2 – Secure with the screws provided.

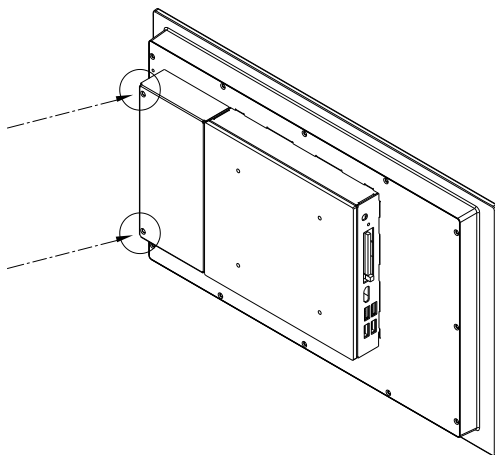


Module installation is complete, as per the image below.

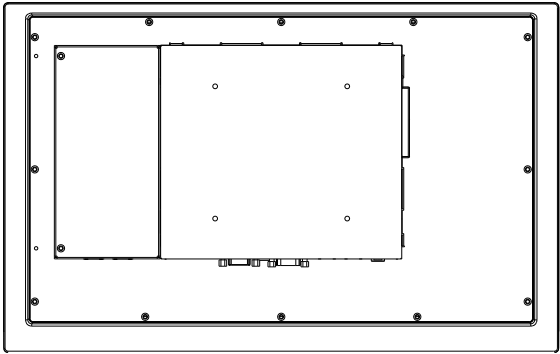


2.4.2 Detaching a Module


Step 1 – Remove the screws from the module.

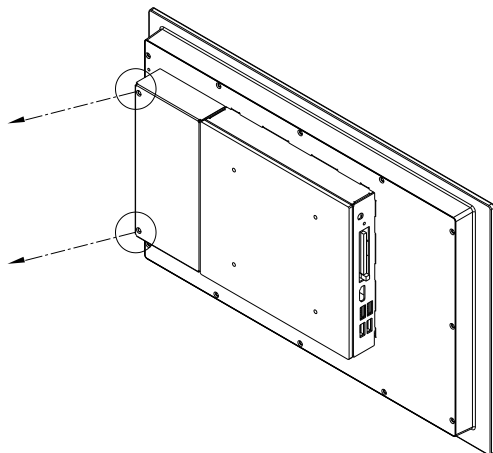

Step 2 – Remove the module

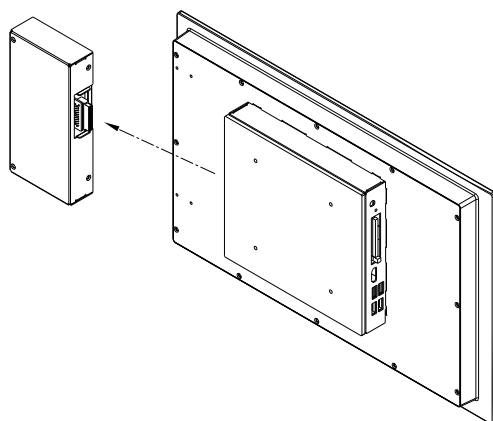

The module is now detached from the main panel, per the below diagram.

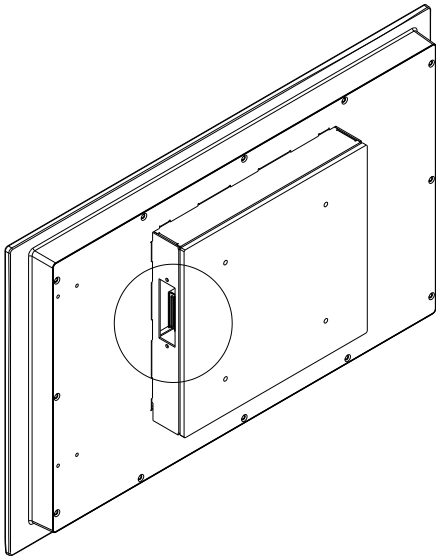

2.5 Hard Disk Drive Installation

Step 1 – Put the rubber provided onto the holes of the bracket.



Step 2 – Place the HDD onto the bracket and secure with the screws provided.



Step 3 – Hook the setup onto the bar above the PCB board as shown below, then secure it with the screw provided.




Note: Users are advised to use storage devices provided and installed by AAEON.

2.6 DRAM Installation


To install DRAM, remove the HDD and HDD bracket and insert the RAM module as shown below.

Note: Users are advised to use DRAM modules provided and installed by AAEON.

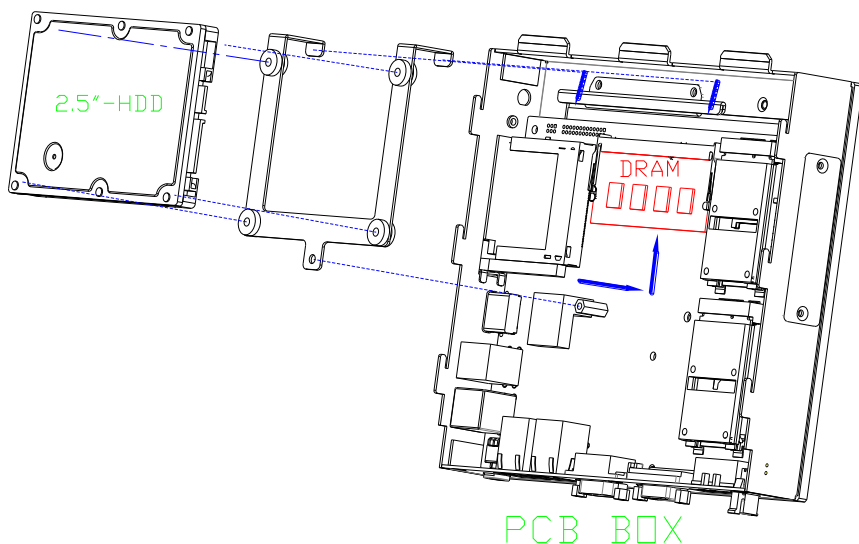


2.7 Wall Mount Installation


Step 1 – Glue the water-proof rubber along back side of the panel.

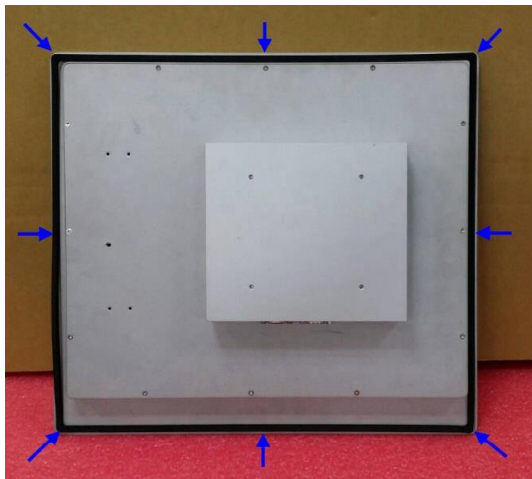

Step 2 – Screw the provided mounting brackets into back of the panel.

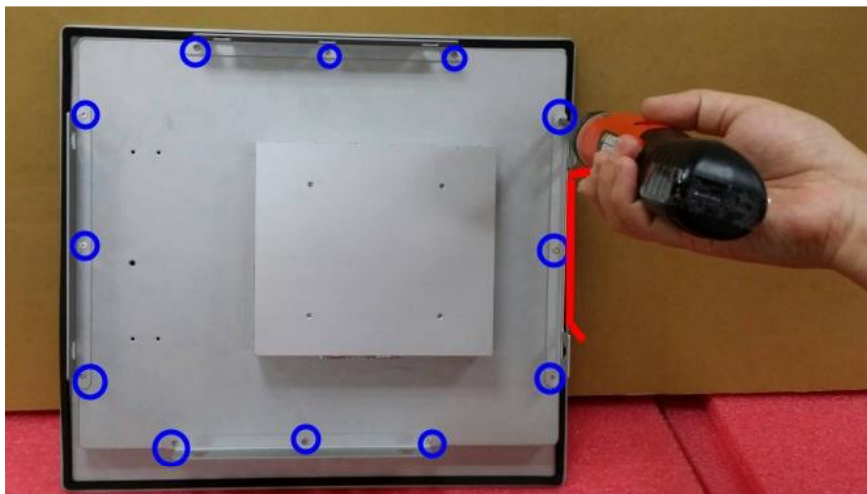

Step 3 – Secure the panel with wall mount brackets onto the wall with screws.

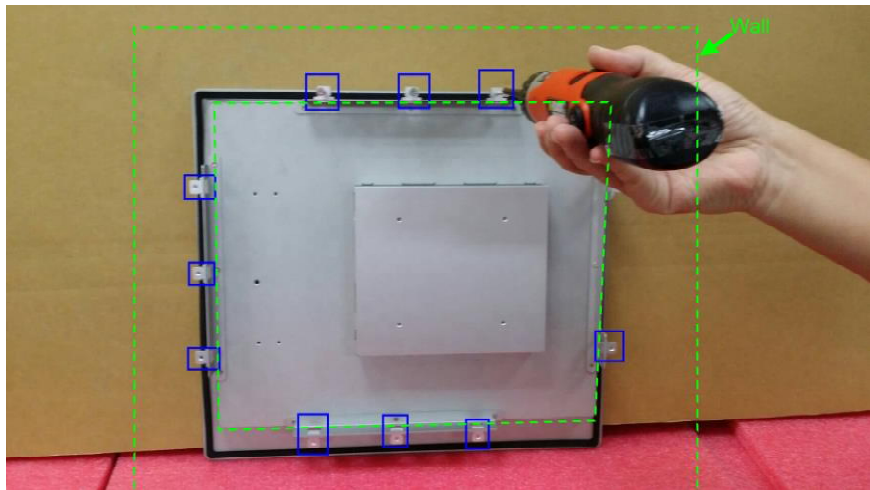


2.8 Assemble the OMNI Panel and the CPU Box

The left photo shows the LCD Kit and the right photo shows BOXER Kit.



Step 1 – Plug connectors into connector sockets accordingly.

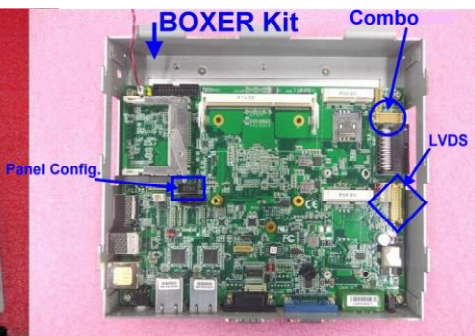

:




Step 2 – Assemble the panel and CPU Box.



Step 3 – Slide the CPU Box into the panel and tighten them with screws.




The assembly process is complete.

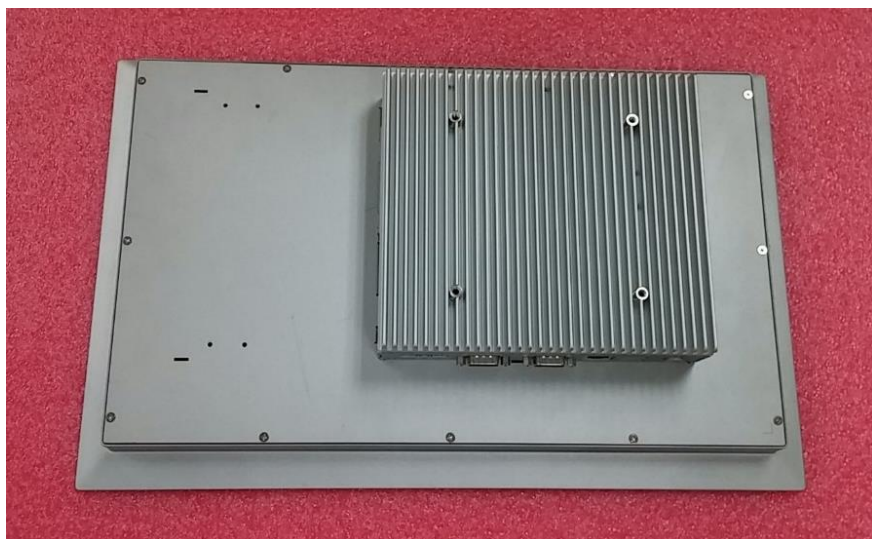

2.9 P-CAP Touch Screen Operation



1. Always touch the screen with finger pads.
2. The force of finger should be lower than 10g.

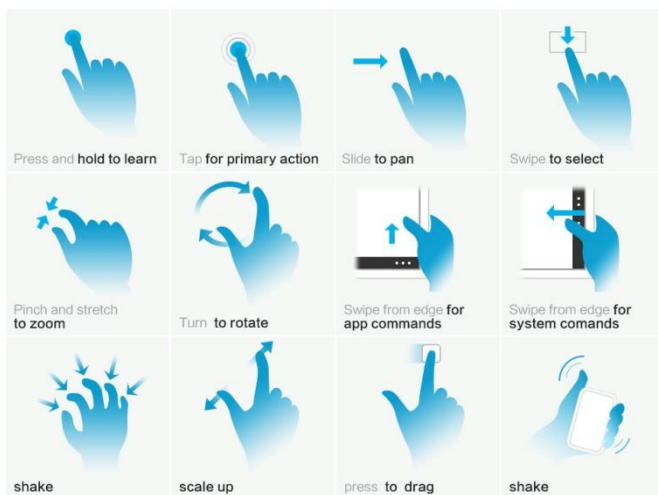

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization. If an error, fatal or non-fatal, is encountered, a few short beeps or an error message will be outputted. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be outputted, in which case you will need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- You are starting your system for the first time
- You have changed your system's hardware
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention, which is to be replaced once emptied.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Enable/ Disable boot option for legacy network devices


Chipset – For hosting bridge parameters

Security – The setup administrator password can be set here


Boot – Enable/ Disable quiet Boot Option

Save & Exit – Save your changes and exit the program


3.3 Setup Submenu: Main

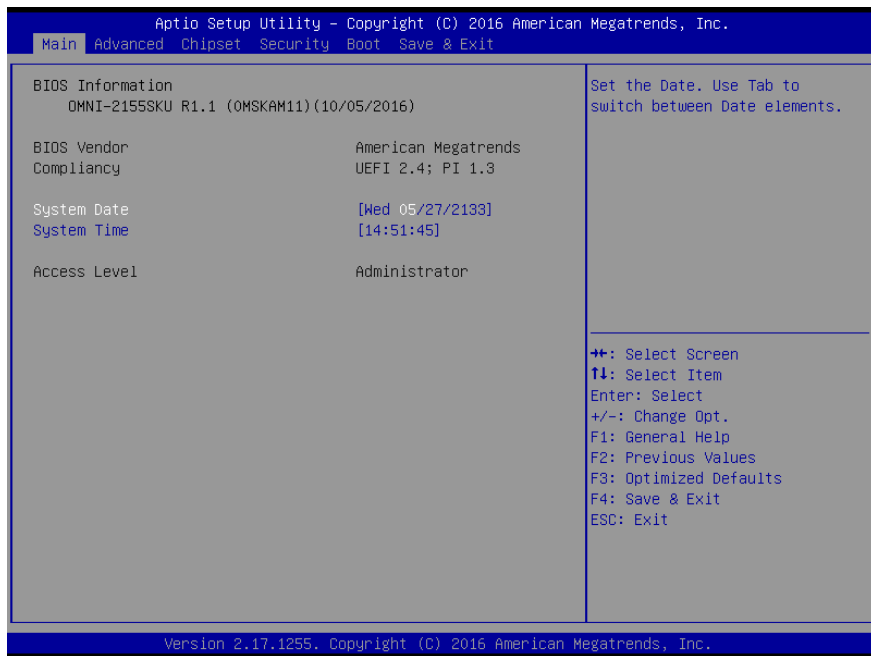


3.4 Setup Submenu: Advanced

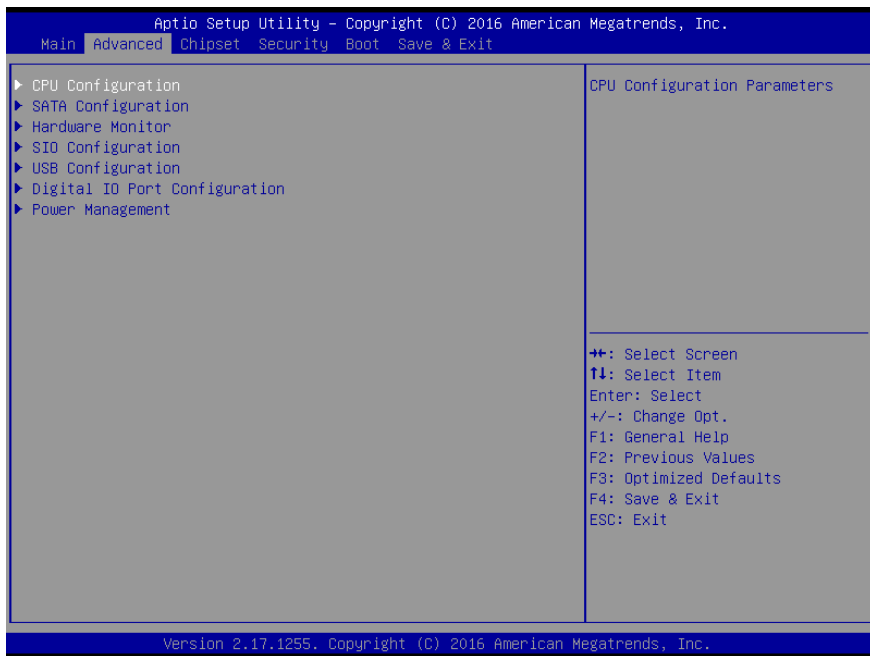

3.4.1 CPU Configuration

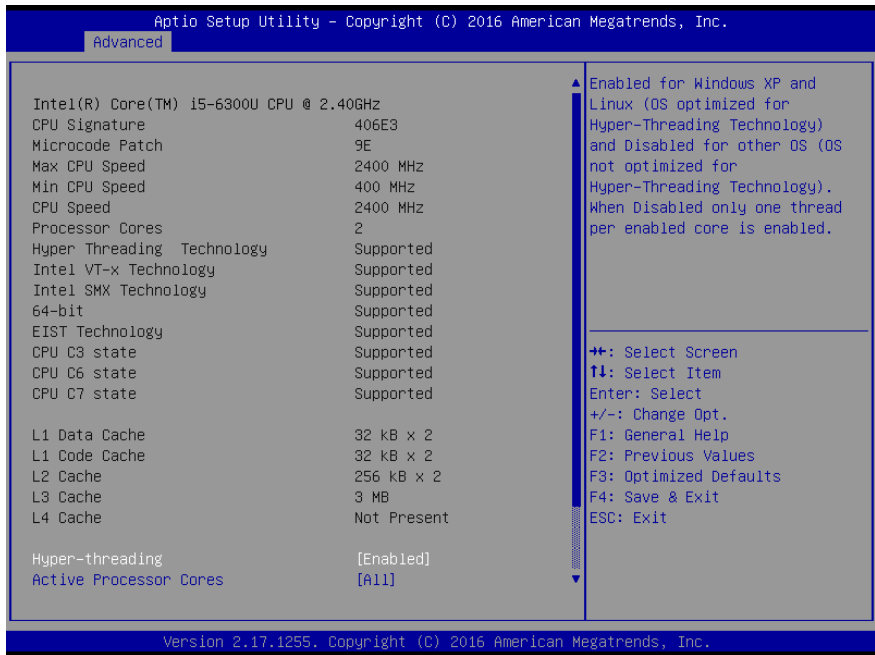

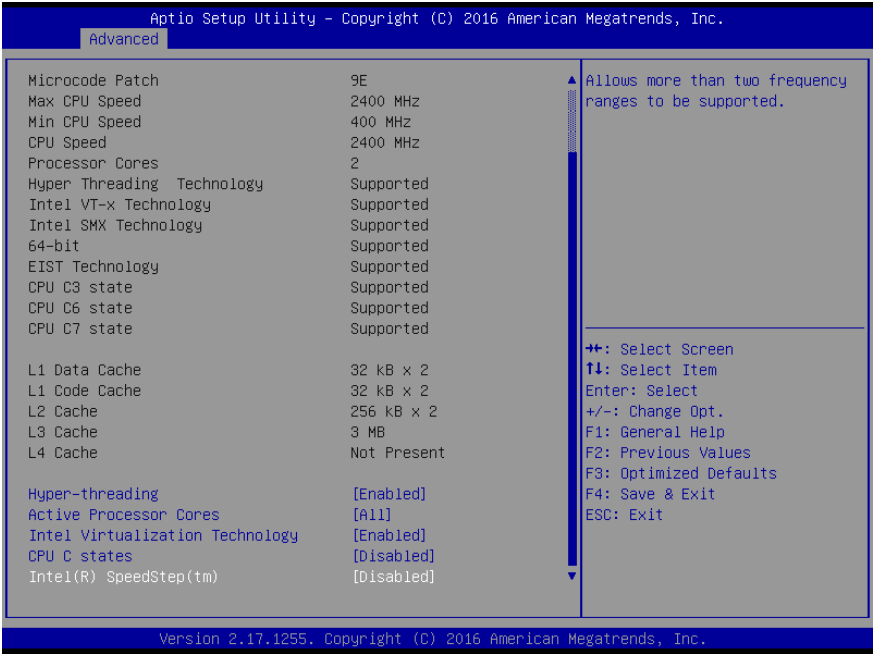


Options Summary		
Hyper-threading	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.		
Intel Virtualization Technology	Disabled	
	Enabled	Optimal Default, Failsafe Default
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.		
Active Processor Cores	1	
	All	Optimal Default, Failsafe Default
Number of cores to enable in each processor package.		
CPU C States	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable or disable CPU C states.		
Intel(R) SpeedStep(tm)	Disabled	Optimal Default, Failsafe Default
	Enabled	
Allows more than two frequency ranges to be supported.		

3.4.2 SATA Configuration




Options Summary		
SATA Controller(s)	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable SATA Device.		
Port 0	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable or Disable SATA Port.		
Hot Plug	Enabled	
	Disabled	Optimal Default, Failsafe Default
Designates this port as Hot Pluggable.		

3.4.3 Hardware Monitor

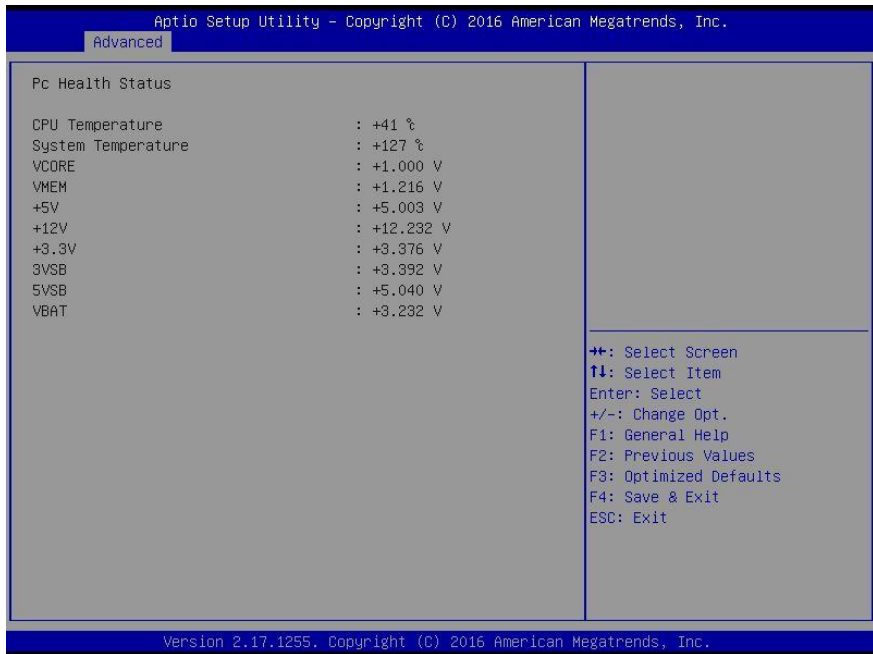

3.4.4 SIO Configuration

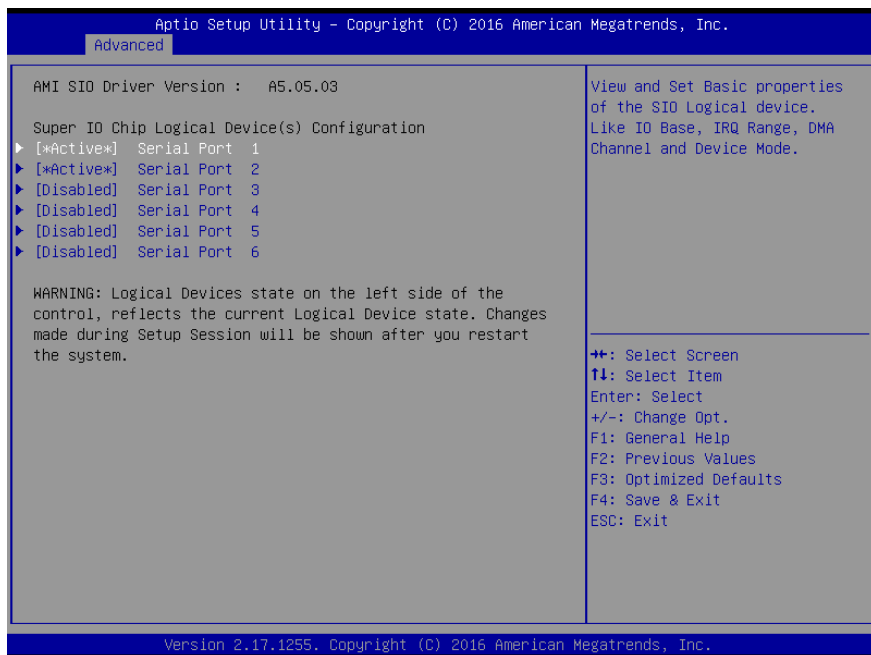

3.4.4.1 Serial Port 1 Configuration

Aptio Setup Utility - Copyright (C) 2016 American Megatrends, Inc.


Advanced

Serial Port 1 Configuration Use This Device [Enabled] Logical Device Settings: Current : IO=3F8h; IRQ=4; Possible: [Use Automatic Settings] Mode : [RS232] WARNING: Disabling SIO Logical Devices may have unwanted side effects. PROCEED WITH CAUTION.	Enable or Disable this Logical Device. ⇧⇩: Select Screen T1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
--	---

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2F8; IRQ=3;	
	IO=3F8; IRQ=4;	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485 selection.		

3.4.4.2 Serial Port 2 Configuration

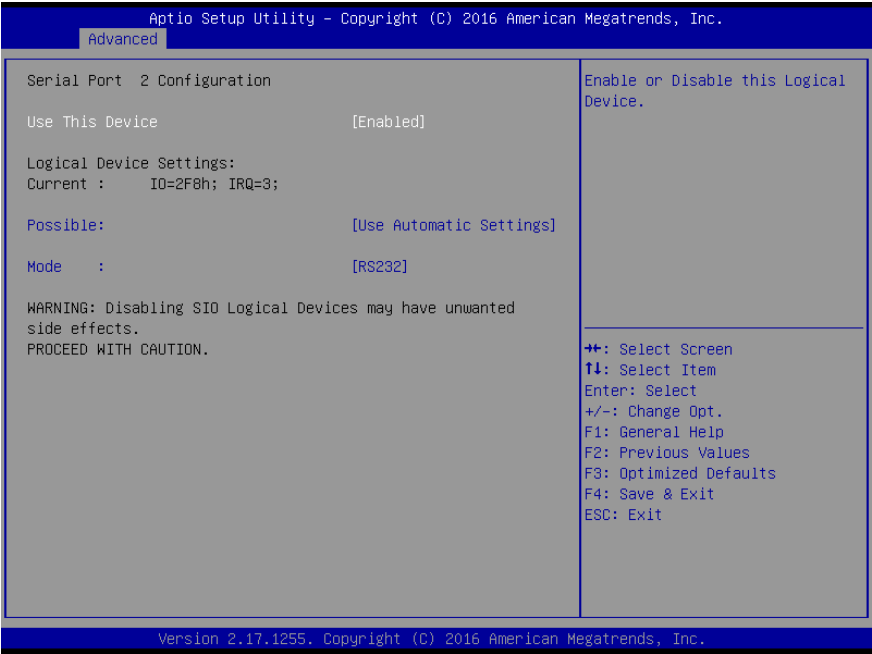


Options Summary		
Use This Device	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2F8; IRQ=3;	
	IO=3F8; IRQ=4;	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		
Mode:	RS232	Optimal Default, Failsafe Default
	RS422	
	RS485	
UART RS232, 422, 485 selection.		

3.4.5 USB Configuration

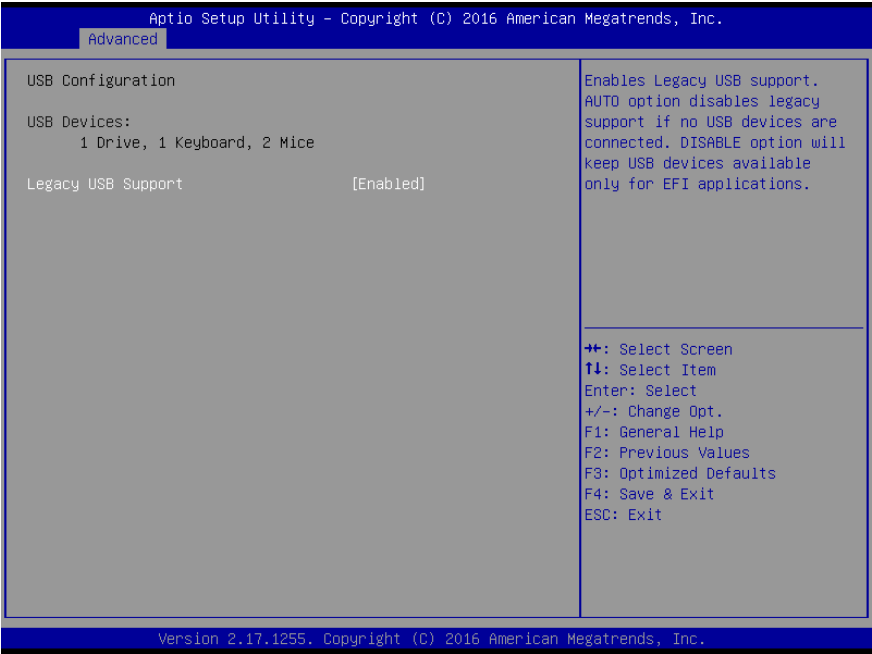


Options Summary		
Legacy USB Support	Enabled	Optimal Default, Failsafe Default
	Disabled	
	Auto	
Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.		

3.4.6 Digital IO Port Configuration

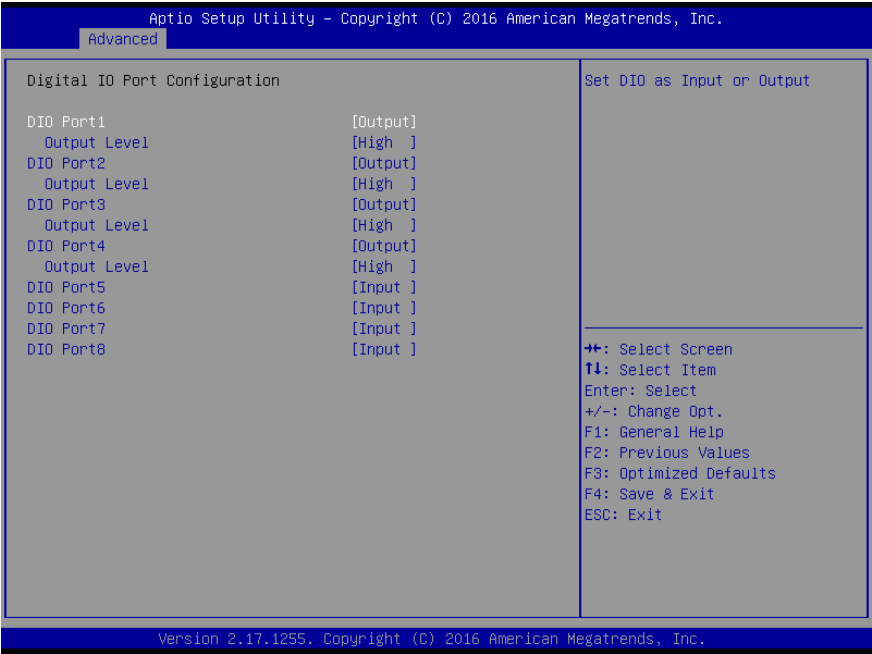

Options Summary		
DIO Port1/2/3/4/5/6/7/8	Output	Optimal Default, Failsafe Default
	Input	
Set DIO as Input or Output.		
Output Level	Low	
	High	Optimal Default, Failsafe Default
Set output level when DIO pin is output.		


3.4.7 Power Management

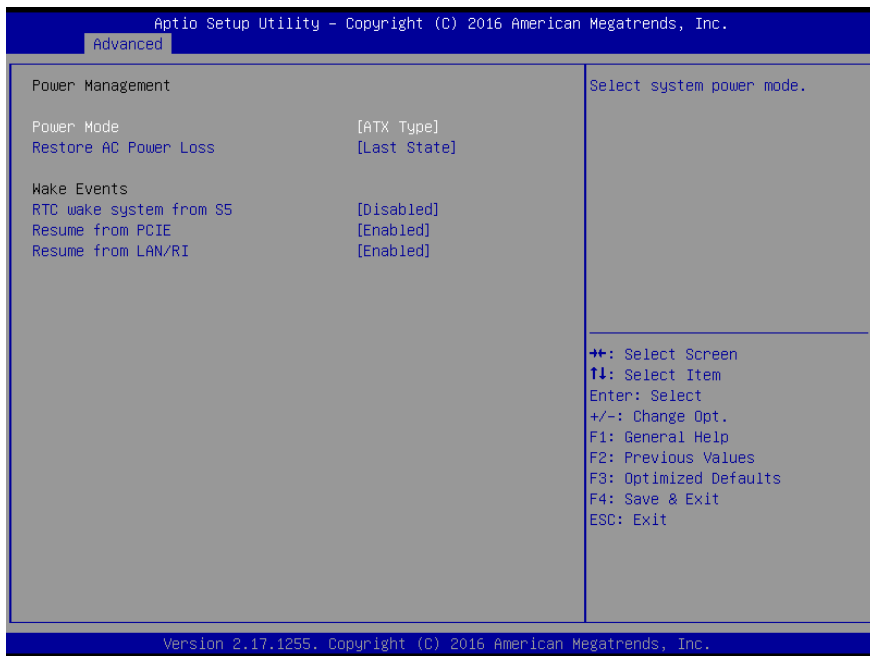


Options Summary		
Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select power supply mode.		
Restore AC Power Loss	Last State	Optimal Default, Failsafe Default
	Power On	
	Power Off	
Select power state when power is re-applied after a power failure.		
RTC wake system from S5	Disabled	Optimal Default, Failsafe Default
	Fixed Time	
	Dynamic Time	
Fixed Time: System will wake on the hr::min::sec specified./n Dynamic Time: System will wake on the current time + Increase minute(s).		
Resume from PCIE	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable Resume from PCIE.		

Options Summary		
Resume from LAN/RI	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable Resume from LAN/RI.		

3.5 Setup Submenu: Chipset

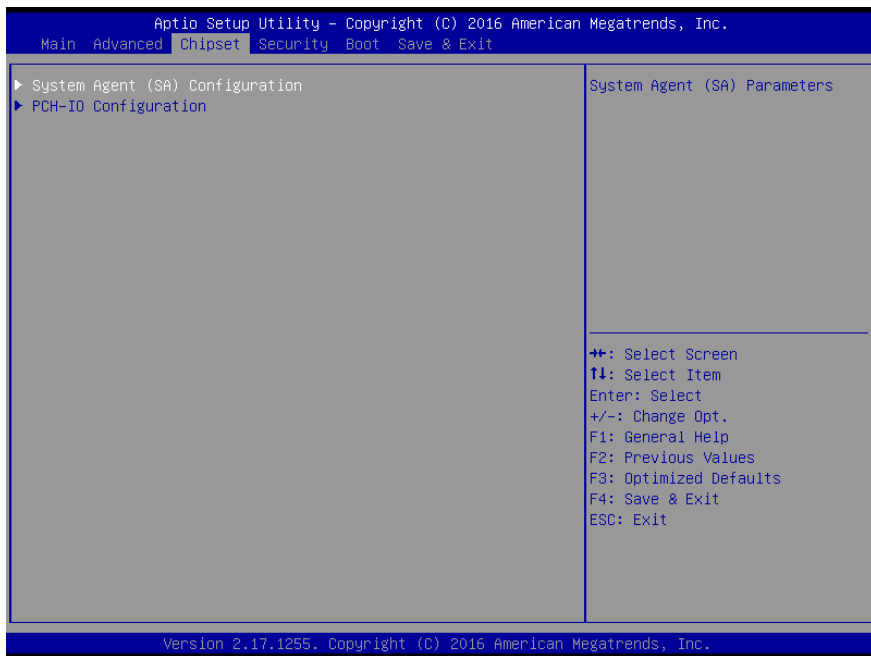


3.5.1 System Agent (SA) Configuration

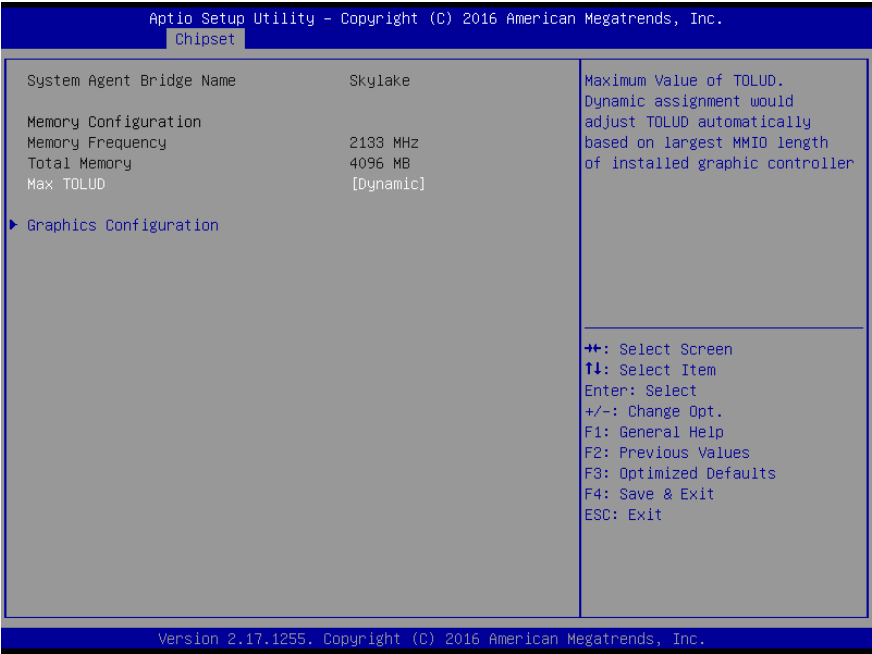

Options Summary		
Max TOLUD	Dynamic	Optimal Default, Failsafe Default
	1 GB	
	1.25 GB	
	1.5 GB	
	1.75 GB	
	2 GB	
	2.25 GB	
	2.5 GB	
	2.75 GB	
	3 GB	
Maximum Value of TOLUD (Top of Low Usable DRAM). Dynamic assignment would adjust TOLUD automatically based on largest MMIO length of installed graphic controller. Changing this value may cause side effect, if reserved memory is lesser than MMIO required. This happens often when GfX device with large MMIO requirement.		

3.5.1.1 Graphics Configuration

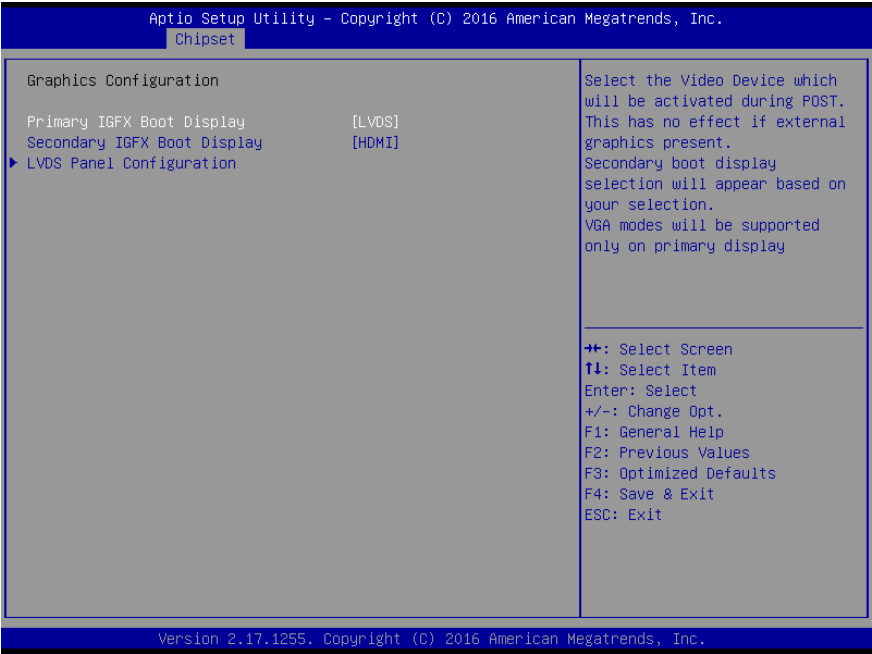


Options Summary		
Primary IGFX Boot Display	VBIOS default	
	HDMI	
	LVDS	Optimal Default, Failsafe Default
Secondary IGFX Boot Display	Disabled	Optimal Default, Failsafe Default
	HDMI	
Select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.		

3.5.1.1.1 LVDS Panel Configuration




Options Summary		
LVDS	Enabled	Optimal Default, Failsafe Default
	Disabled	
Enable/Disable this panel.		
Backlight Level	80%	Optimal Default, Failsafe Default
	0% ~ 100%	
Select backlight control level.		

3.5.2 PCH-IO Configuration

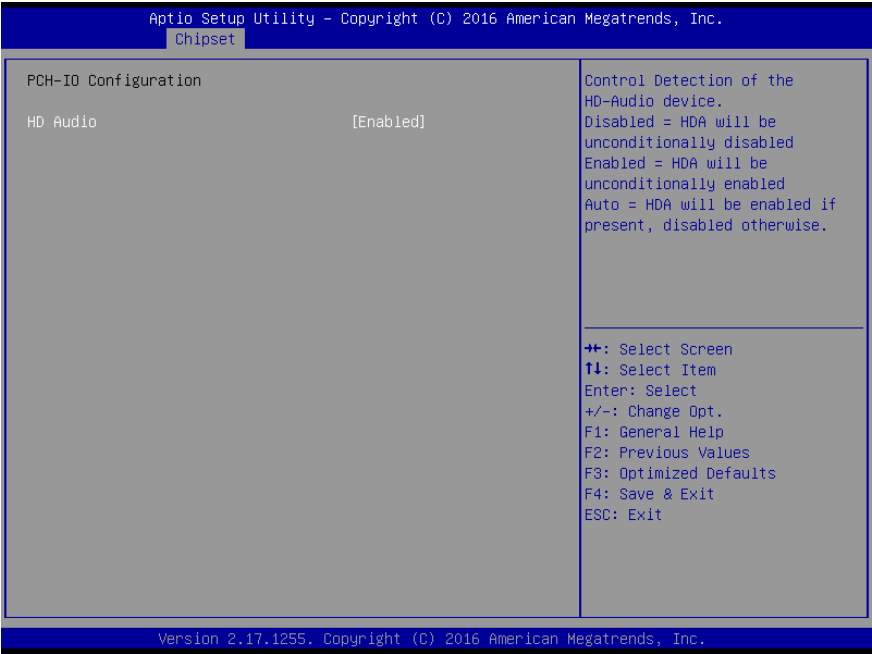

Options Summary		
HD Audio	Disabled	
	Enabled	Optimal Default, Failsafe Default
Control Detection of the HD-Audio device. Disabled = HDA will be unconditionally disabled. Enabled = HDA will be unconditionally enabled. Auto = HDA will be enabled if present, disabled otherwise.		

3.6 Setup Submenu: Security

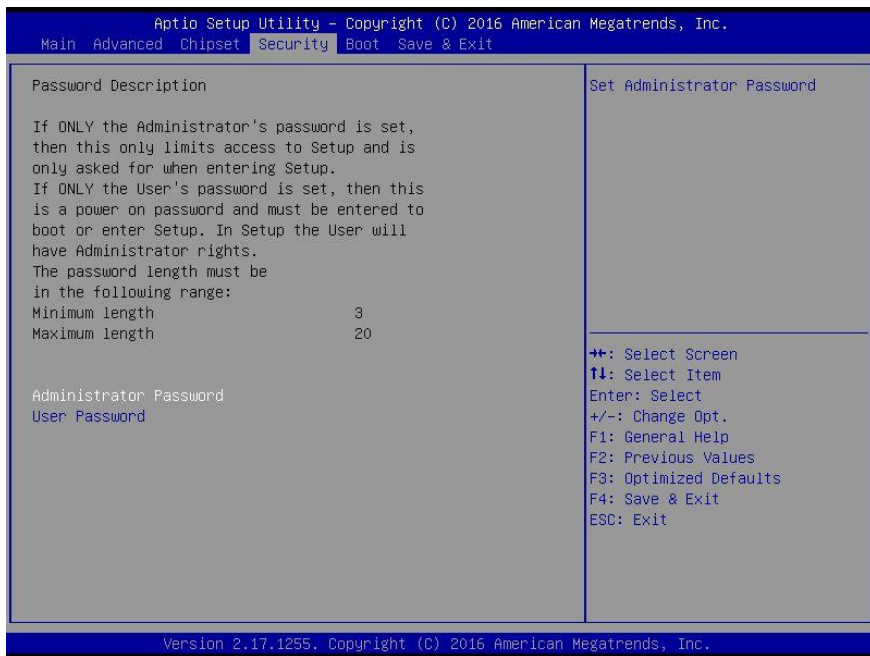


Change User/Administrator Password

You can set a User Password once an Administrator Password is set. The password will be required during boot up, or when the user enters the Setup utility. Please Note that a User Password does not provide access to many of the features in the Setup utility. Select the password you wish to set, press Enter to open a dialog box to enter your password. Password length must be between 3 and 20 numbers or letters. Press Enter to confirm your entry, after which you will be prompted to retype your password for a final confirmation. Press Enter again after you have retyped it correctly.

Removing the Password


Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.7 Setup Submenu: Boot

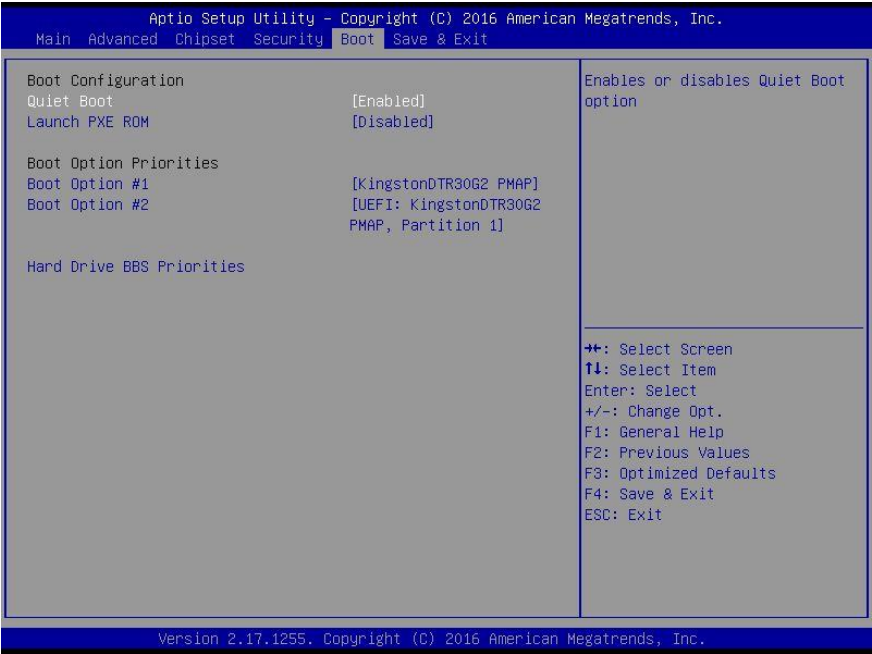


Options Summary		
Quiet Boot	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enables or disables Quiet Boot option.		
Launch PXE OpROM	Disabled	Optimal Default, Failsafe Default
	Enabled	
Controls the execution of UEFI and Legacy PXE OpROM.		

3.7.1 BBS Priorities

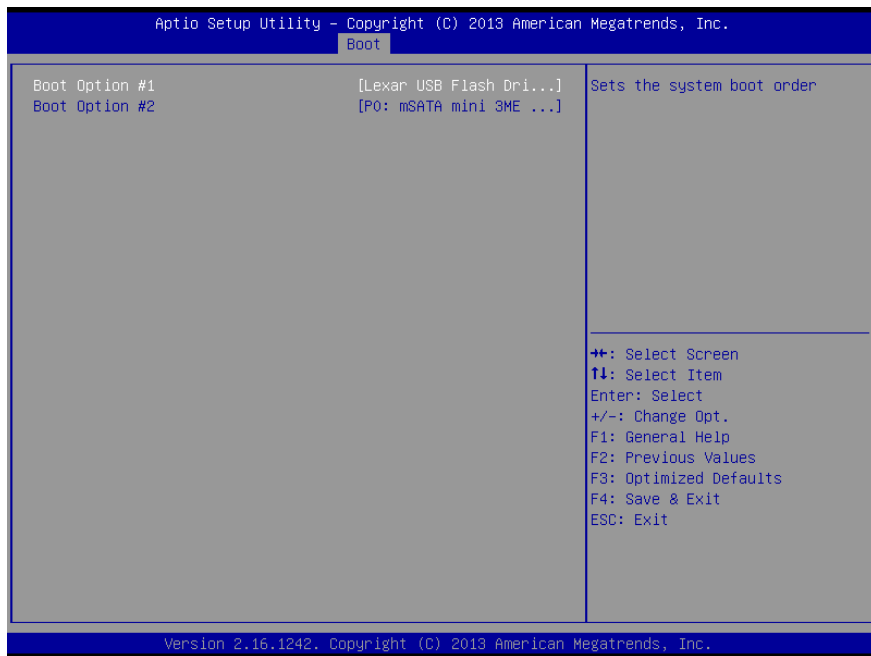

3.8 Setup Submenu: Save & Exit

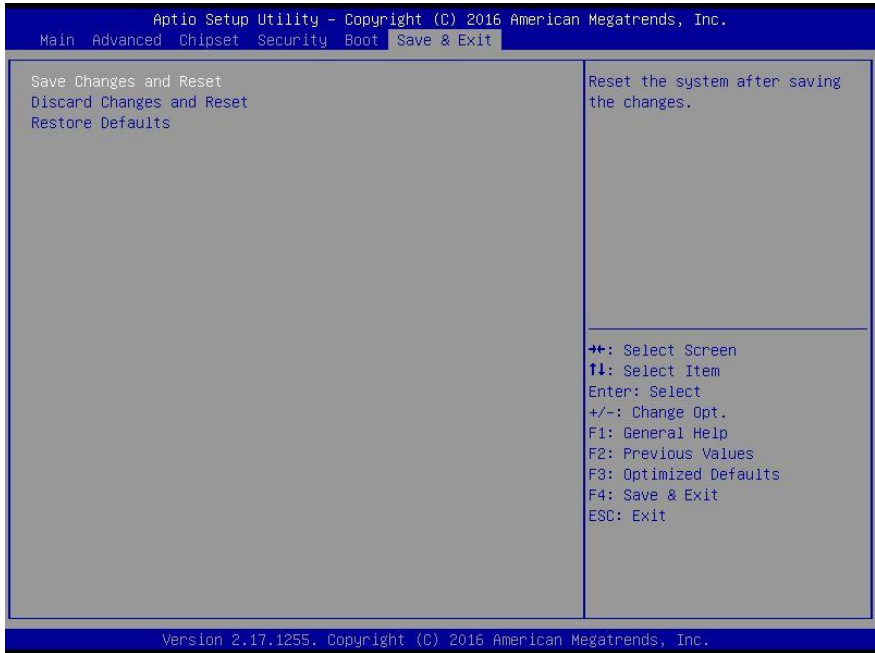

Chapter 4

Drivers Installation & Touchscreen Settings

4.1 Product CD/DVD

Drivers for the OMNI-SKU Series series comes with a product DVD that contains all the drivers and utilities you need to setup your product. Insert the DVD and follow the steps in the autorun program to install the drivers.

In case the program does not start, follow the sequence below to install the drivers from the AAEON website:

<https://www.aaeon.com/en/c/modular-hmi-panel-pcs-and-displays/>

Install Chipset Drivers

1. Open the **Chipset Driver** folder and select your OS
2. Open the **SetupChipset.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Install Graphics Driver

1. Open the **Graphics Driver** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Install LAN Driver

1. Open the **LAN Driver** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Install Audio Drivers

1. Open the **Audio Driver** folder followed by **0005-Win7_Win8_Win81_Win10_R279.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Install USB 3.0 Drivers

1. Open the **USB Driver** folder and select your OS
2. Open the **.exe** file in the folder depending on the controller selected
3. Follow the instructions
4. Drivers will be installed automatically

Install ME Drivers (Optional, Windows 8.1/10 only)

1. Open the **ME & TXE Driver** folder followed by **SetupME.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Install Peripheral Drivers (Resistive touchscreen only)

1. Open the **Peripheral Driver** folder and select either **AMT Touch** or **Linux**, depending on your needs
2. If selecting **AMT Touch**, simply select **Setup.exe**
3. Follow the instructions
4. Drivers will be installed automatically
5. If selecting **Linux**, follow instructions contained therein to install the driver manually.

Note: The OMNI-SKU Series uses either 5-wire resistive or projected capacitive multi-touch technologies. The latter is capable of 10 fingers multi-touch with Windows 7 & Windows 8.x.


Serial Port Drivers (Optional)

For Windows 10:


1. Open the **COM Port Drivers** folder and select your OS
2. Open the **setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

For Windows 7:


1. Change User Account Control settings to **Never notify**

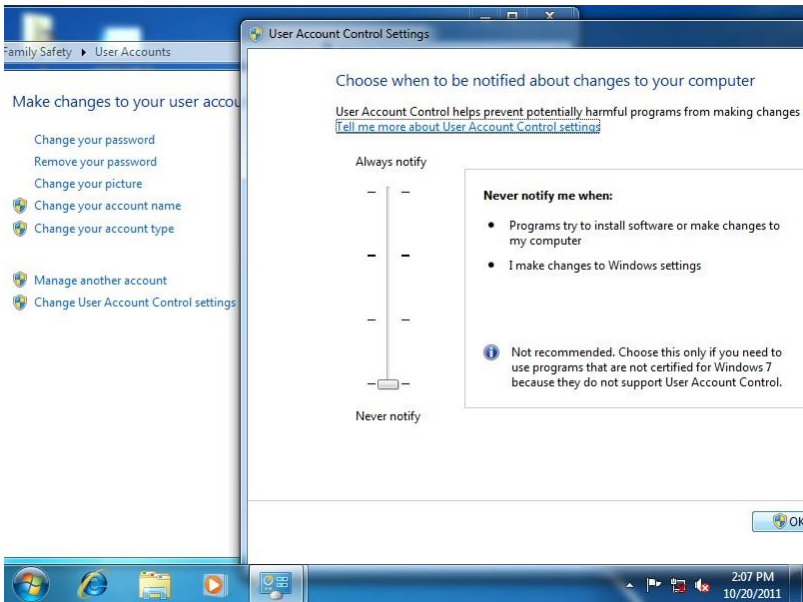

2. Reboot and log in as administrator

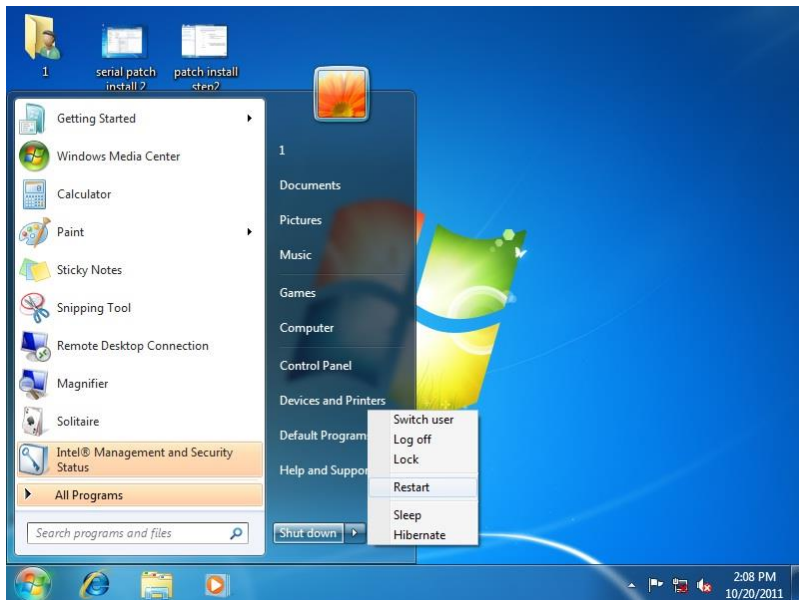


3. Run patch.bat as administrator

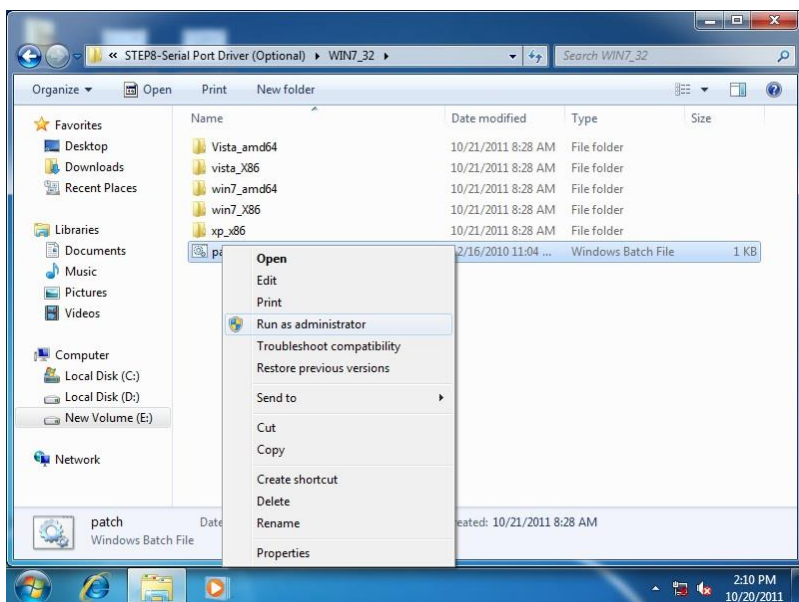


For Windows 8:


1. Open the Apps Screen, right click on the **Command Prompt** tile and select **Run as Administrator**

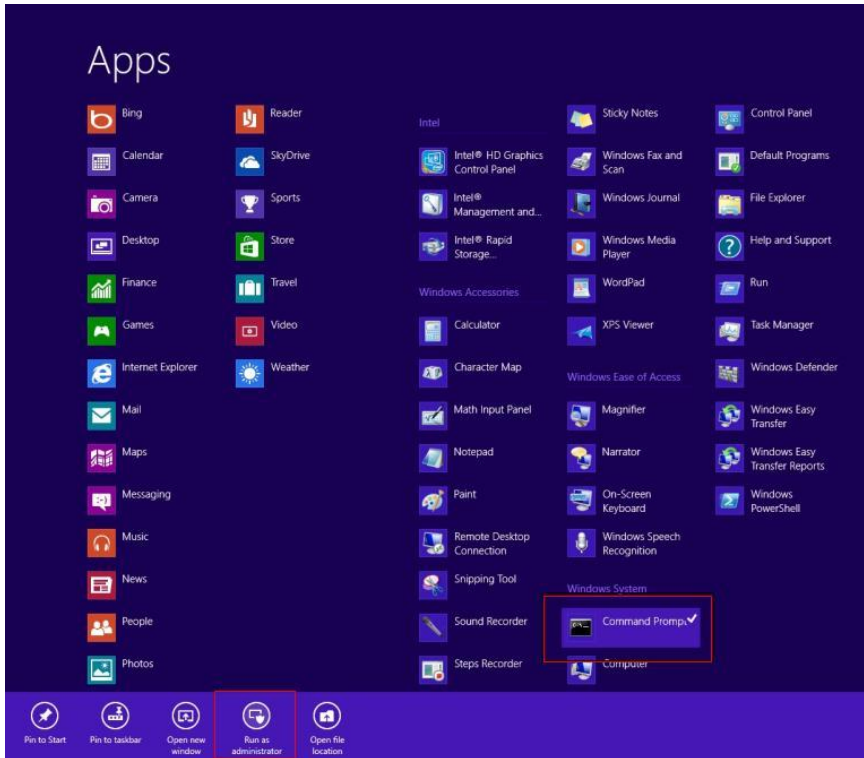

2. To install the driver (patch.bat), you will first have to locate the file in command prompt. To do that, first go to the directory which contains the file by entering **<drive letter>:** eg. if the driver is in D drive, enter **D:**
3. You are now at the directory containing the installation file. Next, go to the folder in which the file resides by entering **cd <folder>** eg: if the file is in a folder named abc, enter **cd <abc>**.
4. You are now at the folder where the file is located. Enter the **patch.bat** to open and install the drivers. If your file is in a subfolder, enter the **cd <folder>** command again to access the subfolder (screenshot below is for reference only).

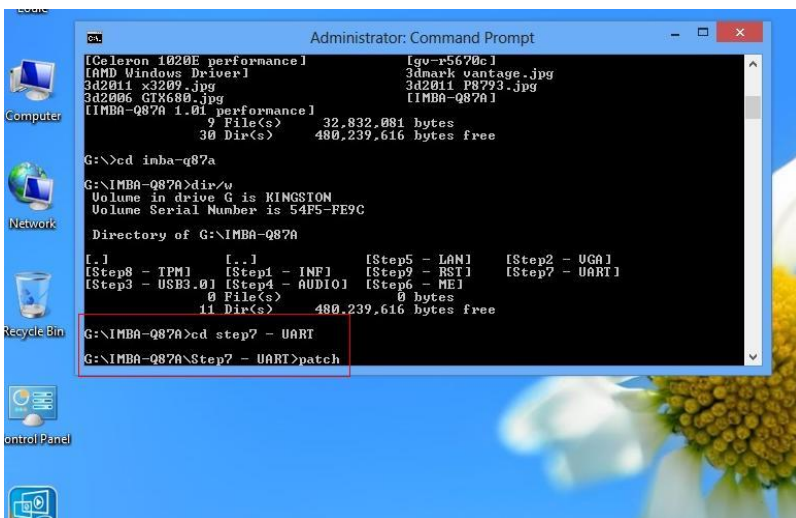

5. Reboot after installation completes.
6. To confirm the installation, go to Device Manager, expand the Ports (COM & LPT) tree and double click on any of the COM ports to open its properties. Go to the Driver tab, select Driver Details and click on **serial.sys**, you should see its provider as **Windows (R) Win 7 DDK Provider**.

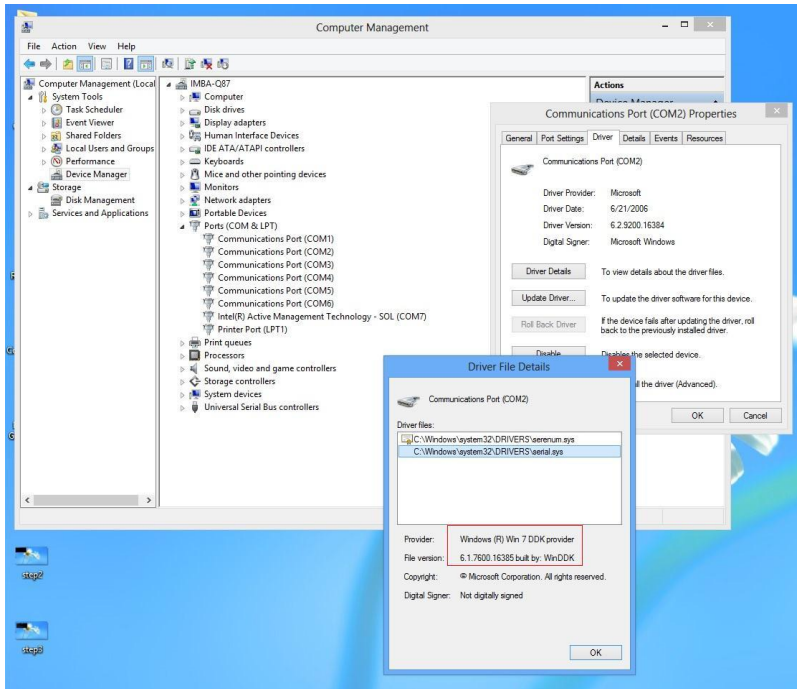

Install DIO Driver (for DIO module only)

Please refer to Appendix D – DI/O Utility (for DI/O Module)


Install CANBus Driver (for CANBus module only)

Please refer to Appendix C – CANBus Utility (for DI/O Module)


4.2 PCAP Dual Monitor Touch Settings

When two panels are used, they can set to be the primary and secondary display. The instruction below shows how this can be done:

1. Go to Display Panel and choose your preferred primary display.

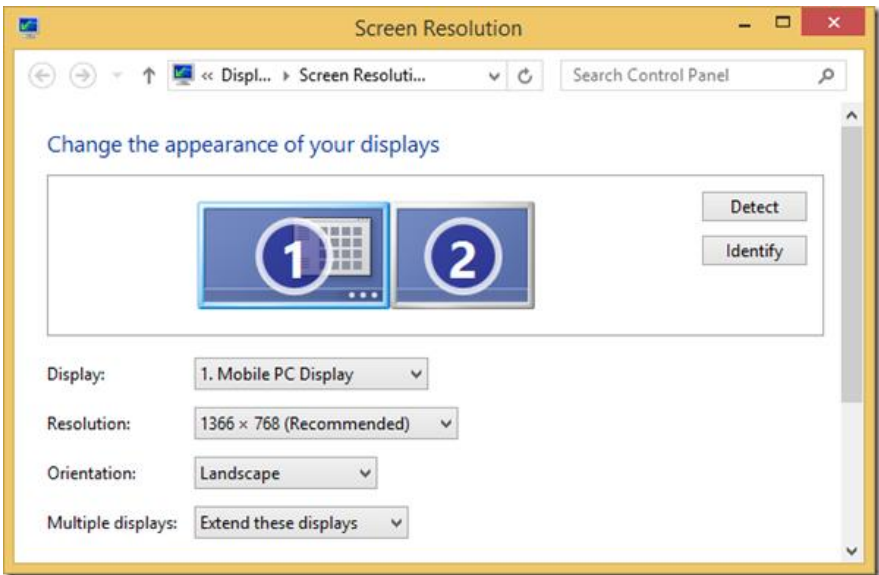

- Go to **Tablet PC Settings** in **Control Panel**. Under **Display options**, select the primary display from step 1. Apply the changes and exit.

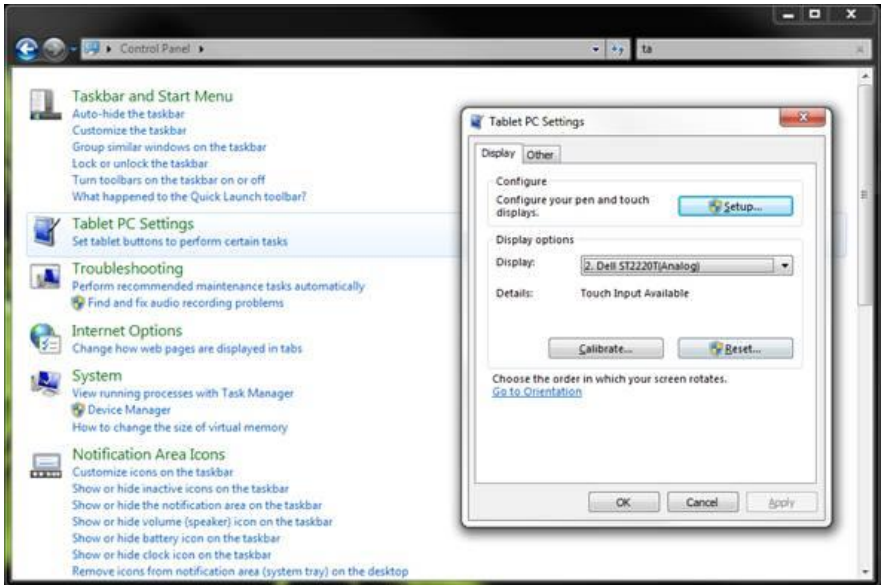

***Do NOT calibrate the screen on your own. Doing so might disrupt the device's factory calibration.**

Appendix A

Watchdog Timer Programming

A.1 Watchdog Timer Initial Program

Table 1: Super I/O Relative Register Table

	Default Value	Note
Index	0x2E(Note1)	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F(Note2)	SIO MB PnP Mode Data Register 0x2F or 0x4F

Table 2: Watchdog Relative Register Table

	LDN	Register	BitNum	Value	Note
Timer Counter	0x07(Note3)	0xF6(Note4)		(Note24)	Time of watchdog timer (0~255) This register is byte access
Counting Unit	0x07(Note5)	0xF5(Note6)	3(Note7)	0(Note8)	Select time unit. 0: second 1: minute
Watchdog Enable	0x07(Note9)	0xF5(Note10)	5(Note11)	1(Note12)	0: Disable 1: Enable
Timeout Status	0x07(Note13)	0xF5(Note14)	6(Note15)	1	1: Clear timeout status
Output Mode	0x07(Note16)	0xF5(Note17)	4(Note18)	1(Note19)	Select WDTRST# output mode 0: level 1: pulse
WDTRST output	0x07(Note20)	0xFA(Note21)	0(Note22)	1(Note23)	Enable/Disable time out output via WDTRST# 0: Disable 1: Enable

```

*****
// SuperIO relative definition (Please reference to Table 1)
#define byte SIOIndex //This parameter is represented from Note1
#define byte SIOData //This parameter is represented from Note2
#define void IOWriteByte(byte IOPort, byte Value);
#define byte IOReadByte(byte IOPort);
// Watch Dog relative definition (Please reference to Table 2)
#define byte TimerLDN //This parameter is represented from Note3
#define byte TimerReg //This parameter is represented from Note4
#define byte TimerVal // This parameter is represented from Note24
#define byte UnitLDN //This parameter is represented from Note5
#define byte UnitReg //This parameter is represented from Note6
#define byte UnitBit //This parameter is represented from Note7
#define byte UnitVal //This parameter is represented from Note8
#define byte EnableLDN //This parameter is represented from Note9
#define byte EnableReg //This parameter is represented from Note10
#define byte EnableBit //This parameter is represented from Note11
#define byte EnableVal //This parameter is represented from Note12
#define byte StatusLDN // This parameter is represented from Note13
#define byte StatusReg // This parameter is represented from Note14
#define byte StatusBit // This parameter is represented from Note15
#define byte ModeLDN // This parameter is represented from Note16
#define byte ModeReg // This parameter is represented from Note17
#define byte ModeBit // This parameter is represented from Note18
#define byte ModeVal // This parameter is represented from Note19
#define byte WDTRstLDN // This parameter is represented from Note20
#define byte WDTRstReg // This parameter is represented from Note21
#define byte WDTRstBit // This parameter is represented from Note22
#define byte WDTRstVal // This parameter is represented from Note23
*****

```

Appendix B

I/O Information

B.1 I/O Address Map

Note: There is no PS/2 interface on the OMNI-SKU series, hence the exclamation marks.

▼		DESKTOP-CGVLQ5J
▼		Input/output (IO)
	[0000000000000000 - 000000000000CF7]	PCI Express Root Complex
	[0000000000000020 - 0000000000000021]	Programmable interrupt controller
	[0000000000000024 - 0000000000000025]	Programmable interrupt controller
	[0000000000000028 - 0000000000000029]	Programmable interrupt controller
	[000000000000002C - 000000000000002D]	Programmable interrupt controller
	[000000000000002E - 000000000000002F]	Motherboard resources
	[0000000000000030 - 0000000000000031]	Programmable interrupt controller
	[0000000000000034 - 0000000000000035]	Programmable interrupt controller
	[0000000000000038 - 0000000000000039]	Programmable interrupt controller
	[000000000000003C - 000000000000003D]	Programmable interrupt controller
	[0000000000000040 - 0000000000000043]	System timer
	[000000000000004E - 000000000000004F]	Motherboard resources
	[0000000000000050 - 0000000000000053]	System timer
	[0000000000000061 - 0000000000000061]	Motherboard resources
	[0000000000000063 - 0000000000000063]	Motherboard resources
	[0000000000000065 - 0000000000000065]	Motherboard resources
	[0000000000000067 - 0000000000000067]	Motherboard resources
	[0000000000000070 - 0000000000000070]	Motherboard resources
	[0000000000000070 - 0000000000000077]	System CMOS/real time clock
	[0000000000000080 - 0000000000000080]	Motherboard resources
	[0000000000000092 - 0000000000000092]	Motherboard resources
	[00000000000000A0 - 00000000000000A1]	Programmable interrupt controller
	[00000000000000A4 - 00000000000000A5]	Programmable interrupt controller
	[00000000000000A8 - 00000000000000A9]	Programmable interrupt controller
	[00000000000000AC - 00000000000000AD]	Programmable interrupt controller
	[00000000000000B0 - 00000000000000B1]	Programmable interrupt controller
	[00000000000000B2 - 00000000000000B3]	Motherboard resources
	[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
	[00000000000000B8 - 00000000000000B9]	Programmable interrupt controller
	[00000000000000BC - 00000000000000BD]	Programmable interrupt controller
	[00000000000002F8 - 00000000000002FF]	Communications Port (COM2)
	[00000000000003B0 - 00000000000003BB]	Intel(R) HD Graphics 520

	[000000000000A0 - 000000000000A1] Programmable interrupt controller
	[000000000000A4 - 000000000000A5] Programmable interrupt controller
	[000000000000A8 - 000000000000A9] Programmable interrupt controller
	[000000000000AC - 000000000000AD] Programmable interrupt controller
	[000000000000B0 - 000000000000B1] Programmable interrupt controller
	[000000000000B2 - 000000000000B3] Motherboard resources
	[000000000000B4 - 000000000000B5] Programmable interrupt controller
	[000000000000B8 - 000000000000B9] Programmable interrupt controller
	[000000000000BC - 000000000000BD] Programmable interrupt controller
	[0000000000002F8 - 0000000000002FF] Communications Port (COM2)
	[0000000000003B0 - 0000000000003BB] Intel(R) HD Graphics 520
	[0000000000003C0 - 0000000000003DF] Intel(R) HD Graphics 520
	[0000000000003F8 - 0000000000003FF] Communications Port (COM1)
	[0000000000004D0 - 0000000000004D1] Programmable interrupt controller
	[000000000000680 - 00000000000069F] Motherboard resources
	[000000000000A00 - 000000000000A0F] Motherboard resources
	[000000000000A10 - 000000000000A1F] Motherboard resources
	[000000000000A20 - 000000000000A2F] Motherboard resources
	[000000000000D00 - 000000000000FFF] PCI Express Root Complex
	[000000000000164E - 000000000000164F] Motherboard resources
	[0000000000001854 - 000000000000185F] Motherboard resources
	[0000000000001800 - 000000000000185F] Motherboard resources
	[000000000000E000 - 000000000000EFFF] Mobile 6th Generation Intel(R) Processor Family I/O PCI Express Root Port #1 - 9D10
	[000000000000F000 - 000000000000F03F] Intel(R) HD Graphics 520
	[000000000000F040 - 000000000000F05F] Mobile 6th Generation Intel(R) Processor Family I/O SMBUS - 9D23
	[000000000000F060 - 000000000000F07F] Standard SATA AHCI Controller
	[000000000000F080 - 000000000000F083] Standard SATA AHCI Controller
	[000000000000F090 - 000000000000F097] Standard SATA AHCI Controller
	[000000000000FF00 - 000000000000FFFE] Motherboard resources
	[000000000000FFFF - 000000000000FFFF] Motherboard resources
	[000000000000FFFF - 000000000000FFFF] Motherboard resources
	[000000000000FFFF - 000000000000FFFF] Motherboard resources
> 	Interrupt request (IRQ)
> 	Memory

B.2 Memory Address Map

Memory	
 [0000000000A0000 - 0000000000BFFFF] Intel(R) HD Graphics 520	
 [0000000000A0000 - 0000000000BFFFF] PCI Express Root Complex	
 [00000000009000000 - 0000000000FFFFFFF] PCI Express Root Complex	
 [0000000000C000000 - 0000000000CFFFFFFF] Intel(R) HD Graphics 520	
 [0000000000DE00000 - 0000000000DEFFFFFFF] Intel(R) HD Graphics 520	
 [0000000000DF00000 - 0000000000DF0FFFF] Intel(R) I210 Gigabit Network Connection	
 [0000000000DF00000 - 0000000000DF0FFFF] Mobile 6th Generation Intel(R) Processor Family I/O PCI Express Root Port #1 - 9D10	
 [0000000000DF020000 - 0000000000DF023FFF] Intel(R) I210 Gigabit Network Connection	
 [0000000000DF100000 - 0000000000DF10FFFF] High Definition Audio Controller	
 [0000000000DF110000 - 0000000000DF11FFFF] Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)	
 [0000000000DF120000 - 0000000000DF123FFF] High Definition Audio Controller	
 [0000000000DF124000 - 0000000000DF127FFF] Mobile 6th Generation Intel(R) Processor Family I/O PMC - 9D21	
 [0000000000DF128000 - 0000000000DF129FFF] Standard SATA AHCI Controller	
 [0000000000DF12A000 - 0000000000DF12A0FF] Mobile 6th Generation Intel(R) Processor Family I/O SMBUS - 9D23	
 [0000000000DF12B000 - 0000000000DF12B7FF] Standard SATA AHCI Controller	
 [0000000000DF12C000 - 0000000000DF12C0FF] Standard SATA AHCI Controller	
 [0000000000DF12A000 - 0000000000DF12A0FF] Mobile 6th Generation Intel(R) Processor Family I/O Thermal subsystem - 9D31	
 [0000000000DFFE0000 - 0000000000FFFFFFF] Motherboard resources	
 [0000000000E000000 - 0000000000EFFFFFFF] Motherboard resources	
 [0000000000FD00000 - 0000000000FDABFFFF] Motherboard resources	
 [0000000000FD00000 - 0000000000FE7FFFFF] PCI Express Root Complex	
 [0000000000FDAC0000 - 0000000000FDACFFFF] Motherboard resources	
 [0000000000FDAD0000 - 0000000000FDADFFFF] Motherboard resources	
 [0000000000FDAE0000 - 0000000000FDAEFFFF] Motherboard resources	
 [0000000000FDAF0000 - 0000000000FDAFFFFF] Motherboard resources	
 [0000000000FDB00000 - 0000000000FDBFFFFF] Motherboard resources	
 [0000000000FE000000 - 0000000000FE01FFFF] Motherboard resources	
 [0000000000FE028000 - 0000000000FE028FFF] Motherboard resources	
 [0000000000FE029000 - 0000000000FE029FFF] Motherboard resources	
 [0000000000FE036000 - 0000000000FE03BFFF] Motherboard resources	
 [0000000000FE03D000 - 0000000000FE3FFFFF] Motherboard resources	
 [0000000000FE40F000 - 0000000000FE40FFFF] Intel(R) Management Engine Interface	
 [0000000000FE410000 - 0000000000FE7FFFFF] Motherboard resources	

	[00000000DF120000 - 00000000DF123FFF]	High Definition Audio Controller
	[00000000DF124000 - 00000000DF127FFF]	Mobile 6th Generation Intel(R) Processor Family I/O PMC - 9D21
	[00000000DF128000 - 00000000DF129FFF]	Standard SATA AHCI Controller
	[00000000DF12A000 - 00000000DF12A0FF]	Mobile 6th Generation Intel(R) Processor Family I/O SMBUS - 9D23
	[00000000DF12B000 - 00000000DF12B7FF]	Standard SATA AHCI Controller
	[00000000DF12C000 - 00000000DF12C0FF]	Standard SATA AHCI Controller
	[00000000DF12E000 - 00000000DF12EFFF]	Mobile 6th Generation Intel(R) Processor Family I/O Thermal subsystem - 9D31
	[00000000DFFE0000 - 00000000DFFEFFFF]	Motherboard resources
	[00000000E0000000 - 00000000E0FFFFFF]	Motherboard resources
	[00000000FD000000 - 00000000FDABFFFF]	Motherboard resources
	[00000000FD000000 - 00000000FE7FFFFF]	PCI Express Root Complex
	[00000000FDAC0000 - 00000000FDACFFFF]	Motherboard resources
	[00000000FDAD0000 - 00000000FDADFFFF]	Motherboard resources
	[00000000FDAE0000 - 00000000FDAEFFFF]	Motherboard resources
	[00000000FDAF0000 - 00000000FDAFFFFF]	Motherboard resources
	[00000000FDB00000 - 00000000FDBFFFFF]	Motherboard resources
	[00000000FE000000 - 00000000FE01FFFF]	Motherboard resources
	[00000000FE028000 - 00000000FE028FFF]	Motherboard resources
	[00000000FE029000 - 00000000FE029FFF]	Motherboard resources
	[00000000FE036000 - 00000000FE03BFFF]	Motherboard resources
	[00000000FE03D000 - 00000000FE3FFFFF]	Motherboard resources
	[00000000FE40F000 - 00000000FE40FFFF]	Intel(R) Management Engine Interface
	[00000000FE410000 - 00000000FE7FFFFF]	Motherboard resources
	[00000000FED00000 - 00000000FED003FF]	High precision event timer
	[00000000FED10000 - 00000000FED17FFF]	Motherboard resources
	[00000000FED18000 - 00000000FED18FFF]	Motherboard resources
	[00000000FED19000 - 00000000FED19FFF]	Motherboard resources
	[00000000FED20000 - 00000000FED3FFFF]	Motherboard resources
	[00000000FED40000 - 00000000FED40FFF]	Trusted Platform Module 1.2
	[00000000FED45000 - 00000000FED8FFFF]	Motherboard resources
	[00000000FED90000 - 00000000FED93FFF]	Motherboard resources
	[00000000FEE00000 - 00000000FEEFFFFFFF]	Motherboard resources
	[00000000FF000000 - 00000000FFFFFFFF]	Legacy device
	[00000000FF000000 - 00000000FFFFFFFF]	Motherboard resources

B.3 IRQ Mapping Chart

Interrupt request (IRQ)		
	(ISA) 0x00000000 (00)	System timer
	(ISA) 0x00000003 (03)	Communications Port (COM2)
	(ISA) 0x00000004 (04)	Communications Port (COM1)
	(ISA) 0x00000008 (08)	System CMOS/real time clock
	(ISA) 0x0000000E (14)	Motherboard resources
	(ISA) 0x00000036 (54)	Microsoft ACPI-Compliant System
	(ISA) 0x00000037 (55)	Microsoft ACPI-Compliant System
	(ISA) 0x00000038 (56)	Microsoft ACPI-Compliant System
	(ISA) 0x00000039 (57)	Microsoft ACPI-Compliant System
	(ISA) 0x0000003A (58)	Microsoft ACPI-Compliant System
	(ISA) 0x0000003B (59)	Microsoft ACPI-Compliant System
	(ISA) 0x0000003C (60)	Microsoft ACPI-Compliant System
	(ISA) 0x0000003D (61)	Microsoft ACPI-Compliant System
	(ISA) 0x0000003E (62)	Microsoft ACPI-Compliant System
	(ISA) 0x0000003F (63)	Microsoft ACPI-Compliant System
	(ISA) 0x00000040 (64)	Microsoft ACPI-Compliant System
	(ISA) 0x00000041 (65)	Microsoft ACPI-Compliant System
	(ISA) 0x00000042 (66)	Microsoft ACPI-Compliant System
	(ISA) 0x00000043 (67)	Microsoft ACPI-Compliant System
	(ISA) 0x00000044 (68)	Microsoft ACPI-Compliant System
	(ISA) 0x00000045 (69)	Microsoft ACPI-Compliant System
	(ISA) 0x00000046 (70)	Microsoft ACPI-Compliant System
	(ISA) 0x00000047 (71)	Microsoft ACPI-Compliant System
	(ISA) 0x00000048 (72)	Microsoft ACPI-Compliant System
	(ISA) 0x00000049 (73)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004B (75)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004C (76)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004D (77)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004E (78)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004F (79)	Microsoft ACPI-Compliant System
	(ISA) 0x00000050 (80)	Microsoft ACPI-Compliant System
	(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System

	(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
	(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
	(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
	(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
	(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
	(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
	(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
	(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
	(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
	(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
	(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
	(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
	(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
	(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
	(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
	(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
	(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
	(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
	(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
	(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
	(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
	(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System

	(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
	(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
	(ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
	(ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
	(ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
	(ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
	(ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
	(ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
	(ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
	(ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
	(ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
	(ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
	(ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
	(ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
	(ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
	(ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
	(ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
	(ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
	(ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
	(ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
	(ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
	(ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System

	(ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
	(ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
	(ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
	(ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
	(ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
	(ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
	(ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
	(ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
	(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System

	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BF (191)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C0 (192)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C1 (193)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C2 (194)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C3 (195)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C4 (196)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C5 (197)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C6 (198)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C7 (199)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C8 (200)	Microsoft ACPI-Compliant System
	(ISA) 0x000000C9 (201)	Microsoft ACPI-Compliant System
	(ISA) 0x000000CA (202)	Microsoft ACPI-Compliant System
	(ISA) 0x000000CB (203)	Microsoft ACPI-Compliant System
	(ISA) 0x000000CC (204)	Microsoft ACPI-Compliant System
	(ISA) 0x00000100 (256)	Microsoft ACPI-Compliant System
	(ISA) 0x00000101 (257)	Microsoft ACPI-Compliant System
	(ISA) 0x00000102 (258)	Microsoft ACPI-Compliant System
	(ISA) 0x00000103 (259)	Microsoft ACPI-Compliant System
	(ISA) 0x00000104 (260)	Microsoft ACPI-Compliant System
	(ISA) 0x00000105 (261)	Microsoft ACPI-Compliant System
	(ISA) 0x00000106 (262)	Microsoft ACPI-Compliant System
	(ISA) 0x00000107 (263)	Microsoft ACPI-Compliant System
	(ISA) 0x00000108 (264)	Microsoft ACPI-Compliant System

	(ISA) 0x00000108 (264)	Microsoft ACPI-Compliant System
	(ISA) 0x00000109 (265)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010A (266)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010B (267)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010C (268)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010D (269)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010E (270)	Microsoft ACPI-Compliant System
	(ISA) 0x0000010F (271)	Microsoft ACPI-Compliant System
	(ISA) 0x00000110 (272)	Microsoft ACPI-Compliant System
	(ISA) 0x00000111 (273)	Microsoft ACPI-Compliant System
	(ISA) 0x00000112 (274)	Microsoft ACPI-Compliant System
	(ISA) 0x00000113 (275)	Microsoft ACPI-Compliant System
	(ISA) 0x00000114 (276)	Microsoft ACPI-Compliant System
	(ISA) 0x00000115 (277)	Microsoft ACPI-Compliant System
	(ISA) 0x00000116 (278)	Microsoft ACPI-Compliant System
	(ISA) 0x00000117 (279)	Microsoft ACPI-Compliant System
	(ISA) 0x00000118 (280)	Microsoft ACPI-Compliant System
	(ISA) 0x00000119 (281)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011A (282)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011B (283)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011C (284)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011D (285)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011E (286)	Microsoft ACPI-Compliant System
	(ISA) 0x0000011F (287)	Microsoft ACPI-Compliant System
	(ISA) 0x00000120 (288)	Microsoft ACPI-Compliant System
	(ISA) 0x00000121 (289)	Microsoft ACPI-Compliant System
	(ISA) 0x00000122 (290)	Microsoft ACPI-Compliant System
	(ISA) 0x00000123 (291)	Microsoft ACPI-Compliant System
	(ISA) 0x00000124 (292)	Microsoft ACPI-Compliant System
	(ISA) 0x00000125 (293)	Microsoft ACPI-Compliant System
	(ISA) 0x00000126 (294)	Microsoft ACPI-Compliant System
	(ISA) 0x00000127 (295)	Microsoft ACPI-Compliant System
	(ISA) 0x00000128 (296)	Microsoft ACPI-Compliant System
	(ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System

	(ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012A (298)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012B (299)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012C (300)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012D (301)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012E (302)	Microsoft ACPI-Compliant System
	(ISA) 0x0000012F (303)	Microsoft ACPI-Compliant System
	(ISA) 0x00000130 (304)	Microsoft ACPI-Compliant System
	(ISA) 0x00000131 (305)	Microsoft ACPI-Compliant System
	(ISA) 0x00000132 (306)	Microsoft ACPI-Compliant System
	(ISA) 0x00000133 (307)	Microsoft ACPI-Compliant System
	(ISA) 0x00000134 (308)	Microsoft ACPI-Compliant System
	(ISA) 0x00000135 (309)	Microsoft ACPI-Compliant System
	(ISA) 0x00000136 (310)	Microsoft ACPI-Compliant System
	(ISA) 0x00000137 (311)	Microsoft ACPI-Compliant System
	(ISA) 0x00000138 (312)	Microsoft ACPI-Compliant System
	(ISA) 0x00000139 (313)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013A (314)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013B (315)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013C (316)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013D (317)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013E (318)	Microsoft ACPI-Compliant System
	(ISA) 0x0000013F (319)	Microsoft ACPI-Compliant System
	(ISA) 0x00000140 (320)	Microsoft ACPI-Compliant System
	(ISA) 0x00000141 (321)	Microsoft ACPI-Compliant System
	(ISA) 0x00000142 (322)	Microsoft ACPI-Compliant System
	(ISA) 0x00000143 (323)	Microsoft ACPI-Compliant System
	(ISA) 0x00000144 (324)	Microsoft ACPI-Compliant System
	(ISA) 0x00000145 (325)	Microsoft ACPI-Compliant System
	(ISA) 0x00000146 (326)	Microsoft ACPI-Compliant System
	(ISA) 0x00000147 (327)	Microsoft ACPI-Compliant System
	(ISA) 0x00000148 (328)	Microsoft ACPI-Compliant System
	(ISA) 0x00000149 (329)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System

	(ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014B (331)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014C (332)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014D (333)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014E (334)	Microsoft ACPI-Compliant System
	(ISA) 0x0000014F (335)	Microsoft ACPI-Compliant System
	(ISA) 0x00000150 (336)	Microsoft ACPI-Compliant System
	(ISA) 0x00000151 (337)	Microsoft ACPI-Compliant System
	(ISA) 0x00000152 (338)	Microsoft ACPI-Compliant System
	(ISA) 0x00000153 (339)	Microsoft ACPI-Compliant System
	(ISA) 0x00000154 (340)	Microsoft ACPI-Compliant System
	(ISA) 0x00000155 (341)	Microsoft ACPI-Compliant System
	(ISA) 0x00000156 (342)	Microsoft ACPI-Compliant System
	(ISA) 0x00000157 (343)	Microsoft ACPI-Compliant System
	(ISA) 0x00000158 (344)	Microsoft ACPI-Compliant System
	(ISA) 0x00000159 (345)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015A (346)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015B (347)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015C (348)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015D (349)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015E (350)	Microsoft ACPI-Compliant System
	(ISA) 0x0000015F (351)	Microsoft ACPI-Compliant System
	(ISA) 0x00000160 (352)	Microsoft ACPI-Compliant System
	(ISA) 0x00000161 (353)	Microsoft ACPI-Compliant System
	(ISA) 0x00000162 (354)	Microsoft ACPI-Compliant System
	(ISA) 0x00000163 (355)	Microsoft ACPI-Compliant System
	(ISA) 0x00000164 (356)	Microsoft ACPI-Compliant System
	(ISA) 0x00000165 (357)	Microsoft ACPI-Compliant System
	(ISA) 0x00000166 (358)	Microsoft ACPI-Compliant System
	(ISA) 0x00000167 (359)	Microsoft ACPI-Compliant System
	(ISA) 0x00000168 (360)	Microsoft ACPI-Compliant System
	(ISA) 0x00000169 (361)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016A (362)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016B (363)	Microsoft ACPI-Compliant System

	(ISA) 0x0000016B (363)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016C (364)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016D (365)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016E (366)	Microsoft ACPI-Compliant System
	(ISA) 0x0000016F (367)	Microsoft ACPI-Compliant System
	(ISA) 0x00000170 (368)	Microsoft ACPI-Compliant System
	(ISA) 0x00000171 (369)	Microsoft ACPI-Compliant System
	(ISA) 0x00000172 (370)	Microsoft ACPI-Compliant System
	(ISA) 0x00000173 (371)	Microsoft ACPI-Compliant System
	(ISA) 0x00000174 (372)	Microsoft ACPI-Compliant System
	(ISA) 0x00000175 (373)	Microsoft ACPI-Compliant System
	(ISA) 0x00000176 (374)	Microsoft ACPI-Compliant System
	(ISA) 0x00000177 (375)	Microsoft ACPI-Compliant System
	(ISA) 0x00000178 (376)	Microsoft ACPI-Compliant System
	(ISA) 0x00000179 (377)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017A (378)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017B (379)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017C (380)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017D (381)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017E (382)	Microsoft ACPI-Compliant System
	(ISA) 0x0000017F (383)	Microsoft ACPI-Compliant System
	(ISA) 0x00000180 (384)	Microsoft ACPI-Compliant System
	(ISA) 0x00000181 (385)	Microsoft ACPI-Compliant System
	(ISA) 0x00000182 (386)	Microsoft ACPI-Compliant System
	(ISA) 0x00000183 (387)	Microsoft ACPI-Compliant System
	(ISA) 0x00000184 (388)	Microsoft ACPI-Compliant System
	(ISA) 0x00000185 (389)	Microsoft ACPI-Compliant System
	(ISA) 0x00000186 (390)	Microsoft ACPI-Compliant System
	(ISA) 0x00000187 (391)	Microsoft ACPI-Compliant System
	(ISA) 0x00000188 (392)	Microsoft ACPI-Compliant System
	(ISA) 0x00000189 (393)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018A (394)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018B (395)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018C (396)	Microsoft ACPI-Compliant System

	(ISA) 0x0000018C (396)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018D (397)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018E (398)	Microsoft ACPI-Compliant System
	(ISA) 0x0000018F (399)	Microsoft ACPI-Compliant System
	(ISA) 0x00000190 (400)	Microsoft ACPI-Compliant System
	(ISA) 0x00000191 (401)	Microsoft ACPI-Compliant System
	(ISA) 0x00000192 (402)	Microsoft ACPI-Compliant System
	(ISA) 0x00000193 (403)	Microsoft ACPI-Compliant System
	(ISA) 0x00000194 (404)	Microsoft ACPI-Compliant System
	(ISA) 0x00000195 (405)	Microsoft ACPI-Compliant System
	(ISA) 0x00000196 (406)	Microsoft ACPI-Compliant System
	(ISA) 0x00000197 (407)	Microsoft ACPI-Compliant System
	(ISA) 0x00000198 (408)	Microsoft ACPI-Compliant System
	(ISA) 0x00000199 (409)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019A (410)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019B (411)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019C (412)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019D (413)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019E (414)	Microsoft ACPI-Compliant System
	(ISA) 0x0000019F (415)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A0 (416)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A1 (417)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A2 (418)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A3 (419)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A4 (420)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A5 (421)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A6 (422)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A7 (423)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A8 (424)	Microsoft ACPI-Compliant System
	(ISA) 0x000001A9 (425)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AA (426)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AB (427)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AC (428)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AD (429)	Microsoft ACPI-Compliant System

	(ISA) 0x000001AD (429)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AE (430)	Microsoft ACPI-Compliant System
	(ISA) 0x000001AF (431)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B0 (432)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B1 (433)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B2 (434)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B3 (435)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B4 (436)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B5 (437)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B6 (438)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B7 (439)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B8 (440)	Microsoft ACPI-Compliant System
	(ISA) 0x000001B9 (441)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BA (442)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BB (443)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BC (444)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BD (445)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BE (446)	Microsoft ACPI-Compliant System
	(ISA) 0x000001BF (447)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C0 (448)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C1 (449)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C2 (450)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C3 (451)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C4 (452)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C5 (453)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C6 (454)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C7 (455)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C8 (456)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C9 (457)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CA (458)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CB (459)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CC (460)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CD (461)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System

	(ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CF (463)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D0 (464)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D1 (465)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D2 (466)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D3 (467)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D4 (468)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D5 (469)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D6 (470)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D7 (471)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D8 (472)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D9 (473)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DA (474)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DB (475)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DC (476)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DD (477)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DE (478)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DF (479)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E0 (480)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E1 (481)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E2 (482)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E3 (483)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E4 (484)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E5 (485)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E6 (486)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E7 (487)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E8 (488)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E9 (489)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EA (490)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System

	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x00000005 (05)	Mobile 6th Generation Intel(R) Processor Family I/O SMBUS - 9D23
	(PCI) 0x00000006 (06)	Mobile 6th Generation Intel(R) Processor Family I/O Thermal subsystem - 9D31
	(PCI) 0x00000010 (16)	High Definition Audio Controller
	(PCI) 0xFFFFFFF4 (-12)	Intel(R) Management Engine Interface
	(PCI) 0xFFFFFFF5 (-11)	Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
	(PCI) 0xFFFFFFF6 (-10)	Intel(R) HD Graphics 520
	(PCI) 0xFFFFFFF7 (-9)	Intel(R) I210 Gigabit Network Connection
	(PCI) 0xFFFFFFF8 (-8)	Intel(R) I210 Gigabit Network Connection
	(PCI) 0xFFFFFFF9 (-7)	Intel(R) I210 Gigabit Network Connection
	(PCI) 0xFFFFFFFA (-6)	Intel(R) I210 Gigabit Network Connection
	(PCI) 0xFFFFFFFB (-5)	Intel(R) I210 Gigabit Network Connection
	(PCI) 0xFFFFFFFC (-4)	Intel(R) I210 Gigabit Network Connection
	(PCI) 0xFFFFFFFDD (-3)	Standard SATA AHCI Controller
	(PCI) 0xFFFFFFFEE (-2)	Mobile 6th Generation Intel(R) Processor Family I/O PCI Express Root Port #1 - 9D10
➤  Memory		

Appendix C


CANBus Utility (for CANBus Module)

C.1 CANBus Driver Installation


Before using the utility, please follow the instructions below to install the drivers.

For Windows 8.1


1. Locate the **CANBus** in Device Manager

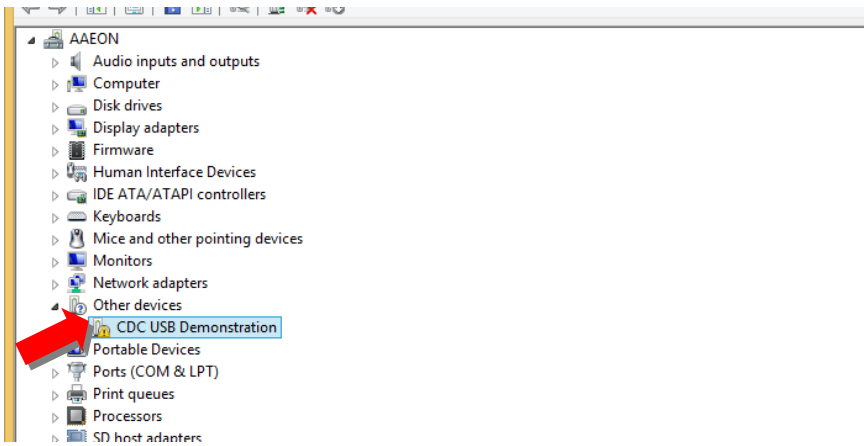


2. Right click and select **Update driver**

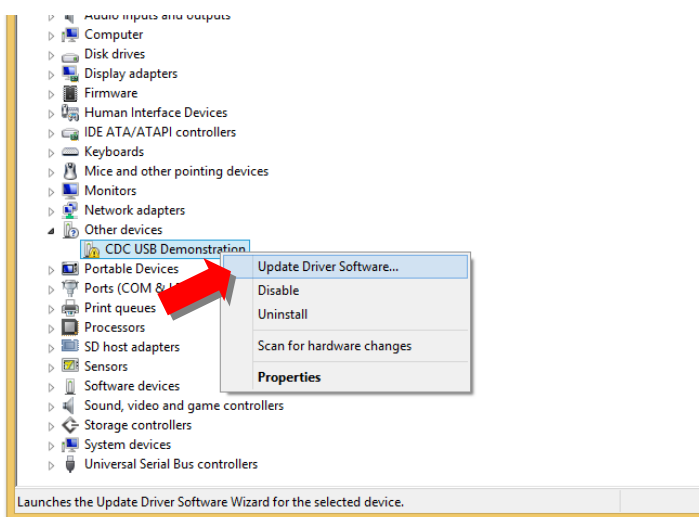


3. Choose **Browse my computer for driver software** and **Next**

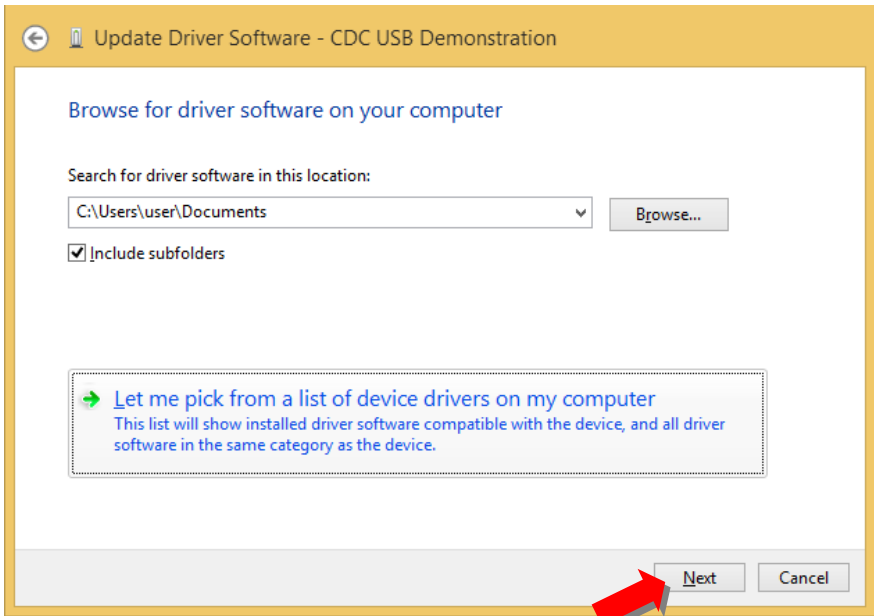



4. Click **Have Disk** and **browse to the driver's directory**

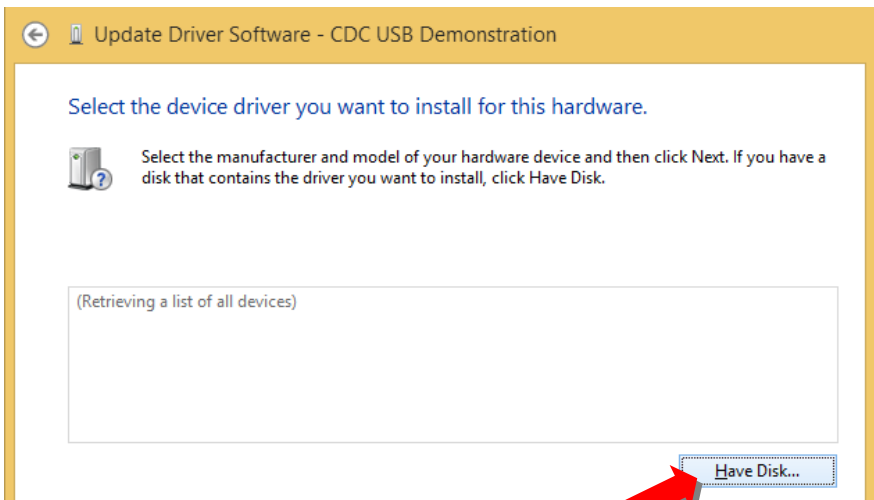

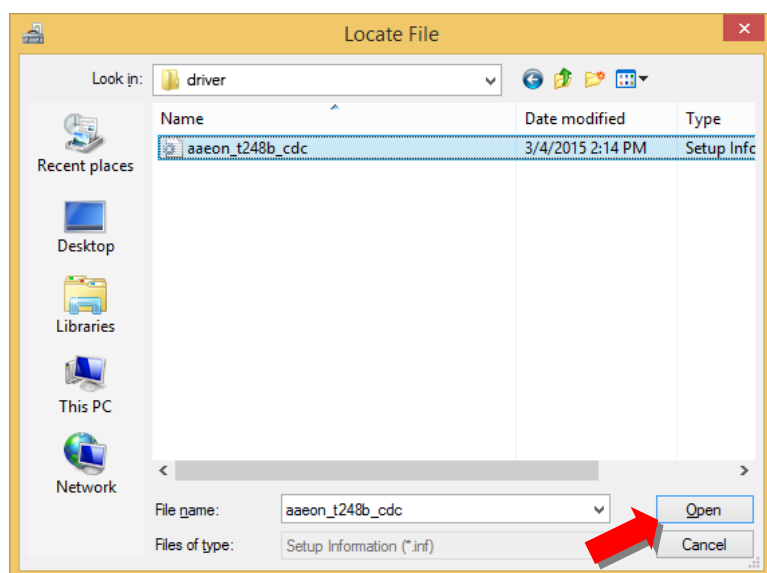


5. After selecting the directory, click **next** and **install the drivers**

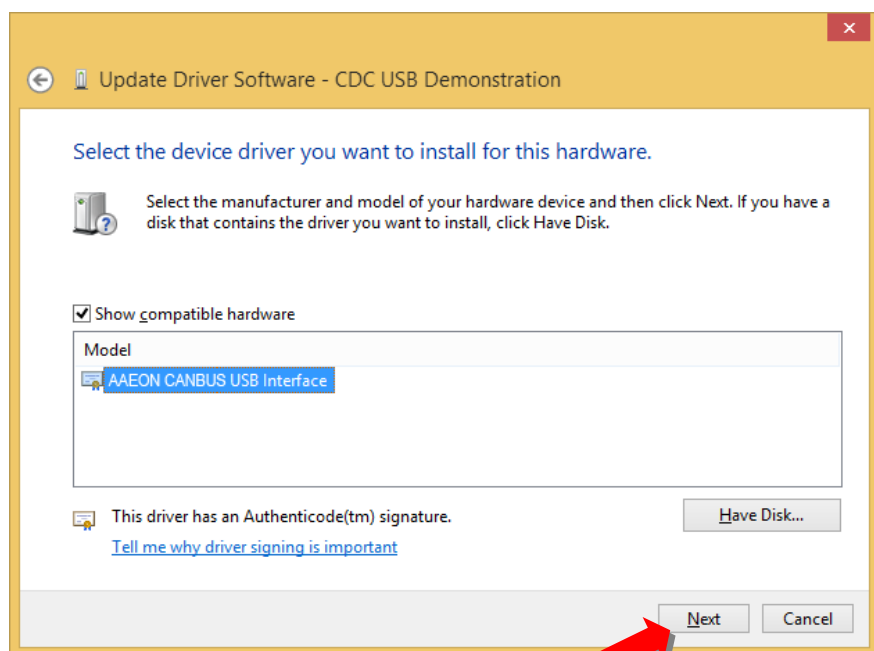


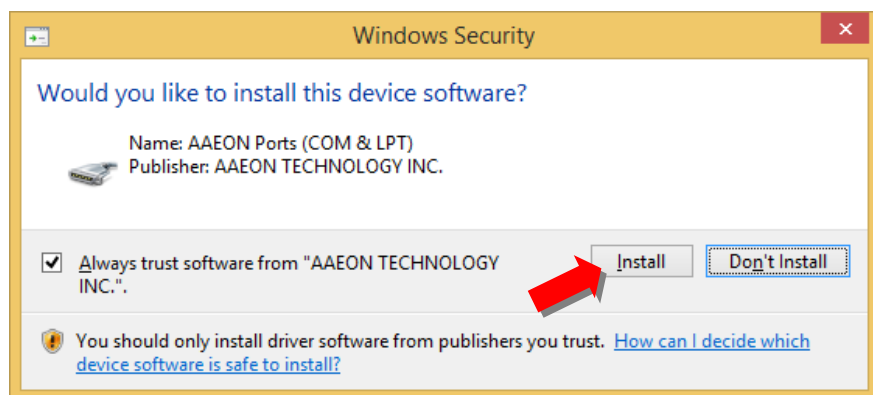

6. You should see this after the driver is successfully installed.

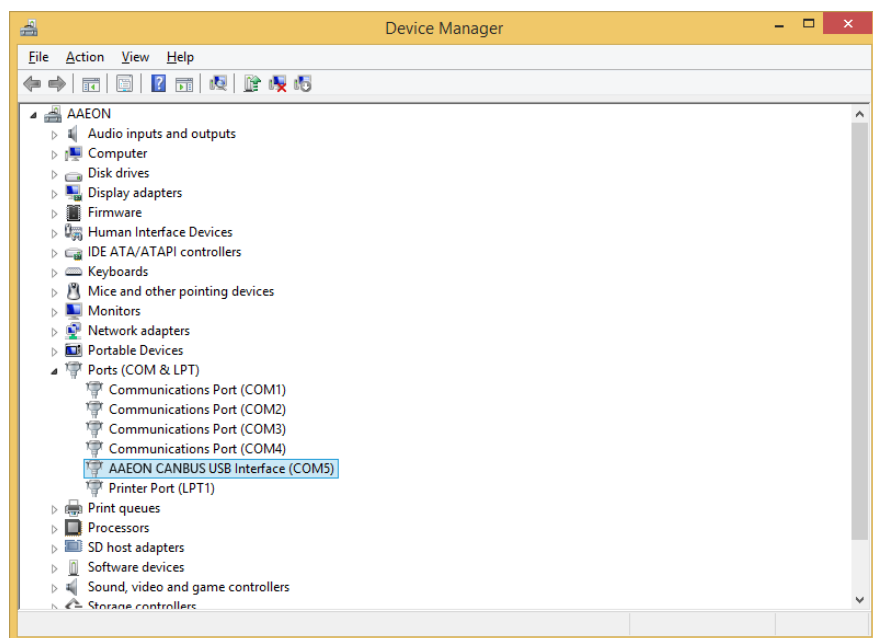

C.2 CANBus Utility

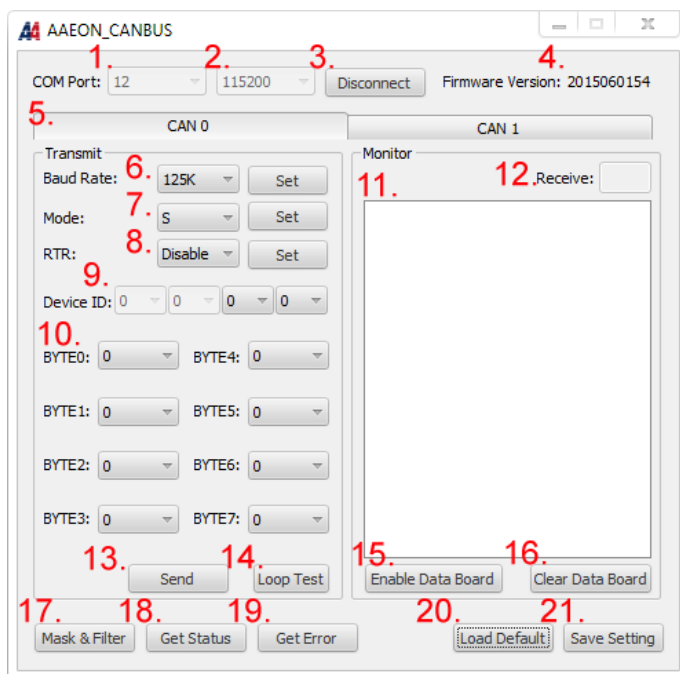


1. COM PORT NUMBER
2. COM PORT BAUD RATE:
 - i. 115200
 - ii. 57600
 - iii. 38400
 - iv. 19200
 - v. 9600
3. CONNECTION BUTTON
4. FIRMWARE VERSION
5. CAN BUS PORT SELECTOR: 0 OR 1
6. CAN BUS BAUD RATE (PRESS SET TO APPLY CHANGE):
 - i. 125K

- ii. 500K
 - iii. 1M
- 7. CAN BUS MODE: STANDARD OR EXTENDED (PRESS SET BUTTON TO APPLY CHANGE)
 - i. STANDARD: ID RANGE WILL BE 0x000~0x7FF
 - ii. EXTENDED: ID RANGE WILL BE 0x00000000~0x1FFFFFFF
- 8. ENABLE/ DISABLE RTR MODE (PRESS SET BUTTON TO APPLY CHANGE):

IF RTR IS ENABLED, A REMOTE FRAME WILL BE TRANSMITTED VIA THE BUS. THIS MEANS THAT NO DATA BYTES ARE INCLUDED WITHIN THIS FRAME. NEVERTHELESS, IT IS NECESSARY TO SPECIFY THE CORRECT DATA LENGTH CODE WHICH DEPENDS ON THE CORRESPONDING DATA FRAME WITH THE SAME IDENTIFIER CODING. IF THE RTR IS DISABLED, A DATA FRAME WILL BE SENT INCLUDING THE NUMBER OF DATA BYTES AS SPECIFIED BY THE DATA LENGTH CODE.
- 9. CAN BUS ID: THE IDENTIFIER IS TRANSMITTED FIRST ON THE BUS DURING THE ARBITRATION PROCESS. THE IDENTIFIER ACTS AS THE MESSAGE'S NAME.
- 10. DATA FIELD: DATA TO BE TRANSMITTED.
- 11. RECEIVED DATA WILL BE LISTED HERE
- 12. COUNTER INCREASED WHEN RECEIVING DATA
- 13. SEND BUTTON
- 14. LOOP TEST FUNCTION: PRESS THIS BUTTON TO SEND DATA AUTOMATICALLY.
- 15. RECEIVE BUTTON: PRESS TO START RECEIVING DATA.
- 16. CLEAR RECEIVE FIELD
- 17. MASK AND FILTER FUNCTION, PLEASE REFER TO NEXT SESSION.
- 18. GET STATUS FROM FIRMWARE REGISTER
- 19. GET ERROR STATUS FROM FIRMWARE REGISTER
- 20. LOAD DEFAULT
- 21. SAVE CURRENT SETTING TO FIRMWARE REGISTER

C.3 Mask and Filter Function

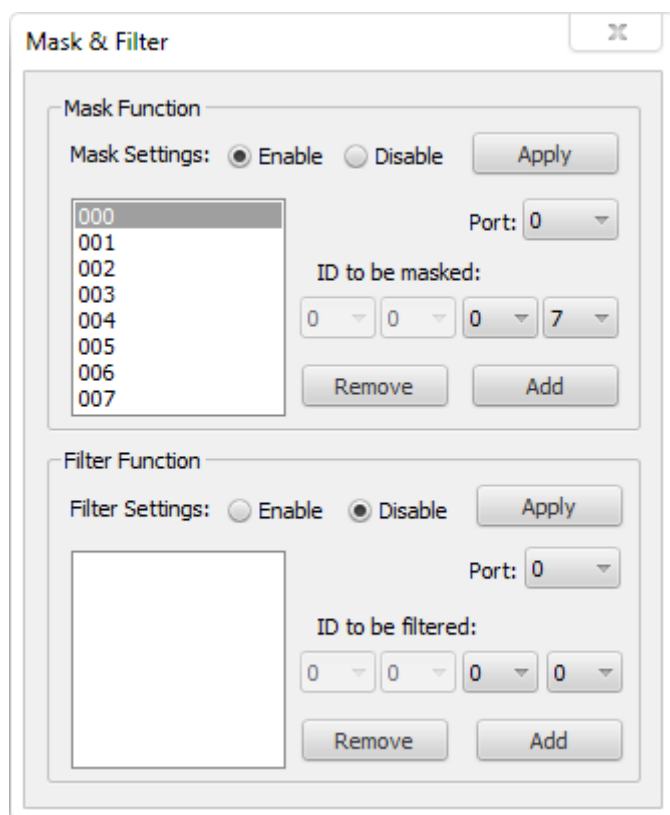

The image shows a 'Mask & Filter' dialog box with two main sections: 'Mask Function' and 'Filter Function'. The 'Mask Function' section has 'Mask Settings' with 'Enable' selected, an 'Apply' button, a list of IDs (000-007) with '000' selected, a 'Port' dropdown set to '0', and 'ID to be masked' fields with values '0', '0', '0', and '7'. The 'Filter Function' section has 'Filter Settings' with 'Disable' selected, an 'Apply' button, an empty ID list, a 'Port' dropdown set to '0', and 'ID to be filtered' fields with values '0', '0', '0', and '0'. Both sections have 'Remove' and 'Add' buttons.

Mask & Filter

Mask Function

Mask Settings: ☒ Enable ☐ Disable

000
001
002
003
004
005
006
007

Port: 0

ID to be masked:

0 0 0 7

Filter Function

Filter Settings: ☐ Enable ☒ Disable

Port: 0

ID to be filtered:

0 0 0 0

1. MASK: SPECIFIED ID CANNOT BE RECEIVED.
2. FILTER: ONLY SPECIFIED ID CANNOT BE RECEIVED.
3. WORKS ON PORT THAT APPLY TO RECEIVE PORT

Appendix D

DI/O Utility (for DI/O Module)

D.1 Digital I/O Register

Table 1: SuperIO Relative Register Table

	Default Value	Note
Index	0x2E(Note1)	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F(Note2)	SIO MB PnP Mode Data Register 0x2F or 0x4F

Table 2: Digital Input Relative Register Table

	LDN	Register	BitNum	Value	Note
DIO-1 Pin Status	0x06(Note3)	0xA2 (Note4)	0(Note5)		GPIO50
DIO-2 Pin Status	0x06(Note6)	0xA2 (Note7)	1(Note8)		GPIO51
DIO-3 Pin Status	0x06(Note9)	0xA2 (Note10)	2(Note11)		GPIO52
DIO-4 Pin Status	0x06(Note12)	0xA2 (Note13)	3(Note14)		GPIO53
DIO-5 Pin Status	0x06(Note15)	0xA2 (Note16)	4(Note17)		GPIO54
DIO-6 Pin Status	0x06(Note18)	0xA2 (Note19)	5(Note20)		GPIO55
DIO-7 Pin Status	0x06(Note21)	0xA2 (Note22)	6(Note23)		GPIO56
DIO-8 Pin Status	0x06(Note24)	0xA2 (Note25)	7(Note26)		GPIO57

Table 3: Digital Output Relative Register Table

	LDN	Register	BitNum	Value	Note
DIO-1 Output Data	0x06(Note27)	0xA1 (Note28)	0(Note29)	(Note30)	GPIO50
DIO-2 Output Data	0x06(Note31)	0xA1 (Note32)	1(Note33)	(Note34)	GPIO51
DIO-3 Output Data	0x06(Note35)	0xA1 (Note36)	2(Note37)	(Note38)	GPIO52
DIO-4 Output Data	0x06(Note39)	0xA1 (Note40)	3(Note41)	(Note42)	GPIO53
DIO-5 Output Data	0x06(Note43)	0xA1 (Note44)	4(Note45)	(Note46)	GPIO54
DIO-6 Output Data	0x06(Note47)	0xA1 (Note48)	5(Note49)	(Note50)	GPIO55
DIO-7 Output Data	0x06(Note51)	0xA1 (Note52)	6(Note53)	(Note54)	GPIO56
DIO-8 Output Data	0x06(Note55)	0xA1 (Note56)	7(Note57)	(Note58)	GPIO57

D.2 Digital I/O Sample Program

```
*****
// SuperIO relative definition (Please reference to Table 1)
#define byte   SIOWIndex  //This parameter is represented from Note1
#define byte   SIOWData   //This parameter is represented from Note2
#define void   IOWWriteByte(byte IOPort, byte Value);
#define byte   IOWReadByte(byte IOPort);
// Digital Input Status relative definition (Please reference to Table 2)
#define byte   DIInput1LDN // This parameter is represented from Note3
#define byte   DIInput1Reg // This parameter is represented from Note4
#define byte   DIInput1Bit // This parameter is represented from Note5
#define byte   DIInput2LDN // This parameter is represented from Note6
#define byte   DIInput2Reg // This parameter is represented from Note7
#define byte   DIInput2Bit // This parameter is represented from Note8
#define byte   DIInput3LDN // This parameter is represented from Note9
#define byte   DIInput3Reg // This parameter is represented from Note10
#define byte   DIInput3Bit // This parameter is represented from Note11
#define byte   DIInput4LDN // This parameter is represented from Note12
#define byte   DIInput4Reg // This parameter is represented from Note13
#define byte   DIInput4Bit // This parameter is represented from Note14
#define byte   DIInput5LDN // This parameter is represented from Note15
#define byte   DIInput5Reg // This parameter is represented from Note16
#define byte   DIInput5Bit // This parameter is represented from Note17
#define byte   DIInput6LDN // This parameter is represented from Note18
#define byte   DIInput6Reg // This parameter is represented from Note19
#define byte   DIInput6Bit // This parameter is represented from Note20
#define byte   DIInput7LDN // This parameter is represented from Note21
#define byte   DIInput7Reg // This parameter is represented from Note22
#define byte   DIInput7Bit // This parameter is represented from Note23
#define byte   DIInput8LDN // This parameter is represented from Note24
#define byte   DIInput8Reg // This parameter is represented from Note25
#define byte   DIInput8Bit // This parameter is represented from Note26
*****
```

// Digital Output control relative definition (Please reference to Table 3)

```
#define byte DOutput1LDN // This parameter is represented from Note27
#define byte DOutput1Reg // This parameter is represented from Note28
#define byte DOutput1Bit // This parameter is represented from Note29
#define byte DOutput1Val // This parameter is represented from Note30
#define byte DOutput2LDN // This parameter is represented from Note31
#define byte DOutput2Reg // This parameter is represented from Note32
#define byte DOutput2Bit // This parameter is represented from Note33
#define byte DOutput2Val // This parameter is represented from Note34
#define byte DOutput3LDN // This parameter is represented from Note35
#define byte DOutput3Reg // This parameter is represented from Note36
#define byte DOutput3Bit // This parameter is represented from Note37
#define byte DOutput3Val // This parameter is represented from Note38
#define byte DOutput4LDN // This parameter is represented from Note39
#define byte DOutput4Reg // This parameter is represented from Note40
#define byte DOutput4Bit // This parameter is represented from Note41
#define byte DOutput4Val // This parameter is represented from Note42
#define byte DOutput5LDN // This parameter is represented from Note43
#define byte DOutput5Reg // This parameter is represented from Note44
#define byte DOutput5Bit // This parameter is represented from Note45
#define byte DOutput5Val // This parameter is represented from Note46
#define byte DOutput6LDN // This parameter is represented from Note47
#define byte DOutput6Reg // This parameter is represented from Note48
#define byte DOutput6Bit // This parameter is represented from Note49
#define byte DOutput6Val // This parameter is represented from Note50
#define byte DOutput7LDN // This parameter is represented from Note51
#define byte DOutput7Reg // This parameter is represented from Note52
#define byte DOutput7Bit // This parameter is represented from Note53
#define byte DOutput7Val // This parameter is represented from Note54
#define byte DOutput8LDN // This parameter is represented from Note55
#define byte DOutput8Reg // This parameter is represented from Note56
#define byte DOutput8Bit // This parameter is represented from Note57
#define byte DOutput8Val // This parameter is represented from Note58
```

```

*****
VOID Main(){
    Boolean PinStatus ;

    // Procedure : AaeonReadPinStatus
    // Input :
    //     Example, Read Digital I/O Pin 3 status
    // Output :
    //     InputStatus :
    //         0: Digital I/O Pin level is low
    //         1: Digital I/O Pin level is High
    PinStatus = AaeonReadPinStatus(DInput3LDN, DInput3Reg, DInput3Bit);

    // Procedure : AaeonSetOutputLevel
    // Input :
    //     Example, Set Digital I/O Pin 6 level
    AaeonSetOutputLevel(DOutput6LDN, DOutput6Reg, DOutput6Bit, DOutput6Val);
}
*****

```

```

*****
Boolean  AaeonReadPinStatus(byte LDN, byte Register, byte BitNum){
    Boolean PinStatus ;

    PinStatus = SIOBitRead(LDN, Register, BitNum);
    Return PinStatus ;
}
VOID  AaeonSetOutputLevel(byte LDN, byte Register, byte BitNum, byte Value){
    ConfigToOutputMode(LDN, Register, BitNum);
    SIOBitSet(LDN, Register, BitNum, Value);
}
*****

```

```

*****
VOID SIOEnterMBPnPMode(){
    IOWriteByte(SIOIndex, 0x87);
    IOWriteByte(SIOIndex, 0x87);
}

VOID SIOExitMBPnPMode(){
    IOWriteByte(SIOIndex, 0xAA);
}

VOID SIOSelectLDN(byte LDN){
    IOWriteByte(SIOIndex, 0x07); // SIO LDN Register Offset = 0x07
    IOWriteByte(SIOData, LDN);
}

VOID SIOBitSet(byte LDN, byte Register, byte BitNum, byte Value){
    Byte TmpValue;

    SIOEnterMBPnPMode();
    SIOSelectLDN(byte LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= ~(1 < BitNum);
    TmpValue |= (Value < BitNum);
    IOWriteByte(SIOData, TmpValue);
    SIOExitMBPnPMode();
}

VOID SIOByteSet(byte LDN, byte Register, byte Value){
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    IOWriteByte(SIOData, Value);
    SIOExitMBPnPMode();
}
*****

```

```
*****
```

```
Boolean SIOBitRead(byte LDN, byte Register, byte BitNum){
```

```
    Byte TmpValue;
```

```
    SIOEnterMBPnPMode();
```

```
    SIOSelectLDN(LDN);
```

```
    IOWriteByte(SIOIndex, Register);
```

```
    TmpValue = IOReadByte(SIOData);
```

```
    TmpValue &= (1 << BitNum);
```

```
    SIOExitMBPnPMode();
```

```
    If(TmpValue == 0)
```

```
        Return 0;
```

```
    Return 1;
```

```
}
```

```
VOID ConfigToOutputMode(byte LDN, byte Register, byte BitNum){
```

```
    Byte TmpValue, OutputEnableReg;
```

```
    OutputEnableReg = Register-1;
```

```
    SIOEnterMBPnPMode();
```

```
    SIOSelectLDN(LDN);
```

```
    IOWriteByte(SIOIndex, OutputEnableReg);
```

```
    TmpValue = IOReadByte(SIOData);
```

```
    TmpValue |= (1 << BitNum);
```

```
    IOWriteByte(SIOData, OutputEnableReg);
```

```
    SIOExitMBPnPMode();
```

```
}
```

```
*****
```