

**PCM-5895**

Onboard AMD Geode LX 800

(LX 700/900 Optional) Processors

Up to 24-bit LVDS

184-pin DDR 333/400 Memory

4 USB 2.0 / 8-bit Digital I/O / 4 COM

## Copyright Notice

This document is copyrighted, 2007. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

## Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- Award is a trademark of Award Software International, Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- AMD, the AMD Arrow logo and combinations thereof are trademarks of Advanced Micro Devices, Inc.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- SoundBlaster is a trademark of Creative Labs, Inc.

All other product names or trademarks are properties of their respective owners.

## Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- **1 PCM-5895 CPU Card**
- **1 Quick Installation Guide**
- **1 CD-ROM for manual (in PDF format) and drivers**
- **1 9657666600 Jumper Cap**

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

# Contents

## Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features .....	1-3
1.3 Specifications .....	1-4

## Chapter 2 Quick Installation Guide

2.1 Safety Precautions .....	2-2
2.2 Location of Connectors and Jumpers .....	2-3
2.3 Mechanical Drawing .....	2-5
2.4 List of Jumpers .....	2-7
2.5 List of Connectors .....	2-8
2.6 Setting Jumpers .....	2-10
2.7 DC Address Selection (JP4) .....	2-11
2.8 AT/ATX Power Type Selection (JP5) .....	2-11
2.9 CFD Master/ Slave Selection (JP6) .....	2-11
2.10 Clear CMOS (JP7) .....	2-11
2.11 COM Ports RI/+5V+12V Selection (JP8, JP10, JP9, JP11) .....	2-12
2.12 LCD Power & Clock Selection (JP12) .....	2-13
2.13 Inverter Voltage Selection (JP13) .....	2-13
2.14 FAN Connector (CN1) .....	2-13
2.15 IrDA Connector (CN2) .....	2-14
2.16 CAN Bus (CN4) .....	2-14

2.17 USB Port #1 & Port #2 (CN6).....	2-14
2.18 Front Panel (CN7) .....	2-15
2.19 USB Port #3 & Port #4 (CN8).....	2-15
2.20 PC/104 ISA Interface (CN9).....	2-15
2.21 ATX Power Socket (CN10) .....	2-19
2.22 AT Power Socket (CN11).....	2-20
2.23 IDE Hard Drive (CN12).....	2-20
2.24 CRT Display (CN 14).....	2-21
2.25 Audio Input/ Output/ CD-in/ MIC (CN15).....	2-22
2.26 Parallel Port (CN16) .....	2-22
2.27 Keyboard/ Mouse Connector (CN17).....	2-23
2.28 Digital I/O (CN18) .....	2-23
2.29 Serial Port (CN19).....	2-24
2.30 Floppy (CN20) .....	2-26
2.31 Ethernet 10/100Base-TX RJ-45 Phone Jack (CN21) .....	2-27
2.32 Mini-PCI Slot (MPC11).....	2-27
2.33 CompactFlash Disk Slot (CFD1) .....	2-27
2.34 PCI Slot (PC11) .....	2-30
2.35 LAN LED (CN13, CN25) .....	2-30
2.36 DOC (U11) .....	2-31
2.37 LVDS 1,2 (CN22, CN24) .....	2-31
2.38 TFT LCD (CN23) .....	2-32
2.39 Ethernet 10/100Base-TX Connector (CN26) .....	2-34
2.40 LCD Inverter (CN27) .....	2-34

## Chapter 3 Award BIOS Setup

3.1 System Test and Initialization .....	3-2
3.2 Award BIOS Setup .....	3-3

## Chapter 4 Driver Installation

4.1 Software Drivers.....	4-2
4.2 Necessary to Know .....	4-3
4.3 Installing VGA Driver .....	4-4
4.4 Installing AES Driver .....	4-5
4.5 Installing PCI to ISA Bridge Driver .....	4-6
4.6 Installing LAN Driver.....	4-7
4.7 Ethernet Software Configuration .....	4-7
4.8 Installing Audio Driver .....	4-8

## Appendix A Programming the Watchdog Timer

A.1 Programming .....	A-2
A.2 ITE 8712 Watchdog Timer Initial Program.....	A-5

## Appendix B I/O Information

B.1 I/O Address Map .....	B-2
B.2 1 <sup>st</sup> MB Memory Address Map .....	B-2
B.3 IRQ Mapping Chart.....	B-3
B.4 DMA Channel Assignments.....	B-3

## Appendix C Mating Connector

C.1 List of Mating Connectors and Cables.....	C-2
---	-----

Chapter

1

**General  
Information**



## **1.1 Introduction**

---

PCM-5895 adopts an AMD Geode LX 800 processor. In addition, LX700 and LX900 processors are optional to meet customer demands. The AMD LX series processors are ideal for applications that require low power consumption and stable performance. The system memory features 184-pin DDR DIMM up to 1GB. Moreover, the PCM-5895 supports Mini PCI, PCI and PC/104 for flexible expansion. Customers are always eager to find a low-priced, multi-functional product. The PCM-5895 meets this criteria exactly.

Regarding the multimedia performance of PCM-5895, it features CRT/LCD, CRT/TV and LCD/TV simultaneous display. The LVDS/TTL TFT LCD is up to 24-bit and the rich audio I/O interface that PCM-5895 possesses supports MIC-in, Line-in, Line-out and CD-in. In addition, PCM-5895 deploys 4 COM ports--three RS-232 ports and one RS-232/422/485 port. Moreover, 4 USB 2.0, 8-bit Digital I/O and IrDA ports make PCM-5895 more attractive for system device expansion. One CAN Bus port is an optional feature that can help enrich connections.

## 1.2 Features

---

- Onboard AMD Geode LX 800 (LX700/900 Optional) Processors
- One DIMM DDR 333/400 up to 1GB
- Supports up to Duo 24-bit LVDS/TTL TFT LCD
- Dual 10/100Base-TX Ethernet
- Mini PCI, PCI and PC/104
- IDE, 4 COM Ports, Parallel
- AC97 2 Channel
- USB2.0 x 4, 8-bit Digital I/O, IrDA
- CAN Bus (Optional)

### 1.3 Specifications

---

#### System

- CPU Onboard AMD Geode LX800 (LX 700/900 Optional) Processors
- System Memory 184-pin DDR DIMM x 1, Max. 1GB (DDR 333/400)
- Chipset AMD Geode LX + CS5536
- I/O Chipset ITE IT8712 + IT8888G
- Ethernet Realtek RTL 8139DL, 10/100Base-TX x 2, RJ-45 x 1 & Pin header x 1
- BIOS Award Plug & Play BIOS – 512KB ROM
- Watchdog Timer Generates a time-out system reset
- H/W status monitoring Supports power supply voltages and temperature monitoring functions
- SSD One Type II Compact Flash slot, DiskOnChip x 1
- Expansion Interface Mini PCI x 1, PCI x 1, PC/104 x 1
- Battery Lithium battery
- Operating Temperature 32°F~140°F (0°C~60°C)
- Power Requirement +5V/ AT/ ATX
- Board Size 8"(L) x 5.72" (W) (203mm x

- Gross Weight 146mm)  
1.2 lb (0.5 kg)

### Display: Supports CRT/LCD and CRT/TV Simultaneous display

- Chipset AMD Geode + TI SN75LVDS83
- Memory Shared system memory up to 254MB
- Resolutions Up to 1920x1440@24bpp for CRT;  
Up to 1600x1200@24bpp for LCD
- LCD Interface Up to Duo 24-bit LVDS/TTL TFT LCD (Simultaneous)

### I/O

- MIO EIDEx1(UDMA-100 x 1), Floppy Disk Drive x 1; RS-232 x 3, RS-232/422/485 x 1, Keyboard + Mouse x 1, Parallel x 1
- IrDA One IrDA Tx/Rx header
- Audio MIC-in/ Line-in/ Line-out/ CD-in
- USB Two 5x2 box headers support four USB 2.0 ports
- Digital I/O Supports 8-bit (Programmable)
- CAN Bus Supports one port (Philips SJA 1000T)(optional)

Chapter


2

**Quick  
Installation  
Guide**

*Notice:*

*The Quick Installation Guide is derived from Chapter 2 of user manual. For other chapters and further installation instructions, please refer to the user manual CD-ROM that came with the product.*

**OZONE SAFE**

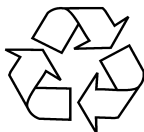

**RECYCLABLE**

## 2.1 Safety Precautions

---

**Warning!**


*Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.*

**Caution!**


*Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis*

## 2.2 Location of Connectors and Jumpers

### Component Side

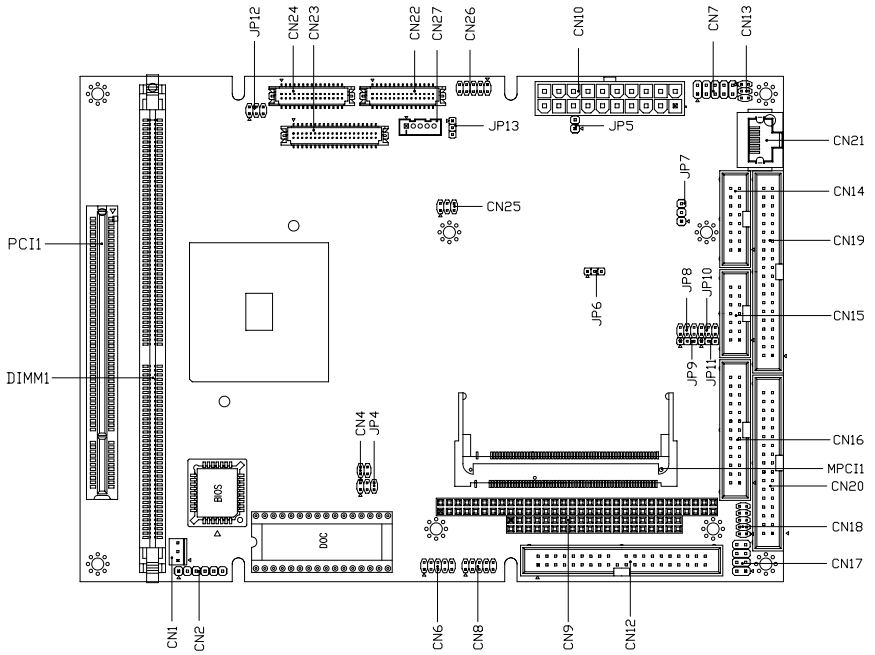


Solder Side

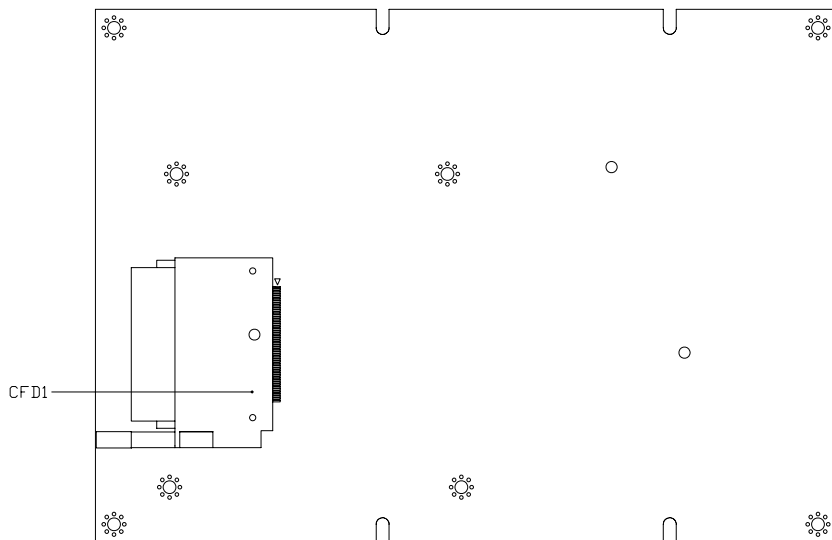




### 2.3 Mechanical Drawing

#### Component Side

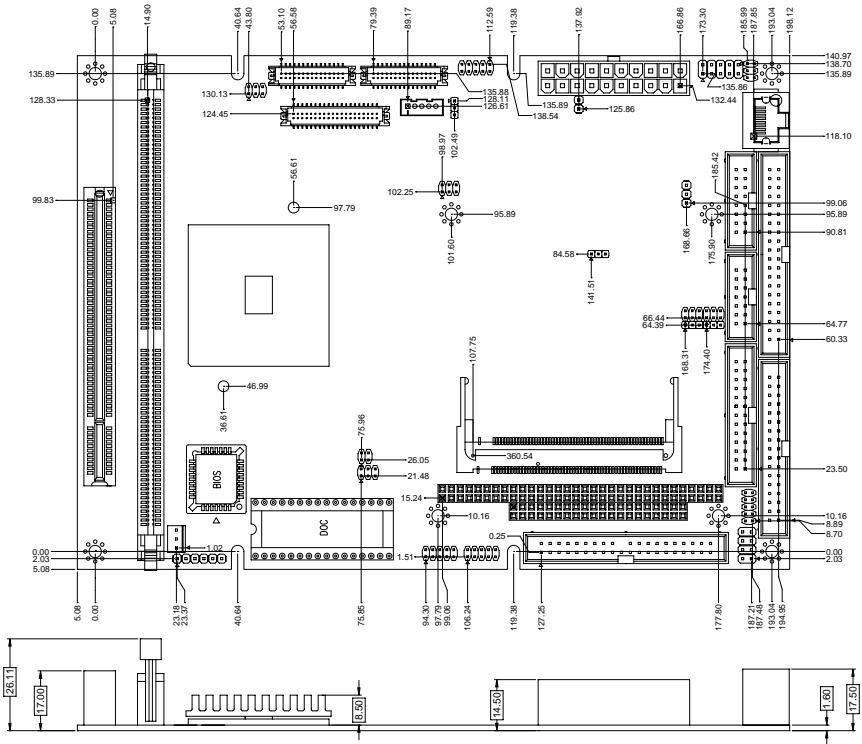

Solder Side

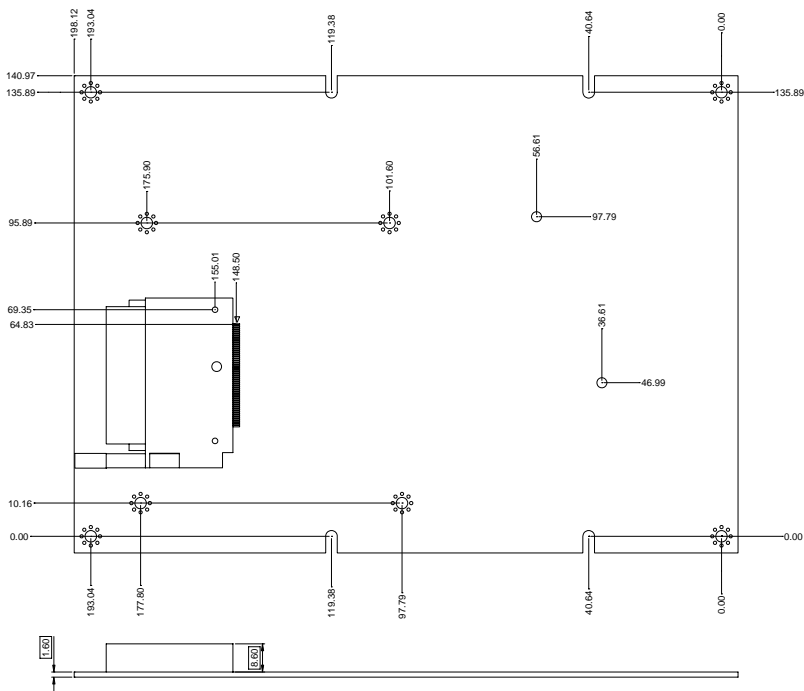

## 2.4 List of Jumpers

---

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

### Jumpers

Label	Function
JP4	DOC Address Selection
JP5	AT/ATX Power Type Selection
JP6	CFD Master/Slave Selection
JP7	Clear CMOS
JP8, JP10	COM Ports RI/+5V/+12V Selection
JP9, JP11	COM Ports +5V/+12V Selection
JP12	LCD Clock and Power Selection
JP13	Inverter Voltage Selection

## 2.5 List of Connectors

---

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:

### Connectors

Label	Function
CN1	System FAN
CN2	IrDA
CN4	CAN BUS (Optional)
CN6	USB Port #1 and Port #2
CN7	Front Panel
CN8	USB Port #3 and Port #4
CN9	PC/104 ISA Interface
CN10	ATX Power Socket
CN11	AT Power Socket (Optional)
CN12	IDE Hard Drive
CN13	LAN1 LED
CN14	CRT Display
CN15	Audio Input/Output/CDin/MIC
CN16	Parallel Port
CN17	KB/MS Connector
CN18	Digital I/O
CN19	Serial Port

---

CN20	Floppy
CN21	Ethernet 10/100 Base RJ-45 Phone Jack (LAN1)
CN22	LVDS1 Connector
CN23	TFT LCD Connector
CN24	LVDS2 Connector
CN25	LAN2 LED
CN26	LAN2 Connector
CN27	LCD Inverter Connector
MPCI1	Mini-PCI
CFD1	Compact Flash Disk
PCI1	PCI Slot
U11	DOC


---

## 2.6 Setting Jumpers

---

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip.

To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.

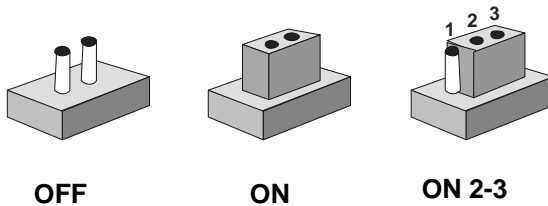

A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change.

Generally, you simply need a standard cable to make most connections.

## 2.7 DC Address Selection (JP4)

JP4	Function
1-2	D400
3-4	DC00
5-6	D800
1-2	Disable (Default)
3-4	
5-6	

## 2.8 AT/ ATX Power Type Selection (JP5)

JP5	Function
1-2	ATX Power Supply (Default)
	AT Power Supply

## 2.9 CFD Master/ Slave Selection (JP6)

JP6	Function
1-2	Slave (Default)
2-3	Master

## 2.10 Clear CMOS (JP7)

JP7	Function
1-2	Normal (Default)

---

2-3	Clear CMOS
-----	------------

---

## 2.11 COM Ports RI/+5V/+12V Selection (JP8, JP10, JP9, JP11)

---

COM1: JP8

<b>JP8</b>	<b>Function</b>
1-2	+12V
3-4	+5V
5-6	RI (Default)

COM2: JP10

<b>JP10</b>	<b>Function</b>
7-8	+12V
9-10	+5V
11-12	RI (Default)

COM3: JP9

<b>JP9</b>	<b>Function</b>
1-2	+12V
2-3	+5V (Default)

COM4: JP11

<b>JP11</b>	<b>Function</b>
1-2	+12V
2-3	+5V (Default)

---



## 2.12 LCD Power & Clock Selection (JP12)

---

JP12	Function
1-3	Normal (Default)
3-5	Inverse

JP12	Function
2-4	+5Vlcd
4-6	+3Vlcd (Default)

## 2.13 Inverter Voltage Selection (JP13)

---

JP13	Function
1-2	+12V
2-3	+5V (Default)

## 2.14 FAN Connector (CN1)

---

Pin	Signal
1	GND
2	+12V
3	FAN Sense

### 2.15 IrDA Connector (CN2)

Pin	Signal
1	+5V
2	CIR_TX (Optional)
3	RX
4	GND
5	TX
6	CIR_RX (Optional)

### 2.16 CAN Bus (CN4) (Optional)

Pin	Signal	Pin	Signal
1	CANH	2	CANL
3	GND	4	N.C.

### 2.17 USB Port #1 & Port #2 (CN6)

Pin	Signal	Pin	Signal
1	VDD0	2	GND
3	D0-	4	GND
5	D0+	6	D1+
7	GND	8	D1-
9	GND	10	VDD1

## 2.18 Front Panel (CN7)

Pin	Signal
1-2	ATX Power-on Button
3-4	HDD Active LED
5-6	External Speaker
7-8	Power LED
9-10	System Reset Button

## 2.19 USB Port #3 & Port #4 (CN8)

Pin	Signal	Pin	Signal
1	VDD3	2	GND
3	D3-	4	GND
5	D3+	6	D4+
7	GND	8	D4-
9	GND	10	VDD4

## 2.20 PC/104 ISA Interface (CN9)

J1/P1		
Pin	A	B
1	IOCHCK*	GND
2	D7	RSTDRV
3	D6	+5V

4	D5	IRQ9
5	D4	-5V
6	D3	DRQ2
7	D2	-12V
8	D1	ENDXFR*
9	D0	+12V
10	IOCHRDY	GND/KEY
11	AEN	SMEMW*
12	A19	SMEMR*
13	A18	IOW*
14	A17	IOR*
15	A16	DACK3*
16	A15	DRQ3
17	A14	DACK1*
18	A13	DRQ1
19	A12	REFRESH*
20	A11	SYSCLK
21	A10	IRQ7
22	A9	IRQ6
23	A8	IRQ5
24	A7	IRQ4
25	A6	IRQ3
26	A5	DACK2*
27	A4	TC

**Compact Board****PCM-5895**

28	A3	BALE
29	A2	+5V
30	A1	OSC
31	A0	GND
32	GND	GND

**J2/P2**

<b>Pin</b>	<b>D</b>	<b>C</b>
1	GND	GND
2	MEMCS16*	SBHE*
3	IOCS16*	LA23
4	IRQ10	LA22
5	IRQ11	LA21
6	IRQ12	LA20
7	IRQ15	LA19
8	IRQ14	LA18
9	DACK0*	LA17
10	DRQ0	MEMR*
11	DACK5*	MEMW*
12	DRQ5	SD8
13	DACK6*	SD9
14	DRQ6	SD10
15	DACK7*	SD11

16	DRQ7	SD12
17	+5V	SD13
18	MASTER*	SD14
19	GND	SD15
20	GND	GND/KEY

PCM-5895 does not support PC/104 way legacy ISA-DMA mode cause by AMD architecture.

I/O Resource Allocation Method of PC/104 card is for the PCM-5895.

PC/104 connector at the PCM-5895 cannot automatically get related I/O resource when a new PC/104 card is added because of AMD Geode's architecture limitation. The following steps are for setting up the I/O resources manually for your reference.

1. Retrieve the resource of the PC/104 card. The information is typically contained in the manual of the PC/104 card.
2. Push a function key "Delete" to get into the BIOS
3. Enable the resource of the device in BIOS setup
4. Disable the resource of the device for which conflicts the resource of the device mentioned above in BIOS setup
5. Save above BIOS setup and restart the system
6. Install the driver in the operating system

7. Open your Control Panel (click Start, then pick Setting and Control Panel) Double click on the System icon and choose the Device Manager tab. Find the device of which you want to enable. Click the plus sign (+) next to the various categories click on the device you want to update, and then click on "Resource" and choose the resource that is the same as the hardware setup.

## 2.21 ATX Power Socket (CN10)

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
1	+3.3V	11	+3.3V
2	+3.3V	12	-12V
3	GND	13	GND
4	+5V	14	PS-ON
5	GND	15	GND
6	+5V	16	GND
7	GND	17	GND
8	N.C	18	-5V
9	5VSB	19	+5V
10	+12V	20	+5V

## 2.22 AT Power Socket (CN11) (Optional)

---

Pin	Signal
1	N.C.
2	+5V
3	+12V
4	-12V
5	GND
6	GND
7	GND
8	GND
9	-5V
10	+5V
11	+5V
12	+5V

## 2.23 IDE Hard Drive (CN12)

---

Pin	Signal	Pin	Signal
1	RESET#	2	GND
3	D7	4	D8
5	D6	6	D9
7	D5	8	D10
9	D4	10	D11



11	D3	12	D12
13	D2	14	D13
15	D1	16	D14
17	D0	18	D15
19	GND	20	N.C.
21	DREQ	22	GND
23	IOW#	24	GND
25	IOR#	26	GND
27	IORDY	28	GND
29	DACK#	30	GND
31	IRQ14	32	N.C.
33	DA1	34	PDIAG#
35	DA0	36	DA2
37	CS#1	38	CS#3
39	Active LED#	40	GND

## 2.24 CRT Display (CN14)

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
1	RED	2	+5V
3	GREEN	4	GND
5	BLUE	6	N.C.
7	N.C.	8	DDCSDA
9	GND	10	HSYNC

11	GND	12	VSYNC
13	GND	14	DDCSCL
15	GND	16	GND

## 2.25 Audio Input/ Output/ CD-in/ MIC (CN15)

Pin	Signal	Pin	Signal
1	MIC	2	MIC_Vcc
3	Audio Ground	4	CD_GND
5	LINE_IN L	6	CD_L
7	LINE_IN R	8	CD_GND
9	Audio Ground	10	CD_R
11	LINE_OUT L	12	LINE_OUT R
13	Audio Ground	14	Audio Ground

## 2.26 Parallel Port (CN16)

Pin	Signal	Pin	Signal
1	STB#	2	AFD#
3	PTD0	4	ERR#
5	PTD1	6	PINIT#
7	PTD2	8	SLIN#
9	PTD3	10	GND
11	PTD4	12	GND

13	PTD5	14	GND
15	PTD6	16	GND
17	PTD7	18	GND
19	ACK#	20	GND
21	BUSY	22	GND
23	PE	24	GND
25	SLCT	26	N.C.

## 2.27 Keyboard/ Mouse Connector (CN17)

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
1	Keyboard Data	2	Keyboard Clock
3	GND	4	+5V
5	Mouse Data	6	Mouse Clock
7	N.C.		

## 2.28 Digital I/O (CN18)

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
1	IN0	2	IN1
3	IN2	4	IN3
5	OUT0	6	OUT1
7	OUT2	8	OUT3
9	+5V	10	GND

**DIO Address is 801H**

BIOS Setting	Connector Definition	Address	IT8712 GPIO Setting
Port 1	CN18. pin 1	Bit 7	U40. pin 20 (GPIO27)
Port 2	CN18. pin 2	Bit 6	U40. pin 21 (GPIO26)
Port 3	CN18. pin 3	Bit 5	U40. pin 22 (GPIO25)
Port 4	CN18. pin 4	Bit 4	U40. pin 23 (GPIO24)
Port 5	CN18. pin 5	Bit 3	U40. pin 24 (GPIO23)
Port 6	CN18. pin 6	Bit 2	U40. pin 25 (GPIO22)
Port 7	CN18. pin 7	Bit 1	U40. pin 26 (GPIO21)
Port 8	CN18. pin 8	Bit 0	U40. pin 27 (GPIO20)

**2.29 Serial Port (CN19)**

**Note:** COM 1 & COM 2 support full modem control signals and COM 3 & COM 4 support TX & RX only.

**COM/ RS-232 mode**

Pin	Signal	Pin	Signal
1	DCD1	2	DSR1
3	RXD1	4	RTS1
5	TXD1	6	CTS1
7	DTR1	8	RI1/+5V/+12V
9	GND	10	N.C.
11	DCD2	12	DSR2
13	RXD2	14	RTS2

**Compact Board****PCM - 5895**

15	TXD2	16	CTS2
17	DTR2	18	RI2/+5V/+12V
19	GND	20	N.C.
21	N.C.	22	N.C.
23	RXD3	24	N.C.
25	TXD3	26	N.C.
27	N.C.	28	+5V/+12V
29	GND	30	N.C.
31	N.C.	32	N.C.
33	RXD4	34	N.C.
35	TXD4	36	N.C.
37	N.C.	38	+5V/+12V
39	GND	40	N.C.

**COM/ RS-422 mode**

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
11	TXD-	12	N.C.
13	RXD+	14	N.C.
15	TXD+	16	N.C.
17	RXD-	18	N.C./ +5V/ +12V
19	GND	20	N.C.

**COM/ RS-485 mode**

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
------------	---------------	------------	---------------

11	TXD-	12	N.C.
13	N.C.	14	N.C.
15	TXD+	16	N.C.
17	N.C.	18	N.C./ +5V/ +12V
19	GND	20	N.C.

### 2.30 Floppy (CN20)

Pin	Signal	Pin	Signal
1	GND	2	DENSEL#
3	GND	4	N.C.
5	GND	6	N.C.
7	GND	8	INDEX#
9	GND	10	MTRA#
11	GND	12	DRVB#
13	GND	14	DRVA#
15	GND	16	MTRB#
17	GND	18	DIR#
19	GND	20	STEP#
21	GND	22	WDATA#
23	GND	24	WGATE#
25	GND	26	TRK0#
27	GND	28	WPT#
29	N.C.	30	RDATA#

31	GND	32	HDSEL#
33	N.C.	34	DSKCHG#

### 2.31 Ethernet 10/100Base-TX RJ-45 Phone Jack (CN21)

Pin	Signal	Pin	Signal
1	TXD+	2	TXD-
3	RXD+	4	N.C. (N GND)
5	N.C. (N GND)	6	RXD-
7	N.C.(C GND)	8	N.C.(C GND)
9	GND	10	GND

### 2.32 Mini-PCI Slot (MPC11)

Standard Specification.

### 2.33 CompactFlash Disk Slot (CFD1)

Pin	Signal	Pin	Signal
1	GND	26	GND
2	D3	27	D11
3	D4	28	D12
4	D5	29	D13
5	D6	30	D14
6	D7	31	D15

7	CS#1	32	CS#3
8	GND	33	GND
9	GND	34	IOR#
10	GND	35	IOW#
11	GND	36	+5V.
12	GND	37	IRQ14
13	+5V	38	+5V
14	GND	39	CSEL#
15	GND	40	N.C.
16	GND	41	RESET#
17	GND	42	IORDY
18	DA2	43	DREQ
19	DA1	44	DACK#
20	DA0	45	DASP#
21	D0	46	PDIAG#
22	D1	47	D8
23	D2	48	D9
24	IO16#	49	D10
25	GND	50	GND

**Note:** There is a limitation when supports Compact Flash and a hard disk drive on the same IDE channel. Below information is from AMD.

#### Frequently Asked Question - FAQ.179

**Question:** Can the AMD Geode™ LX DB800 development board support Compact Flash and a hard disk drive on the same IDE channel?



**Answer:**

The AMD Geode™ LX DB800 development board has a Compact Flash (CF) socket and a 40-pin IDE header on the motherboard. The IDE header is typically used for a Hard Disk Drive (HDD) or some other IDE device. It is possible to use a configuration containing a CF and HDD, with certain restrictions and considerations.

An easy mistake is to have master and slave devices (HDD, CD-ROM, etc.) on the cable and CF on the motherboard. This does not work because it puts three devices on an interface architected for only two drives.

In order to demonstrate CF on the LX DB800, a baseboard modification is required. The following reworks must be made:

- 1) Wire J6-39 to J5-45 (this is the DASP signal)
- 2) Lift J5-24 (on ICS16#)
- 3) Install R137 (on ICS16#)
- 4) Change R37 to 4.7k (on CSEL#)

If support for any of the DMA modes is required (i.e., multi-word or ultra-DMA) the following modifications are required:

- 5) Lift pin J5-44
- 6) Wire J6-21 to J5-43
- 7) Wire J6-29 to pin J5-44 (the lifted pin, not the pad)

Be careful with the pin numbering on the CF connector J5. The pins aren't in order (i.e., 1, 2, 3, 4...49, 50) they are in this order 1, 26, 2, 27, 3, 28...45, 21, 46, 22, 47, 23, 48, 24, 49, 25, 50. So pin 45 is 11 pins from the end marked 50. And pin 24 is 4 pins from the end marked 50.

The cable should be carefully considered. It must connect PDIAG- between the HDD and CF.

The problem is related to the fact that one device is on the cable and the other is populated on the motherboard.

A 40-pin cable has PDIAG- available on all its connectors. Therefore, PDIAG- may be signaled from the cable-based HDD, through the motherboard, and to the CF (or vice versa).

Unfortunately, the higher UDMA modes cannot be supported on a 40-pin cable.

An 80-pin cable is typically marked with the specific connectors intended for motherboard and drives. The PDIAG- signal is allowed to travel

between the two drives on the cable, but is not connected to the motherboard. Inside the cable's motherboard connector, the PDIAG- signal is disconnected from the two drives, and grounded for the motherboard. As a result, the PDIAG- signal cannot travel between the HDD (on the cable) and a CF (on the motherboard).

There are three options for supporting configurations with both HDD and CF:

- 1) Use a 40-pin cable. This solution limits the user to the lower UDMA speeds.
- 2) Abandon the CF socket on the LX DB800 baseboard and use a CF adapter that attaches directly to the 80-pin cable. This solution allows the HDD to operate at the higher UDMA speeds and also maintains support for the 80-pin cable detection.
- 3) Modify an 80-pin cable (or build a modified cable). Cutting off the host end of the 80-pin cable at the point where it attaches to the first drive connector allows the PDIAG- signal to pass from the HDD to the CF socket. This also removes the hardware support for detecting the presence of the 80-pin cable, and requires the BIOS be modified so that 80-pin support is the default.

## 2.34 PCI Slot (PCI1)

---

Standard Specification.

## 2.35 LAN LED (CN13, CN25)

---

<b>Pin</b>	<b>Signal</b>	<b>Pin</b>	<b>Signal</b>
1	RX	2	+3.3V
3	LINK10/100	4	+3.3V
5	TX	6	+3.3V

### 2.36 DOC (U11)

---

Standard Specification.

### 2.37 LVDS1, 2 (CN22, CN24)

---

Pin	Signal	Pin	Signal
1	BKL_EN	2	N.C.
3	VLCD	4	GND
5	LVDS_CLK#	6	LVDS_CLK
7	VLCD	8	GND
9	TX0#	10	TX0
11	TX1#	12	TX1
13	TX2#	14	TX2
15	TX3#	16	TX3
17	N.C.	18	N.C.
19	N.C.	20	N.C.
21	N.C.	22	N.C.
23	N.C.	24	N.C.
25	N.C.	26	N.C.
27	VLCD	28	GND
29	N.C.	30	N.C.

## 2.38 TFT LCD (CN23)

---

For 24-bit TFT LCD

Pin	Signal	Pin	Signal
1	+5VLCD	2	+5VLCD
3	GND	4	GND
5	+3.3VLCD	6	+3.3VLCD
7	BKL_EN	8	GND
9	B0	10	B1
11	B2	12	B3
13	B4	14	B5
15	B6	16	B7
17	G0	18	G1
19	G2	20	G3
21	G4	22	G5
23	G6	24	G7
25	R0	26	R1
27	R2	28	R3
29	R4	30	R5
31	R6	32	R7
33	GND	34	GND
35	LCD_CLK	36	LCD_VS
37	LCD_DE	38	LCD_HS
39	N.C.	40	TP

For 18-bit TFT LCD

Pin	Signal	Pin	Signal
1	+5VLCD	2	+5VLCD
3	GND	4	GND
5	+3.3VLCD	6	+3.3VLCD
7	BKL_EN	8	GND
9	N.C.	10	N.C.
11	B0	12	B1
13	B2	14	B3
15	B4	16	B5
17	N.C.	18	N.C.
19	G0	20	G1
21	G2	22	G3
23	G4	24	G5
25	N.C.	26	N.C.
27	R0	28	R1
29	R2	30	R3
31	R4	32	R5
33	GND	34	GND
35	LCD_CLK	36	LCD_VS
37	LCD_DE	38	LCD_HS
39	N.C.	40	TP

### 2.39 Ethernet 10/100Base-TX Connector (CN26)

---

Pin	Signal	Pin	Signal
1	RXD-	2	RXD+
3	N.C.(N GND)	4	N.C.(N GND)
5	GND	6	GND
7	N.C.(C GND)	8	N.C.(C GND)
9	TXD+	10	TXD-

---

### 2.40 LCD Inverter (CN27)

---

Pin	Signal	Pin	Signal
1	12V/5V	4	GND
2	GND	5	BKL_EN
3	VCON		

---

Chapter

3

**Award  
BIOS Setup**

### 3.1 System Test and Initialization

---

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

Press <F1> to RESUME

Write down the message and press the F1 key to continue the boot up sequence.

#### **System configuration verification**

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The PCM-5895 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.



## 3.2 Award BIOS Setup

---

Awards BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

### Entering Setup

Power on the computer and press <Del> immediately. This will allow you to enter Setup.



### Standard CMOS Features

Use this menu for basic system configuration. (Date, time, IDE, etc.)

### Advanced BIOS Features

Use this menu to set the advanced features available on your system.

## **Advanced Chipset Features**

Use this menu to change the values in the chipset registers and optimize your system performance.

## **Integrated Peripherals**

Use this menu to specify your settings for integrated peripherals. (Primary slave, secondary slave, keyboard, mouse etc.)

## **Power Management Setup**

Use this menu to specify your settings for power management. (HDD power down, power on by ring, KB wake up, etc.)

## **PnP/PCI Configurations**

This entry appears if your system supports PnP/PCI.

## **PC Health Status**

This menu allows you to set the shutdown temperature for your system.

## **Frequency/Voltage Control**

Use this menu to specify your settings for auto detect DIMM/PCI clock and spread spectrum.

## **Load Fail-Safe Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

## **Load Optimized Defaults**

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations. While AWARD has designated the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

## **Set Supervisor/User Password**

Use this menu to set Supervisor/User Passwords.

## **Save and Exit Setup**

Save CMOS value changes to CMOS and exit setup.

## **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

**You can refer to the "AAEON BIOS Item Description.pdf" file in the CD for the meaning of each setting in this chapter.**

**Chapter**

**4**

**Driver  
Installation**

## 4.1 Software Drivers

---

This chapter describes the operation and installation of the display drivers supplied on the Supporting CD-ROM that are shipped with your product. The onboard VGA adapter is based on the AMD LX VGA Flat Panel/CRT controller. This controller offers a large set of extended functions and higher resolutions. The purpose of the enclosed software drivers is to take advantage of the extended features of the AMD LX VGA Flat Panel/CRT controller.

### Hardware Configuration

Some of the high-resolution drivers provided in this package will work only in certain system configurations. If a driver does not display correctly, try the following:

1. Change the display controller to CRT-only mode, rather than flat panel or simultaneous display mode. Some high-resolution drivers will display correctly only in CRT mode.
2. If a high-resolution mode does not support your system, try to use a lower-resolution mode. For example, 1024 x 768 mode will not work on some systems, but 800 x 600 mode supports the most.

## 4.2 Necessary to Know

---

The instructions in this manual assume that you understand elementary concepts of MS-DOS and the IBM Personal Computer. Before you attempt to install any driver from the *Supporting CD-ROM*, you should:

- Know how to copy files from a CD-ROM to a directory on the hard disk
- Understand the MS-DOS directory structure

If you are uncertain about any of these concepts, please refer to the DOS or OS/2 user reference guides for more information before you proceed with the installation.

### Before you begin

The Supporting CD-ROM contains different drivers for corresponding Windows OS, please choose the specific driver for your Windows OS.

### 4.3 Installing VGA Driver

---

#### Win XP / Win XPe VGA

Place the Driver CD-ROM into your CD-ROM drive and follow the steps below to install.

1. Click on **Start** button
2. Click on **Settings** button
3. Click on **Control Panel** button
4. Click on **System** button
5. Select **Hardware** and click on **Device Manager...**
6. Double click on **Video Controller (VGA Compatible)**
7. Click on **Update Driver...**
8. Click on **Next**
9. Select **Search for a suitable driver...**, then click on **Next**
10. Select **Specify a location**, then click on **Next**
11. Click on **Browse**
12. Select "lx\_win" file from CD-ROM (**Drivers/Step 1 – LX\_Graphics**) then click on **Open**
13. Click on **OK**
14. Click on **Next**
15. Click on **Yes**
16. Click on **Finish**

**Note:** The user must install this system driver before install other device drivers.

## 4.4 Installing AES Driver

---

### Win XP / Win XPe AES

Place the Driver CD-ROM into your CD-ROM drive and follow the steps below to install.

1. Click on **Start** button
2. Click on **Settings** button
3. Click on **Control Panel** button
4. Click on **System** button
5. Select **Hardware** and click on **Device Manager...**
6. Double click on **Entertainment Encryption/Decryption Controller**
7. Click on **Update Driver...**
8. Click on **Next**
9. Select **Search for a suitable driver...**, then click on **Next**
10. Select **Specify a location**, then click on **Next**
11. Click on **Browse**
12. Select "**LX AES**" file from CD-ROM (**Drivers/Step 2 – AES**) then click on **Open**
13. Click on **OK**
14. Click on **Next**
15. Click on **Finish**



## 4.5 Installing PCI to ISA Bridge Driver

---

### Win XP / Win XPe System

Place the Driver CD-ROM into your CD-ROM drive and follow the following steps to install.

1. Click on **Start** button
2. Click on **Settings** button
3. Click on **Control Panel** button
4. Click on **System** button
5. Select **Hardware** and click on **Device Manager...**
6. Double click on **Other PCI Bridge Device**
7. Click on **Update Driver...**
8. Click on **Next**
9. Select **Search for a suitable driver...**, then click on **Next**.
10. Select **Specify a location**, then click on **Next**
11. Click on **Browse**
12. Select "**ite**" file from CD-ROM (**Drivers/Step 3- PCI to ISA Bridge** ) then click on **open**
13. Click on **OK**
14. Click on **Next**
15. Click on **Finish**

## 4.6 Installing LAN Driver

---

1. Click on the **Step 4 –Install Lan**
2. Double click on the **Setup.exe**
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

## 4.7 Ethernet Software Configuration

---

The onboard Ethernet interface supports all major network operating systems. I/O addresses and interrupts are easily configured via the Insyde BIOS Setup. To configure the medium type, to view the current configuration, or to run diagnostics, please refer to the following instruction:

1. Power the main board on. Ensure that the RSET8139.EXE file is located in the working drive.
2. At the prompt, type RSET8139.EXE and press <ENTER>. The Ethernet configuration program will then be displayed.
3. This simple screen shows all the available options for the Ethernet interface. Just highlight the option you wish to change by using the Up and DOWN keys. To change a selected item, press <ENTER>, and a screen will appear with the available options. Highlight your option and press <ENTER>. Each highlighted option has a helpful message guide displayed at the bottom of the screen for additional

information.

4. After you have made your selections and the configuration is what you want, press <ESC>. A prompt will appear asking if you want to save the configuration. Press "Y" if you want to save.

There are three very useful diagnostic functions offered in the Ethernet Setup Menu as follows:

1. Run EEPROM test
2. Run Diagnostics on Board
3. Run Diagnostics on Network

Each option has its own display screen, which shows the format and result of any diagnostic tests undertaken.

## 4.8 Installing Audio Driver

---

### Win XP / Win XPe Audio

Place the Driver CD-ROM into your CD-ROM drive and follow the steps below to install.

1. Click on **Start** button
2. Click on **Settings** button
3. Click on **Control Panel** button
4. Click on **System** button
5. Select **Hardware** and click on **Device Manager...**
6. Double click on **Multimedia Audio Controller**
7. Click on **Update Driver...**

8. Click on **Next**
9. Select **Search for a suitable driver...**, then click on **Next**
10. Select **Specify a location**, then click on **Next**
11. Click on **Browse**
12. Select “**LXWDMAu**” file from CD-ROM (**Drivers/Step 5 – Audio**) then click on **Open**
13. Click on **OK**
14. Click on **Next**
15. Click on **Yes**
16. Click on **Finish**

**Appendix**

**A**

**Programming the  
Watchdog Timer**


## A.1 Programming

PCM-5895 utilizes ITE 8712 chipset as its watchdog timer controller. ( K version )

Below are the procedures to complete its configuration and the AAEON initial watchdog timer program is also attached based on which you can develop customized program to fit your application.

### Configuring Sequence Description

After the hardware reset or power-on reset, the ITE 8712 enters the normal mode with all logical devices disabled except KBC.

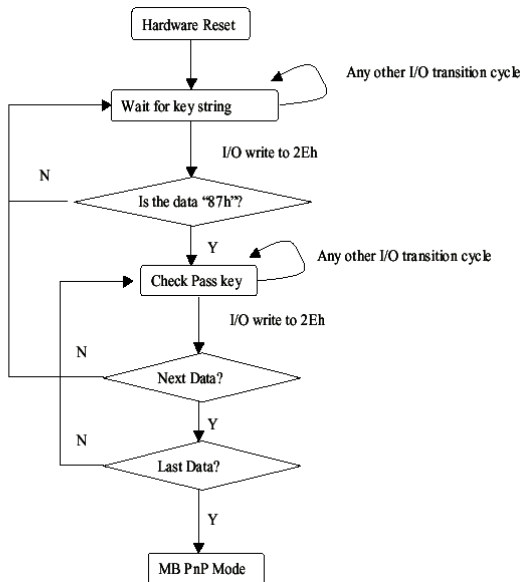

There are three steps to complete the configuration setup: (1) Enter the MB PnP Mode; (2) Modify the data of configuration registers; (3) Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.

### (1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to be performed during Wait for Key state. To ensure the initial state of the key-check logic, it is necessary to perform four write operations to the Special Address port (2EH). Two different enter keys are provided to select configuration ports (2Eh/2Fh) of the next step.

	Address Port	Data Port
87h, 01h, 55h, 55h:	2Eh	2Fh

### (2) Modify the Data of the Registers

All configuration registers can be accessed after entering the MB PnP Mode. Before accessing a selected register, the content of Index 07h must be changed to the LDN to which the register belongs, except some Global registers.

### (3) Exit the MB PnP Mode

Set bit 1 of the configure control register (Index=02h) to 1 to exit the MB PnP Mode.

#### WatchDog Timer Configuration Registers

LDN	Index	R/W	Reset	Configuration Register or Action
All	02H	W	N/A	Configuration Control
07H	71H	R/W	00H	WatchDog Timer Control Register
07H	72H	R/W	00H	WatchDog Timer Configuration Register
07H	73H	R/W	00H	WatchDog Timer Time-out Value (LSB) Register
07H	74H	R/W	00H	WatchDog Timer Time-out Value (MSB) Register

**Configure Control (Index=02h)**

This register is write only. Its values are not sticky; that is to say, a hardware reset will automatically clear the bits, and does not require the software to clear them.

Bit	Description
7-2	Reserved
1	Returns to the Wait for Key state. This bit is used when the configuration sequence is completed.
0	Resets all logical devices and restores configuration registers to their power-on states.

**WatchDog Timer Control Register (Index=71h, Default=00h)**

Bit	Description
7	WDT is reset upon a CIR interrupt
6	WDT is reset upon a KBC (Mouse) interrupt
5	WDT is reset upon a KBC (Keyboard) interrupt
4	WDT is reset upon a read or a write to the Game port base address
3-2	Reserved
1	Force Time-out. This bit is self-clearing
0	WDT status 1: WDT value reaches 0 0: WDT value is not 0

**WatchDog Timer Configuration Register (Index=72h, Default=00h)**

Bit	Description
7	WDT Time-out value select 1: Second 0: Minute
6	WDT output through KRST (pulse) enable
5	WDT Time-out value Extra select 1: 4s. 0: Determine by WDT Time-out value select (bit7 of this register)



---

4	WDT output through PWROK1/PWROK2 (pulse) enable
3	Select the interrupt level <sup>note</sup> for WDT

---

**WatchDog Timer Time-out Value (LSB) Register (Index=73h,  
Default=00h)**

**Bit Description**

---

7-0	WDT Time-out value 7-0
-----	------------------------

---

**WatchDog Timer Time-out Value (MSB) Register (Index=74h,  
Default=00h)**

**Bit Description**

---

7-0	WDT Time-out value 15-8
-----	-------------------------

---

## A.2 ITE8712 Watchdog Timer Initial Program

---

```
.MODEL SMALL
```

```
.CODE
```

Main:

```
CALL Enter_Configuration_mode
```

```
CALL Check_Chip
```

```
mov cl, 7
```

```
call Set_Logic_Device
```

```
;time setting
```

```
mov cl, 10 ; 10 Sec
```

```
dec al
```

Watch\_Dog\_Setting:

```
;Timer setting
mov al, cl
mov cl, 73h
call Superio_Set_Reg
;Clear by keyboard or mouse interrupt
mov al, 0f0h
mov cl, 71h
call Superio_Set_Reg
;unit is second.
mov al, 0C0H
mov cl, 72h
call Superio_Set_Reg
; game port enable
mov cl, 9
call Set_Logic_Device
```

Initial\_OK:

```
CALL Exit_Configuration_mode
MOV AH,4Ch
INT 21h
```

```
Enter_Configuration_Mode PROC NEAR
MOV SI,WORD PTR CS:[Offset Cfg_Port]
```

```
MOV DX,02Eh
MOV CX,04h
Init_1:
MOV AL,BYTE PTR CS:[SI]
OUT DX,AL
INC SI
LOOP Init_1
RET
Enter_Configuration_Mode ENDP

Exit_Configuration_Mode PROC NEAR
MOV AX,0202h
CALL Write_Configuration_Data
RET
Exit_Configuration_Mode ENDP

Check_Chip PROC NEAR

MOV AL,20h
CALL Read_Configuration_Data
CMP AL,87h
JNE Not_Initial

MOV AL,21h
CALL Read_Configuration_Data
```

CMP AL,12h

JNE Not\_Initial

Need\_Initial:

STC

RET

Not\_Initial:

CLC

RET

Check\_Chip ENDP

Read\_Configuration\_Data PROC NEAR

MOV DX,WORD PTR CS:[Cfg\_Port+04h]

OUT DX,AL

MOV DX,WORD PTR CS:[Cfg\_Port+06h]

IN AL,DX

RET

Read\_Configuration\_Data ENDP

Write\_Configuration\_Data PROC NEAR

MOV DX,WORD PTR CS:[Cfg\_Port+04h]

OUT DX,AL

XCHG AL,AH

MOV DX,WORD PTR CS:[Cfg\_Port+06h]

OUT DX,AL

RET

Write\_Configuration\_Data ENDP

Superio\_Set\_Reg proc near

push ax

MOV DX,WORD PTR CS:[Cfg\_Port+04h]

mov al,cl

out dx,al

pop ax

inc dx

out dx,al

ret

Superio\_Set\_Reg endp.Set\_Logic\_Device proc near

Set\_Logic\_Device proc near

push ax

push cx

xchg al,cl

mov cl,07h

call Superio\_Set\_Reg

pop cx

pop ax

ret

Set\_Logic\_Device endp

;Select 02Eh->Index Port, 02Fh->Data Port

Cfg\_Port DB 087h,001h,055h,055h

DW 02Eh,02Fh

## END Main

*Note: Interrupt level mapping*

0Fh-Dh: not valid

0Ch: IRQ12

.

.

03h: IRQ3

02h: not valid

01h: IRQ1

00h: no interrupt selected

**Appendix**

**B**

**I/O Information**

## B.1 I/O Address Map

Address	Description	User Address
000-01F	DMA Controller #1	000-000F
020-03F	Interrupt Controller #1, Master	020-021
040-05F	System Time	040-043
060-06F	8042 (Keyboard Controller)	060-064
070-07F	Real time Clock, NMI (non-maskable Interrupt) Mask	070-073
080-09F	DMA Page Register	080-08F
0A0-0BF	Interrupt Controller #2	0A0-0A1
0C0-0DF	DMA Controller #2	0C0-0DF
0F0-0FF	Math Coprocessor	0F0-0FF
1F0-1F7	Primary IDE Channel	1F0-1F7
2E8-2EF	Serial Port 4	2E8-2EF
2F8-2FF	Serial Port 2	2F8-2FF
378-37F	Parallel Printer Port 1	378-37F
3B0-3DF	EGA / VGA card	3B0-3DF
3E8-3EF	Serial Port 3	3E8-3EF
3F8-3FF	Serial Port 1	3F8-3FF

## B.2 1<sup>st</sup> MB Memory Address Map

Memory Address	Description
00000-9FFFF	System memory
A0000-BFFFF	VGA buffer
C0000-CBFFF	VGA BIOS
E0000-FFFFF	System BIOS



### B.3 IRQ Mapping Chart

---

IRQ0	System Timer	IRQ8	System CMOS / Real time clock
IRQ1	Keyboard	IRQ9	Microsoft ACPI – Compliant system
IRQ2	Cascade to IRQ Controller	IRQ10	COM3
IRQ3	COM2	IRQ11	COM4
IRQ4	COM1	IRQ12	PS/2 mouse
IRQ5	Unused	IRQ13	FPU
IRQ6	Floppy	IRQ14	Primary IDE
IRQ7	Printer	IRQ15	Reserved

### B.4 DMA Channel Assignments

---

DMA Channel	Function
0	Available
1	Available
2	Floppy
3	Available

**Appendix**

**C**

**Mating Connector**

## C.1 List of Mating Connectors and Cables

The table notes mating connectors and available cables.

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
CN1	System FAN	凱 迅 C a t c h	【2.54mm】 1190-700-03S(or compatible)		
CN2	IrDA	致 威 J I H V E I	【2.54mm】 21B12564-06S10B-01G-6/3(or compatible)		
CN4	CAN BUS	致 威 J I H V E I	【2.0mm】 21B22050-04S10B-01G-4/2.8(or compatible)		
CN6	USB Port #1 and Port #2	致 威 J I H V E I	【2.0mm】 21B22050-10S10B-01G-4/2.8(or compatible)	USB Cable	1709100201
CN7	Front Panel	凱 迅 C a t c h	【2.54mm】 1130-010-10S(or compatible)		
CN8	USB Port	致 威	【2.0mm】	USB	1709100201

	#3 and Port #4	J1H VEI	21B22050-10S10B-01G-4/2.8(or compatible)	Cable	
CN9	PC-104 / ISA Interface	凱 迅 C a t c h	【3.40mm】 1232-251-40(or compatible)		
CN9	PC-104 / ISA Interface	凱 迅 C a t c h	【3.40mm】 1232-251-64(or compatible)		
CN10	ATX Power Socket	凱 迅 C a t c h	【3.50mm】 1121-700-20S(or compatible)		
CN11(OPTION)	AT Power Socket	何 迪 HO-BASE	【3.96mm】 401-12T(or compatible)		
CN12	IDE Hard Drive	凱 迅 C a t c h	【2.54mm】 1137-020-40SA(or compatible)	IDE Cable	1701400453
CN13	LAN1 LED	凱 迅 C a t c h	【2.0mm】 1140-010-06S(or compatible)		
CN14	CRT Display	凱 迅 C a t c h	【2.54mm】 1137-000-16S(or compatible)	CRT Cable	1701150150

CN15	Audio Input/Output/CDin/MIC	凱 迅 C a t c h	【2.54mm】 1137-000-14S(or compatible)	Audio Cable	1700140163
CN16	Parallel Port	凱 迅 C a t c h	【2.54mm】 1137-000-26S(or compatible)	Parallel Port Cable	1701260301
CN17	KB/MS Connector	凱 迅 C a t c h	【2.54mm】 1130-010-08SA(or compatible)	Keyboard & Mouse Cable	1700080204
CN18	Digital I/O	致 威 J I H V E I	【2.0mm】 21B22050-10S10B-01G-4/2.8(or compatible)		
CN19	Serial Port	凱 迅 C a t c h	【2.54mm】 1137-000-40S(or compatible)	Serial Port Cable	1701400180
CN20	Floppy	凱 迅 C a t c h	【2.54mm】 1137-000-34S(or compatible)	Floppy Cable	1701340700
CN22	LVDS1 Connector	創 維 C o m W e a l	【1.25mm】 103-303M(or compatible)		

CN23	TFT LCD Connector	創 維 ComWeal	【1.25mm】 103-403M(or compatible)		
CN24	LVDS2 Connector	創 維 ComWeal	【1.25mm】 103-303M(or compatible)		
CN25	LAN2 LED	凱 迅 C a t c h	【2.0mm】 1140-010-06S(or compatible)		
CN26	LAN2 Connector	致 威 JIH VEI	【2.0mm】 21B22050-10S10B- 01G-4/2.8(or compatible)	LAN Cable	1700100200
CN27	LCD Inverter Connector	凱 迅 C a t c h	【2.0mm】 1192-700-05S(or compatible)		