

**Compact Board**

**PCM-8150**

**PCM-8150**

Intel® ULV Celeron® M  
600MHz, 1.8GHz Processors  
Compact Board  
With LVDS, 10/100 Ethernet,  
6 Channel Audio & Mini PCI

PCM-8150 Rev. A Manual 2nd Ed.  
Jan. 2006

---

## Copyright Notice

This document is copyrighted, 2006. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

## Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- Award is a trademark of Award Software International, Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- Intel®, Pentium® M, and Celeron® M are trademarks of Intel® Corporation.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- SoundBlaster is a trademark of Creative Labs, Inc.

Please be notified that all other products' name or trademarks not be mentioned above are properties of their respective owners.

## Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- 1 PCM-8150 CPU Card
- 1 Quick Installation Guide
- 1 CD-ROM for manual (in PDF format) and drivers
- 1 Cooler Fan +Heatsink (For Socket 478 version only)
- 1 Jumper cap

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

# Contents

## Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features .....	1-4
1.3 Specifications .....	1-5

## Chapter 2 Quick Installation Guide

2.1 Safety Precautions .....	2-2
2.2 Location of Connectors and Jumpers .....	2-3
2.3 Mechanical Drawing .....	2-6
2.4 List of Jumpers .....	2-8
2.5 List of Connectors .....	2-9
2.6 Setting Jumpers .....	2-11
2.7 ATX Emulation AT Power Selection (JP1).....	2-12
2.8 Audio Out Selection (JP2).....	2-12
2.9 LCD Voltage Selection (JP3) .....	2-12
2.10 COM4 Ring/+5V/+12V Selection (JP4).....	2-12
2.11 COM3 Ring/+5V/+12V Selection (JP5).....	2-12
2.12 Clear CMOS (JP6) .....	2-13
2.13 TV-out Connector (CN1) .....	2-13
2.14 Audio SPDIF Connector (CN2) .....	2-13
2.15 LVDS Connector (CN4).....	2-13
2.16 ATX Power Connector (CN5).....	2-14
2.17 DVI Connector (CN7) .....	2-14

2.18 Audio Connector (CN8).....	2-15
2.19 LAN LED Connector (CN9) .....	2-15
2.20 COM 1/2/3/4 Connector (CN10).....	2-16
2.21 CPU Fan Connector (CN11) .....	2-17
2.22 Digital I/O-1 Connector (CN12) Address=801H.....	2-17
2.23 Digital I/O-2 Connector (CN13) Address=800H.....	2-17
2.24 System Fan Connector (CN16).....	2-17
2.25 IrDA Connector (CN17).....	2-18
2.26 Internal Keyboard and Mouse Connector (CN18)...	2-18
2.27 Front Panel Connector (CN19) .....	2-18
2.28 Floppy Connector (FDD1) .....	2-18
2.29 EIDE Connector (IDE1).....	2-19
2.30 VGA Display Connector (VGA1) .....	2-20
2.31 LPT Port Connector (LPT1) .....	2-20
2.32 USB Connector (USB1) .....	2-21
2.33 USB Connector (USB2) .....	2-21

### **Chapter 3 Award BIOS Setup**

3.1 System Test and Initialization. ....	3-2
3.2 Award BIOS Setup .....	3-3

### **Chapter 4 Driver Installation**

4.1 Installation .....	4-3
------------------------	-----

### **Appendix A I/O Information**

A.1 I/O Address Map.....	A-2
A.2 Memory Address Map.....	A-3

A.3 IRQ Mapping Chart.....A-4  
A.4 DMA Channel Assignments.....A-4

**Appendix B Programming The Watchdog Timer**

B.1 Programming .....B-2  
B.2 IT8712 Watchdog Timer Initial Program.....B-7

Chapter

1

**General  
Information**



## 1.1 Introduction

---

PCM-8150 is powered by onboard ULV Intel® Celeron® Processor at 600MHz Processor or Socket 478-based Pentium® M or Celeron® M processor up to 1.8GHz. PCM-8150 is an innovative product that adopts Intel® latest low power consumption platform but with excellent performance. It is delicately designed for fanless and low power consumption and simple voltage input required application. (5V only workable)

The PCM-8150 supports system memory up to 1GB with fast DDR 266MHz providing high calculate and graphic ability but with extreme low power consumption. This feature is especially suitable for Video, Automation controller, Multimedia application.

Besides the excellent CPU performance, PCM-8150 also provides multiple display functions, it allows user to display different content on CRT/LCD, CRT/TV, CRT/DVI, LCD/TV and LCD/DVI. This feature opens a shortcut to dual view and simultaneous display demanders. PCM-8150 does really the most power efficiency board that you can find at this moment.

PCM-8150 provides interface capabilities of one channel ATA controller supports two ATAPI devices; USB 2.0 host controller support up to 4 USB ports; eight sets digital I/O and Watchdog Timer support. In addition, the excellent 48/24/18-bit LVDS

supports high quality LCD display resolution. Expansion Interfaces include one mini-PCI, one PCI and two Type II PCMCIA ports. And onboard Intel® 82551 Ethernet controller stands for 10/100Mbps transferring speed.

The PCM-8150 is the ideal choice for high performance and energy saving demands that implement with low power consumption and pleasant multimedia presentations. For environment-friendly applications, The PCM-8150 no doubt is a perfect fit.

## 1.2 Features

---

- Supports Intel® Pentium® M / Celeron® M or onboard ULV Intel® Celeron® Processor at 600MHz
- Supports 48-bit dual channel LVDS TFT Panel
- Supports one DDR266 memory slot up to 1GB
- 6 channels AC97 2.0 Codec with S/P DIF function
- Supports Mini-PCI socket, PCMCIA slots
- 4 COM / 4 USB2.0 / TV-out / DVI / Digital I/O

### 1.3 Specifications

---

#### System

- CPU: Onboard ULV Intel® Celeron® Processor at 600MHz or Socket 478 Intel® Pentium® M / Celeron® M Processor up to 1.8GHz
- Memory: DDR DIMM x 1, support DDR266 up to 1GB
- Chipset: Intel® 852GM + 82801DB(ICH4)
- I/O Chipset: ITE IT8712F
- Ethernet: Intel® 82551, 10/100Base-TX RJ-45 connector
- BIOS: AWARD512KB FLASH ROM
- Watchdog Timer: Generates a Time-out System Reset
- H/W Status Monitor: Supports Power Supply Voltages and Temperatures Monitoring
- SSD: Type II CompactFlash™ slot x 1
- Expansion Interface: Type III Mini-PCI Socket x 1; PCI slot x1, Type II PCMCIA x 2 (optional)

## Display

- Chipset: Intel® 852GM + Chrontel 7009
- Memory size: Shared System Memory Up to 64MB with DVMT
- Resolutions: Up to 1280 x 1024 @ 32bpp Colors for CRT;  
Up to 1280 x 1024 @ 24bpp Colors for LCD
- TV-out: Supports NTSC and PAL standard; Supports CRT/LCD, CRT/TV, CRT/DVI, LCD/DVI and LCD/TV Simultaneous Display

## I/O

- MIO: EIDE x 1(UDMA100x 1), FDD x 1, KB + Mouse x 1, RS-232 x 3, RS-232/422/485 x 1, Parallel x 1
- IrDA: IrDA Tx/Rx header x 1
- Audio: MIC-in, Line-in, Line-out / Speaker-out, 5.1 Output
- USB: USB 2.0 ports x 4
- Digital I/O: Supports Digital I/O (8 in and 8 out, 16 in or 16 out)

**Mechanical and Environment**

- Dimension: 8"(L) x 5.75"(W)  
(203mmx146mm)
- Weight: 1.2lb (0.5kg)
- Operation Temp: 32°F~140°F (0°C~60°C)
- Battery: Lithium battery
- Power Supply Voltage: +5V. AT/ATX

## Chapter

# 2

## Quick Installation Guide

**Notice:**

*The Quick Installation Guide is derived from Chapter 2 of user manual. For other chapters and further installation instructions, please refer to the user manual CD-ROM that came with the product.*



## 2.1 Safety Precautions

---

**Warning!**

*Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.*


**Caution!**

*Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis*




## 2.2 Location of Connectors and Jumpers

### Component Side

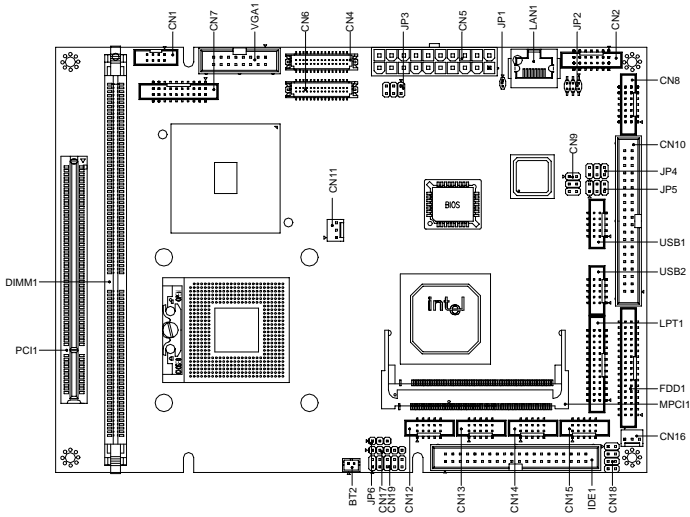


**Type I: Socket 478 CPU**

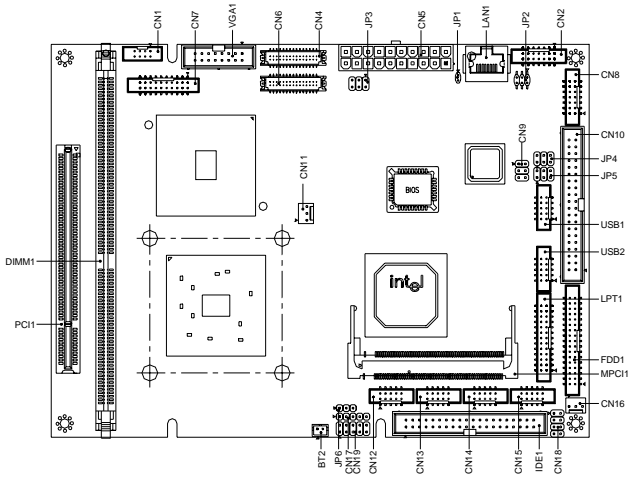

NOTE:  
The Height of Cooling System Depends on Customer Cooling Device.


## Type II: Onboard CPU

Solder Side

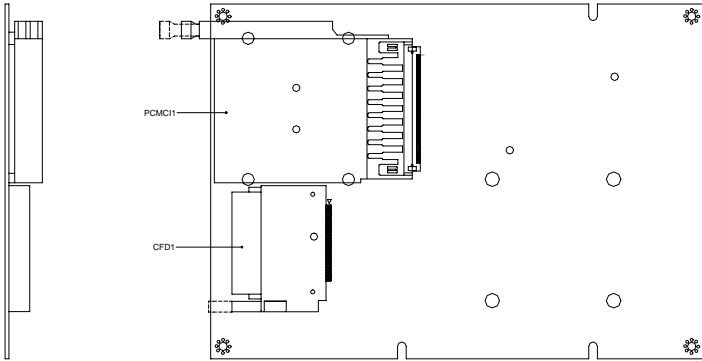


### 2.3 Mechanical Drawing

#### Component Side

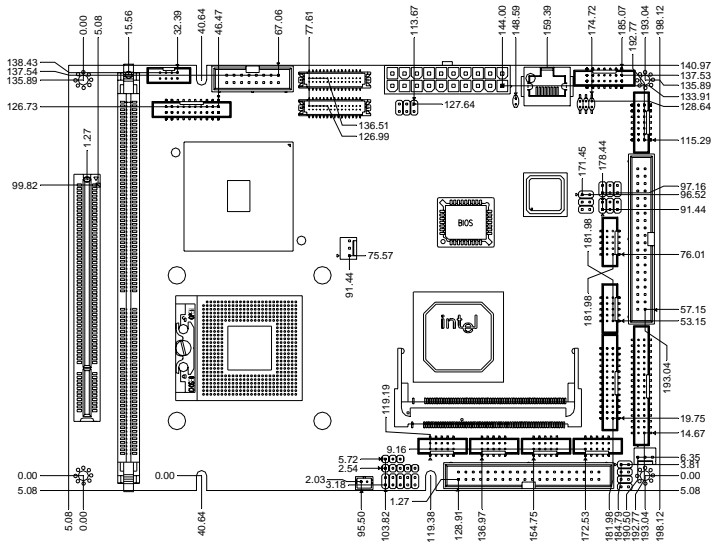

Solder Side

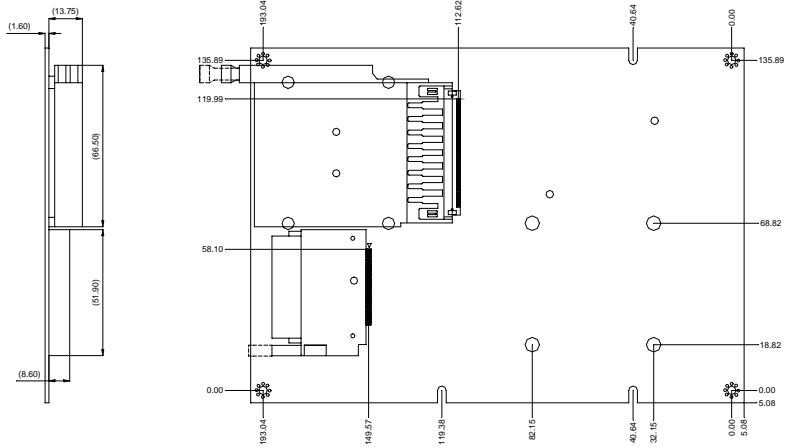

## 2.4 List of Jumpers

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

### Jumpers

Label	Function
JP1	ATX Power to AT Function
JP2	Audio Out Selection
JP3	LCD Voltage Selection
JP4	COM4 Ring/+5V/+12V Selection
JP5	COM3 Ring/+5V/+12V Selection
JP6	Clear CMOS

## 2.5 List of Connectors

---

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:

### Connectors

<b>Label</b>	<b>Function</b>
CN1	TV_Out Connector
CN2	Audio Connector (Audio 5.1 Channel /SPDIF)
CN4	LVDS Connector For 82852GM
CN5	ATX Power Connector
CN7	DVI Connector
CN8	Audio Connector(Audio 2 Channel /Amplifier)
CN9	LAN LED Connector
CN10	COM1-4 Connector
CN11	CPU Fan Connector
CN12	Digital I/O-1 Connector
CN13	Digital I/O-2 Connector
CN16	System Fan Connector
CN17	IrDA Connector
CN18	Internal Keyboard and Mouse Connector
CN19	Front Panel Connector
FDD1	Floppy Connector
IDE1	EIDE Connector
VGA1	VGA Display Connector
LPT1	LPT Port Connector

---

USB1	USB 0/1 Connector
USB2	USB 2/3 Connector
LAN1	10/100 Base-TX Ethernet Connector
PCI1	PCI Slot
MPCI1	Mini PCI Slot
PCMCIA1	PCMCIA Slot
DIMM1	DDR DIMM Slot

---






## 2.6 Setting Jumpers

---

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip.

To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.

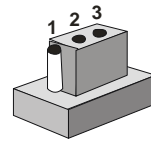**OFF****ON****ON 2-3**

A pair of needle-nose pliers may be helpful when working with jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change.

Generally, you simply need a standard cable to make most connections.

## 2.7 ATX Emulation AT Power Selection (JP1)

JP1	Function
ON	AT
OFF	ATX (Default)

## 2.8 Audio Out Selection (JP2)

JP2	Function
1-3, 2-4	W/O Amplifier
3-5, 4-6	W/ Amplifier (Default)

## 2.9 LCD Voltage Selection (JP3)

JP3	Function	Voltage
1-3	LVDS-LCD for 82852GM	+5V
2-4	LVDS-LCD for CH7017	+5V
3-5	LVDS-LCD for 82852GM	+3.3V (Default)
4-6	LVDS-LCD for CH7017	+3.3V (Default)

## 2.10 COM4 Ring/+5V/+12V Selection (JP4)

JP4	Function
1-2	+12V
3-4	+5V
5-6	Ring (Default)

## 2.11 COM3 Ring/+5V/+12V Selection (JP5)

JP5	Function
1-2	+12V
3-4	+5V
5-6	Ring (Default)

## 2.12 Clear CMOS (JP6)

JP6	Function
1-2	Protected (Default)
2-3	Clear

## 2.13 TV\_Out Connector (CN1)

Pi	Signal	Pi	Signal
1	Y	2	CVBS
3	GND	4	GND
5	C	6	N.C.
7	GND	8	N.C.

## 2.14 Audio SPDIF Connector (CN2)

Pin	Signal	Pi	Signal
1	Front-R	2	GND
3	Front-L	4	GND
5	SURROUND-R	6	GND
7	SURROUND-L	8	GND
9	LFEOUT	10	GND
11	CENOUT	12	GND
13	SPDIFO-N	14	SPDIFI-N

## 2.15 LVDS Connector (CN4)

Pin	Signal	Pin	Signal
1	LVDS_BKLEN	2	LVDS_BKLCTL
3	PPVCC_1	4	GND
5	LVDS_TXLCLK (-)	6	LVDS_TXLCLK(+)
7	PPVCC_1	8	GND

9	LVDS_TXL0(-)	10	LVDS_TXL0(+)
11	LVDS_TXL1(-)	12	LVDS_TXL1(+)
13	LVDS_TXL2(-)	14	LVDS_TXL2(+)
15	LVDS_TXL3(-)	16	LVDS_TXL3(+)
17	LVDS_DDCPDATA	18	LVDS_DDCPCLK
19	LVDS_TXU0(-)	20	LVDS_TXU0(+)
21	LVDS_TXU1(-)	22	LVDS_TXU1(+)
23	LVDS_TXU2(-)	24	LVDS_TXU2(+)
25	LVDS_TXU3(-)	26	LVDS_TXU3(+)
27	PPVCC_1	28	GND
29	LVDS_TXUCLK(-)	30	LVDS_TXUCLK(+)

## 2.16 ATX Power Connector (CN5)

Pin	Signal	Pi	Signal
1	+3.3V	2	+3.3V
3	GND	4	+5V
5	GND	6	+5V
7	GND	8	POWER OK
9	+5VSB	10	+12V
11	+3.3V	12	-12V
13	GND	14	PS_ON
15	GND	16	GND
17	GND	18	-5V
19	+5V	20	+5V

## 2.17 DVI Connector (CN7)

Pin	Signal	Pi	Signal
1	DVI_TD1(+)	2	DVI_TD1(-)

3	GND	4	GND
5	DVI_TDC(+)	6	DVI_TDC(-)
7	GND	8	+5V
9	HPDET	10	+5V
11	DVI_TD2(+)	12	DVI+TD2(-)
13	GND	14	GND
15	DVI_TD0(+)	16	DVI_TD0(-)
17	N.C.	18	N.C.
19	MDVI_DATA	20	MDVI_CLK

### 2.18 Audio Connector (CN8)

Pin	Signal	Pi	Signal
1	MIC IN	2	MIC +2.5V
3	LINE_IN_GND	4	CD_GND
5	LINE_IN_L	6	CD_IN_L
7	LINE_IN_R	8	CD_GND
9	LINE_IN_GND	10	CD_IN_R
11	LINE_OUT_L	12	LINE_OUT_R
13	LINE_OUT_GND	14	LINE_OUT_GND

### 2.19 LAN LED Connector (CN9)

Pin	Signal	Pin	Signal
1	Link/Active LED (+)	2	Link/ Active LED (-)
3	Speed 100Base-TX LED (+)	4	Speed 100Base-TX LED (-)
5	Speed 1000Base-T LED (+)	6	Speed 1000Base-T LED (-)

**2.20 COM 1/2/3/4 Connector (CN10)**

Pin	Signal	Pin	Signal
1	DCD1	2	DSR1
3	RXD1	4	RTS1
5	TXD1	6	CTS1
7	DTR1	8	RI1
9	GND	10	N.C.
11	DCD2	12	DSR2
	(422TXD-/485DATA-)		(422/485)
13	RXD2 (422RXD+)	14	RTS2
15	TXD2	16	CTS2
	(422TXD+/485DATA+)		
17	DTR2 (422RXD-)	18	RI2
19	GND	20	N.C.
21	DCD3	22	DSR3
23	RXD3	24	RTS3
25	TXD3	26	CTS3
27	DTR3	28	RI3/ +5V/ +12V
29	GND	30	N.C.
31	DCD4	32	DSR4
33	RXD4	34	RTS4
35	TXD4	36	CTS4
37	DTR4	38	RI4/ +5V/ +12V
39	GND	40	N.C.

### 2.21 CPU Fan Connector (CN11)

Pin	Signal
1	GND
2	+5V
3	Speed Sense

### 2.22 Digital I/O-1 Connector (CN12) Address=801H

Pin	Signal	Pin	Signal
1	DIO2-1	2	DIO2-2
3	DIO2-3	4	DIO2-4
5	DIO2-5	6	DIO2-6
7	DIO2-7	8	DIO2-8
9	+5V	10	GND

### 2.23 Digital I/O-2 Connector (CN13) Address=800H

Pin	Signal	Pin	Signal
1	DIO1-1	2	DIO1-2
3	DIO1-3	4	DIO1-4
5	DIO1-5	6	DIO1-6
7	DIO1-7	8	DIO1-8
9	+5V	10	GND

### 2.24 System Fan Connector (CN16)

Pin	Signal
1	GND
2	+5V
3	Speed Sense

### 2.25 IrDA Connector (CN17)

Pin	Signal
1	+5V
2	N.C.
3	IRRX
4	GND
5	IRTX

### 2.26 Internal Keyboard and Mouse Connector (CN18)

Pin	Signal	Pin	Signal
1	KB DATA	2	KB CLK
3	GND	4	+5V
5	MS_DATA	6	MS_CLK
7	N.C.	8	

### 2.27 Front Panel Connector (CN19)

Pin	Signal	Pin	Signal
1	Power On Button (-)	2	Power On Button (+)
3	IDE LED (-)	4	IDE LED (+)
5	External Buzzer (-)	6	External Buzzer (+)
7	Power LED (-)	8	Power LED (+)
9	Reset Switch (-)	10	Reset Switch (+)

### 2.28 Floppy Connector (FDD1)

Pin	Signal	Pin	Signal
1	GND	2	# REDWC
3	GND	4	N.C.
5	GND	6	# DS1



7	GND	8	# INDEX
9	GND	10	# MOTOR A
11	GND	12	# DRIVE SELECT B
13	GND	14	# DRIVE SELECT A
15	GND	16	# MOTOR B
17	GND	18	# DIR
19	GND	20	# STEP
21	GND	22	# WRITE DATA
23	GND	24	# WRITE GATE
25	GND	26	# TRACK0
27	GND	28	# WRITE PROTECT
29	GND	30	# READ DATA
31	GND	32	# SIDE1
33	GND	34	# DISK CHANGE

## 2.29 EIDE Connector (IDE1)

Pin	Signal	Pin	Signal
1	IDE RESET	2	GND
3	DATA7	4	DATA 8
5	DATA6	6	DATA9
7	DATA5	8	DATA10
9	DATA4	10	DATA11
11	DATA3	12	DATA12
13	DATA2	14	DATA13
15	DATA1	16	DATA14
17	DATA0	18	DATA15
19	GND	20	N.C.
21	REQ	22	GND

23	IO WRITE	24	GND
25	IO READ	26	GND
27	IO READY	28	GND
29	DACK	30	GND
31	IRQ14	32	N.C.
33	ADDR1	34	UDMA DETECT
35	ADDR0	36	ADDR2
37	CS#1	38	CS#3
39	LED	40	GND

### 2.30 VGA Display Connector (VGA1)

Pin	Signal	Pin	Signal
1	RED	2	VGAVCC
3	GREEN	4	GND
5	BLUE	6	N.C.
7	N.C.	8	SDATA
9	GND	10	H
11	GND	12	V
13	GND	14	SCLK
15	GND	16	N.C.

### 2.31 LPT Port Connector (LPT1)

Pin	Signal	Pin	Signal
1	#STROBE	2	#AFD
3	DATA0	4	#ERROR
5	DATA1	6	#INIT
7	DATA2	8	#SLIN
9	DATA3	10	GND

11	DATA4	12	GND
13	DATA5	14	GND
15	DATA6	16	GND
17	DATA7	18	GND
19	#ACK	20	GND
21	BUSY	22	GND
23	PE	24	GND
25	SELECT	26	N.C.

### 2.32 USB Connector (USB1)

Pin	Signal	Pin	Signal
1	+5V	2	GND
3	USB0D0(-)	4	GND
5	USB0D0(+)	6	USB1D1(+)
7	GND	8	USB1D1(-)
9	GND	10	+5V

### 2.33 USB Connector (USB2)

Pin	Signal	Pin	Signal
1	+5V	2	GND
3	USB2D2(-)	4	GND
5	USB2D2(+)	6	USB3D3(+)
7	GND	8	USB3D3(-)
9	GND	10	+5V

Chapter

3

**Award  
BIOS Setup**

### 3.1 System Test and Initialization

---

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors. Non-fatal error messages usually appear on the screen along with the following instructions:

Press <F1> to RESUME

Write down the message and press the F1 key to continue the boot up sequence.

#### **System configuration verification**

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The PCM-8150 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

## 3.2 Award BIOS Setup

---

Awards BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

### Entering Setup

Power on the computer and press <Del> immediately. This will allow you to enter Setup.



### Standard CMOS Features

Use this menu for basic system configuration. (Date, time, IDE, etc.)

### Advanced BIOS Features

Use this menu to set the advanced features available on your system.

### Advanced Chipset Features

Use this menu to change the values in the chipset registers and optimize your system performance.

### **Integrated Peripherals**

Use this menu to specify your settings for integrated peripherals. (Primary slave, secondary slave, keyboard, mouse etc.)

### **Power Management Setup**

Use this menu to specify your settings for power management. (HDD power down, power on by ring, KB wake up, etc.)

### **PnP/PCI Configurations**

This entry appears if your system supports PnP/PCI.

### **PC Health Status**

This menu allows you to set the shutdown temperature for your system.

### **Frequency/Voltage Control**

Use this menu to specify your settings for auto detect DIMM/PCI clock and spread spectrum.

### **Load Fail-Safe Defaults**

Use this menu to load the BIOS default values for the minimal/stable performance for your system to operate.

### **Load Optimized Defaults**

Use this menu to load the BIOS default values that are factory settings for optimal performance system operations.

While AWARD has designated the custom BIOS to maximize performance, the factory has the right to change these defaults to meet their needs.

### **Set Supervisor/User Password**

Use this menu to set Supervisor/User Passwords.

### **Save and Exit Setup**

Save CMOS value changes to CMOS and exit setup.

### **Exit Without Saving**

Abandon all CMOS value changes and exit setup.

**You can refer to the "AAEON BIOS Item Description.pdf" file in the CD for the meaning of each setting in this chapter.**



Chapter

4

**Driver  
Installation**

## **OS Support For Microsoft® Windows® 2000, Windows® XP only**

The PCM-8150 comes with a CD-ROM that contains most of drivers and utilities of your needs.

### ***Please follow the sequence below to install the drivers:***

Step 1 – Install Intel® Chipset Software Installation Utility

Step 2 – Install Intel® Extreme Graphics Driver

Step 3 – Install Intel® LAN Driver

Step 4 – Install Realtek AC97 codec Driver

USB 2.0 Drivers are available for download using Windows® Update for both Windows® XP and Windows® 2000. For additional information regarding USB 2.0 support in Windows® XP and Windows® 2000, please visit [www.microsoft.com/hwdev/usb/](http://www.microsoft.com/hwdev/usb/).

Please read instructions below for further detailed installations.

## 4.1 Installation:

---

Insert the PCM-8150 CD-ROM into the CD-ROM Drive. And install the drivers from Step 1 to Step 4 in order.

### Step 1 – Install Intel® Chipset Software Installation Utility

1. Click on the **Intel® Chipset Software Installation Utility** folder and then double click on the **infinst\_autol.exe**.
2. Follow the instructions that the window shows you.
3. The system will help you install the driver automatically.

### Step 2 – Install Intel® Extreme Graphics Driver

1. Click on the **Intel® Extreme Graphics Driver** folder and then double click on the **SETUP.exe**.
2. Follow the instructions that the window shows you.
3. The system will help you install the driver automatically.

*Remark: You can choose the different display ways by pressing below hot key*

*C+A+F1 = CRT, C+A+F2=LCD, C+A+F3=TV, C+A+F4=DVI,  
C+A+F12=Graphic Control Panel*

### Step 3 – Install Intel® LAN Driver

There're two folders after you enter the 'Step 3' folder. You can install either **Intel® LAN 82551er Driver** or **Intel® LAN 825xx Driver** in terms of the board you purchased.

#### **Intel® LAN 82551er Driver**

1. Double click on the **82551ER.exe**. before you key in the

path where you want the unzipped files place on and then click on Unzip button.

2. Click on **Start, Settings, Control Panel** and **System** button in order.
3. Select **Device Manager** under the **Hardware** category.
4. Double click on the **Ethernet controller** and select **reinstall Driver** button under the **General** category.
5. Click **Next** twice and tick the **Specify a location** option.
6. Click **Next** and choose a route where you want place the folders on before you click on **open**.
7. Click **Next, Yes** and **Finish** button in order, and the window will show you how to finish the installation process.

### **Intel® LAN 825xx Driver**

1. Click on the **Intel® LAN 825xx Driver** folder and then double click on the **pro2kxp.exe**.
2. Follow the instructions that the window shows you.
3. The system will help you install the driver automatically.

## **Step 4 – Install Realtek AC97 Codec Driver**

1. Click on the **Realtek AC97 codec Driver** folder and then double click on the **wdm\_a367.exe**
2. Follow the instructions that the window shows you.
3. The system will help you install the driver automatically.

Appendix

**A**

**I/O Information**

## A.1 I/O Address Map

Input/output (IO)	
[00000000 - 0000000F]	Direct memory access controller
[00000000 - 00000CF7]	PCI bus
[00000010 - 000001F]	Motherboard resources
[00000020 - 00000021]	Programmable interrupt controller
[00000022 - 0000003F]	Motherboard resources
[00000040 - 00000043]	System timer
[00000044 - 0000005F]	Motherboard resources
[00000060 - 00000060]	Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
[00000061 - 00000061]	System speaker
[00000062 - 00000063]	Motherboard resources
[00000064 - 00000064]	Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
[00000065 - 0000006F]	Motherboard resources
[00000070 - 00000073]	System CMOS/real time clock
[00000074 - 0000007F]	Motherboard resources
[00000080 - 00000090]	Direct memory access controller
[00000091 - 00000093]	Motherboard resources
[00000094 - 0000009F]	Direct memory access controller
[000000A0 - 000000A1]	Programmable interrupt controller
[000000A2 - 000000BF]	Motherboard resources
[000000C0 - 000000DF]	Direct memory access controller
[000000E0 - 000000EF]	Motherboard resources
[000000F0 - 000000FF]	Numeric data processor
[00000170 - 00000177]	Secondary IDE Channel
[000001F0 - 000001F7]	Primary IDE Channel
[00000274 - 00000277]	ISAPNP Read Data Port
[00000279 - 00000279]	ISAPNP Read Data Port
[00000290 - 0000029F]	Motherboard resources
[000002E8 - 000002EF]	Communications Port (COM4)
[000002F8 - 000002FF]	Communications Port (COM2)
[00000376 - 00000376]	Secondary IDE Channel
[00000378 - 0000037F]	Printer Port (LPT1)
[00000380 - 00000388]	Intel(R) 82852/82855 GM/GME Graphics Controller
[000003C0 - 000003DF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[000003E8 - 000003EF]	Communications Port (COM3)
[000003F0 - 000003F5]	Standard floppy disk controller
[000003F6 - 000003F6]	Primary IDE Channel
[000003F7 - 000003F7]	Standard floppy disk controller
[000003F8 - 000003FF]	Communications Port (COM1)
[00000400 - 000004BF]	Motherboard resources
[000004D0 - 000004D1]	Motherboard resources
[00000500 - 0000051F]	Intel(R) 82801DB/DBM SMBus Controller - 24C3
[00000800 - 00000805]	Motherboard resources
[00000A79 - 00000A79]	ISAPNP Read Data Port
[00000D00 - 0000FFFF]	PCI bus
[0000D000 - 0000D03F]	Intel(R) 8255xER PCI Adapter
[0000E000 - 0000E01F]	Intel(R) 82801DB/DBM USB Universal Host Controller - 24C2
[0000E100 - 0000E11F]	Intel(R) 82801DB/DBM USB Universal Host Controller - 24C4
[0000E200 - 0000E207]	Intel(R) 82852/82855 GM/GME Graphics Controller
[0000E400 - 0000E4FF]	Realtek AC'97 Audio
[0000E500 - 0000E53F]	Realtek AC'97 Audio
[0000F000 - 0000F00F]	Intel(R) 82801DB Ultra ATA Storage Controller - 24CB
[0000FC00 - 0000FCFF]	Texas Instruments PCI-1420 CardBus Controller
[0000FD00 - 0000FDFF]	Texas Instruments PCI-1420 CardBus Controller
[0000FE00 - 0000FEFF]	Texas Instruments PCI-1420 CardBus Controller
[0000FF00 - 0000FFFF]	Texas Instruments PCI-1420 CardBus Controller

## A.2 Memory Address Map

Address Range	Device
[00000000 - 0009FFFF]	System board
[000A0000 - 000BFFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[000A0000 - 000BFFFF]	PCI bus
[000C0000 - 000DFFFF]	PCI bus
[000CD400 - 000CFFFF]	System board
[000DE000 - 000DEFFF]	Texas Instruments PCI-1420 CardBus Controller
[000DF000 - 000DFFFF]	Texas Instruments PCI-1420 CardBus Controller
[000E0000 - 000EFFFF]	System board
[000F0000 - 000F7FFF]	System board
[000F8000 - 000FBFFF]	System board
[000FC000 - 000FFFFF]	System board
[00100000 - 00FEFFFF]	System board
[0DFF0000 - 0DFFFFFF]	System board
[0E000000 - FEBFFFFFF]	PCI bus
[08000000 - 0FFFFFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E0000000 - E7FFFFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E8000000 - E801FFFF]	Intel(R) 8255xER PCI Adapter
[E8030000 - E8030FFF]	Texas Instruments PCI-1420 CardBus Controller
[E8035000 - E8035FFF]	Texas Instruments PCI-1420 CardBus Controller
[E803A000 - E803AFFF]	Intel(R) 8255xER PCI Adapter
[E8100000 - E817FFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E8180000 - E818FFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E8200000 - E82003FF]	Intel(R) 82801DB/DBM USB2 Enhanced Host Controller - 24CD
[E8201000 - E82011FF]	Realtek AC'97 Audio
[000DF000 - 000DFFFF]	Texas Instruments PCI-1420 CardBus Controller
[000E0000 - 000EFFFF]	System board
[000F0000 - 000F7FFF]	System board
[000F8000 - 000FBFFF]	System board
[000FC000 - 000FFFFF]	System board
[00100000 - 0DFFFFFF]	System board
[0DFF0000 - 0DFFFFFF]	System board
[0E000000 - FEBFFFFFF]	PCI bus
[08000000 - 0FFFFFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E0000000 - E7FFFFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E8000000 - E801FFFF]	Intel(R) 8255xER PCI Adapter
[E8030000 - E8030FFF]	Texas Instruments PCI-1420 CardBus Controller
[E8035000 - E8035FFF]	Texas Instruments PCI-1420 CardBus Controller
[E803A000 - E803AFFF]	Intel(R) 8255xER PCI Adapter
[E8100000 - E817FFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E8180000 - E818FFFF]	Intel(R) 82852/82855 GM/GME Graphics Controller
[E8200000 - E82003FF]	Intel(R) 82801DB/DBM USB2 Enhanced Host Controller - 24CD
[E8201000 - E82011FF]	Realtek AC'97 Audio
[E8202000 - E82020FF]	Realtek AC'97 Audio
[F68FD000 - FABFCFFF]	Texas Instruments PCI-1420 CardBus Controller
[FABFD000 - FABDFFFF]	Texas Instruments PCI-1420 CardBus Controller
[FABFE000 - FEBDFFFF]	Texas Instruments PCI-1420 CardBus Controller
[FEBFE000 - FEBFEFFF]	Texas Instruments PCI-1420 CardBus Controller
[FEBFFC00 - FEBFFFFFF]	Intel(R) 82801DB Ultra ATA Storage Controller - 24CB
[FEC00000 - FECFFFFFF]	System board
[FEE00000 - FEEFFFFFF]	System board
[FFB00000 - FFB7FFFF]	System board
[FFB80000 - FFBFFFFFF]	Intel(R) 82802 Firmware Hub Device
[FFF00000 - FFFFFFFF]	System board

## A.3 IRQ Mapping Chart

---

Interrupt request (IRQ)	
(ISA) 0	System timer
(ISA) 1	Standard 101/102-Key or Microsoft Natural PS/2 Keyboard
(ISA) 3	Communications Port (COM2)
(ISA) 4	Communications Port (COM1)
(ISA) 6	Standard floppy disk controller
(ISA) 8	System CMOS/real time clock
(ISA) 9	Microsoft ACPI-Compliant System
(ISA) 10	Communications Port (COM3)
(ISA) 11	Communications Port (COM4)
(ISA) 12	PS/2 Compatible Mouse
(ISA) 13	Numeric data processor
(ISA) 14	Primary IDE Channel
(ISA) 15	Secondary IDE Channel
(PCI) 5	Intel(R) 82801DB/DBM SMBus Controller - 24C3
(PCI) 16	Intel(R) 82801DB/DBM USB Universal Host Controller - 24C2
(PCI) 16	Intel(R) 82852/82855 GM/GME Graphics Controller
(PCI) 16	Texas Instruments PCI-1420 CardBus Controller
(PCI) 17	Intel(R) 8255xER PCI Adapter
(PCI) 17	Realtek AC'97 Audio
(PCI) 17	Texas Instruments PCI-1420 CardBus Controller
(PCI) 19	Intel(R) 82801DB/DBM USB Universal Host Controller - 24C4
(PCI) 23	Intel(R) 82801DB/DBM USB2 Enhanced Host Controller - 24CD

## A.4 DMA Channel Assignments

---

Direct memory access (DMA)	
2	Standard floppy disk controller
4	Direct memory access controller



Appendix

**B**

# Programming the Watchdog Timer

## B.1 Programming

---

PCM-8150 utilizes ITE 8712 chipset as its watchdog timer controller.

Below are the procedures to complete its configuration and the

AAEON initial watchdog timer program is also attached based on

which you can develop customized program to fit your application.

### **Configuring Sequence Description**


After the hardware reset or power-on reset, the ITE 8712 enters the

normal mode with all logical devices disabled except KBC. The

initial state (enable bit ) of this logical device (KBC) is determined

by the state of pin 121 (DTR1#) at the falling edge of the system

reset during power-on reset.

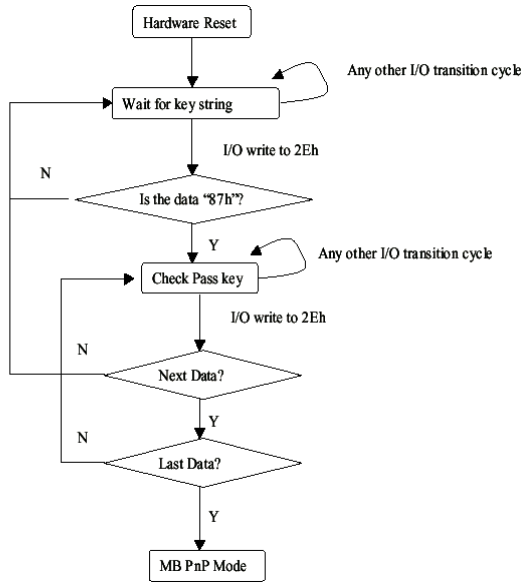

There are three steps to complete the configuration setup: (1) Enter

the MB PnP Mode; (2) Modify the data of configuration registers;

(3) Exit the MB PnP Mode. Undesired result may occur if the MB

PnP Mode is not exited normally.

### (1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to

be performed during Wait for Key state. To ensure the initial state

of the key-check logic, it is necessary to perform four write operations

to the Special Address port (2EH). Two different enter keys are provided to select configuration ports (2Eh/2Fh) of the next

step.

	Address Port	Data Port
87h, 01h, 55h, 55h:	2Eh	2Fh

## (2) Modify the Data of the Registers

All configuration registers can be accessed after entering the MB

PnP Mode. Before accessing a selected register, the content of

Index 07h must be changed to the LDN to which the register belongs, except some Global registers.

## (3) Exit the MB PnP Mode

Set bit 1 of the configure control register (Index=02h) to 1 to exit

the MB PnP Mode.

**WatchDog Timer Configuration Registers**

<b>LDN Index R/W Reset Configuration Register or Action</b>				
All	02H	W	N/A	Configure Control
07H	71H	R/W	00H	WatchDog Timer Control Register
07H	72H	R/W	00H	WatchDog Timer Configuration Register
07H	73H	R/W	00H	WatchDog Timer Time-out Value Register

**Configure Control (Index=02h)**

This register is write only. Its values are not sticky; that is to say, a

hardware reset will automatically clear the bits, and does not require

the software to clear them.

<b>Bit</b>	<b>Description</b>
7-2	Reserved
1	Returns to the Wait for Key state. This bit is used when the configuration sequence is completed
0	Resets all logical devices and restores configuration registers to their power-on states.

**WatchDog Timer Control Register (Index=71h, Default=00h)**

Bit	Description
7	WDT is reset upon a CIR interrupt
6	WDT is reset upon a KBC (mouse) interrupt
5	WDT is reset upon a KBC (keyboard) interrupt
4	WDT is reset upon a read or a write to the Game Port base address
3-2	Reserved
1	Force Time-out. This bit is self-clearing
0	WDT Status
	1: WDT value reaches 0.
	0: WDT value is not 0

**WatchDog Timer Configuration Register (Index=72h, Default=00h)**

Bit	Description
7	WDT Time-out value select
	1: Second
	0: Minute
6	WDT output through KRST (pulse) enable
5-4	Reserved
3-0	Select the interrupt level <sup>Note</sup> for WDT

**WatchDog Timer Time-out Value Register (Index=73h, Default=00h)**

Bit	Description
7-0	WDT Time-out value 7-0

## B.2 IT8712 Watchdog Timer Initial Program

---

```
.MODEL SMALL
```

```
.CODE
```

Main:

```
CALL Enter_Configuration_mode
```

```
CALL Check_Chip
```

```
mov cl, 7
```

```
call Set_Logic_Device
```

```
;time setting
```

```
mov cl, 10 ; 10 Sec
```

```
dec al
```

Watch\_Dog\_Setting:

```
;Timer setting
```

```
mov al, cl
```

```
mov cl, 73h
```

```
call Superio_Set_Reg
```

```
;Clear by keyboard or mouse interrupt
```

```
mov al, 0f0h
```

```
mov cl, 71h
```

```
call Superio_Set_Reg
```

```
;unit is second.
```

```
mov al, 0C0H
```

```
mov cl, 72h
```

```
call Superio_Set_Reg
```

```
; game port enable  
mov cl, 9  
call Set_Logic_Device
```

```
Initial_OK:  
CALL Exit_Configuration_mode  
MOV AH,4Ch  
INT 21h
```

```
Enter_Configuration_Mode PROC NEAR  
MOV SI,WORD PTR CS:[Offset Cfg_Port]
```

```
MOV DX,02Eh  
MOV CX,04h  
Init_1:  
MOV AL,BYTE PTR CS:[SI]  
OUT DX,AL  
INC SI  
LOOP Init_1  
RET  
Enter_Configuration_Mode ENDP
```

```
Exit_Configuration_Mode PROC NEAR  
MOV AX,0202h  
CALL Write_Configuration_Data
```



RET

Exit\_Configuration\_Mode ENDP

Check\_Chip PROC NEAR

MOV AL,20h

CALL Read\_Configuration\_Data

CMP AL,87h

JNE Not\_Initial

MOV AL,21h

CALL Read\_Configuration\_Data

CMP AL,12h

JNE Not\_Initial

Need\_Initial:

STC

RET

Not\_Initial:

CLC

RET

Check\_Chip ENDP

Read\_Configuration\_Data PROC NEAR

MOV DX,WORD PTR CS:[Cfg\_Port+04h]

OUT DX,AL

```
MOV DX,WORD PTR CS:[Cfg_Port+06h]
IN AL,DX
RET
Read_Configuration_Data ENDP
```

```
Write_Configuration_Data PROC NEAR
MOV DX,WORD PTR CS:[Cfg_Port+04h]
OUT DX,AL
XCHG AL,AH
MOV DX,WORD PTR CS:[Cfg_Port+06h]
OUT DX,AL
RET
Write_Configuration_Data ENDP
```

```
Superio_Set_Reg proc near
push ax
MOV DX,WORD PTR CS:[Cfg_Port+04h]
mov al,cl
out dx,al
pop ax
inc dx
out dx,al
ret
Superio_Set_Reg endp.Set_Logic_Device proc near
Set_Logic_Device proc near
```

```
push ax
push cx
xchg al,cl
mov cl,07h
call Superio_Set_Reg
pop cx
pop ax
ret
Set_Logic_Device endp
```

```
;Select 02Eh->Index Port, 02Fh->Data Port
Cfg_Port DB 087h,001h,055h,055h
```

```
DW 02Eh,02Fh
```

## END Main

*Note: Interrupt level mapping*

0Fh-Dh: not valid

0Ch: IRQ12

.

.

03h: IRQ3

02h: not valid

01h: IRQ1

00h: no interrupt selected