

EPIC-BDU7

Intel® Core™ i3/i5/i7 ULT Processor SoC

DDR3L 1600 SODIMM

2 Mini-PCle Socket

4 USB 2.0, 2 USB 3.0, 6 COM

2 SATA, 1 mSATA

VGA, LVDS, DP

Copyright Notice

This document is copyrighted, 2019. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMD[®] is trademark of Advanced Micro Devices.
- Microsoft Windows[®] is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin installing your card, please make sure that the following materials have been shipped:

- DVD-ROM for manual (in PDF format) and drivers
- EPIC-BDU7

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

China RoHS Requirements
产品中有毒有害物质或元素名称及含量

AAEON Main Board/ Daughter Board/ Backplane

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注: 此产品所标示之环保使用期限, 系指在一般正常使用状况下。</p>						

China RoHS Requirements

Poisonous or Hazardous Substances or Elements in Products

AAEON Main Board/ Daughter Board/ Backplane

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	X	O	O	O	O	O
Wires & Connectors for External Connections	X	O	O	O	O	O

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

Contents

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features.....	1-3
1.3 Specifications	1-4

Chapter 2 Quick Installation Guide

2.1 Safety Precautions.....	2-2
2.2 Dimensions.....	2-3
2.3 Jumpers and Connectors.....	2-6
2.4 List of Jumpers	2-7
2.5 List of Connectors.....	2-8
2.6 Setting Jumpers.....	2-10
2.7 PCI-104 I/O Voltage Selection (JP1).....	2-11
2.8 Clear CMOS Jumper (JP2)	2-11
2.9 Touchscreen 4/5/8 Wire Mode Selection (JP3).....	2-11
2.10 AT/ATX Power Supply Mode Selection (JP4).....	2-11
2.11 LVDS2 Port1/eDP Backlight Inverter Voltage Selection (JP10)	2-12
2.12 LVDS2 Port1/eDP Operating Voltage Selection (JP11) .	2-12
2.13 LVDS Port1/eDP Backlight Lightness Control Mode Selection (JP12).....	2-12
2.14 COM2 (D-SUB) Ring/+12V/+5V Selection (JP13).....	2-12

2.15 COM3 (Wafer) Ring/+12V/+5V Selection (JP14)	2-13
2.16 LVDS Port2 Backlight Lightness Control Mode Selection (JP15)	2-13
2.17 LVDS Port2 Backlight Inverter Voltage Selection (JP17)	2-13
2.18 LVDS Port2 Operating Voltage Selection (JP18)	2-13
2.19 Stereo Audio Right Channel (CN1)	2-14
2.20 Stereo Audio Left Channel (CN2).....	2-14
2.21 Main Power Input (+12V) (CN3).....	2-14
2.22 Main Power Input (+9V to +24V) (CN4).....	2-15
2.23 PCI-104 Connector (CN5).....	2-15
2.24 High Definition Audio (CN6)	2-17
2.25 USB 2.0 Port 4 (CN7)	2-18
2.26 Front Panel (CN8).....	2-18
2.27 LPT/ Digital IO Port (CN9).....	2-19
2.28 USB 2.0 Port 3 (CN10)	2-22
2.29 USB 2.0 Port 5 (CN11)	2-23
2.30 MiniCard (Half-size) (CN12).....	2-23
2.31 +5V Output for SATA HDD (CN14)	2-26
2.32 UIM Socket (CN15).....	2-27
2.33 SPI Programming Header (Debug ONLY) (CN16).....	2-27
2.34 CPU Fan (CN17)	2-28
2.35 PS/2 Keyboard/Mouse Combo (CN18).....	2-29
2.36 Touchscreen Connector (CN19).....	2-30
2.37 LCP Expansion Connector (CN20).....	2-33

2.38 COM Port 6 (CN21)	2-34
2.39 COM Port 5 (CN22)	2-35
2.40 COM Port 1 (Optional) (CN23)	2-36
2.41 LVDS Port 1/eDP Inverter / Backlight Connector (CN24)	2-37
2.42 LVDS Port 1/eDP (CN25).....	2-38
2.43 10M/100M/1G Ethernet Port 1 (CN26)	2-38
2.44 10M/100M/1G Ethernet Port 2 (CN27)	2-38
2.45 COM Port 4 (CN28)	2-44
2.46 COM Port 3 (RS-232/422/485) (CN29).....	2-45
2.47 USB 2.0/3.0 Port 1 & 2 (CN30)	2-47
2.48 Display Port 2 (CN31)	2-48
2.49 LVDS Port 2 (CN32)	2-50
2.50 COM Port 1 & 2 (CN33)	2-52
2.51 VGA Port (CN34).....	2-54
2.52 Display Port 1 (CN35)	2-55
2.53 LVDS Port 2 Inverter / Backlight Connector (CN36).....	2-56
2.54 USB 2.0 Port 6 (CN37)	2-57
2.55 MiniCard (Full-size) (CN38)	2-57
2.56 SATA Port 1 (SATA1)	2-60
2.57 SATA Port 2 (SATA2)	2-61
2.58 DDR3L SODIMM (DIMM1).....	2-61

Chapter 3 AMI BIOS Setup

3.1 System Test and Initialization.....	3-2
3.2 AMI BIOS Setup	3-3

Chapter 4 Driver Installation

4.1 Installation	4-3
------------------------	-----

Appendix A Programming The Watchdog Timer

A.1 Programming	A-2
A.2 WatchDog Sample Program	A-3

Appendix B I/O Information

B.1 I/O Address Map	B-2
B.2 Memory Address Map	B-4
B.3 IRQ Mapping Chart	B-5
B.4 DMA Channel Assignments.....	B-17

Appendix C Mating Connector

C.1 List of Mating Connectors and Cables	C-2
--	-----

Appendix D Electrical Specifications for I/O Ports

D.1 Electrical Specifications for I/O Ports	D-2
---	-----

Appendix E Digital I/O Ports

E.1 Electrical Specifications for Digital I/O Ports.....	E-2
E.2 Digital I/O Programming	E-3
E.3 Digital I/O Register	E-4
E.4 Digital I/O Sample Program	E-6

Chapter

1

**General
Information**

1.1 Introduction

As one of AAEON's first products using Intel® 5th Generation Core™ Processor SoCs, the board is equipped with rich media playing features such as support for 4K resolution videos as well as independent displays.

With low-power consumption and compactness being the key aspects in 21st century computer designs, the board runs on 15WDP while providing an abundance of expansion, network, and I/O capabilities, making it one of the top contenders in applications in gaming, digital signage, and industrial automation.

1.2 Features

- Fifth Generation Intel® Core™ i3/i5/i7 ULT Processor SoC
- DDR3L 1600 SODIMM, up to 8GB
- VGA, LVDS1, DP, LVDS2 (Optional), eDP (Optional)
- Intel® WGI211AT/ WGI218LM x 1, RJ-45 x 2
- SATA 3 (6.0Gb/s) x 2, mSATA x 1
- USB 2.0 x 4, USB 3.0 x 2
- RS-232 x 4, RS-242/422/485 x 2
- Touch panel control chip supporting 4/5 wire touchscreen (Optional)
- DC 9V ~ 24V, AT/ATX

1.3 Specifications

System

- Form Factor EPIC Board
- Processor 5th Generation Intel® Core™ i3/i5/i7 ULT Processor SoC
- System Memory DDR3L 1600 SODIMM, up to 8GB
- Chipset 5th Generation Intel® Core™ i3/i5/i7 ULT Processor SoC
- Ethernet Intel® WGI211AT x 1/ WGI218LM x 1
- BIOS AMI BIOS
- Wake On LAN Yes
- Watchdog Timer 1~255 sec support by AAEON Hi-Safe
- H/W Status Monitoring Supported by AAEON Hi-Safe
- Expansion Interface Full-size MiniCard #1 (Shared with mSATA) (Optional)
Full-size MiniCard #1 SIM slot x 1 (Optional)
Half-size MiniCard #2
PCI-104 x 1(optional)
Touch panel controller and connector x 1 (optional)
TPM x 1 (optional)

- Battery Lithium RTC battery
- Power Requirement DC 9~24V, AT/ATX
- Power Consumption 38W
(Typical)
- Board Size 165mm x 115mm (6.5" x 4.53")
- Gross Weight 0.4kg (0.88 lbs)
- Operating Temperature 0 °C ~ 60 °C (32 °F ~ 140 °F)
- Storage Temperature -40°C ~ 80°C (-40°F ~ 176°F)
- Operation Humidity 0% ~ 90% Relative Humidity,
Non-Condensing

Display

- Chipset 5th Generation Intel® Core™ i3/i5/i7 ULT
Processor SoC
- Resolution CRT up to 1920 x 1200 @ 60Hz
LCD up to 1920 x 1200 @ 60Hz
Display Port up to 3840 x 2160 @ 60Hz
- LCD Interface VGA, LVDS1, DP, LVDS2 (Optional), eDP
(Optional)

I/O

- Storage SATA 3 (6.0Gb/s) x 2, mSATA x 1 (Full-size,

- USB
default)
USB 3.0 x 2
USB 2.0 x 4
- Serial Port
RS-232 x 4
RS-232/422/485 x 2 (Ring/+5V/+12V)
- Parallel Port
SPP/EPP/ECP x 1 (Optional) controlled by BIOS
- DI/O
16-bit digital I/O interface co-lay with LPT
Port controlled by BIOS (DI/O default)
- Audio
Realtek ALC 892
2W Audio Amp
- Keyboard/ Mouse
PS/2 Keyboard & Mouse

Chapter

2

**Quick
Installation
Guide**

2.1 Safety Precautions

Warning!


Always completely disconnect the power cord from your board whenever you are working on it. Do not make connections while the power is on, because a sudden rush of power can damage sensitive electronic components.

Caution!




Always ground yourself to remove any static charge before touching the board. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag when they are not in the chassis

2.2 Dimensions


Component Side

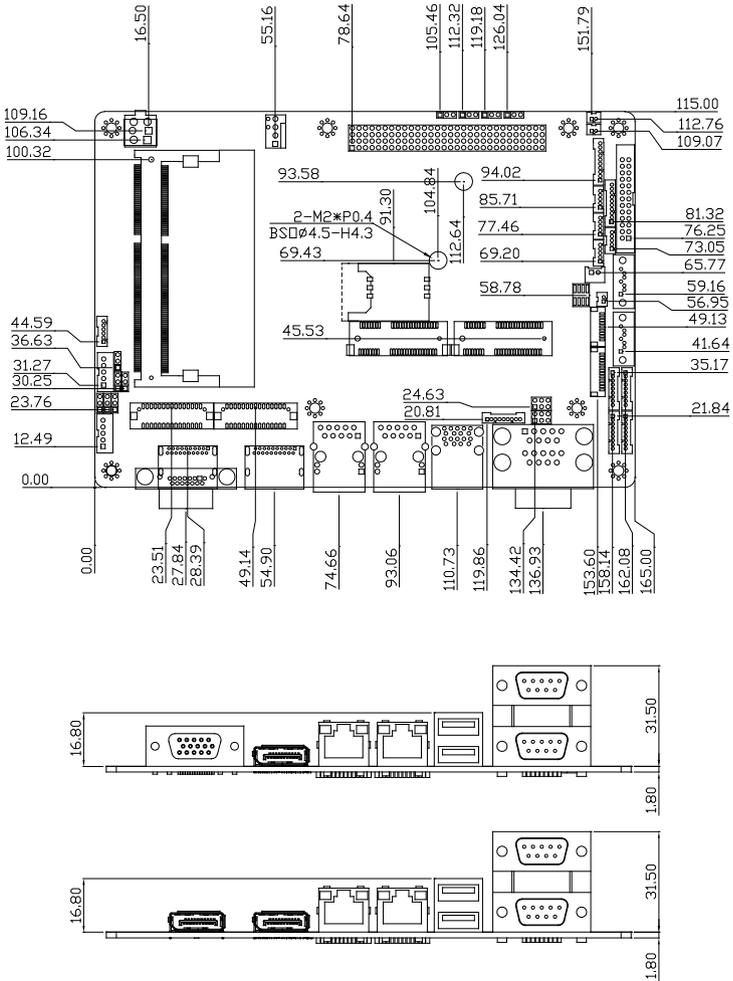


With Heat Spreader

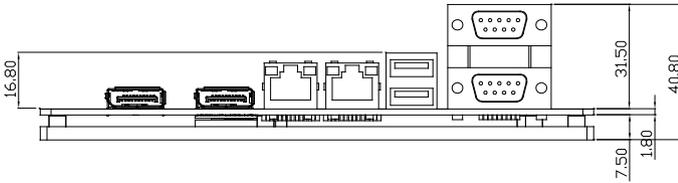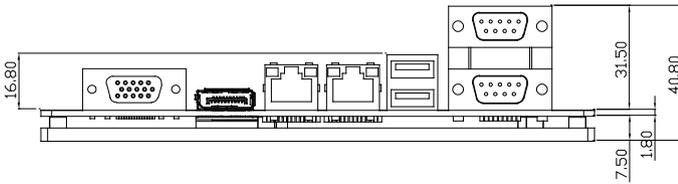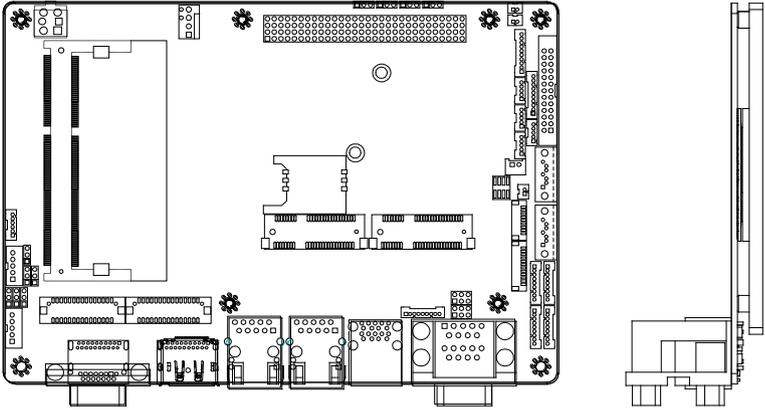


Solder Side

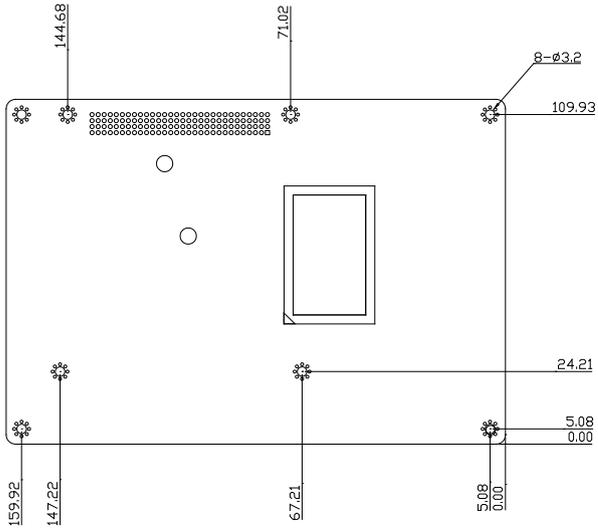

With Heat Spreader

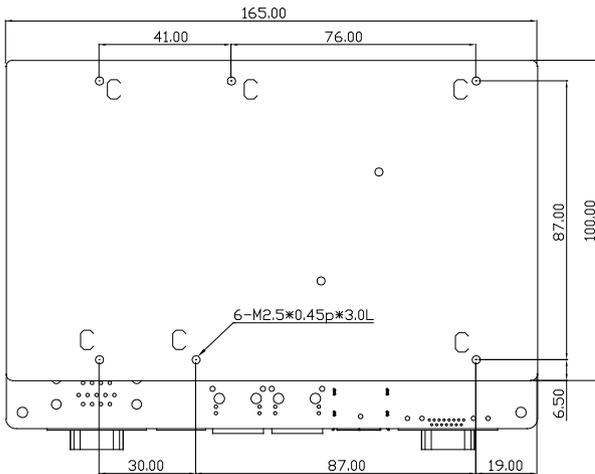

2.3 Jumpers and Connectors

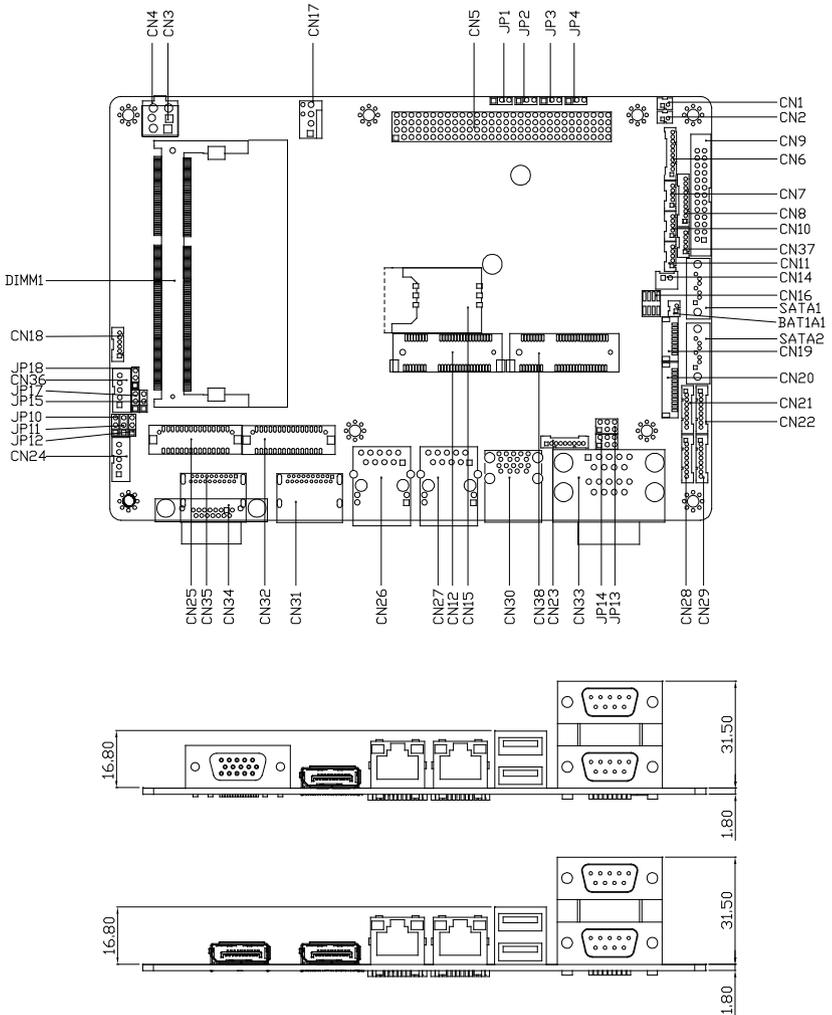

2.4 List of Jumpers

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

Label	Function
JP1	PCI-104 I/O Voltage Selection
JP2	Clear CMOS Jumper
JP3	Touch Screen 4/5/8 Wire Mode Selection
JP4	AT/ATX Power Supply Mode Selection
JP10	LVDS Port1/eDP Backlight Inverter Voltage
JP11	LVDS Port1/eDP Operating Voltage Selection
JP12	LVDS Port1/eDP Backlight Lightness Control
JP13	COM2 (D-SUB) Ring/+12V/+5V Selection
JP14	COM3 (Wafer) Ring/+12V/+5V Selection
JP15	LVDS Port2 Backlight Lightness Control Mode
JP17	LVDS Port2 Backlight Inverter Voltage
JP18	LVDS Port2 Operating Voltage Selection

2.5 List of Connectors

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:


Label	Function
CN1	Stereo Audio RIGHT Channel
CN2	Stereo Audio LEFT Channel
CN3	Main Power Input (+12V ONLY)
CN4	Main Power Input (+9V to +24V)
CN5	PCI-104 Connector
CN6	High Definition Audio
CN7	USB 2.0 Port 4
CN8	Front Panel
CN9	LPT/Digital IO Port
CN10	USB 2.0 Port 3
CN11	USB 2.0 Port 5
CN12	Mini-Card (Half Size)
CN14	+5V Output for SATA HDD
CN15	UIM Socket
CN16	SPI Programming Header (Debug ONLY)
CN17	CPU FAN
CN18	PS/2 Keyboard/Mouse Combo Port
CN19	Touch Screen Connector
CN20	LPC Expansion Connector

Label	Function
CN21	COM Port 6 (RS232)
CN22	COM Port 5 (RS232)
CN23	COM Port 1 (RS232)
CN24	LVDS Port1/eDP Inverter / Backlight Connector
CN25	LVDS Port1/eDP
CN26	10M/100M/1G Ethernet Port 1
CN27	10M/100M/1G Ethernet Port 2
CN28	COM Port 4 (RS232)
CN29	COM Port 3 (RS232/485/422)
CN30	USB 2.0/3.0 Port 1 & 2
CN31	Display Port 2
CN32	LVDS Port 2
CN33A	COM Port 1 (RS232)
CN33B	COM Port 2 (RS232/485/422)
CN34	VGA Port
CN35	Display Port 1
CN36	LVDS Port 2 Inverter / Backlight Connector
CN37	USB 2.0 Port 6
CN38	Mini-Card (Full Size)
SATA1	SATA Port 1
SATA2	SATA Port 2
DIMM1	DDR3L SODIMM

2.6 Setting Jumpers

You configure your card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip.


To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2 and 3. In this case you would connect either pins 1 and 2 or 2 and 3.

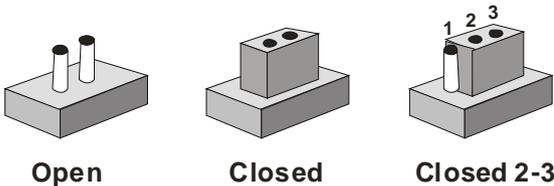


A pair of needle-nose pliers may be helpful when working with jumpers. If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any change.

Generally, you simply need a standard cable to make most connections.

2.7 PCI-104 I/O Voltage Selection (JP1)




+5V




+3.3V (Default)

2.8 Clear CMOS Jumper (JP2)




Normal (Default)




Clear CMOS

2.9 Touchscreen 4/5/8 Wire Mode Selection (JP3)




4/8 Wires Mode (Default)




5 Wires Mode

2.10 AT/ATX Power Supply Mode Selection (JP4)



ATX Mode




AT Mode (Default)

2.11 LVDS2 Port1/eDP Backlight Inverter Voltage Selection (JP10)



+12V




+5V (Default)

2.12 LVDS2 Port1/eDP Operating Voltage Selection (JP11)




+5V




+3.3V (Default)

2.13 LVDS Port1/eDP Backlight Lightness Control Mode Selection (JP12)




VR Mode




PWM Mode (Default)


2.14 COM2 (D-SUB) Ring/+12V/+5V Selection (JP13)



+12V




Ring (Default)




+5V


2.15 COM3 (Wafer) Ring/+12V/+5V Selection (JP14)



+12V



Ring (Default)




+5V

2.16 LVDS Port2 Backlight Lightness Control Mode Selection (JP15)




VR Mode




PWM Mode (Default)

2.17 LVDS Port2 Backlight Inverter Voltage Selection (JP17)




+12V




+5V (Default)

2.18 LVDS Port2 Operating Voltage Selection (JP18)




+5V




+3.3V (Default)

2.19 Stereo Audio Right Channel (CN1)




Pin	Pin Name	Signal Type	Signal Level
1	R+	OUT	
2	R-	OUT	

2.20 Stereo Audio Left Channel (CN2)



Pin	Pin Name	Signal Type	Signal Level
1	L+	OUT	
2	L-	OUT	


2.21 Main Power Input (+12V) (CN3)



Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
3	+VIN	PWR	+12V
4	+VIN	PWR	+12V

2.22 Main Power Input (+9V to +24V) (CN4)

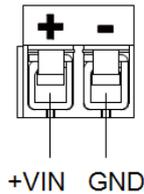

Pin	Pin Name	Signal Type	Signal Level
1	+VIN	PWR	+9V to +24V
2	GND	GND	


2.23 PCI-104 Connector (CN5)

	A	B	C	D
1	GND	+5V_SB	+5V	AD00
2	VI/O	AD02	AD01	+5V
3	AD05	GND	AD04	AD03
4	C/BE0#	AD07	GND	AD06
5	GND	AD09	AD08	GND
6	AD11	VI/O	AD10	M66EN
7	AD14	AD13	GND	AD12

EPIC Board**EPIC-BDU7**


	A	B	C	D
8	+3.3V	C/BE1#	AD15	+3.3V
9	SERR#	GND	PSON#	PAR
10	GND	PERR#	+3.3V	PME#
11	STOP#	+3.3V	LOCK#	GND
12	+3.3V	TRDY#	GND	DEVSEL#
13	FRAME#	GND	IRDY#	+3.3V
14	GND	AD16	+3.3V	C/BE2#
15	AD18	+3.3V	AD17	GND
16	AD21	AD20	GND	AD19
17	+3.3V	AD23	AD22	+3.3V
18	IDSEL0	GND	IDSEL1	IDSEL2
19	AD24	C/BE3#	VI/O	IDSEL3
20	GND	AD26	AD25	GND
21	AD29	+5V	AD28	AD27
22	+5V	AD30	GND	AD31
23	REQ0#	GND	REQ1#	VI/O
24	GND	REQ2#	+5V	GNT0#
25	GNT1#	VI/O	GNT2#	GND
26	+5V	CLK0	GND	CLK1
27	CLK2	+5V	CLK3	GND
28	GND	INTD#	+5V	RST#
29	+12V	INTA#	INTB#	INTC#
30	-12V	REQ3#	GNT3#	GND

2.24 High Definition Audio (CN6)

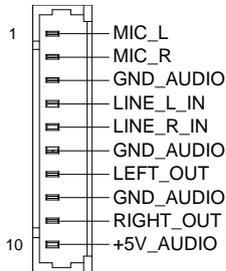


Pin	Pin Name	Signal Type	Signal Level
1	MIC_L	IN	
2	MIC_R	IN	
3	GND_AUDIO	GND	
4	LINE_L_IN	IN	
5	LINE_R_IN	IN	
6	GND_AUDIO	GND	
7	LEFT_OUT	OUT	
8	GND_AUDIO	GND	
9	RIGHT_OUT	OUT	
10	+5V_AUDIO	PWR	+5V

2.25 USB 2.0 Port 4 (CN7)

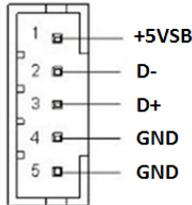

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB3_D-	DIFF	
3	USB3_D+	DIFF	
4	GND	GND	
5	GND	GND	


2.26 Front Panel (CN8)



Pin	Pin Name	Signal Type	Signal Level
1	PWR_BTN#	IN	
2	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
3	+V5S	PWR	+5V
4	SPEAKER	IN	
5	+V3.3S	PWR	+3.3V
6	HDD_LED#	IN	
7	+V3.3S	PWR	+3.3V
8	GND	GND	
9	H/W RESET#	IN	
10	GND	GND	

2.27 LPT/ Digital IO Port (CN9)

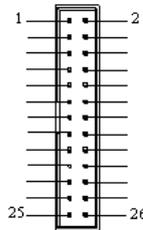

Pin	Pin Name	Signal Type	Signal Level
1	STOBE#	I/O	
2	#AFD	I/O	
3	PPD0	I/O	
4	ERR#	I/O	
5	PPD1	I/O	
6	PINIT#	I/O	


Pin	Pin Name	Signal Type	Signal Level
7	PPD2	I/O	
8	SLIN#	I/O	
9	PPD3	I/O	
10	GND	GND	
11	PPD4	I/O	
12	GND	GND	
13	PPD5	I/O	
14	GND	GND	
15	PPD6	I/O	
16	GND	GND	
17	PPD7	I/O	
18	GND	GND	
19	ACK#	I/O	
20	GND	GND	
21	BUSY	I/O	
22	GND	GND	
23	PE	I/O	
24	GND	GND	
25	SLCT	I/O	
26	PWR	PWR	+5V

Digital I/O Mode			
Pin	Pin Name	Signal Type	Signal Level
1	GPIO15	I/O	
2	GPIO14	I/O	
3	GPIO0	I/O	
4	GPIO13	I/O	
5	GPIO1	I/O	
6	GPIO12	I/O	
7	GPIO2	I/O	
8	GPIO11	I/O	
9	GPIO3	I/O	
10	GND	GND	
11	GPIO4	I/O	
12	GND	GND	
13	GPIO5	I/O	
14	GND	GND	
15	GPIO6	I/O	
16	GND	GND	
17	GPIO7	I/O	
18	GND	GND	
19	GPIO10	I/O	
20	GND	GND	
21	GPIO9	I/O	
22	GND	GND	

Digital I/O Mode


Pin	Pin Name	Signal Type	Signal Level
23	GPIO8	I/O	
24	GND	GND	
25	N.C		
26	PWR	PWR	+5V

2.28 USB 2.0 Port 3 (CN10)

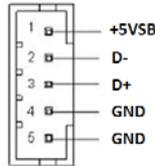

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB2_D-	DIFF	
3	USB2_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.29 USB 2.0 Port 5 (CN11)

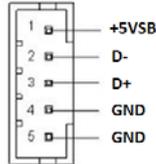

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB4_D-	DIFF	
3	USB4_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.30 MiniCard (Half-size) (CN12)


Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V
7	PCIE_CLK_REQ#	IN	

Pin	Pin Name	Signal Type	Signal Level
8	NC		
9	GND	GND	
10	NC		
11	PCIE_REF_CLK-	DIFF	
12	NC		
13	PCIE_REF_CLK+	DIFF	
14	NC		
15	GND	GND	
16	NC		
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-	DIFF	
24	+3.3VSB	PWR	+3.3V
25	PCIE_RX+	DIFF	
26	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		
45	NC		


Pin	Pin Name	Signal Type	Signal Level
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3VSB	PWR	+3.3V

2.31 +5V Output for SATA HDD (CN14)




Pin	Pin Name	Signal Type	Signal Level
1	+5V	PWR	+5V
2	GND	GND	

2.32 UIM Socket (CN15)



Pin	Pin Name	Signal Type	Signal Level
1	UIM_PWR	PWR	
2	UIM_RST	IN	
3	UIM_CLK	IN	
4	GND	GND	
5	UIM_VPP	PWR	
6	UIM_DAT	I/O	


2.33 SPI Programming Header (Debug ONLY) (CN16)



Pin	Pin Name	Signal Type	Signal Level
1	+3.3V	PWR	+3.3V
2	GND	GND	
3	CS#	I/O	
4	CLK	I/O	

Pin	Pin Name	Signal Type	Signal Level
5	SO	I/O	
6	SI	I/O	
7	NC		
8	NC		

2.34 CPU Fan (CN17)

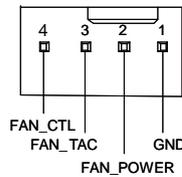

Pin	Pin Name	Signal type	Signal Level
1	GND	GND	
2	FAN_POWER	PWR	+12V
3	FAN_TAC	IN	
4	FAN_CTL	IN	


* Pin 4 is optional. If used, smart fan will be supported

2.35 PS/2 Keyboard/Mouse Combo (CN18)




Pin	Pin Name	Signal Type	Signal Level
1	KB_DATA	I/O	+5V
2	KB_CLK	I/O	+5V
3	GND	GND	
4	+5VSB	PWR	+5V
5	MS_DATA	I/O	+5V
6	MS_CLK	I/O	+5V


2.36 Touchscreen Connector (CN19)

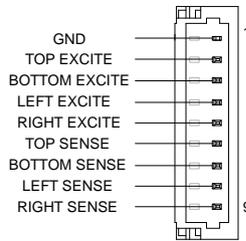

8 Wires			
Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP EXCITE	IN	
3	BOTTOM EXCITE	IN	
4	LEFT EXCITE	IN	
5	RIGHT EXCITE	IN	
6	TOP SENSE	IN	
7	BOTTOM SENSE	IN	
8	LEFT SENSE	IN	
9	RIGHT SENSE	IN	

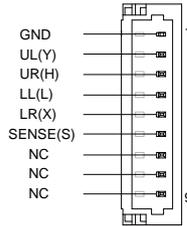


5 Wires			
Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	UL(Y)	IN	
3	UR(H)	IN	
4	LL(L)	IN	
5	LR(X)	IN	
6	SENSE(S)	IN	
7	NC		
8	NC		
9	NC		

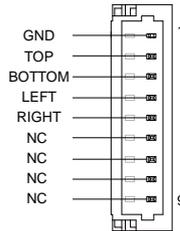

4 Wires			
Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	TOP	IN	
3	BOTTOM	IN	
4	LEFT	IN	
5	RIGHT	IN	
6	NC		
7	NC		
8	NC		
9	NC		


* Touchscreen mode can be set by JP3

2.37 LCP Expansion Connector (CN20)

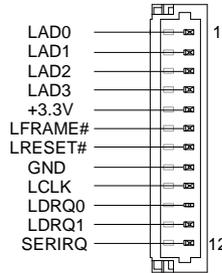


Pin	Pin Name	Signal Type	Signal Level
1	LAD0	I/O	+3.3V
2	LAD1	I/O	+3.3V
3	LAD2	I/O	+3.3V
4	LAD3	I/O	+3.3V
5	+3.3V	PWR	+3.3V
6	LFRAME#	IN	
7	LRESET#	OUT	+3.3V
8	GND	GND	
9	LCLK	OUT	

2.38 COM Port 6 (CN21)

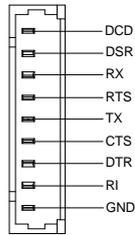


Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.39 COM Port 5 (CN22)

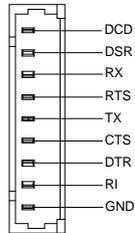


Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.40 COM Port 1 (Optional) (CN23)

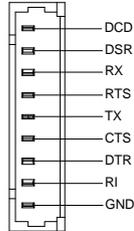

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.41 LVDS Port 1/eDP Inverter / Backlight Connector (CN24)

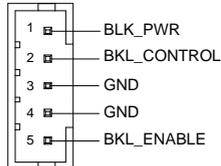


Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	3.3V

* LVDS1/BKL_PWR can be set to +5V or +12V by JP10.

* LVDS1/BKL_CONTROL can be set by JP12.

* The driving current supports up to 2A

2.42 LVDS Port 1/eDP (CN25)

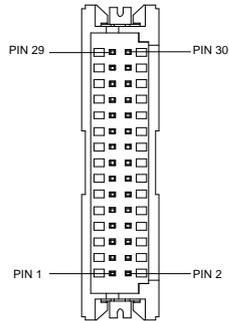

LVDS			
Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	LVDS_A_CLK-	DIFF	
6	LVDS_A_CLK+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	LVDS_DA0-	DIFF	
10	LVDS_DA0+	DIFF	
11	LVDS_DA1-	DIFF	

LVDS			
Pin	Pin Name	Signal Type	Signal Level
12	LVDS_DA1+	DIFF	
13	LVDS_DA2-	DIFF	
14	LVDS_DA2+	DIFF	
15	LVDS_DA3-	DIFF	
16	LVDS_DA3+	DIFF	
17	DDC_DATA	I/O	+3.3V
18	DDC_CLK	I/O	+3.3V
19	LVDS_DB0-	DIFF	
20	LVDS_DB0+	DIFF	
21	LVDS_DB1-	DIFF	
22	LVDS_DB1+	DIFF	
23	LVDS_DB2-	DIFF	
24	LVDS_DB2+	DIFF	
25	LVDS_DB3-	DIFF	
26	LVDS_DB3+	DIFF	
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	LVDS_B_CLK-	DIFF	

LVDS


Pin	Pin Name	Signal Type	Signal Level
30	LVDS_B_CLK+	DIFF	

eDP

Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	eDP_DA3-	DIFF	
6	eDP_DA3+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	eDP_DA2-	DIFF	
10	eDP_DA2+	DIFF	
11	eDP_DA1-	DIFF	
12	eDP_DA1+	DIFF	
13	eDP_DA0-	DIFF	
14	eDP_DA0+	DIFF	

eDP			
Pin	Pin Name	Signal Type	Signal Level
15	NC		
16	Hot Plug Detect #		
17	eDP_AUX-	DIFF	
18	eDP_AUX+	DIFF	
19	NC		
20	NC		
21	NC		
22	NC		
23	NC		
24	NC		
25	NC		
26	NC		
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	NC		
30	NC		


2.43 10M/100M/1G Ethernet Port 1 (CN26)

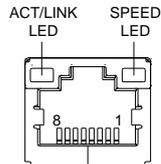

Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	


* Standard IEEE 802.3 Ethernet interface for 1000BASE-T, 100BASE-TX, and 10BASE-T applications is provided for by Intel® LAN

2.44 10M/100M/1G Ethernet Port 2 (CN27)

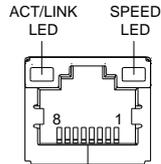


Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	

2.45 COM Port 4 (CN28)

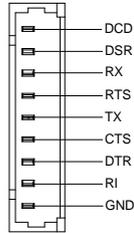

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±9V
5	TX	OUT	±9V
6	CTS	IN	
7	DTR	OUT	±9V
8	RI	IN	
9	GND	GND	

2.46 COM Port 3 (RS-232/422/485) (CN29)

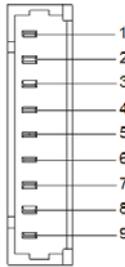

RS-232			
Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	±6V
5	TX	OUT	±6V
6	CTS	IN	
7	DTR	OUT	±6V
8	RI/+5V/+12V	IN/ PWR	+5V/+12V
9	GND	GND	

RS-422

Pin	Pin Name	Signal Type	Signal Level
1	RS422_TX-	OUT	±5V
2	NC		
3	RS422_TX+	IN	
4	NC		
5	RS422_RX+	OUT	±5V
6	NC		
7	RS422_RX-	IN	
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

RS-485

Pin	Pin Name	Signal Type	Signal Level
1	RS485_D-	I/O	±5V
2	NC		
3	RS485_D+	I/O	±5V
4	NC		
5	NC		
6	NC		
7	NC		


RS-485

Pin	Pin Name	Signal Type	Signal Level
8	NC/+5V/+12V	PWR	+5V/+12V
9	GND	GND	

* COM3 RS-232/422/485 can be set by BIOS settings. Default is RS-232

* Function for Pin 8 can be set by JP14


2.47 USB 2.0/3.0 Port 1 & 2 (CN30)

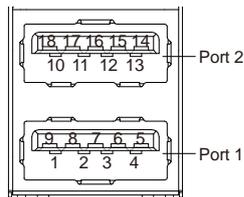

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB1_D-	DIFF	
3	USB1_D+	DIFF	
4	GND	GND	
5	USB1_SSRX-	DIFF	
6	USB1_SSRX+	DIFF	
7	GND	GND	
8	USB1_SSTX-	DIFF	

Pin	Pin Name	Signal Type	Signal Level
9	USB1_SSTX+	DIFF	
10	+5VSB	PWR	+5V
11	USB2_D-	DIFF	
12	USB2_D+	DIFF	
13	GND	GND	
14	USB2_SSRX-	DIFF	
15	USB2_SSRX+	DIFF	
16	GND	GND	
17	USB2_SSTX-	DIFF	
18	USB2_SSTX+	DIFF	


2.48 Display Port 2 (CN31)

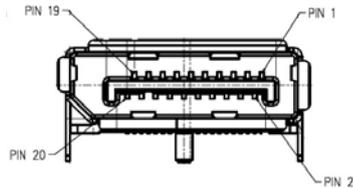

Pin	Pin Name	Signal Type	Signal Level
1	Lane0+	I/O	
2	GND	GND	
3	Lane0-	I/O	
4	Lane1+	I/O	

Pin	Pin Name	Signal Type	Signal Level
5	GND	GND	
6	Lane1-	I/O	
7	Lane2+	I/O	
8	GND	GND	
9	Lane2-	I/O	
10	Lane3+	I/O	
11	GND	GND	
12	Lane3-	I/O	
13	GND	GND	
14	GND	GND	
15	AUX+	I/O	
16	GND	GND	
17	AUX-	I/O	
18	Hot Plug Detect		
19	Return PWR (GND)	GND	
20	DP_PWR	PWR	+3.3V

2.49 LVDS Port 2 (CN32)

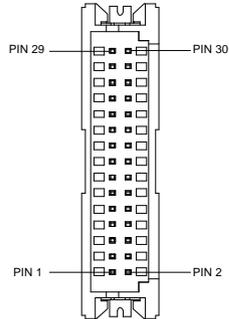


Pin	Pin Name	Signal Type	Signal Level
1	BKL_ENABLE	OUT	
2	BKL_CONTROL	OUT	
3	LCD_PWR	PWR	+3.3V/+5V
4	GND	GND	
5	LVDS_C_CLK-	DIFF	
6	LVDS_C_CLK+	DIFF	
7	LCD_PWR	PWR	+3.3V/+5V
8	GND	GND	
9	LVDS_DC0-	DIFF	
10	LVDS_DC0+	DIFF	
11	LVDS_DC1-	DIFF	

Pin	Pin Name	Signal Type	Signal Level
12	LVDS_DC1+	DIFF	
13	LVDS_DC2-	DIFF	
14	LVDS_DC2+	DIFF	
15	LVDS_DC3-	DIFF	
16	LVDS_DC3+	DIFF	
17	DDC_DATA	I/O	+3.3V
18	DDC_CLK	I/O	+3.3V
19	LVDS_DD0-	DIFF	
20	LVDS_DD0+	DIFF	
21	LVDS_DD1-	DIFF	
22	LVDS_DD1+	DIFF	
23	LVDS_DD2-	DIFF	
24	LVDS_DD2+	DIFF	
25	LVDS_DD3-	DIFF	
26	LVDS_DD3+	DIFF	
27	LCD_PWR	PWR	+3.3V/+5V
28	GND	GND	
29	LVDS_D_CLK-	DIFF	
30	LVDS_D_CLK+	DIFF	

* LVDS2 LCD_PWR can be set to +3.3V or +5V by JP18

* The max. driving current is 2A

2.50 COM Port 1 & 2 (CN33)

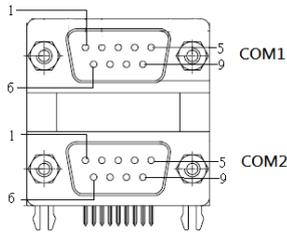

COM1/COM2 (RS-232)			
Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	RX	IN	
3	TX	OUT	±9V
4	DTR	OUT	±9V
5	GND	GND	
6	DSR	IN	
7	RTS	OUT	±9V
8	CTS	IN	
9	RI_+5V_+12V	IN/PWR	+5V/+12V

COM2 (RS-422)

Pin	Pin Name	Signal Type	Signal Level
1	422TXD-	OUT	
2	422TXD+	OUT	
3	422RXD+	IN	
4	422RXD-	IN	422RXD-
5	NC		
6	NC		
7	NC		
8	NC		
9	NC/+5V/+12V	PWR	+5V/+12V


COM2 (RS-485)

Pin	Pin Name	Signal Type	Signal Level
1	485D-	I/O	
2	485D+	I/O	
3	NC		
4	NC		
5	NC		
6	NC		
7	NC		
8	NC		
9	NC/+5V/+12V	PWR	+5V/+12V

2.51 VGA Port (CN34)

Pin	Pin Name	Signal Type	Signal Level
1	RED	OUT	
2	GREEN	OUT	
3	BLUE	OUT	
4	NC		
5	GND	GND	
6	RED_GND_RTN	GND	
7	GREEN_GND_RTN	GND	
8	BLUE_GND_RTN	GND	
9	+5V	PWR	+5V
10	CRT_PLUG#		
11	NC		
12	DDC_DATA	I/O	+5V
13	HSYNC	OUT	
14	VSYNC	OUT	
15	DDC_CLK	I/O	+5V


2.52 Display Port 1 (CN35)

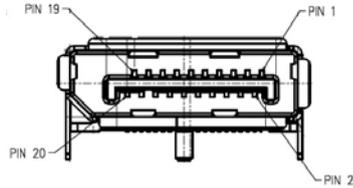

Pin	Pin Name	Signal Type	Signal Level
1	Lane0+	I/O	
2	GND	GND	
3	Lane0-	I/O	
4	Lane1+	I/O	
5	GND	GND	
6	Lane1-	I/O	
7	Lane2+	I/O	
8	GND	GND	
9	Lane2-	I/O	
10	Lane3+	I/O	
11	GND	GND	
12	Lane3-	I/O	
13	GND	GND	
14	GND	GND	
15	AUX+	I/O	
16	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
17	AUX-	I/O	
18	Hot Plug Detect		
19	Return PWR (GND)	GND	
20	DP_PWR	PWR	+3.3V


2.53 LVDS Port 2 Inverter / Backlight Connector (CN36)

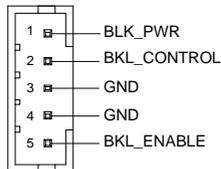

Pin	Pin Name	Signal Type	Signal Level
1	BKL_PWR	PWR	+5V / +12V
2	BKL_CONTROL	OUT	
3	GND	GND	
4	GND	GND	
5	BKL_ENABLE	OUT	+5V

- * LVDS2/BKL_PWR can be set to +5V or +12V by JP17
- * LVDS2/BKL_CONTROL can be set by JP15
- * The driving current supports up to 2A

2.54 USB 2.0 Port 6 (CN37)

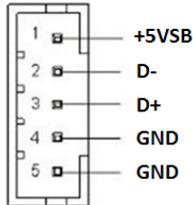

Pin	Pin Name	Signal Type	Signal Level
1	+5VSB	PWR	+5V
2	USB5_D-	DIFF	
3	USB5_D+	DIFF	
4	GND	GND	
5	GND	GND	

2.55 MiniCard (Full-size) (CN38)


Pin	Pin Name	Signal Type	Signal Level
1	PCIE_WAKE#	IN	
2	+3.3VSB	PWR	+3.3V
3	NC		
4	GND	GND	
5	NC		
6	+1.5V	PWR	+1.5V

Pin	Pin Name	Signal Type	Signal Level
7	PCIE_CLK_REQ#	IN	
8	UIM_PWR	PWR	
9	GND	GND	
10	UIM_DATA	I/O	
11	PCIE_REF_CLK-	DIFF	
12	UIM_CLK	IN	
13	PCIE_REF_CLK+	DIFF	
14	UIM_RST	IN	
15	GND	GND	
16	UIM_VPP	PWR	
17	NC		
18	GND	GND	
19	NC		
20	W_DISABLE#	OUT	+3.3V
21	GND	GND	
22	PCIE_RST#	OUT	+3.3V
23	PCIE_RX-	DIFF	
24	+3.3VSB	PWR	+3.3V
25	PCIE_RX+	DIFF	

Pin	Pin Name	Signal Type	Signal Level
26	GND	GND	
27	GND	GND	
28	+1.5V	PWR	+1.5V
29	GND	GND	
30	SMB_CLK	I/O	+3.3V
31	PCIE_TX-	DIFF	
32	SMB_DATA	I/O	+3.3V
33	PCIE_TX+	DIFF	
34	GND	GND	
35	GND	GND	
36	USB_D-	DIFF	
37	GND	GND	
38	USB_D+	DIFF	
39	+3.3VSB	PWR	+3.3V
40	GND	GND	
41	+3.3VSB	PWR	+3.3V
42	NC		
43	GND	GND	
44	NC		

Pin	Pin Name	Signal Type	Signal Level
45	NC		
46	NC		
47	NC		
48	+1.5V	PWR	+1.5V
49	NC		
50	GND	GND	
51	NC		
52	+3.3VSB	PWR	+3.3V


2.56 SATA Port 1 (SATA1)

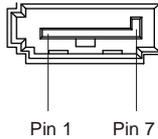

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX0+	DIFF	
3	SATA_TX0-	DIFF	
4	GND	GND	
5	SATA_RX0-	DIFF	
6	SATA_RX0+	DIFF	

Pin	Pin Name	Signal Type	Signal Level
7	GND	GND	

2.57 SATA Port 2 (SATA2)

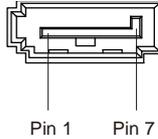

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX1+	DIFF	
3	SATA_TX1-	DIFF	
4	GND	GND	
5	SATA_RX1-	DIFF	
6	SATA_RX1+	DIFF	
7	GND	GND	

2.58 DDR3L SODIMM (DIMM1)

Standard Specification

Chapter

3

**AMI
BIOS Setup**

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The EPIC-BDU7 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM and BIOS NVRAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press or <F2> immediately. This will allow you to enter Setup.

Main

Set the date, use tab to switch between date elements.

Advanced

Enable/disable boot option for legacy network devices.

Chipset

Host bridge parameters.

Boot

Enables/disables quiet boot option.


Security

Set setup administrator password.

Save & Exit

Exit system setup after saving the changes.


Setup submenu: Main

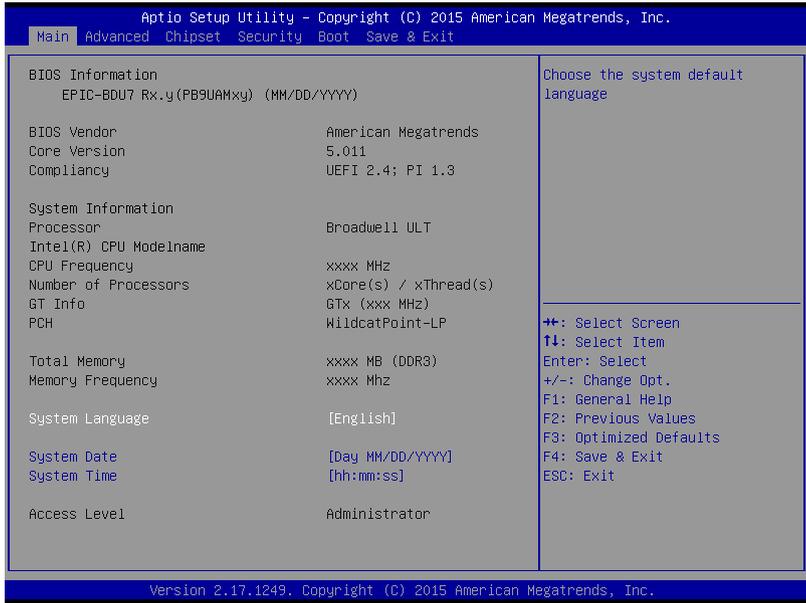

Options summary: **(default setting)**

System Language	English	
Only English support in this BIOS		
System Date	Day MM:DD:YYYY	
Change the month, year and century. The 'Day' is changed automatically.		
System Time	HH : MM : SS	
Change the clock of the system.		

Setup submenu: Advanced

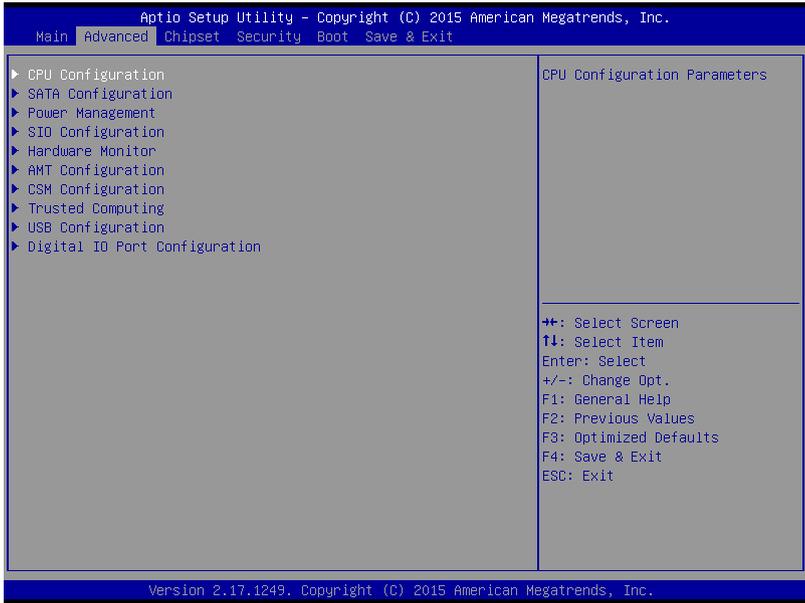

Options summary: **(default setting)**

CPU Configuration		
CPU Configuration Parameters		
SATA Configuration		
SATA Controller/ Serial ATA Port Parameters		
Power Management		
System ACPI/Power Mode/Wake Event Configuration		
SIO Configuration		
Super IO Configuration Parameters		
Hardware Monitor		
Monitor hardware status		

AMT Configuration		
AMT Configuration Settings		
CSM Configuration		
CSM Configuration Parameters		
Trusted Computing		
Trusted Computing Settings		
USB Configuration		
USB Configuration Parameters		
Digital IO Port Configuration		
DIO configuration		

CPU Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

CPU Configuration		Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.
Intel(R) CPU ModelName	306d4	
CPU Signature	XX	
Microcode Patch	XXXX MHz	
Max CPU Speed	XXX MHz	
Min CPU Speed	XXXX MHz	
CPU Speed	X	
Processor Cores	Supported	
64-bit	32 KB x 2	
L1 Data Cache	32 KB x 2	
L1 Code Cache	256 KB x 2	
L2 Cache	X MB	
L3 Cache	Not Present	
L4 Cache		
Hyper-threading	[Enabled]	
Active Processor Cores	[All]	
Limit CPUID Maximum	[Disabled]	
Execute Disable Bit	[Enabled]	
Intel Virtualization Technology	[Enabled]	
EIST	[Enabled]	
Turbo Mode	[Enabled]	
CPU C states	[Enabled]	
Enhanced C1 state	[Enabled]	

++: Select Screen
 F1: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: (default setting)

Hyper-threading	Disabled	
	Enabled	
Enable for Windows XP		
Active Processor Cores	All	
	1~4	
All for Windows XP		
Limit CPUID Maximum	Disabled	
	Enabled	
Disabled for Windows XP		

Execute Disable Bit	Disabled	
	Enabled	
En/Disable XD bit for supporting OS		
Intel Virtualization Technology	Disabled	
	Enabled	
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology		
EIST	Disabled	
	Enabled	
Enable/Disable Intel SpeedStep		
Turbo Mode	Disabled	
	Enabled	
Enabled for Windows XP		
CPU C States	Disabled	
	Enabled	
Enable/Disable CPU C States		
Enhanced C1 state	Disabled	
	Enabled	
Enabled for Windows XP		
CPU C3 Report	Disabled	
	Enabled	
Enable/Disable CPU C3 report to OS		
CPU C6 report	Disabled	
	Enabled	

Enable/Disable CPU C6 report to OS		
CPU C7 report	Disabled	
	CPU C7	
	CPU C7s	
Enable/Disable CPU C7 report to OS		
ACPI CTDTP BIOS	Disabled	
	Enabled	
Enable/Disable ACPI CTDTP BIOS support		
Configurable TDP	TDP NOMINAL	
	TDP DOWN	
	TDP UP	
	Disabled	
Allow reconfiguration of TDP levels base on current power and thermal delivery capabilities of the system		
Config TDP LOCK	Disabled	
	Enabled	
Lock the Config TDP Control register		
Intel TXT (LT) Support	Disabled	
	Enabled	
Enable/Disable Intel(R) TXT (LT) Support		

SATA Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

SATA Configuration		Enable or disable SATA Device.
SATA Controller(s)	[Enabled]	
SATA Controller Speed	[Default]	
Serial ATA Port 1	Drive ModeName	
Port	[Enabled]	
Hot Plug	[Disabled]	
Serial ATA Port 2	Drive ModeName	
Port	[Enabled]	
Hot Plug	[Disabled]	
mSATA Port	Drive ModeName	
Port	[Enabled]	
Hot Plug	[Disabled]	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

SATA Controller(s)	Disabled	
	Enabled	
En/Disable SATA Device		
SATA Controller Speed	Default	
	Gen1	
	Gen2	
	Gen3	
Indicates the maximum speed the SATA controller can support		
SATA Port1/Port2/mSATA	Enabled	

Port	Disabled	
Enabled/Disabled SATA Port1/Port2		
HotPlug	Disabled	
	Enabled	
Enabled/Disabled SATA Port1/Port2 HotPlug function		

Power Management

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

<p>Power Management</p> <p>Power Mode [ATX Type] Auto Power Button Enabled Power Saving(ERP) Control [Disabled] Restore AC Power Loss [Last State]</p> <p>ACPI Settings Enable Hibernation [Enabled] ACPI Sleep State [S3 (Suspend to RAM)]</p> <p>Wake Configuration ▶ S5 RTC Wake Settings PME/Ring [Enabled]</p>	<p>Select system power mode.</p> <hr/> <p> ++: Select Screen T4: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	--

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: (default setting)

Power Mode	ATX Type	
	AT Type	

Select system power mode		
Power Saving (ERP)	Disabled	
Control	Enabled	
Configure power mode for power saving function		
Restore AC Power Loss	Power Off	
	Power on	
	Late State	
Select AC power state when power is re-applied after a power failure		
Enable Hibernation	Enabled	
	Disabled	
Enabled or disabled system ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.		
ACPI Sleep State	Suspend Disabled	
	S3 only(Suspend to RAM)	
Select highest ACPI sleep state the System will enter when the Suspend button is pressed		
S5 RTC Wake Settings		
Enable system to wake from S5 using RTC alarm.		
PME/Ring	Enabled	
	Disabled	
Use RI or PME to wake system from sleep state		

RTC Wake Settings

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

Wake system with Fixed Time	[Enabled]	Enable or disable System wake on alarm event. When enabled, System will wake on the hr::min::sec specified
Wake up day	0	
Wake up hour	0	
Wake up minute	0	
Wake up second	0	
Wake system with Dynamic Time		
Wake up minute increase	[Disabled]	
	1	

++: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.17.1249, Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Wake system with Fixed Time	Disabled	
	Enabled	
Enable or disable System wake on alarm event. Wake up time is setting by following settings.		
Wake up day	0-31	
Select 0 for daily system wake up 1-31 for which day of the month that you would like the system to wake up		
Wake up hour	0-23	

Wake up minute	0-59	
Wake up second	0-59	
Wake system with	Disabled	
Dynamic Time	Enabled	
Enable or disable System wake on alarm event. Wake up time is current time + Increase minutes.		
Wake up minute increase	1-5	

SIO Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

<p>AMI SIO Driver Version : A5.05.03</p> <p>Super IO Chip Logical Device(s) Configuration</p> <ul style="list-style-type: none"> ▶ [*Active*] Serial Port 1 ▶ [*Active*] Serial Port 2 ▶ [*Active*] Serial Port 3 ▶ [*Active*] Serial Port 4 ▶ [*Active*] Serial Port 5 ▶ [*Active*] Serial Port 6 ▶ [Disabled] Parallel Port <p>WARNING: Logical Devices state on the left side of the control, reflects the current Logical Device state. Changes made during Setup Session will be shown after you restart the system.</p>	<p>View and Set Basic properties of the SIO Logical device. Like IO Base, IRQ Range, DMA Channel and Device Mode.</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	---

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: (default setting)

Serial Port 1/2/3/4/5/6		
Configuration		
Set Parameters of Serial Port 1/2/3/4/5/6		
Parallel Port Configuration		
Set Parameters of Parallel Port		

Serial Port 1/2/3/4/5/6 Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

<p>Serial Port x Configuration</p> <p>Use This Device [Enabled]</p> <p>Logical Device Settings: Current : ID=xxxh; IRQ=x;</p> <p>Possible: [Auto]</p> <p>WARNING: Disabling SIO Logical Devices may have unwanted side effects. PROCEED WITH CAUTION.</p>	<p>Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
---	---

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Use This Device	Disabled	
	Enabled	
En/Disable specified serial port.		
Possible (COM1)	Auto	
	IO=3F8h; IRQ=4; DMA;	
	IO=3F8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
	IO=2F8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
	IO=3E8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
	IO=2E8h; IRQ=3,4,5,7,9,10,11,12; DMA;	

Possible (COM2)	Auto	
	IO=2F8h; IRQ=3; DMA;	
	IO=3F8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
	IO=2F8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
	IO=3E8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
	IO=2E8h; IRQ=3,4,5,7,9,10,11,12; DMA;	
Possible (COM3)	Auto	
	IO=3E8h; IRQ=7; DMA	
	IO=3E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2F0h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2E0h; IRQ=3,4,5,6,7,10,11,12; DMA	
Possible (COM4)	Auto	
	IO=2E8h; IRQ=7; DMA	
	IO=3E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2F0h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2E0h; IRQ=3,4,5,6,7,10,11,12; DMA	
Possible (COM5)	Auto	
	IO=2D0h; IRQ=7; DMA	
	IO=3E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2D0h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2C0h; IRQ=3,4,5,6,7,10,11,12; DMA	

Possible (COM6)	Auto	
	IO=2C0h; IRQ=7; DMA	
	IO=3E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2E8h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2D0h; IRQ=3,4,5,6,7,10,11,12; DMA	
	IO=2C0h; IRQ=3,4,5,6,7,10,11,12; DMA	
Select a resource setting for Super IO device.		
Mode	RS232	
	RS422	
	RS485	
Configure COM operated as RS232, RS422 or RS485. Only COM2 and COM3 support this function.		

Parallel Port Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

<p>Parallel Port Configuration</p> <p>Use This Device [Disabled]</p> <p>WARNING: Disabling SIO Logical Devices may have unwanted side effects. PROCEED WITH CAUTION.</p>	<p>Enable or Disable this Logical Device.</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
---	---

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Parallel Port	Disabled	
	Enabled	
En/Disable specified this Logical Device		
Note: LPT and DIO feature share the same interface CN9 on the board. When LPT disabled, the interface works in DIO mode and vice versa.		
Possible	Auto	
STD Printer	IO=378h; IRQ=5;	
SPP	IO=378h; IRQ=5,6,7,9,10,11,12;	
EPP and SPP	IO=278h; IRQ=5,6,7,9,10,11,12;	

		IO=3BCh; IRQ=5,6,7,9,10,11,12;	
	ECP	IO=378h; IO=778h; IRQ=5; DMA=3;	
	ECP and EPP	IO=378h; IO=778h;	
		IRQ=5,6,7,9,10,11,12; DMA=1,3;	
		IO=278h; IO=678h;	
		IRQ=5,6,7,9,10,11,12; DMA=1,3;	
		IO=3BCh; IO=7BCh;	
		IRQ=5,6,7,9,10,11,12; DMA=1,3;	

Select a resource setting for Super IO device.

Mode	STD Print Mode	
	SPP Mode	
	EPP-1.9 and SPP Mode	
	EPP-1.7 and SPP Mode	
	ECP Mode	
	ECP and EPP 1.9 Mode	
	ECP and EPP 1.7 Mode	

Change Parallel Port mode.

Hardware Monitor

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced

<p>Pc Health Status</p> <p>Smart Fan [Enabled]</p> <p>▶ Smart Fan Configuration</p> <p>CPU temperature : System temperature : Fan Speed : VCORE : VMEM : +12V : +5V : 5VSB : VBAT :</p>	<p>Enable or Disable Smart Fan</p> <hr/> <p>++: Select Screen ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>
---	---

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: (**default setting**)

Smart Fan	Disabled	
	Enabled	
En/Disable specified Smart Fan.		

Smart Fan Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Advanced


<p>Smart Fan Mode Configuration</p> <p>Fan Mode [Auto Duty]</p> <p>Duty Cycle 1 85 Temperature 1 60</p> <p>Duty Cycle 2 70 Temperature 2 50</p> <p>Duty Cycle 3 60 Temperature 3 40</p> <p>Duty Cycle 4 50 Temperature 4 30</p> <p>Duty Cycle 5 40</p>	<p>Smart Fan Mode Select</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	--

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Fan Mode	Manual Duty	
	Auto Duty	
Smart Fan Mode Select		

AMT Configuration

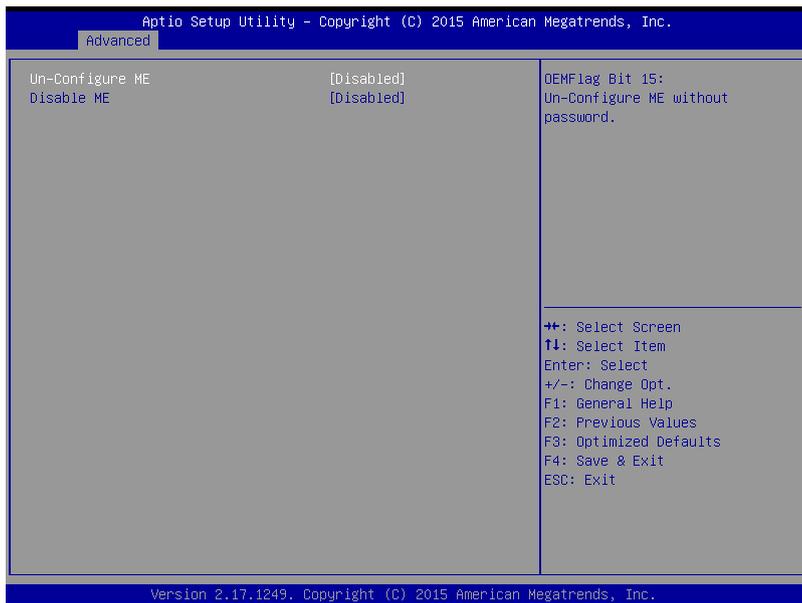

Options summary: (**default setting**)

Un-Configure ME	Disabled	
	Enabled	
Un-configure ME without password.		
Disable ME	Disabled	
	Enabled	
Set ME to soft Temporary Disabled.		

CSM Configuration



Options summary: (**default setting**)

Option ROM Messages	Force BIOS	
	Keep Current	
Set display mode for Option ROM		
Boot option filter	UEFI and Legacy	
	Legacy only	
	UEFI only	
Legacy/UEFI ROMs priority		
Storage/Video	Do not launch	
	UEFI	

	Legacy	
Controls the execution of UEFI and Legacy Storage OpROM		
Other PCI devices	Do not launch	
	UEFI	
	Legacy	
Determines OpROM execution policy for devices other than Network, Storage, or Video		

Trusted Computing

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Main

<p>Configuration</p> <p>Security Device Support [Enable]</p> <p>TPM State [Disabled]</p> <p>Pending operation [None]</p> <p>Device Select [Auto]</p> <p>Current Status Information</p> <p>TPM Enabled Status: [Disabled]</p> <p>TPM Active Status: [Deactivated]</p> <p>TPM Owner Status: [Owned]</p>	<p>Enables or Disables BIOS support for security device. U.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.</p> <p>++: Select Screen f1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>
--	---

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Security Device Support	Disabled	
	Enabled	
En/Disable TPM support.		
TPM State	Disabled	
	Enabled	
En/Disable TPM functionality.		
Pending TPM Operation	None	
	TPM Clear	
Select one-time TPM operation. Item value returns to 'None' after next POST.		

Device Select	Auto	
	TPM 1.2	
	TPM 2.0	
Set Auto option for Device Select		

USB Configuration




Options summary: **(default setting)**

Legacy USB Support	Enabled	
	Disabled	
	Auto	
<p>Enables BIOS Support for Legacy USB Support. When enabled, USB can be functional in legacy environment like DOS. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI application</p>		
USB Mass Storage Driver Support	Disabled	
	Enabled	

Enable/Disable USB Mass Storage Driver Support

Digital IO Port Configuration

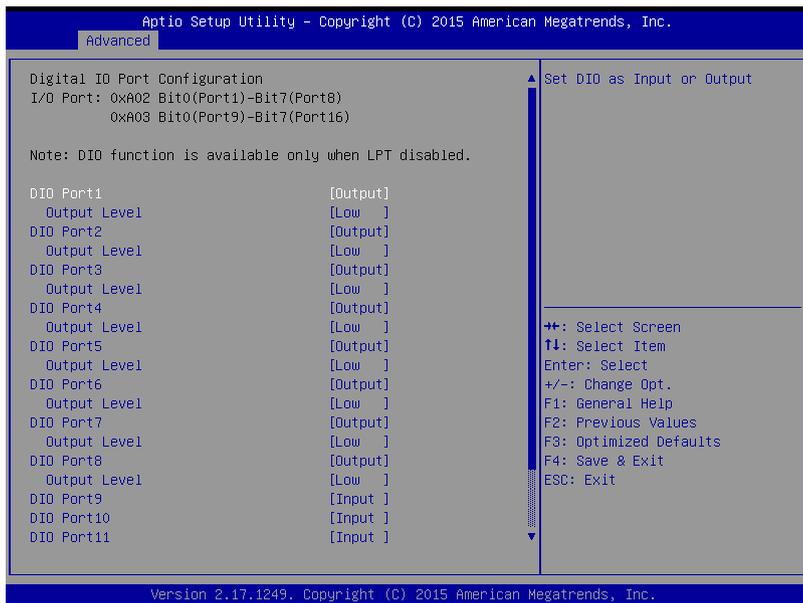


Options summary: (default setting)

DIO Port	Input	
1/2/3/4/5/6/7/8	Output	
Set DIO Port 1/2/3/4/5/6/7/8 as Input or Output		
DIO Port	Input	
9/10/11/12/13/14/15/16	Output	
Set DIO Port 9/10/11/12/13/14/15/16 as Input or Output		
Output Level	Hi	
	Low	

Set GPIO Level when used as Output

Setup submenu: Chipset

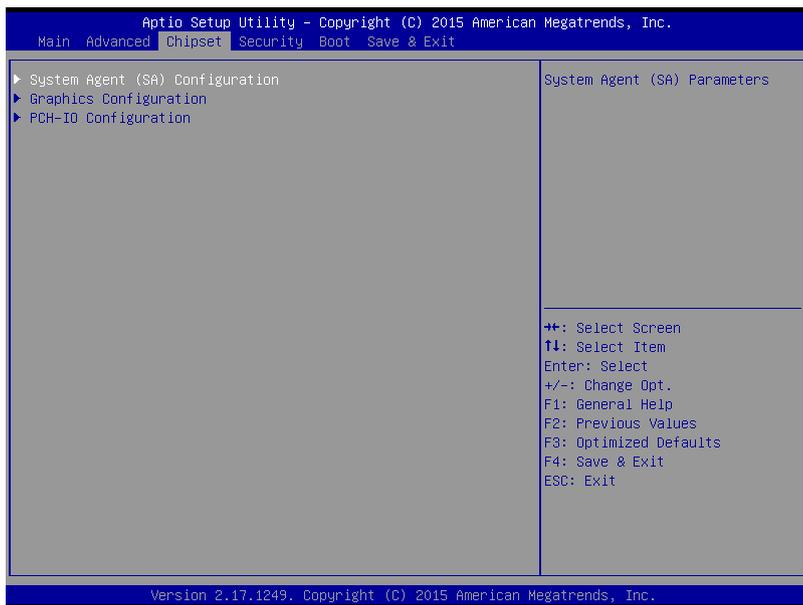

Options summary: **(default setting)**

System Agent (SA)		
Configuration		
System Agent (SA) Parameters		
Graphics Configuration		
Configure Graphics Settings.		
PCH-IO Configuration		
Configure PCH Parameters		

System Agent (SA) Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Chipset

<p>Memory Information</p> <p>Total Memory xxxxx MB (DDR3)</p> <p>Memory Frequency xxxxx Mhz</p> <p>Memory Voltage 1.35v</p> <p>Memory Frequency Limiter [Auto]</p> <p>Max TOLUD [Dynamic]</p> <p>Memory Remap [Enabled]</p>	<p>Maximum Memory Frequency Selections in Mhz.</p> <p>++: Select Screen ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>
--	--


Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Memory Frequency Limiter	Auto	
	1333	
	1600	
Maximum Memory Frequency Selections in Mhz.		
Max TOLUD	Dynamic	
	1 GB	
	1.25 GB	
	1.5 GB	
	1.75 GB	

	2 GB	
	2.25 GB	
	2.5 GB	
	2.75 GB	
	3 GB	
	3.25 GB	
<p>Maximum Value of TOLOUD.</p> <p>Dynamic assignment would adjust TOLUD automatically base on largest MMIO length of installed graphic controller.</p>		
Memory Remap	Enabled	
	Disabled	
<p>Enabled/Disabled Memory Remap above 4G.</p>		

Graphics Configuration

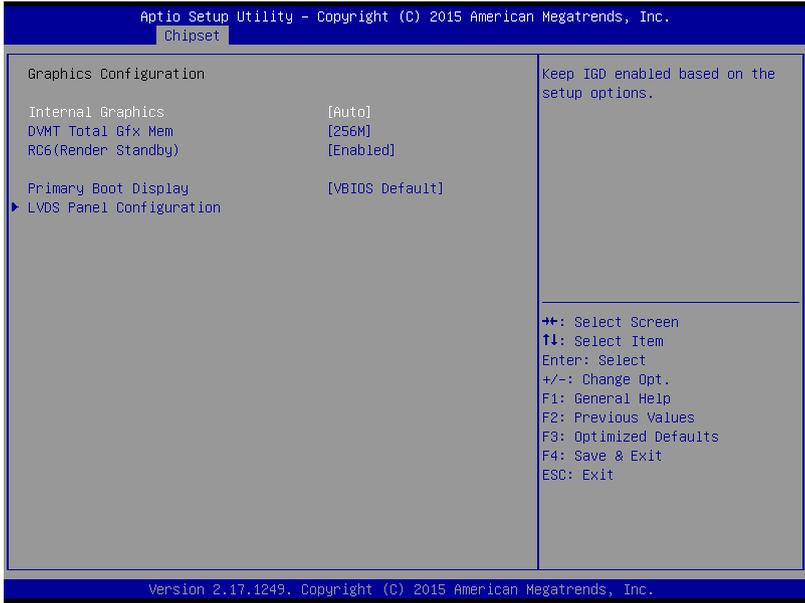


Options summary: (*default setting*)

Internal Graphics	Auto	
	Disabled	
	Enabled	
Keep IGD enabled based on the setup option.		
DVMT Total Gfx Mem	128M	
	256M	
	MAX	
Select DVMT5.0 Total Graphic Memory size used by the internal Graphic Device.		

RC6(Render Standby)	Disabled	
	Enabled	
Check to enable render standby support.		
Primary Boot Display	VBIOS Default	
	CRT	
	LVDS1	
	DisplayPort	
<p>Select the Video Device which will be activated during POST.</p> <p>This has no effect if external graphics present. Secondary boot display selection will appear based on your selection.</p> <p>VGA modes will be supported only on primary display</p>		

LVDS Panel Configuration

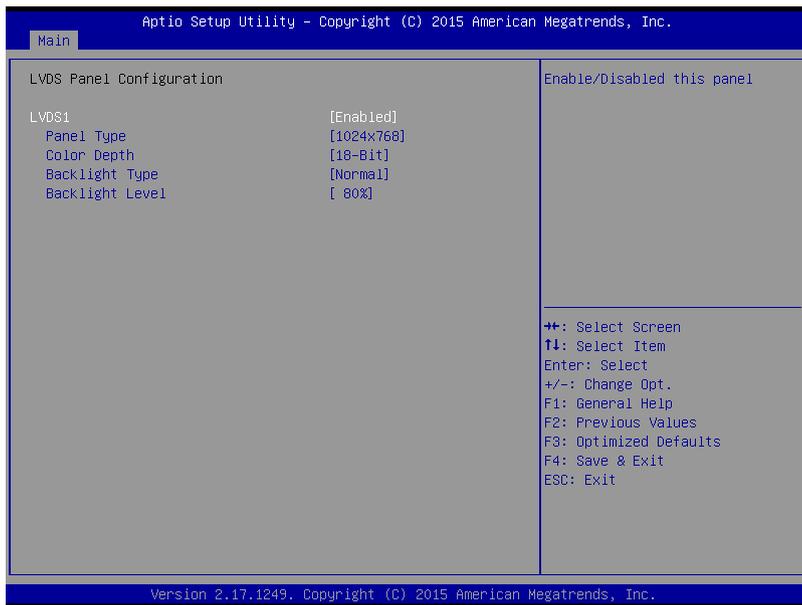

Options summary: (**default setting**)

LVDS1	Disabled	
	Enabled	
Enable or Disable LVDS interface		
Panel Type	640x480	
	800x480	
	800x600	
	1024x600	
	1024x768	
	1280x768	

	1280x1024	
	1366x768	
	1440x900	
	1600x1200	
	1920x1080	
	1920x1200	
Select panel resolution.		
Color Depth	18-Bit	
	24-Bit	
	36-Bit	
	48-Bit	
Select color depth of the panel		
Backlight Type	Inverted	
	Normal	
Select Backlight control type.		
Inverted: Brightest for low PWM duty cycle and low voltage.		
Normal: Brightest for high PWM duty cycle and high voltage.		
Backlight Level	0%	
	10%	
	20%	
	30%	
	40%	
	50%	
	60%	

	70%	
	80%	
	90%	
	100%	
Select Backlight Level		

PCH-IO Configuration

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Chipset

<p>Azalia [Enabled]</p> <p>PCI Express Configuration</p> <p>Mini-card Slot 1(Half-size)</p> <p style="padding-left: 20px;">Hot Plug [Disabled]</p> <p style="padding-left: 20px;">ASPM [Auto]</p> <p style="padding-left: 20px;">PCIe Speed [Auto]</p> <p>Mini-card Slot 2(Full-size)</p> <p>Mode [mSATA]</p> <p>Onboard LAN2 NIC(Intel i211)</p> <p style="padding-left: 20px;">ASPM [Auto]</p> <p>SLP_S4 Assertion Width [4-5 Seconds]</p>	<p>Control Detection of the Azalia device. Disabled = Azalia will be unconditionally disabled Enabled = Azalia will be unconditionally Enabled Auto = Azalia will be enabled if present, disabled otherwise.</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	---

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: (default setting)

Azalia	Disabled	
	Enabled	
Enable or disabled Azalia device for audio function.		
Hot Plug for Mini-card Slot 1(Half-size)	Disabled	
Mini-card Slot 2(Full-size)	Enabled	
Enabled/Disabled PCIe Hot Plug feature for the port.		
PCIe Speed for Mini-card Slot 1(Half-size)	Auto	
	Gen1	

Mini-card Slot 2(Full-size)	Gen2	
Select PCI Express port speed.		
ASPM for	Disabled	
Mini-card Slot 1(Half-size)	L0s	
Mini-card Slot 2(Full-size)	L1	
Onboard LAN2 NIC	L0sL1	
	Auto	
Set the ASPM Level:		
Force L0s-Force all links to L0s State		
AUTO-BIOS auto configure		
DISABLE-Disables ASPM		
Mini-card Slot 2(Full-size)	mSATA	
Mode	PCI Express	
Configure slot 2 function to PCIe or mSATA.		
SLP_S4 Assertion Width	Disabled	
	1-2 Seconds	
	2-3 Seconds	
	3-4 Seconds	
	4-5 Seconds	
Select a minimum assertion width of the SLP_S4# signal		

Setup submenu: Security

Aptio Setup Utility - Copyright (C) 2015 American Megatrends, Inc.

Main Advanced Chipset **Security** Boot Save & Exit

<p>Password Description</p> <p>If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.</p> <p>If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights.</p> <p>The password length must be in the following range:</p> <table style="width: 100%; border: none;"> <tr> <td style="padding-right: 20px;">Minimum length</td> <td style="text-align: right;">3</td> </tr> <tr> <td>Maximum length</td> <td style="text-align: right;">20</td> </tr> </table> <p>Administrator Password User Password</p>	Minimum length	3	Maximum length	20	<p>Set Administrator Password</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
Minimum length	3				
Maximum length	20				

Version 2.17.1249. Copyright (C) 2015 American Megatrends, Inc.

Options summary: **(default setting)**

Administrator Password/	Not set	
User Password		

You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

Install the Password:


Press Enter on this item, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation.

Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

Removing the Password:

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

Setup submenu: Boot

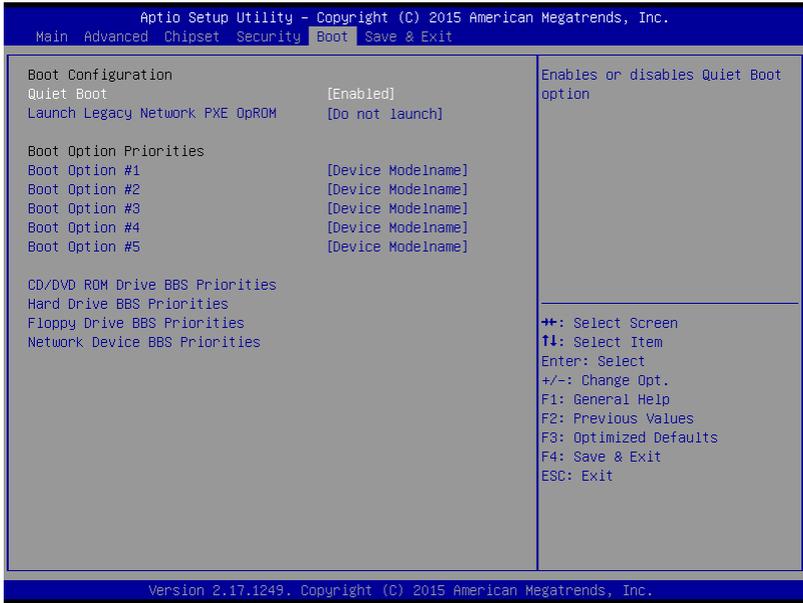


Options summary: (default setting)

Quiet Boot	Disabled	
	Enabled	
En/Disable showing boot logo.		
Launch Network PXE OpROM	Do not launch	
	UEFI	
	Legacy	
En/Disable network OpROM for PXE boot		
Boot Option #X/ XXXX Drive BBS Priorities		

The order of boot priorities.


BBS Priorities

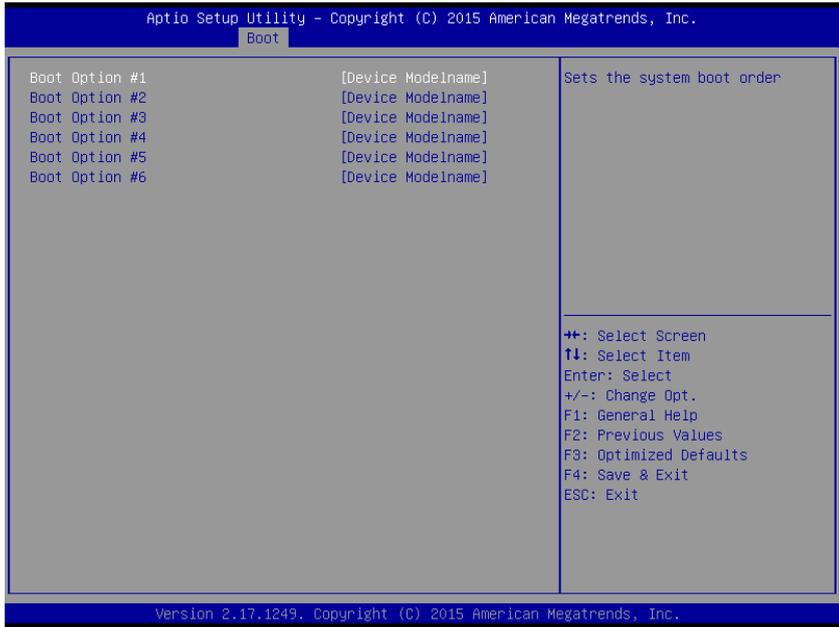

Options summary: (**default setting**)

Boot Option #x	Disabled	
	Device name	
Sets the system boot order		

Setup submenu: Exit

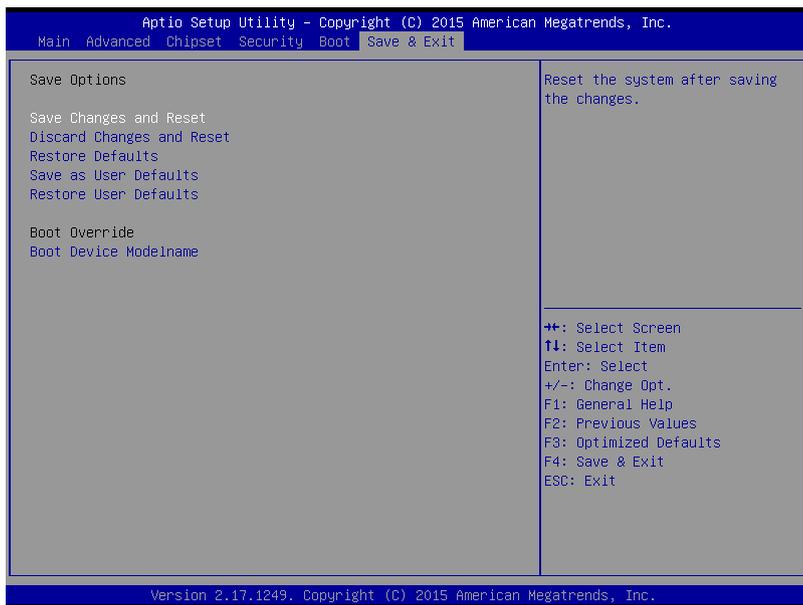

Options summary: **(default setting)**

Save Changes and Reset		
Reset the system after saving the changes		
Discard Changes and Reset		
Reset system setup without saving any changes		
Restore Defaults		
Restore/Load Default values for all the setup options.		
Save as User Defaults		
Save the changes done so far as User Defaults		
Boot Override		

Select the boot device for this boot.

Restore User Defaults		
-----------------------	--	--

Restore the User Defaults to all the setup options

Chapter

4

**Driver
Installation**

The EPIC-BDU7 comes with a driver disk that contains all drivers and utilities you need to setup your product.

Insert the disk and the installation guide will start automatically. If it doesn't, please follow the sequence below to install the drivers.

Follow the sequence below to install the drivers:

Step 1 – Install Chipset Driver

Step 2 – Install VGA Driver

Step 3 – Install Audio Driver

Step 4 – Install LAN Driver

Step 5 – Install ME SW Driver

Step 6 – Install Intel RST Driver

Step 7 – Install USB 3.0 (Windows 7 only)

Step 8 – Install Infineon TPM Driver (Optional)

Step 9 – Install PenMount Touch 6000 Series Driver
(Optional)

Step 10 – Install Serial Port Driver (Optional)

* Also included in the disk is **Microsoft.NET framework 4.5**, users may use this file, or go online for the latest version, when necessary.

Please read instructions below for further detailed installations.

4.1 Installation

Insert the EPIC-BDU7 driver disk into the disk drive and install the drivers from Step 1 to Step 10 in order.

Step 1 – Install Chipset Driver

1. Open the **STEP1 - CHIPSET** folder followed by **SetupChipset.exe**
2. Follow the instructions
3. Drivers will be installed automatically

* **Note:** There is a known issue in Windows® 8.1 whereby running Direct3D graphic tools such as BurnIn Test will cause the system to freeze. Microsoft has provided the KB2979265 hotfix to address to this issue. In order to install this hotfix without dependency issues, it is advised that users update their systems with Windows® Update first before installing the hotfix.

Step 2 – Install VGA Driver

1. Open the **STEP2 - VGA** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 3 – Install Audio Driver

1. Click on the **STEP3 - Audio** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 4 – Install LAN Driver

1. Open the **STEP4 - LAN** folder and select your OS
2. Open the **Setup.exe** file in the OS folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 5 – Install ME SW Driver

1. Open the **STEP5 - ME SW** folder and select your OS
2. Open the **MEISetup.exe** file in the OS folder (For Windows® 7, please install KMDf update first)
3. Follow the instructions
4. Drivers will be installed automatically

Step 6 – Install Intel RST Driver

1. Open the **STEP6 - Intel RST** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Step 7 – Install USB 3.0 Driver (Windows 7 only)

1. Open the **STEP7 - USB3.0** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Step 8 – Install Infineon TPM Driver (Optional)

1. Open the **STEP8 – Infineon TPM** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically


Step 9 – Install PenMount Touch 6000 Series Driver (Optional)

1. Open the **STEP9 – PenMount Touch 6000 Series** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically


Step 10 – Install Serial Port Driver (Optional)

For Windows 7:


1. Change User Account Control settings to **Never notify**

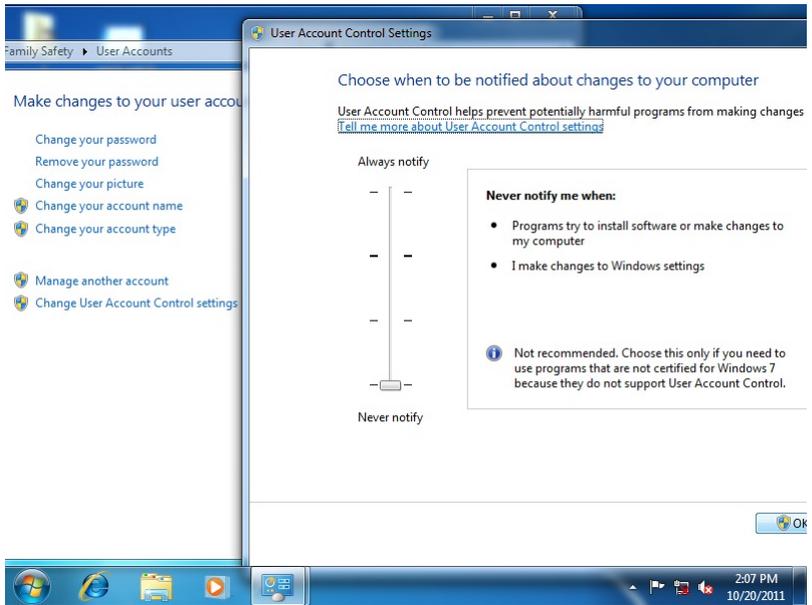

2. Reboot and log in as administrator

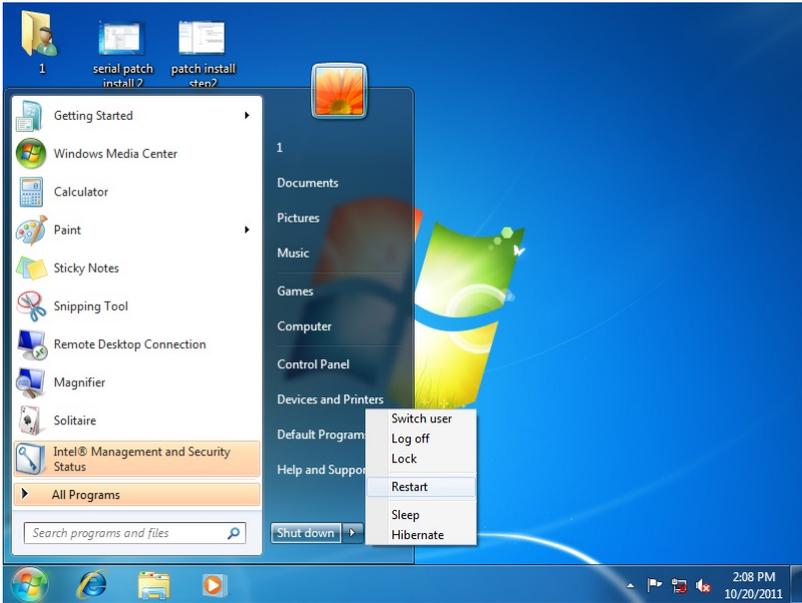


3. Run patch.bat as administrator

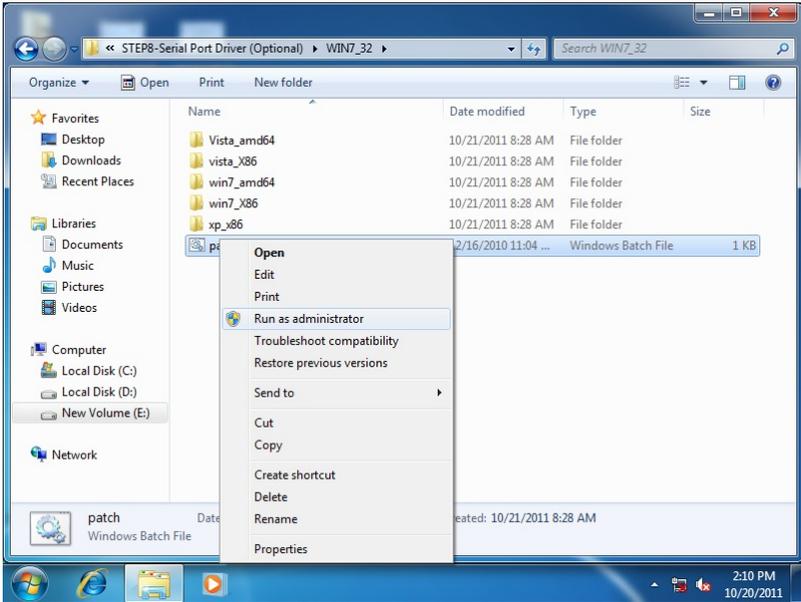

For Windows 8/ Windows 10:

1. Open the Apps Screen, right click on the **Command Prompt** tile and select **Run as Administrator**

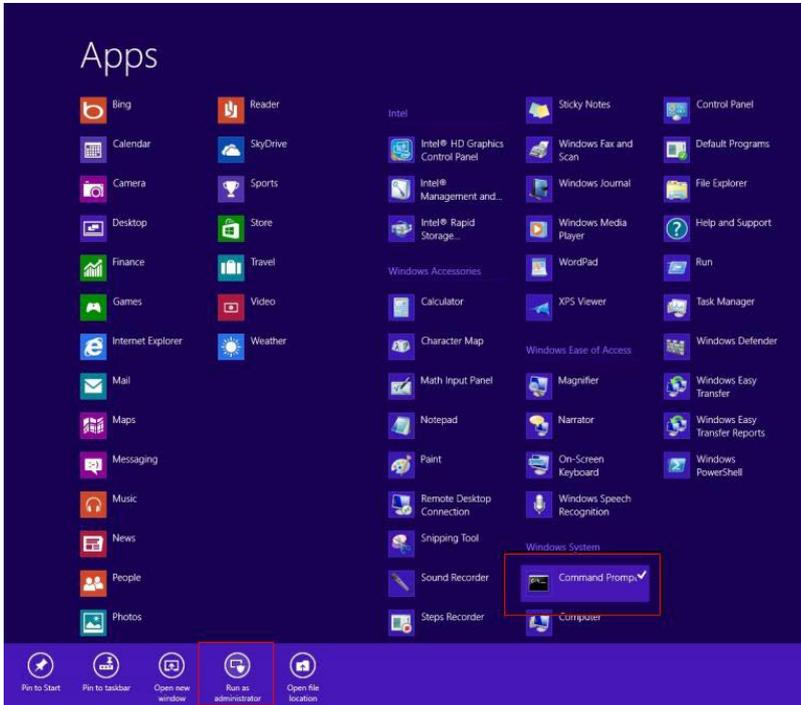

- To install the driver (patch.bat), you will first have to locate the file in command prompt. To do that, first go to the directory which contains the file by entering **<drive letter>**: eg. if the driver is in D drive, enter **D:**
- You are now at the directory containing the installation file. Next, go to the folder in which the file resides by entering **cd <folder>** eg: if the file is in a folder named abc, enter **cd <abc>**.
- You are now at the folder where the file is located. Enter the **patch.bat** to open and install the drivers. If your file is in a subfolder, enter the **cd <folder>** command again to access the subfolder (screenshot below is for reference only).

```
Administrator: Command Prompt

[Celeron 1020E performance] [gv-r5670c]
[AMD Windows Driver] [3dmark vantage .jpg]
[3d2011_x3209_.jpg] [3d2011_P8793_.jpg]
[IMBA-Q87A] [IMBA-Q87A]
[IMBA-Q87A 1.01 performance]
  9 File(s) 32,832,081 bytes
 30 Dir(s) 480,239,616 bytes free


G:\>cd imba-q87a
G:\IMBA-Q87A>dir/v
Volume in drive G is KINGSTON
Volume Serial Number is 54F5-FE9C

Directory of G:\IMBA-Q87A

[.] [..] [Step5 - LAN] [Step2 - UGA]
[Step8 - TPM] [Step1 - INF] [Step9 - RST] [Step7 - UART]
[Step3 - USB3_0] [Step4 - AUDIO] [Step6 - ME]
  0 File(s) 0 bytes
 11 Dir(s) 480,239,616 bytes free

G:\IMBA-Q87A>cd step7 - UART
G:\IMBA-Q87A\Step7 - UART>patch
```

5. Reboot after installation completes.
6. To confirm the installation, go to Device Manager, expand the Ports (COM & LPT) tree and double click on any of the COM ports to open its properties. Go to the Driver tab, select Driver Details and click on **serial.sys**, you should see its provider as **Windows (R) Win 7 DDK Provider**.

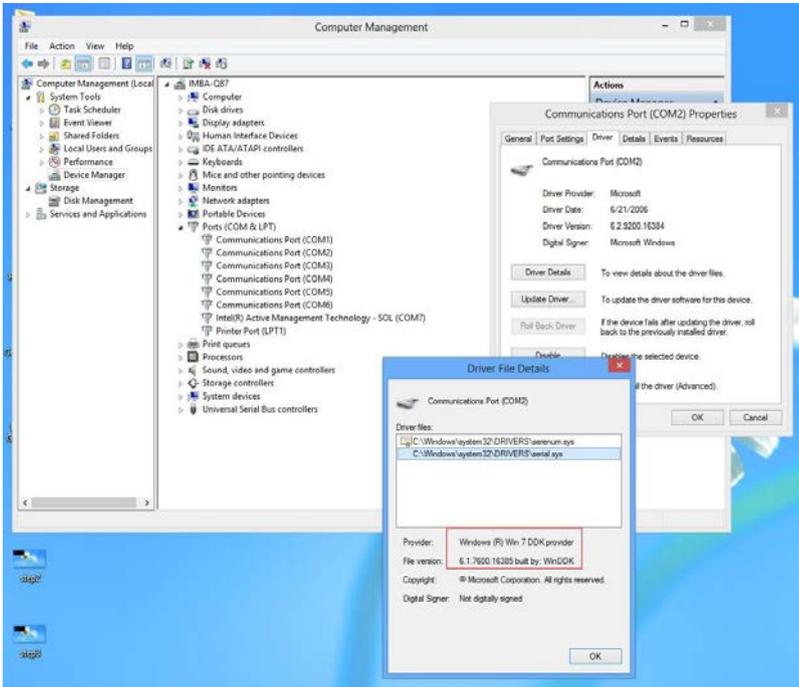

Appendix

A

Programming the Watchdog Timer

A.1 Watchdog Timer Registers

Table 1 : Watch dog relative IO address		
	Default Value	Note
I/O Base Address	0xA10	I/O Base address for Watchdog operation. This address is assigned by SIO LDN7, register 0x60-0x61.

Table 2 : Watchdog relative register table				
Register	Offset	BitNum	Value	Note
Watchdog WDRST# Enable	0x00	7	1	Enable/Disable time out output via WDRST# 0: Disable 1: Enable
Pulse Width	0x05	0:1	01	Width of Pulse signal 00: 1ms (do not use) 01: 25ms 10: 125ms 11: 5s Pulse width is must longer then 16ms.
Signal Polarity	0x05	2	0	0: low active 1: high active Must set this bit to 0
Counting Unit	0x05	3	0	Select time unit. 0: second 1: minute
Output Signal Type	0x05	4	1	0: Level 1: Pulse Must set this bit to 1
Watchdog Timer Enable	0x05	5	1	0: Disable 1: Enable
Timeout Status	0x05	6	1	1: timeout occurred. Write a 1 to clear timeout status
Timer Counter	0x06			Time of watchdog timer (0~255)

A.2 WatchDog Sample Program

```

*****
// WDT I/O operation relative definition (Please reference to Table 1)
#define WDTAddr      0x510 // WDT I/O base address
Void WDTWriteByte(byte Register, byte Value);
byte WDTReadByte(byte Register);
Void WDTSetReg(byte Register, byte Bit, byte Val);
// Watch Dog relative definition (Please reference to Table 2)
#define DevReg      0x00 // Device configuration register
    #define WDRstBit 0x80 // Watchdog WDRST# (Bit7)
    #define WDRstVal 0x80 // Enabled WDRST#
#define TimerReg    0x05 // Timer register
    #define PSWidthBit 0x00 // WDRST# Pulse width (Bit0:1)
    #define PSWidthVal 0x01 // 25ms for WDRST# pulse
    #define PolarityBit 0x02 // WDRST# Signal polarity (Bit2)
    #define PolarityVal 0x00 // Low active for WDRST#
    #define UnitBit     0x03 // Unit for timer (Bit3)
    #define ModeBit     0x04 // WDRST# mode (Bit4)
    #define ModeVal     0x01 // 0:level 1: pulse
    #define EnableBit   0x05 // WDT timer enable (Bit5)
    #define EnableVal   0x01 // 1: enable
    #define StatusBit   0x06 // WDT timer status (Bit6)
#define CounterReg  0x06 // Timer counter register
*****

*****
VOID Main(){
    // Procedure : AaeonWDTConfig
    // (byte)Timer : Counter of WDT timer.(0x00~0xFF)
    // (boolean)Unit : Select time unit(0: second, 1: minute).
    AaeonWDTConfig(Counter, Unit);

    // Procedure : AaeonWDTEnable
    // This procedure will enable the WDT counting.

```

```

    AaeonWDTEnable();
}
*****

*****

// Procedure : AaeonWDTEnable
VOID AaeonWDTEnable (){
    WDTEnableDisable(1);
}

// Procedure : AaeonWDTConfig
VOID AaeonWDTConfig (byte Counter, BOOLEAN Unit){
    // Disable WDT counting
    WDTEnableDisable(0);
    // Clear Watchdog Timeout Status
    WDTClearTimeoutStatus();
    // WDT relative parameter setting
    WDTParameterSetting(Timer, Unit);
}

VOID WDTEnableDisable(byte Value){
    If (Value == 1)
        WDTSetBit(TimerReg, EnableBit, 1);
    else
        WDTSetBit(TimerReg, EnableBit, 0);
}

VOID WDTParameterSetting(byte Counter, BOOLEAN Unit){
    // Watchdog Timer counter setting
    WDTWriteByte(CounterReg, Counter);
    // WDT counting unit setting
    WDTSetBit(TimerReg, UnitBit, Unit);
    // WDT output mode set to pulse
    WDTSetBit(TimerReg, ModeBit, ModeVal);
    // WDT output mode set to active low
    WDTSetBit(TimerReg, PolarityBit, PolarityVal);
    // WDT output pulse width is 25ms

```

```

    WDTSetBit(TimerReg, PSWidthBit, PSWidthVal);
    // Watchdog WDTRST# Enable
    WDTSetBit(DevReg, WDTRstBit, WDTRstVal);
}

VOID WDTClearTimeoutStatus(){
    WDTSetBit(TimerReg, StatusBit, 1);
}
*****

*****

VOID WDTWriteByte(byte Register, byte Value){
    IOWriteByte(WDTAddr+Register, Value);
}

byte WDTReadByte(byte Register){
    return IOReadByte(WDTAddr+Register);
}

VOID WDTSetBit(byte Register, byte Bit, byte Val){
    byte TmpValue;

    TmpValue = WDTReadByte(Register);
    TmpValue &= ~(1 << Bit);
    TmpValue |= Val << Bit;
    WDTWriteByte(Register, TmpValue);
}
*****

```

Appendix

B

I/O Information

B.1 I/O Address Map

	Input/output (IO)
	[0000000000000000 - 000000000000001F] Direct memory access controller
	[0000000000000000 - 0000000000000CF7] PCI Express Root Complex
	[0000000000000020 - 0000000000000021] Programmable interrupt controller
	[0000000000000024 - 0000000000000025] Programmable interrupt controller
	[0000000000000028 - 0000000000000029] Programmable interrupt controller
	[000000000000002C - 000000000000002D] Programmable interrupt controller
	[000000000000002E - 000000000000002F] Motherboard resources
	[0000000000000030 - 0000000000000031] Programmable interrupt controller
	[0000000000000034 - 0000000000000035] Programmable interrupt controller
	[0000000000000038 - 0000000000000039] Programmable interrupt controller
	[000000000000003C - 000000000000003D] Programmable interrupt controller
	[0000000000000040 - 0000000000000043] System timer
	[000000000000004E - 000000000000004F] Motherboard resources
	[0000000000000050 - 0000000000000053] System timer
	[0000000000000060 - 0000000000000060] Standard PS/2 Keyboard
	[0000000000000061 - 0000000000000061] Motherboard resources
	[0000000000000063 - 0000000000000063] Motherboard resources
	[0000000000000064 - 0000000000000064] Standard PS/2 Keyboard
	[0000000000000065 - 0000000000000065] Motherboard resources
	[0000000000000067 - 0000000000000067] Motherboard resources
	[0000000000000070 - 0000000000000070] Motherboard resources
	[0000000000000070 - 0000000000000077] System CMOS/real time clock
	[0000000000000080 - 0000000000000080] Motherboard resources
	[0000000000000081 - 0000000000000091] Direct memory access controller
	[0000000000000092 - 0000000000000092] Motherboard resources
	[0000000000000093 - 000000000000009F] Direct memory access controller
	[00000000000000A0 - 00000000000000A1] Programmable interrupt controller
	[00000000000000A4 - 00000000000000A5] Programmable interrupt controller
	[00000000000000A8 - 00000000000000A9] Programmable interrupt controller
	[00000000000000AC - 00000000000000AD] Programmable interrupt controller
	[00000000000000B0 - 00000000000000B1] Programmable interrupt controller

	[00000000000000B2 - 00000000000000B3]	Motherboard resources
	[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
	[00000000000000B8 - 00000000000000B9]	Programmable interrupt controller
	[00000000000000BC - 00000000000000BD]	Programmable interrupt controller
	[00000000000000C0 - 00000000000000DF]	Direct memory access controller
	[00000000000002E0 - 00000000000002E7]	Communications Port (COM6)
	[00000000000002E8 - 00000000000002EF]	Communications Port (COM4)
	[00000000000002F0 - 00000000000002F7]	Communications Port (COM5)
	[00000000000002F8 - 00000000000002FF]	Communications Port (COM2)
	[00000000000003B0 - 00000000000003BB]	Intel(R) HD Graphics 6000
	[00000000000003C0 - 00000000000003DF]	Intel(R) HD Graphics 6000
	[00000000000003E8 - 00000000000003EF]	Communications Port (COM3)
	[00000000000003F8 - 00000000000003FF]	Communications Port (COM1)
	[00000000000004D0 - 00000000000004D1]	Programmable interrupt controller
	[0000000000000680 - 000000000000069F]	Motherboard resources
	[0000000000000A00 - 0000000000000A0F]	Motherboard resources
	[0000000000000A10 - 0000000000000A1F]	Motherboard resources
	[0000000000000A20 - 0000000000000A2F]	Motherboard resources
	[0000000000000D00 - 000000000000FFFF]	PCI Express Root Complex
	[000000000000164E - 000000000000164F]	Motherboard resources
	[0000000000001800 - 00000000000018FE]	Motherboard resources
	[0000000000001854 - 0000000000001857]	Motherboard resources
	[0000000000003000 - 0000000000003FFF]	Mobile 5th Generation Intel(R) Core(TM) PCI Express
	[0000000000004000 - 000000000000403F]	Intel(R) HD Graphics 6000
	[0000000000004040 - 000000000000405F]	Mobile 5th Generation Intel(R) Core(TM) SMBus Cont
	[0000000000004060 - 000000000000407F]	Intel(R) 9 Series Chipset Family SATA AHCI Controller
	[00000000000040A0 - 00000000000040A3]	Intel(R) 9 Series Chipset Family SATA AHCI Controller
	[00000000000040B0 - 00000000000040B7]	Intel(R) 9 Series Chipset Family SATA AHCI Controller
	[00000000000040C0 - 00000000000040C3]	Intel(R) 9 Series Chipset Family SATA AHCI Controller
	[00000000000040D0 - 00000000000040D7]	Intel(R) 9 Series Chipset Family SATA AHCI Controller
	[000000000000FFFF - 000000000000FFFF]	Motherboard resources
	[000000000000FFFF - 000000000000FFFF]	Motherboard resources
	[000000000000FFFF - 000000000000FFFF]	Motherboard resources

4 Interrupt request (IRQ)

B.2 Memory Address Map

Address Range	Device Name
[0000000000A0000 - 0000000000BFFFFF]	Intel(R) HD Graphics 6000
[0000000000A0000 - 0000000000BFFFFF]	PCI Express Root Complex
[000000007E000000 - 00000000FEAFFFFF]	PCI Express Root Complex
[0000000080000000 - 000000008000FFFFF]	Motherboard resources
[0000000080010000 - 000000008001FFFFF]	Motherboard resources
[0000000081000000 - 0000000081FFFFFFF]	Intel(R) HD Graphics 6000
[0000000082000000 - 00000000827FFFFFFF]	Intel(R) I211 Gigabit Network Connection
[0000000082000000 - 00000000828FFFFFFF]	Mobile 5th Generation Intel(R) Core(TM) PCI Express
[0000000082800000 - 0000000082803FFFFF]	Intel(R) I211 Gigabit Network Connection
[0000000082900000 - 000000008291FFFFF]	Intel(R) Ethernet Connection I218-LM
[0000000082920000 - 000000008292FFFFF]	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Mi
[0000000082930000 - 0000000082933FFF]	High Definition Audio Controller
[0000000082934000 - 0000000082937FFF]	Mobile 5th Generation Intel(R) Core(TM) and Intel(R)
[0000000082938000 - 00000000829380FF]	Mobile 5th Generation Intel(R) Core(TM) SMBus Con
[0000000082939000 - 00000000829397FF]	Intel(R) 9 Series Chipset Family SATA AHCI Controlle
[000000008293A000 - 000000008293A3FF]	Mobile 5th Generation Intel(R) Core(TM) USB EHCI (
[000000008293B000 - 000000008293BFFF]	Intel(R) Ethernet Connection I218-LM
[000000008293E000 - 000000008293E01F]	Intel(R) Management Engine Interface
[0000000090000000 - 000000009FFFFFFF]	Intel(R) HD Graphics 6000
[00000000F8000000 - 00000000FBFFFFFFF]	Motherboard resources
[00000000FED00000 - 00000000FED003FF]	High precision event timer
[00000000FED10000 - 00000000FED17FFF]	Motherboard resources
[00000000FED18000 - 00000000FED18FFF]	Motherboard resources
[00000000FED19000 - 00000000FED19FFF]	Motherboard resources
[00000000FED1C000 - 00000000FED1FFFF]	Motherboard resources
[00000000FED20000 - 00000000FED3FFFF]	Motherboard resources
[00000000FED40000 - 00000000FED44FFF]	Trusted Platform Module 1.2
[00000000FED45000 - 00000000FED8FFFF]	Motherboard resources
[00000000FED90000 - 00000000FED93FFF]	Motherboard resources
[00000000FEE00000 - 00000000FEEFFFFFFF]	Motherboard resources
[00000000FF000000 - 00000000FFFFFFF]	Intel(R) 82802 Firmware Hub Device
[00000000FF000000 - 00000000FFFFFFF]	Intel(R) 82802 Firmware Hub Device
[00000000FF000000 - 00000000FFFFFFF]	Motherboard resources

B.3 IRQ Mapping Chart

Interrupt request (IRQ)	
 (ISA) 0x00000000 (00)	System timer
 (ISA) 0x00000001 (01)	Standard PS/2 Keyboard
 (ISA) 0x00000003 (03)	Communications Port (COM2)
 (ISA) 0x00000004 (04)	Communications Port (COM1)
 (ISA) 0x00000007 (07)	Communications Port (COM3)
 (ISA) 0x00000007 (07)	Communications Port (COM4)
 (ISA) 0x00000007 (07)	Communications Port (COM5)
 (ISA) 0x00000007 (07)	Communications Port (COM6)
 (ISA) 0x00000008 (08)	System CMOS/real time clock
 (ISA) 0x0000000B (11)	Mobile 5th Generation Intel(R) Core(TM) and Intel(R) Core(TM) M Audi
 (ISA) 0x0000000C (12)	Microsoft PS/2 Mouse
 (ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
 (ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
 (ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
 (ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
 (ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
 (ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
 (ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
 (ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
 (ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
 (ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
 (ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
 (ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
 (ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
 (ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
 (ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System

 (ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
 (ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
 (ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
 (ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
 (ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
 (ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
 (ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
 (ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
 (ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
 (ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
 (ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
 (ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
 (ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
 (ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
 (ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
 (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
 (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
 (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
 (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
 (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
 (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System

 (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
 (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
 (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
 (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
 (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
 (ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
 (ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
 (ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
 (ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
 (ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
 (ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
 (ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
 (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
 (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
 (ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System

 (ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
 (ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
 (ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
 (ISA) 0x000000BF (191)	Microsoft ACPI-Compliant System
 (ISA) 0x00000100 (256)	Microsoft ACPI-Compliant System
 (ISA) 0x00000101 (257)	Microsoft ACPI-Compliant System
 (ISA) 0x00000102 (258)	Microsoft ACPI-Compliant System
 (ISA) 0x00000103 (259)	Microsoft ACPI-Compliant System
 (ISA) 0x00000104 (260)	Microsoft ACPI-Compliant System

 (ISA) 0x00000105 (261)	Microsoft ACPI-Compliant System
 (ISA) 0x00000106 (262)	Microsoft ACPI-Compliant System
 (ISA) 0x00000107 (263)	Microsoft ACPI-Compliant System
 (ISA) 0x00000108 (264)	Microsoft ACPI-Compliant System
 (ISA) 0x00000109 (265)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010A (266)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010B (267)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010C (268)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010D (269)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010E (270)	Microsoft ACPI-Compliant System
 (ISA) 0x0000010F (271)	Microsoft ACPI-Compliant System
 (ISA) 0x00000110 (272)	Microsoft ACPI-Compliant System
 (ISA) 0x00000111 (273)	Microsoft ACPI-Compliant System
 (ISA) 0x00000112 (274)	Microsoft ACPI-Compliant System
 (ISA) 0x00000113 (275)	Microsoft ACPI-Compliant System
 (ISA) 0x00000114 (276)	Microsoft ACPI-Compliant System
 (ISA) 0x00000115 (277)	Microsoft ACPI-Compliant System
 (ISA) 0x00000116 (278)	Microsoft ACPI-Compliant System
 (ISA) 0x00000117 (279)	Microsoft ACPI-Compliant System
 (ISA) 0x00000118 (280)	Microsoft ACPI-Compliant System
 (ISA) 0x00000119 (281)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011A (282)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011B (283)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011C (284)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011D (285)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011E (286)	Microsoft ACPI-Compliant System
 (ISA) 0x0000011F (287)	Microsoft ACPI-Compliant System
 (ISA) 0x00000120 (288)	Microsoft ACPI-Compliant System
 (ISA) 0x00000121 (289)	Microsoft ACPI-Compliant System
 (ISA) 0x00000122 (290)	Microsoft ACPI-Compliant System
 (ISA) 0x00000123 (291)	Microsoft ACPI-Compliant System
 (ISA) 0x00000124 (292)	Microsoft ACPI-Compliant System

 (ISA) 0x00000125 (293)	Microsoft ACPI-Compliant System
 (ISA) 0x00000126 (294)	Microsoft ACPI-Compliant System
 (ISA) 0x00000127 (295)	Microsoft ACPI-Compliant System
 (ISA) 0x00000128 (296)	Microsoft ACPI-Compliant System
 (ISA) 0x00000129 (297)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012A (298)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012B (299)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012C (300)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012D (301)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012E (302)	Microsoft ACPI-Compliant System
 (ISA) 0x0000012F (303)	Microsoft ACPI-Compliant System
 (ISA) 0x00000130 (304)	Microsoft ACPI-Compliant System
 (ISA) 0x00000131 (305)	Microsoft ACPI-Compliant System
 (ISA) 0x00000132 (306)	Microsoft ACPI-Compliant System
 (ISA) 0x00000133 (307)	Microsoft ACPI-Compliant System
 (ISA) 0x00000134 (308)	Microsoft ACPI-Compliant System
 (ISA) 0x00000135 (309)	Microsoft ACPI-Compliant System
 (ISA) 0x00000136 (310)	Microsoft ACPI-Compliant System
 (ISA) 0x00000137 (311)	Microsoft ACPI-Compliant System
 (ISA) 0x00000138 (312)	Microsoft ACPI-Compliant System
 (ISA) 0x00000139 (313)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013A (314)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013B (315)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013C (316)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013D (317)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013E (318)	Microsoft ACPI-Compliant System
 (ISA) 0x0000013F (319)	Microsoft ACPI-Compliant System
 (ISA) 0x00000140 (320)	Microsoft ACPI-Compliant System
 (ISA) 0x00000141 (321)	Microsoft ACPI-Compliant System
 (ISA) 0x00000142 (322)	Microsoft ACPI-Compliant System
 (ISA) 0x00000143 (323)	Microsoft ACPI-Compliant System
 (ISA) 0x00000144 (324)	Microsoft ACPI-Compliant System

 (ISA) 0x00000145 (325)	Microsoft ACPI-Compliant System
 (ISA) 0x00000146 (326)	Microsoft ACPI-Compliant System
 (ISA) 0x00000147 (327)	Microsoft ACPI-Compliant System
 (ISA) 0x00000148 (328)	Microsoft ACPI-Compliant System
 (ISA) 0x00000149 (329)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014A (330)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014B (331)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014C (332)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014D (333)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014E (334)	Microsoft ACPI-Compliant System
 (ISA) 0x0000014F (335)	Microsoft ACPI-Compliant System
 (ISA) 0x00000150 (336)	Microsoft ACPI-Compliant System
 (ISA) 0x00000151 (337)	Microsoft ACPI-Compliant System
 (ISA) 0x00000152 (338)	Microsoft ACPI-Compliant System
 (ISA) 0x00000153 (339)	Microsoft ACPI-Compliant System
 (ISA) 0x00000154 (340)	Microsoft ACPI-Compliant System
 (ISA) 0x00000155 (341)	Microsoft ACPI-Compliant System
 (ISA) 0x00000156 (342)	Microsoft ACPI-Compliant System
 (ISA) 0x00000157 (343)	Microsoft ACPI-Compliant System
 (ISA) 0x00000158 (344)	Microsoft ACPI-Compliant System
 (ISA) 0x00000159 (345)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015A (346)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015B (347)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015C (348)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015D (349)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015E (350)	Microsoft ACPI-Compliant System
 (ISA) 0x0000015F (351)	Microsoft ACPI-Compliant System
 (ISA) 0x00000160 (352)	Microsoft ACPI-Compliant System
 (ISA) 0x00000161 (353)	Microsoft ACPI-Compliant System
 (ISA) 0x00000162 (354)	Microsoft ACPI-Compliant System
 (ISA) 0x00000163 (355)	Microsoft ACPI-Compliant System
 (ISA) 0x00000164 (356)	Microsoft ACPI-Compliant System

 (ISA) 0x00000165 (357)	Microsoft ACPI-Compliant System
 (ISA) 0x00000166 (358)	Microsoft ACPI-Compliant System
 (ISA) 0x00000167 (359)	Microsoft ACPI-Compliant System
 (ISA) 0x00000168 (360)	Microsoft ACPI-Compliant System
 (ISA) 0x00000169 (361)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016A (362)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016B (363)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016C (364)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016D (365)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016E (366)	Microsoft ACPI-Compliant System
 (ISA) 0x0000016F (367)	Microsoft ACPI-Compliant System
 (ISA) 0x00000170 (368)	Microsoft ACPI-Compliant System
 (ISA) 0x00000171 (369)	Microsoft ACPI-Compliant System
 (ISA) 0x00000172 (370)	Microsoft ACPI-Compliant System
 (ISA) 0x00000173 (371)	Microsoft ACPI-Compliant System
 (ISA) 0x00000174 (372)	Microsoft ACPI-Compliant System
 (ISA) 0x00000175 (373)	Microsoft ACPI-Compliant System
 (ISA) 0x00000176 (374)	Microsoft ACPI-Compliant System
 (ISA) 0x00000177 (375)	Microsoft ACPI-Compliant System
 (ISA) 0x00000178 (376)	Microsoft ACPI-Compliant System
 (ISA) 0x00000179 (377)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017A (378)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017B (379)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017C (380)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017D (381)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017E (382)	Microsoft ACPI-Compliant System
 (ISA) 0x0000017F (383)	Microsoft ACPI-Compliant System
 (ISA) 0x00000180 (384)	Microsoft ACPI-Compliant System
 (ISA) 0x00000181 (385)	Microsoft ACPI-Compliant System
 (ISA) 0x00000182 (386)	Microsoft ACPI-Compliant System
 (ISA) 0x00000183 (387)	Microsoft ACPI-Compliant System
 (ISA) 0x00000184 (388)	Microsoft ACPI-Compliant System

 (ISA) 0x00000185 (389)	Microsoft ACPI-Compliant System
 (ISA) 0x00000186 (390)	Microsoft ACPI-Compliant System
 (ISA) 0x00000187 (391)	Microsoft ACPI-Compliant System
 (ISA) 0x00000188 (392)	Microsoft ACPI-Compliant System
 (ISA) 0x00000189 (393)	Microsoft ACPI-Compliant System
 (ISA) 0x0000018A (394)	Microsoft ACPI-Compliant System
 (ISA) 0x0000018B (395)	Microsoft ACPI-Compliant System
 (ISA) 0x0000018C (396)	Microsoft ACPI-Compliant System
 (ISA) 0x0000018D (397)	Microsoft ACPI-Compliant System
 (ISA) 0x0000018E (398)	Microsoft ACPI-Compliant System
 (ISA) 0x0000018F (399)	Microsoft ACPI-Compliant System
 (ISA) 0x00000190 (400)	Microsoft ACPI-Compliant System
 (ISA) 0x00000191 (401)	Microsoft ACPI-Compliant System
 (ISA) 0x00000192 (402)	Microsoft ACPI-Compliant System
 (ISA) 0x00000193 (403)	Microsoft ACPI-Compliant System
 (ISA) 0x00000194 (404)	Microsoft ACPI-Compliant System
 (ISA) 0x00000195 (405)	Microsoft ACPI-Compliant System
 (ISA) 0x00000196 (406)	Microsoft ACPI-Compliant System
 (ISA) 0x00000197 (407)	Microsoft ACPI-Compliant System
 (ISA) 0x00000198 (408)	Microsoft ACPI-Compliant System
 (ISA) 0x00000199 (409)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019A (410)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019B (411)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019C (412)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019D (413)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019E (414)	Microsoft ACPI-Compliant System
 (ISA) 0x0000019F (415)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A0 (416)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A1 (417)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A2 (418)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A3 (419)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A4 (420)	Microsoft ACPI-Compliant System

 (ISA) 0x000001A5 (421)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A6 (422)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A7 (423)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A8 (424)	Microsoft ACPI-Compliant System
 (ISA) 0x000001A9 (425)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AA (426)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AB (427)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AC (428)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AD (429)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AE (430)	Microsoft ACPI-Compliant System
 (ISA) 0x000001AF (431)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B0 (432)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B1 (433)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B2 (434)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B3 (435)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B4 (436)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B5 (437)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B6 (438)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B7 (439)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B8 (440)	Microsoft ACPI-Compliant System
 (ISA) 0x000001B9 (441)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BA (442)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BB (443)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BC (444)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BD (445)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BE (446)	Microsoft ACPI-Compliant System
 (ISA) 0x000001BF (447)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C0 (448)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C1 (449)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C2 (450)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C3 (451)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C4 (452)	Microsoft ACPI-Compliant System

 (ISA) 0x000001C5 (453)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C6 (454)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C7 (455)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C8 (456)	Microsoft ACPI-Compliant System
 (ISA) 0x000001C9 (457)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CA (458)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CB (459)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CC (460)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CD (461)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System
 (ISA) 0x000001CF (463)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D0 (464)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D1 (465)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D2 (466)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D3 (467)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D4 (468)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D5 (469)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D6 (470)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D7 (471)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D8 (472)	Microsoft ACPI-Compliant System
 (ISA) 0x000001D9 (473)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DA (474)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DB (475)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DC (476)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DD (477)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DE (478)	Microsoft ACPI-Compliant System
 (ISA) 0x000001DF (479)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E0 (480)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E1 (481)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E2 (482)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E3 (483)	Microsoft ACPI-Compliant System
 (ISA) 0x000001E4 (484)	Microsoft ACPI-Compliant System

	(ISA) 0x000001E5 (485)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E6 (486)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E7 (487)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E8 (488)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E9 (489)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EA (490)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000B (11)	Mobile 5th Generation Intel(R) Core(TM) SMBus Controller - 9CA2
	(PCI) 0x00000010 (16)	PCI standard PCI-to-PCI bridge
	(PCI) 0x00000016 (22)	High Definition Audio Controller
	(PCI) 0x00000017 (23)	Mobile 5th Generation Intel(R) Core(TM) USB EHCI Controller - 9CA6
	(PCI) 0xFFFFFFFF4 (-12)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFFF5 (-11)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFFF6 (-10)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFFF7 (-9)	Intel(R) I211 Gigabit Network Connection
	(PCI) 0xFFFFFFFF8 (-8)	Intel(R) Ethernet Connection I218-LM
	(PCI) 0xFFFFFFFF9 (-7)	Intel(R) Management Engine Interface
	(PCI) 0xFFFFFFFFFA (-6)	Intel(R) HD Graphics 6000
	(PCI) 0xFFFFFFFFFB (-5)	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Microsoft)
	(PCI) 0xFFFFFFFFFC (-4)	Intel(R) 9 Series Chipset Family SATA AHCI Controller
	(PCI) 0xFFFFFFFFFD (-3)	Intel(R) 82801 PCI Bridge - 2448
	(PCI) 0xFFFFFFFFFE (-2)	Mobile 5th Generation Intel(R) Core(TM) PCI Express Root Port #4 - 9C9

B.4 DMA Channel Assignments

Memory	
[0000000000A0000 - 0000000000BFFFFF]	Intel(R) HD Graphics 6000
[0000000000A0000 - 0000000000BFFFFF]	PCI Express Root Complex
[000000007E000000 - 00000000FEAFFFFF]	PCI Express Root Complex
[0000000080000000 - 000000008000FFFFF]	Motherboard resources
[0000000080010000 - 000000008001FFFFF]	Motherboard resources
[0000000081000000 - 0000000081FFFFFFF]	Intel(R) HD Graphics 6000
[0000000082000000 - 00000000827FFFFFFF]	Intel(R) I211 Gigabit Network Connection
[0000000082000000 - 00000000828FFFFFFF]	Mobile 5th Generation Intel(R) Core(TM) PCI Express
[0000000082800000 - 0000000082803FFFFF]	Intel(R) I211 Gigabit Network Connection
[0000000082900000 - 000000008291FFFFF]	Intel(R) Ethernet Connection I218-LM
[0000000082920000 - 000000008292FFFFF]	Intel(R) USB 3.0 eXtensible Host Controller - 0100 (Mi
[0000000082930000 - 0000000082933FFFFF]	High Definition Audio Controller
[0000000082934000 - 0000000082937FFF]	Mobile 5th Generation Intel(R) Core(TM) and Intel(R)
[0000000082938000 - 00000000829380FFF]	Mobile 5th Generation Intel(R) Core(TM) SMBus Cont
[0000000082939000 - 00000000829397FFF]	Intel(R) 9 Series Chipset Family SATA AHCI Controller
[000000008293A000 - 000000008293A3FFF]	Mobile 5th Generation Intel(R) Core(TM) USB EHCI C
[000000008293B000 - 000000008293BFFFFF]	Intel(R) Ethernet Connection I218-LM
[000000008293E000 - 000000008293E01FFF]	Intel(R) Management Engine Interface
[0000000090000000 - 000000009FFFFFFF]	Intel(R) HD Graphics 6000
[00000000F8000000 - 00000000FBFFFFFFF]	Motherboard resources
[00000000FED00000 - 00000000FED003FFF]	High precision event timer
[00000000FED10000 - 00000000FED17FFF]	Motherboard resources
[00000000FED18000 - 00000000FED18FFF]	Motherboard resources
[00000000FED19000 - 00000000FED19FFF]	Motherboard resources
[00000000FED1C000 - 00000000FED1FFFF]	Motherboard resources
[00000000FED20000 - 00000000FED3FFFFF]	Motherboard resources
[00000000FED40000 - 00000000FED44FFF]	Trusted Platform Module 1.2
[00000000FED45000 - 00000000FED8FFFFF]	Motherboard resources
[00000000FED90000 - 00000000FED93FFF]	Motherboard resources
[00000000FEE00000 - 00000000FEFFFFFFF]	Motherboard resources
[00000000FF000000 - 00000000FFFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[00000000FF000000 - 00000000FFFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[00000000FF000000 - 00000000FFFFFFFFF]	Motherboard resources

Appendix

C

Mating Connectors

C.1 List of Mating Connectors and Cables

The table notes mating connectors and available cables.

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
CN1	Amplifier right channel output	Molex	51021-0200	N/A	N/A
CN2	Amplifier left channel output	Molex	51021-0200	N/A	N/A
CN3	ATX 4P Power In	Molex	39-01-2040	Power Cable	1702040151
CN4	+9~24V Vin Connector	N/A	N/A	Power Cable	1702002010
CN6	Audio Connector	Molex	51021-1000	Audio Cable	1709100254
CN7	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN8	Front Panel Connector	Molex	51021-1000	N/A	N/A
CN9	Digital I/O LPT Connector	Neltron	2026B-10	N/A LPT Cable	N/A 1701260308
CN10	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN11	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
CN14	+5Vout Connector	JST	PHR-2	2 Pins For SATA HDD Power	1702150155

EPIC Board**EPIC-BDU7**

CN17	CPU Fan Connector	Molex	22-01-2035	N/A	N/A
CN18	P/S2 KB/MS Connector	Molex	51021-0600	P/S2 KB/MS Cable	1700060158
CN19	Touch Screen Connector	JST	SHR-9V-S-B	N/A	N/A
CN21	COM Port 6 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN22	COM Port 5 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN23	COM Port 1 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN24	eDP/LVDS Inverter Connector	JST	PHR-5	N/A	N/A
CN25	eDP/LVDS Connector	HIROSE	DF13-30DS-1.25C	N/A	N/A
CN28	COM Port 4 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN29	COM Port 3 Connector	Molex	51021-0900	Serial Port Cable	1701090150
CN32	LVDS Connector	HIROSE	DF13-30DS-1.25C	N/A	N/A
CN36	LVDS Inverter Connector	JST	PHR-5	N/A	N/A
CN37	USB Port Connector	Molex	51021-0500	USB Wafer Cable	1700050207
BATTA1	External RTC Connector	Molex	51021-0200	Battery Cable	175011901C

Appendix

D

Electrical Specifications for I/O Ports

D.1 Electrical Specifications for I/O Ports

I/O	Reference	Signal Name	Rate Output
LVDS Port1/eDP Inverter/Backlight Connector	CN24	VDD	+5V/2A or +12V/2A
LVDS Port 2 Inverter/Backlight Connector	CN36	VDD	+5V/2A or +12V/2A
USB 3.0 Port 1 & 2	CN30	+5VSB	+5VSB/1A (per channel)
USB 2.0 Port 3	CN10	+5VSB	
USB 2.0 Port 4	CN7	+5VSB	+5VSB/0.5A
USB 2.0 Port 5	CN11	+5VSB	(per channel)
USB 2.0 Port 6	CN37	+5VSB	
Audio I/O Port	CN6	+5V	+5V/0.5A
LVDS Port 1	CN25	VCC	+3.3V/2A or +5V/2A
LVDS Port 2	CN32	VCC	+3.3V/2A or +5V/2A
COM Port 2	CN33B	+5V/+12V	+5V/1A or +12V/1A
COM Port 3	CN29	+5V/+12V	+5V/1A or +12V/1A
Digital IO Port	CN9	D0~D7	+5V/(Open drain)
PS/2 Keyboard/Mouse Combo Port	CN18	+5VSB	+5VSB/1A
CPU FAN	CN17	VDD	+12V/0.5A
+5V Output for SATA HDD	CN14	+5V	+5V/1A
VGA Ports	CN34	VGA: +5V	+5V/1A (reserved)
Mini-Card Slot	CN12 CN38	+3.3VSB +1.5V	+3.3V/1.1A +1.5V/0.375A

EPIC Board**EPIC-BDU7**

LPC Port	CN20	+3.3V	+3.3V/0.5A
LVDS Port1/eDP Inverter/Backlight Connector	CN24	VDD	+5V/2A or +12V/2A
LVDS Port 2 Inverter/Backlight Connector	CN36	VDD	+5V/2A or +12V/2A

Appendix

E

Digital I/O Ports

E.1 Electrical Specifications for Digital I/O Ports

Pin	Type	Input Threshold Voltage		Output Voltage		Note
		Low	High	Low	High	
DIO1	I/O	0.8	2.0	0	5	
DIO2	I/O	0.8	2.0	0	5	
DIO3	I/O	0.8	2.0	0	5	
DIO4	I/O	0.8	2.0	0	5	
DIO5	I/O	0.8	2.0	0	5	
DIO6	I/O	0.8	2.0	0	5	
DIO7	I/O	0.8	2.0	0	5	
DIO8	I/O	0.8	2.0	0	5	
DIO9	I/O	0.8	2.0	0	5	
DIO10	I/O	0.8	2.0	0	5	
DIO11	I/O	0.8	2.0	0	5	
DIO12	I/O	0.8	2.0	0	5	
DIO13	I/O	0.8	2.0	0	5	
DIO14	I/O	0.8	2.0	0	5	
DIO15	I/O	0.8	2.0	0	5	
DIO16	I/O	0.8	2.0	0	5	

Note: All DIO pins are 5V tolerance in input mode.

E.2 DI/O Programming

EPIC-BDU7 utilizes FINTEK F81866D chipset as its Digital I/O controller. Below are the procedures to complete its configuration and the AAeon initial DIO program is also attached based on which you can develop customized program to fit your application. There are three steps to complete the configuration setup: (1) Enter the MB PnP Mode; (2) Modify the data of configuration registers; (3) Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.

E.3 Digital I/O Register

	Default Value	Note
Index	0x2E	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F)	SIO MB PnP Mode Data Register 0x2F or 0x4F

	LDN	Register	Bit	Note
GPIO1 Direction	0x06	0x88	0	0:input, 1: output
GPIO2 Direction	0x06	0x88	1	
GPIO3 Direction	0x06	0x88	2	
GPIO4 Direction	0x06	0x88	3	
GPIO5 Direction	0x06	0x88	4	
GPIO6 Direction	0x06	0x88	5	
GPIO7 Direction	0x06	0x88	6	
GPIO8 Direction	0x06	0x88	7	
GPIO9 Direction	0x06	0x80	0	
GPIO10 Direction	0x06	0x80	1	
GPIO11 Direction	0x06	0x80	2	
GPIO12 Direction	0x06	0x80	3	
GPIO13 Direction	0x06	0x80	4	
GPIO14 Direction	0x06	0x80	5	
GPIO15 Direction	0x06	0x80	6	
GPIO16 Direction	0x06	0x80	7	
GPIO1 Output Level	0x06	0x89	0	0:low, 1: high
GPIO2 Output Level	0x06	0x89	1	
GPIO3 Output Level	0x06	0x89	2	
GPIO4 Output Level	0x06	0x89	3	
GPIO5 Output Level	0x06	0x89	4	
GPIO6 Output Level	0x06	0x89	5	
GPIO7 Output Level	0x06	0x89	6	
GPIO8 Output Level	0x06	0x89	7	

GPIO9 Output Level	0x06	0x81	0	
GPIO10 Output Level	0x06	0x81	1	
GPIO11 Output Level	0x06	0x81	2	
GPIO12 Output Level	0x06	0x81	3	
GPIO13 Output Level	0x06	0x81	4	
GPIO14 Output Level	0x06	0x81	5	
GPIO15 Output Level	0x06	0x81	6	
GPIO16 Output Level	0x06	0x81	7	
GPIO1 Status	0x06	0x8A	0	0:low, 1: high
GPIO2 Status	0x06	0x8A	1	
GPIO3 Status	0x06	0x8A	2	
GPIO4 Status	0x06	0x8A	3	
GPIO5 Status	0x06	0x8A	4	
GPIO6 Status	0x06	0x8A	5	
GPIO7 Status	0x06	0x8A	6	
GPIO8 Status	0x06	0x8A	7	
GPIO9 Status	0x06	0x82	0	
GPIO10 Status	0x06	0x82	1	
GPIO11 Status	0x06	0x82	2	
GPIO12 Status	0x06	0x82	3	
GPIO13 Status	0x06	0x82	4	
GPIO14 Status	0x06	0x82	5	
GPIO15 Status	0x06	0x82	6	
GPIO16 Status	0x06	0x82	7	

E.4 Digital I/O Sample Program

```

*****
// SuperIO relative definition (Please reference to Table 2)
#define SIOIndex 0x2E
#define SIOData 0x2F
#define DIOLDN 0x06
IOWriteByte(byte IOPort, byte Value);
IOWriteByte(byte IOPort);
// DIO relative definition (Please reference to Table 3)
#define DirReg_L 0x88 // 0:input, 1: output
#define DirReg_H 0x80 // 0:input, 1: output
    #define InputPin 0x00
    #define OutputPin 0x01
#define OutputReg_L 0x89 // 0:low, 1: high
#define OutputReg_H 0x81 // 0:low, 1: high
#define StatusReg_L 0x8A // 0:low, 1: high
#define StatusReg_H 0x82 // 0:low, 1: high
    #define PinLow 0x00
    #define PinHigh 0x01
#define Pin1Bit 0x00
#define Pin2Bit 0x01
#define Pin3Bit 0x02
#define Pin4Bit 0x03
#define Pin5Bit 0x04
#define Pin6Bit 0x05
#define Pin7Bit 0x06
#define Pin8Bit 0x07
#define Pin9Bit 0x08
#define Pin10Bit 0x09
#define Pin11Bit 0x0A
#define Pin12Bit 0x0B
#define Pin13Bit 0x0C
#define Pin14Bit 0x0D
#define Pin15Bit 0x0E
#define Pin16Bit 0x0F

```

```

VOID Main() {
    Boolean PinStatus ;

    // Procedure : AaeonReadPinStatus
    // Input :
    //     Example, Read Digital I/O Pin 3 status
    // Output :
    //     InputStatus :
    //         0: Digital I/O Pin level is low
    //         1: Digital I/O Pin level is High
    PinStatus = AaeonReadPinStatus(Pin3Bit);

    // Procedure : AaeonSetOutputLevel
    // Input :
    //     Example, Set Digital I/O Pin 2 to high level
    AaeonSetOutputLevel(Pin2Bit, PinHigh);
}

```

```

Boolean AaeonReadPinStatus(byte PinBit){
    Boolean PinStatus ;

    if (PinBit < Pin9Bit)
    {
        PinStatus = SIOBitRead(DIOLDN, StatusReg_L, PinBit);
    } else
    {
        PinStatus = SIOBitRead(DIOLDN, StatusReg_H, PinBit - Pin9Bit);
    }
    Return PinStatus ;
}

VOID AaeonSetOutputLevel(byte PinBit, byte Value){

```

```

ConfigDioMode(PinBit, OutputPin);
if (PinBit < Pin9Bit)
{
    SIOBitSet(DIOLDN, OutputReg_L, PinBit, Value);
} else
{
    SIOBitSet(DIOLDN, OutputReg_H, PinBit - Pin9Bit, Value);
}
}
*****

*****VOID
SIOEnterMBPnPMode(){
    IOWriteByte(SIOIndex, 0x87);
    IOWriteByte(SIOIndex, 0x87);
}

VOID SIOExitMBPnPMode(){
    IOWriteByte(SIOIndex, 0xAA);
}

VOID SIOSelectLDN(byte LDN){
    IOWriteByte(SIOIndex, 0x07); // SIO LDN Register Offset = 0x07
    IOWriteByte(SIOData, LDN);
}

VOID SIOBitSet(byte LDN, byte Register, byte BitNum, byte Value){
    Byte TmpValue;

    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= ~(1 << BitNum);
    TmpValue |= (Value << BitNum);
    IOWriteByte(SIOData, TmpValue);
    SIOExitMBPnPMode();
}

```

}

```
VOID SIOByteSet(byte LDN, byte Register, byte Value){
```

```
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    IOWriteByte(SIOData, Value);
    SIOExitMBPnPMode();
```

}

```
Boolean SIOBitRead(byte LDN, byte Register, byte BitNum){
```

```
    Byte TmpValue;
```

```
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= (1 << BitNum);
    SIOExitMBPnPMode();
    If(TmpValue == 0)
        Return 0;
    Return 1;
```

}

```
VOID ConfigDioMode(byte PinBit, byte Mode){
```

```
    Byte TmpValue;
```

```
    SIOEnterMBPnPMode();
    SIOSelectLDN(DIOLDN);
    if (PinBit < Pin9Bit)
    {
        IOWriteByte(SIOIndex, DirReg_L);
        TmpValue = IOReadByte(SIOData);
        TmpValue |= (Mode << PinBit);
        IOWriteByte(SIOData, DirReg_L);
    } else
```

```
{
    IOWriteByte(SIOIndex, DirReg_H);
    TmpValue = IOReadByte(SIOData);
    TmpValue |= (Mode << (PinBit - Pin9Bit));
    IOWriteByte(SIOData, DirReg_L);
}

SIOExitMBPnPMode();
}
```
