

PICO-APL3-SEMI

PICO-SEMI System

User's Manual 7th Ed

Copyright Notice

This document is copyrighted, 2025. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows® is a registered trademark of Microsoft Corp.
- Intel®, Celeron® and Pentium® are registered trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.
- Ubuntu and Canonical are registered trademarks of Canonical Ltd.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries
- Realtek is a trademark of Realtek Semiconductor Corporation

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● PICO-APL3-SEMI	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the product page at AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls.
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running.
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20° C (-4°F) OR ABOVE 60°C (140°F) TO PREVENT DAMAGE.**

FCC Statement

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON System

QO4-381 Rev.A2

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
液晶模块	×	○	○	○	○	○
光驱	×	○	○	○	○	○
触控模块	×	○	○	○	○	○
电源	×	○	○	○	○	○
电池	×	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。

×：表示该有害物质的某一均质材料超出了 GB/T 26572 的限量要求，然而该部件仍符合欧盟指令 2011/65/EU 的规范。

环保使用期限(EFUP (Environmental Friendly Use Period))：10 年

备注：

一、此产品所标示之环保使用期限，系指在一般正常使用状况下。

二、上述部件物质中央处理器、内存、硬盘、光驱、电源为选购品。

三、上述部件物质液晶模块、触控模块仅一体机产品适用。

China RoHS Requirement (EN)

Name and content of hazardous substances in product

AAEON System

QO4-381 Rev.A2

Part Name	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB Assemblies	×	○	○	○	○	○
Connector and Cable	×	○	○	○	○	○
Chassis	○	○	○	○	○	○
CPU and Memory	×	○	○	○	○	○
Hard Disk	×	○	○	○	○	○
LCD Modules	×	○	○	○	○	○
CD-ROM/DVD-ROM	×	○	○	○	○	○
Touch Modules	×	○	○	○	○	○
Power	×	○	○	○	○	○
Battery	×	○	○	○	○	○

The table is prepared in accordance with the provisions of SJ/T 11364.

○ : Indicates that said hazardous substance contained in all of the homogenous materials for this product is below the limit requirement of GB/T 26572.

× : Indicates that said hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement of GB/T 26572. But this product still be compliance with 2011/65/EU Directive (allowed with 2011/65/EU Annex III of RoHS exemption with number 6(c),7(a),7(c)-1).

EFUP (Environment Friendly Use Period) value: 10 years.

Notes:

1. This product defined period of use is under normal condition.
2. In above part, CPU/Memory/ Hard Disk/CD-ROM/DVD-ROM/ Power are optional.
3. In above part, LCD Modules/ Touch Modules are for all-in-one product model.

Table of Contents

Chapter 1 - Product Specifications.....	1
1.1 Specifications	2
1.2 Block Diagram	5
Chapter 2 – Hardware Information	6
2.1 Dimensions	7
2.2 Jumpers and Connectors.....	12
2.3 List of Jumpers	13
2.3.1 Auto Power Button Enable/Disable Selection (JP6)	13
2.3.2 Clear CMOS Jumper (JP7)	13
2.4 List of Connectors.....	14
2.4.1 DC Jack (CN1).....	15
2.4.2 SATA (CN8)	15
2.4.3 Battery (CN9).....	16
2.4.4 RJ-45 LAN Port (CN10)	16
2.4.5 USB 3.2 Gen 1 Ports 0 and 1 (CN11).....	17
2.4.6 Audio I/O Port (CN12).....	18
2.4.7 HDMI Port (CN13)	19
2.4.8 I2S/I2C Connector (CN37)	19
2.4.9 SATA Power (CN39)	20
2.4.10 COM Port (RS-232) (CN51/CN61).....	21
2.4.11 Front Panel Header (CN53).....	22
2.4.12 M.2 2230 E-Key (CN55)	22
2.4.13 M.2 2280 B-Key (CN56).....	24
Chapter 3 - AMI BIOS Setup	28
3.1 System Test and Initialization	29
3.2 AMI BIOS Setup	30

3.3	Setup Submenu: Main	31
3.4	Setup Submenu: Advanced	32
3.4.1	Trusted Computing	33
3.4.2	CPU configuration	35
3.4.3	SATA Configuration	36
3.4.4	Hardware Monitor	38
3.4.4.1	CPU Smart Fan Mode Configuration	39
3.4.5	SIO Configuration	40
3.4.5.1	Serial Port 1 Configuration	41
3.4.5.2	Serial Port 2 Configuration	42
3.4.6	Power Management	43
3.4.7	Digital IO Port Configuration	44
3.5	Setup Submenu: Chipset	45
3.5.1	North Bridge	46
3.6	Setup Submenu: Security	47
3.7	Setup Submenu: Boot	48
3.8	Setup Submenu: Exit	49
Chapter 4	Drivers Installation	50
4.1	Driver Download/Installation	51
Appendix A	Watchdog Timer Programming	53
A.1	Watchdog Timer Registers	54
Appendix B	I/O Information	59
B.1	I/O Address Map	60
B.2	Memory Address Map	61
B.3	IRQ Mapping Chart	62
Appendix C	Mating Connectors	66
C.1	List of Mating Connectors and Cables	67

Appendix D – Programming Digital IO.....	68
D.1 Digital I/O Register.....	69
D.2 Digital I/O Sample Program.....	70

Chapter 1

Product Specifications

1.1 Specifications

System

Form Factor	PICO-SEMI
Processor	Intel® Pentium® Processor N4200 (4C, 1.1 GHz, up to 2.5 GHz, TDP 6W) Intel® Celeron® Processor N3350 (2C, 1.1 GHz, up to 2.4 GHz, TDP 6W)
Chipset	Integrated with Intel® SoC
Memory Type	Onboard DDR3L 1866, Single Channel, Non-ECC, Max 4GB
BIOS	UEFI
Wake on LAN	Yes
Watchdog Timer	255 Levels
Security	TPM 2.0 (Optional)
RTC Battery	Lithium Battery 3V/240mAh
Dimension	Without Heatsink: 4.80" x 3.18" x 1.18" (122mm x 80.8mm x 30mm) With Heatsink: 4.80" x 3.18" x 1.75" (122mm x 80.8mm x 44.4mm)
Gross Weight	Without Heatsink: 0.38 lb. (0.17Kg) With Heatsink: 0.91 lb. (0.41Kg)
OS Support	Windows® 10 (64-bit) Linux Ubuntu 16.04.2/Kernel 4.8.0-36

Power

Power Requirement	+12V
Power Supply Type	ATX

Power

Connector	DC Jack Connector
Power Consumption	Intel® Pentium® Processor N4200, DDR3L 8GB x 1, 1.08A, eMMC 32GB @+12V (Typical)

Display

Controller	Intel® HD Graphics 500/505
LVDS/eDP	—
Display Interface	HDMI 1.4 x 1, 3840 x 2160 @30Hz
Multiple Display	—

Audio

Codec	Realtek ALC269 (Optional)
Audio Interface	Line-out (Optional)
Speaker	—

External I/O

Ethernet	Realtek 8111G GbE, RJ-45 x 1
USB	USB 3.2 Gen 1 x 2
Serial Port	COM 1~2 (RS-232, Optional)
Video	HDMI 1.4 x 1

Internal I/O

USB	—
Serial Port	—
Video	—
Storage	eMMC 5.1, 32GB (Optional: 16GB/64GB)
Audio	Line-out (Optional)

Internal I/O

DIO/GPIO	—
SMBus/I2C	—
Fan	—
Front Panel	HDD LED, PWR LED, Power Button, Buzzer, Reset
Others	—


Expansion

Mini PCIe/mSATA	—
M.2	M.2 2230 E-Key x 1 (PCIe 3.0 [x1] + USB 2.0) M.2 2280 B-Key x 1 (SATA + USB 2.0)
Others	—

Environment & Certification

Operating Temperature	32°F ~ 122°F (0°C ~ 50°C) with 0.5 m/s airflow
Storage Temperature	-40°F ~ 185°F (-40°C ~ 85°C)
Operating Humidity	0% ~ 90% relative humidity, non-condensing
MTBF (Hours)	110,000
EMC	CE/FCC Class A


1.2 Block Diagram

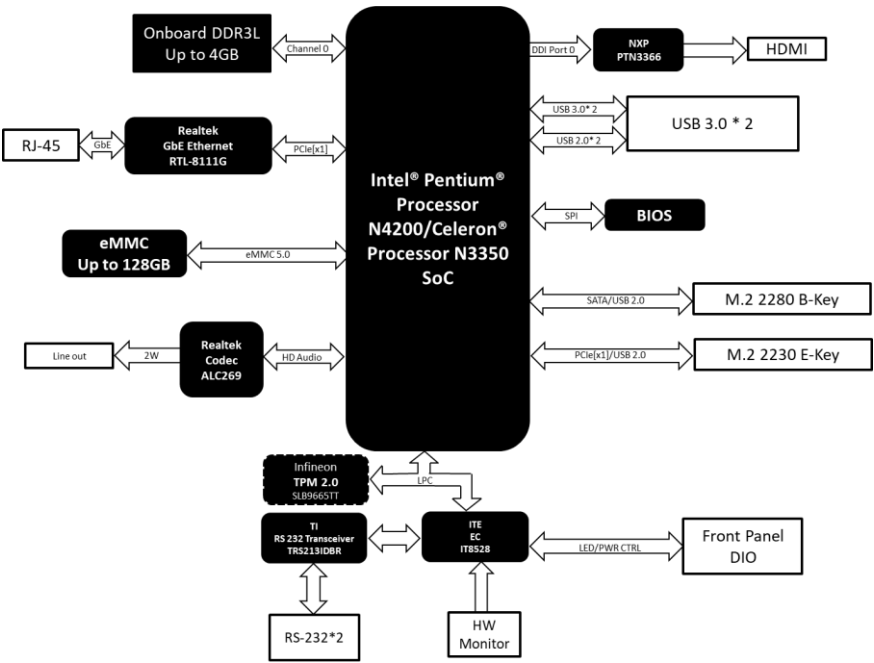


Chapter 2

Hardware Information


2.1 Dimensions

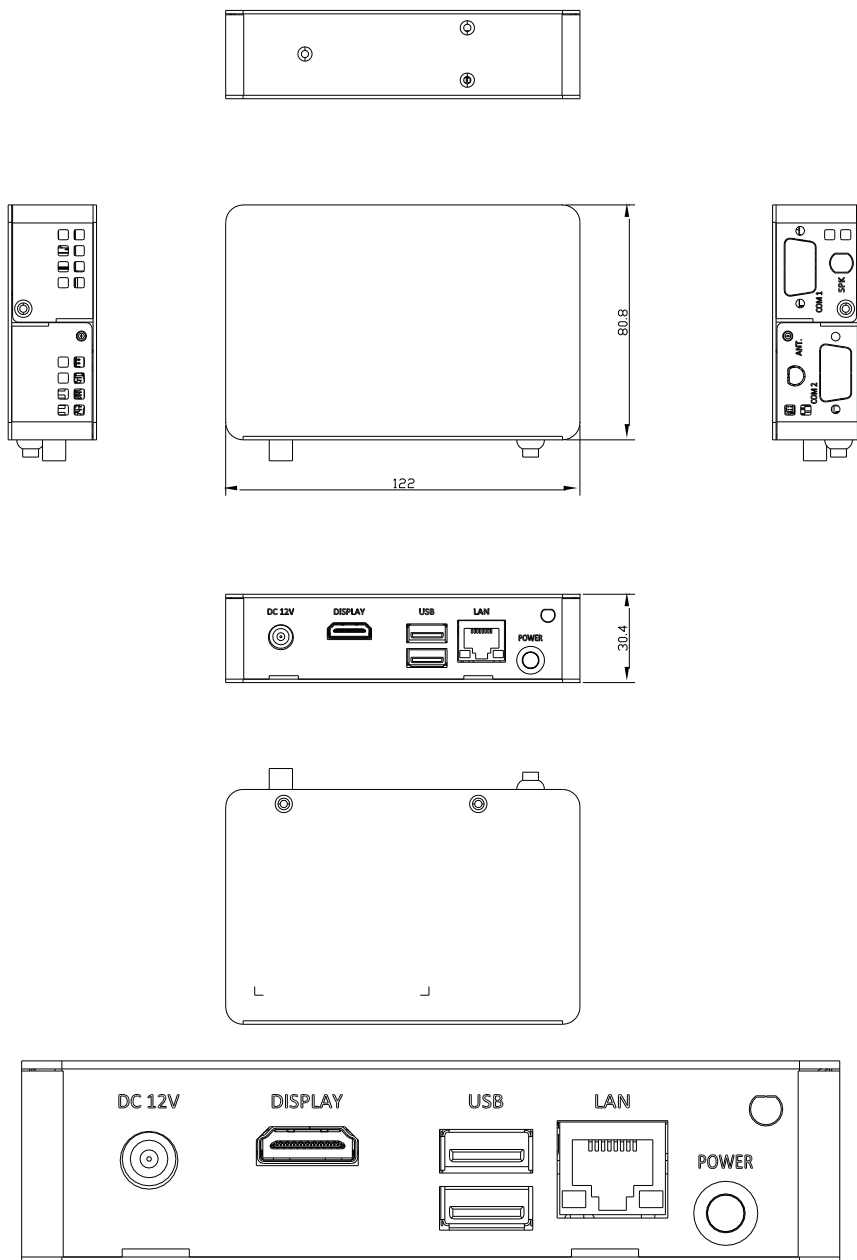


System with Heatsink

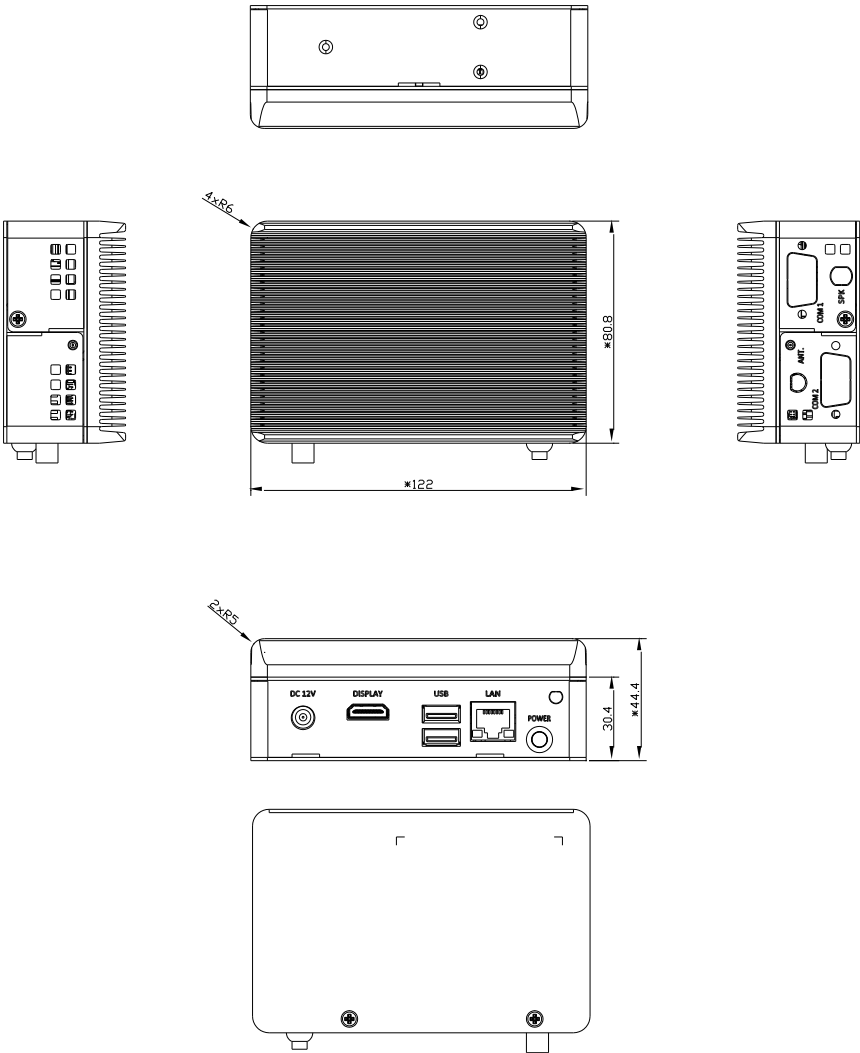


Heatsink Assembly

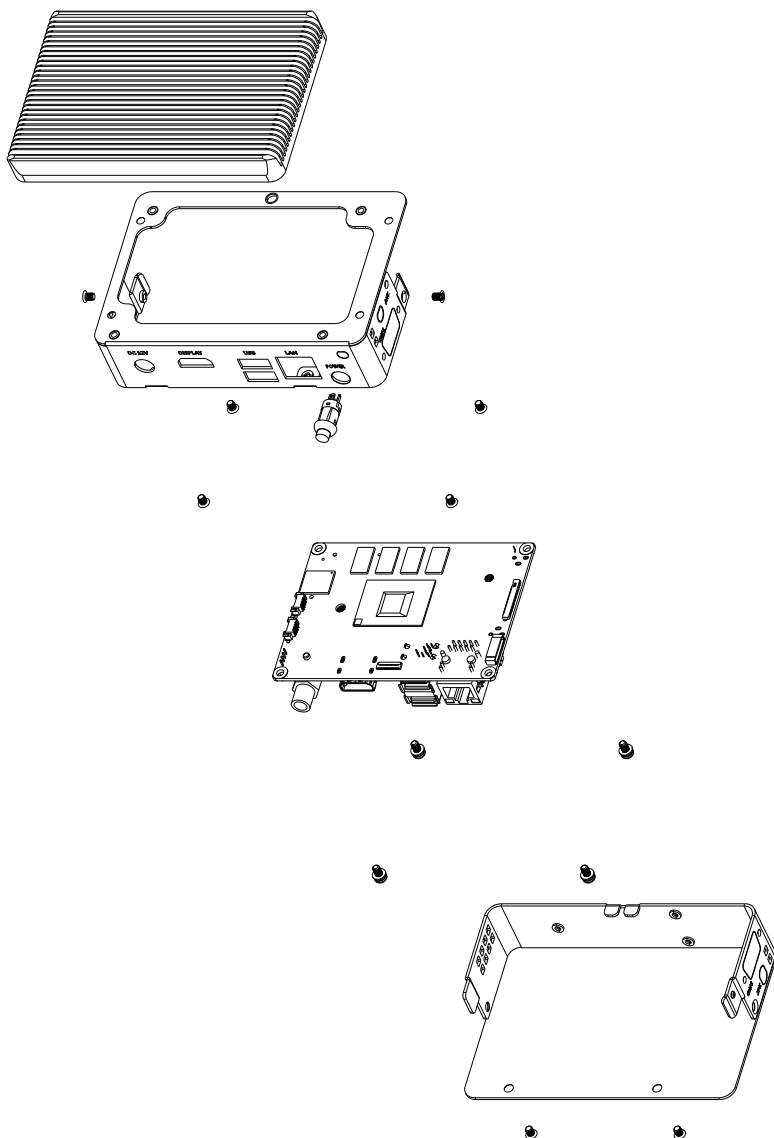


Board

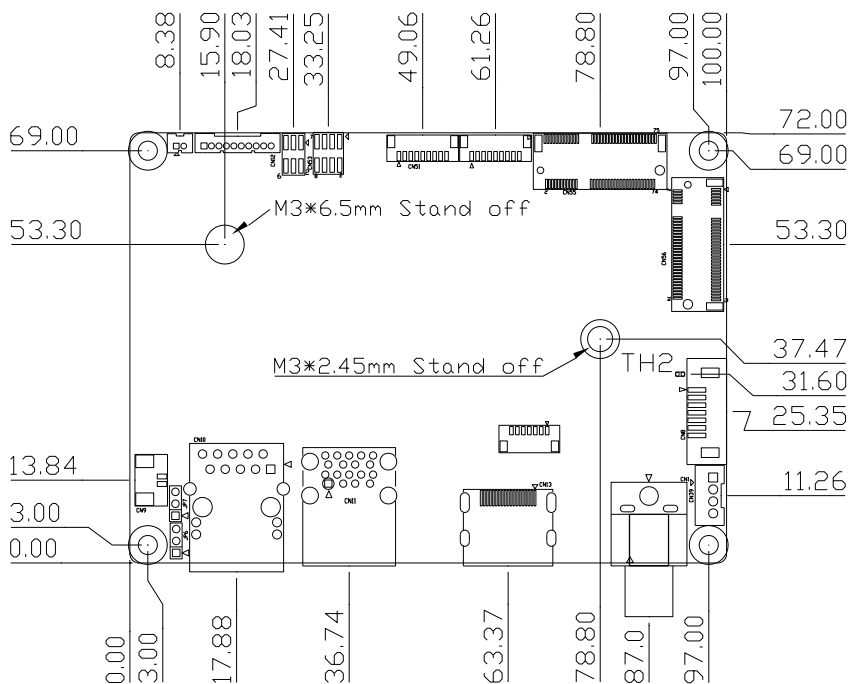

Component Side

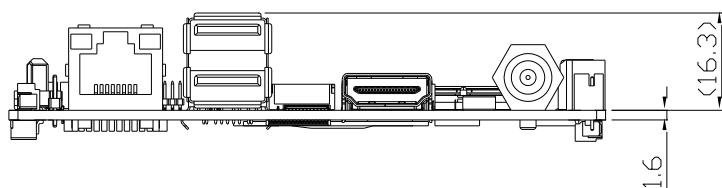


Solder Side

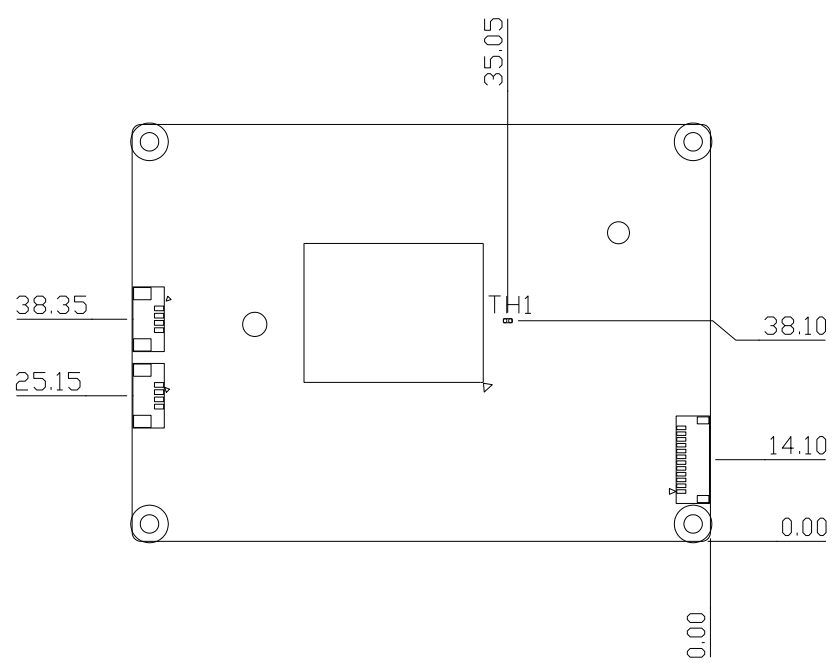


Solder Side

2.2 Jumpers and Connectors

Component Side

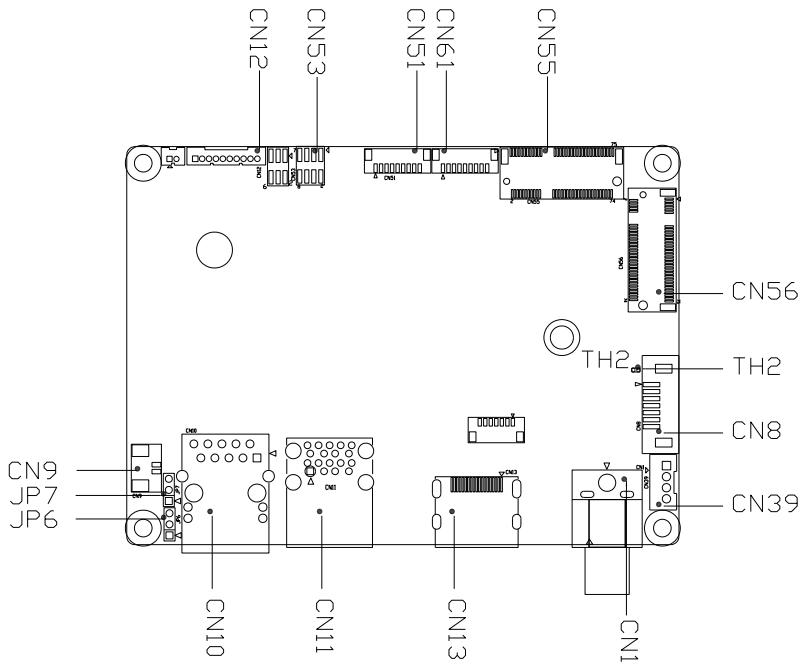

Solder Side

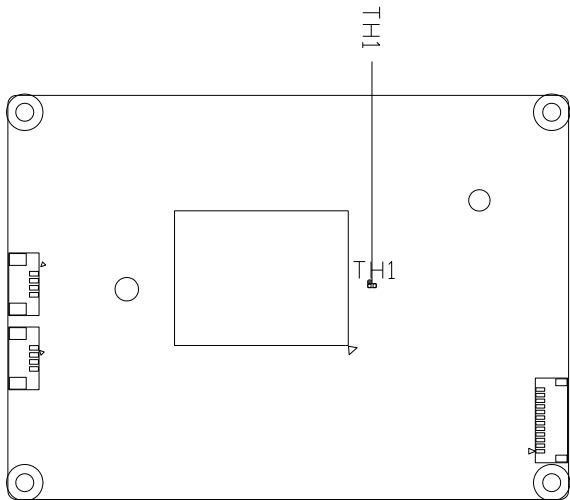


2.3 List of Jumpers


Please refer to the table below for all of the board's jumpers that you can configure for your application

Label	Function
JP6	Auto Power Button Enable/Disable Selection
JP7	Clear CMOS Jumper

2.3.1 Auto Power Button Enable/Disable Selection (JP6)




Disable




Enable (Default)

Disable Auto Power Button JP6 (1-2): Need to use power button JP6 (1-2) to power on the system.

2.3.2 Clear CMOS Jumper (JP7)



Normal (Default)




Clear CMOS

2.4 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application


Label	Function
CN1	DC Jack
CN8	SATA
CN9	RTC Battery
CN10	RJ-45 LAN
CN11	USB 3.2 Gen 1 Ports 0 and 1
CN12	Line In/Line out/Mic In
CN13	HDMI Port
CN37	I2S/I2C Connector
CN39	SATA Power
CN51	COM Port (RS-232)
CN53	Front Panel Header
CN55	M.2 2230 E-Key
CN56	M.2 2280 B-Key
CN61	COM Port (RS-232)

2.4.1 DC Jack (CN1)

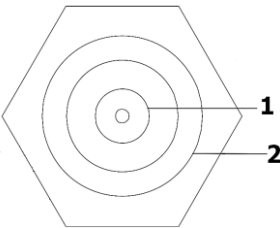


Pin	Pin Name	Signal Type	Signal Level
1	+12V	PWR	+12V
2	GND	GND	

2.4.2 SATA (CN8)

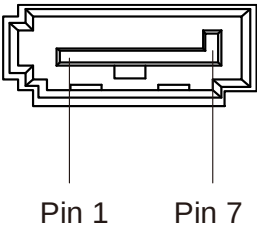


Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	SATA_TX-	DIFF	
3	SATA_TX-	DIFF	
4	GND	GND	
5	SATA_RX-	DIFF	
6	SATA_RX+	DIFF	
7	GND	GND	

2.4.3 Battery (CN9)

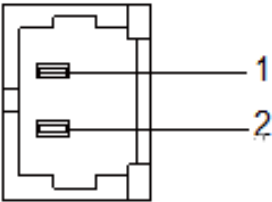


Pin	Pin Name	Signal Type	Signal Level
1	+BAT_RTC	PWR	3.3V
2	GND	GND	

2.4.4 RJ-45 LAN Port (CN10)

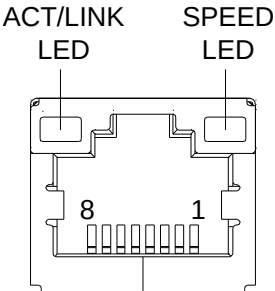


Pin	Pin Name	Signal Type	Signal Level
1	MDI0+	DIFF	
2	MDI0-	DIFF	
3	MDI1+	DIFF	
4	MDI2+	DIFF	
5	MDI2-	DIFF	
6	MDI1-	DIFF	
7	MDI3+	DIFF	
8	MDI3-	DIFF	

2.4.5 USB 3.2 Gen 1 Ports 0 and 1 (CN11)

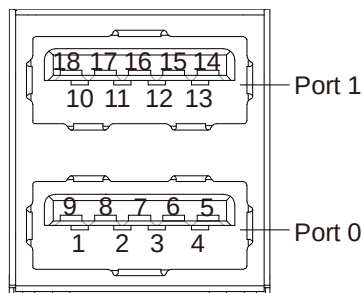


Pin	Pin Name	Signal Type	Signal Level
1	+5VA	PWR	+5V
2	USB0_D-	DIFF	
3	USB0_D+	DIFF	
4	GND	GND	
5	USB0_SSRX-	DIFF	
6	USB0_SSRX+	DIFF	
7	GND	GND	
8	USB0_SSTX-	DIFF	
9	USB0_SSTX+	DIFF	
10	+5VA	PWR	+5V
11	USB1_D-	DIFF	
12	USB1_D+	DIFF	
13	GND	GND	
14	USB1_SSRX-		
15	USB1_SSRX+		
16	GND	GND	
17	USB1_SSTX-		
18	USB1_SSTX+		

2.4.6 Audio I/O Port (CN12)

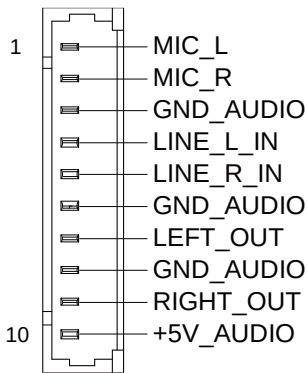

Pin	Pin Name	Signal Type	Signal Level
1	MIC_L	Audio	
2	MIC_R	Audio	
3	GND_AUDIO	AGND	
4	LINE_L_IN	Audio	
5	LINE_R_IN	Audio	
6	GND_AUDIO	AGND	
7	LEFT_OUT	Audio	
8	GND_AUDIO	AGND	
9	RIGHT_OUT	Audio	
10	+5V	PWR	

2.4.7 HDMI Port (CN13)

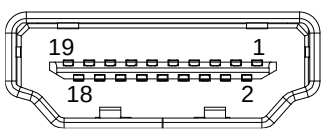


Pin	Pin Name	Signal Type	Signal Level
1	TMDS_DAT2+	DIFF	
2	GND	GND	
3	TMDS_DAT2-	DIFF	
4	TMDS_DAT1+	DIFF	
5	GND	GND	
6	TMDS_DAT1-	DIFF	
7	TMDS_DAT0+	DIFF	
8	GND	GND	
9	TMDS_DAT0-	DIFF	
10	TMDS_CLK+	DIFF	
11	GND	GND	
12	TMDS_CLK-	DIFF	
13	NC		
14	NC		
15	DDC_CLK	I/O	+5V
16	DDC_DATA	I/O	+5V
17	GND	GND	
18	+5V	I/O	+5V
19	HPLG_DETECT	IN	

2.4.8 I2S/I2C Connector (CN37)

Pin	Pin Name	Signal Type	Signal Level
1	+V3.3A	VDD	3.3V
2	I2S1_SYNC	Signal	
3	I2S1_SDI	Signal	


Pin	Pin Name	Signal Type	Signal Level
4	I2S1_SDO	Signal	
5	I2S1_MCLK	Signal	
6	I2S1_BCLK	Signal	
7	I2C2_SCL	Signal	
8	I2C2_SDA	Signal	
9	GND	GND	
10	NC	NC	

2.4.9 SATA Power (CN39)




Pin	Pin Name	Signal Type	Signal Level
1	+12V	PWR	+12V
2	GND	GND	
3	GND	GND	
4	+5V	PWR	+5V

2.4.10 COM Port (RS-232) (CN51/CN61)

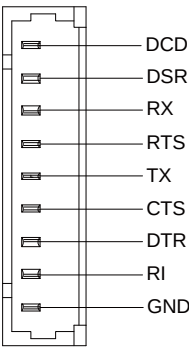

Pin	Pin Name	Signal Type	Signal Level
1	DCD	IN	
2	DSR	IN	
3	RX	IN	
4	RTS	OUT	
5	TX	OUT	
6	CTS	IN	
7	DTR	OUT	
8	RI	IN/ PWR	
9	GND	GND	

2.4.11 Front Panel Header (CN53)

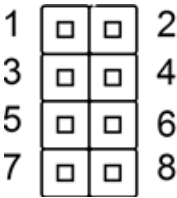

Pin	Pin Name	Pin	Pin Name
1	GND	2	PWR Button
3	FP_IDELED#	4	+3.3V
5	FP_BUZZER	6	+5V
7	GND	8	RESET Button

2.4.12 M.2 2230 E-Key (CN55)

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	+3.3VA	PWR	3.3V
3	USB+	DIFF	
4	+3.3VA	PWR	3.3V
5	USB-	DIFF	
6			
7	GND	GND	
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			

Pin	Pin Name	Signal Type	Signal Level
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33	GND	GND	
34			
35	PCIE_TXP	DIFF	
36			
37	PCIE_TXN	DIFF	
38			
39	GND	GND	
40			
41	PCIE_RXP	DIFF	
42			
43	PCIE_RXN	DIFF	
44			
45	GND	GND	
46			
47	CLK_PCIE_P	DIFF	
48			
49	CLK_PCIE_N	DIFF	
50			

Pin	Pin Name	Signal Type	Signal Level
51	GND	GND	
52	RST#	OUT	
53	PCIE_CLKREQ#	IN	
54	BT_DISABLE#	OUT	
55	PCIE_WAKE#	IN	
56	WIFI_DISABLE#	OUT	
57	GND	GND	
58			
59			
60			
61			
62			
63	GND	GND	
64			
65			
66			
67			
68			
69	GND	GND	
70			
71			
72	+3.3VA	PWR	3.3V
73			
74	+3.3VA	PWR	3.3V
75	GND	GND	

2.4.13 M.2 2280 B-Key (CN56)

Pin	Pin Name	Signal Type	Signal Level
1	GND	GND	
2	+3.3V	PWR	3.3V
3	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
4	+3.3V	PWR	3.3V
5	GND	GND	
6			
7	USB_DP	DIFF	
8			
9	USB_DN	DIFF	
10	DAS	IN	3.3V
11	GND	GND	
12			
13			
14			
15			
16			
17			
18			
19			
20			
21	GND	GND	
22			
23			
24			
25			
26			
27			
28			
29	USB3_RX_N (Reserved)	Diff	
30			
31	USB3_RX_P (Reserved)	Diff	
32			
33	GND	GND	
34			
35	USB3_TX_N (Reserved)	Diff	
36			

Pin	Pin Name	Signal Type	Signal Level
37	USB3_TX_P (Reserved)	Diff	
38			
39	GND	GND	
40			
41	SATA_RXP	DIFF	
42			
43	SATA_RXN	DIFF	
44			
45	GND	GND	
46			
47	SATA_TXN	DIFF	
48			
49	SATA_TXP	DIFF	
50			
51	GND	GND	
52			
53			
54			
55			
56			
57	GND	GND	
58			
59			
60			
61			
62			
63			
64			
65			
66			
67			
68			
69	GND	GND	

Pin	Pin Name	Signal Type	Signal Level
70	+3.3V	PWR	3.3V
71	GND	GND	
72	+3.3V	PWR	3.3V
73	GND	GND	
74	+3.3V	PWR	3.3V
75	GND	GND	

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration stored in the CMOS memory and BIOS NVRAM. If system configuration is not found or system configuration data error is detected, system will load optimized default and re-boot with this default system configuration automatically.

There are four situations in which you will need to setup system configuration:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The system configuration is reset by Clear-CMOS jumper
4. The CMOS memory has lost power and the configuration information has been erased.

The PICO-APL3-SEMI CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it finally runs down.

3.2 AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM and BIOS NVRAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press or <ESC> immediately. This will allow you to enter Setup.

Main

Set the date, use tab to switch between date elements.

Advanced

Enable/disable boot option for legacy network devices.

Chipset

Host bridge parameters.

Security

Set setup administrator password.

Boot


Enables/disables quiet boot option.

Save & Exit


Exit system setup after saving the changes.

3.3 Setup Submenu: Main


Press "Delete" to enter Setup.

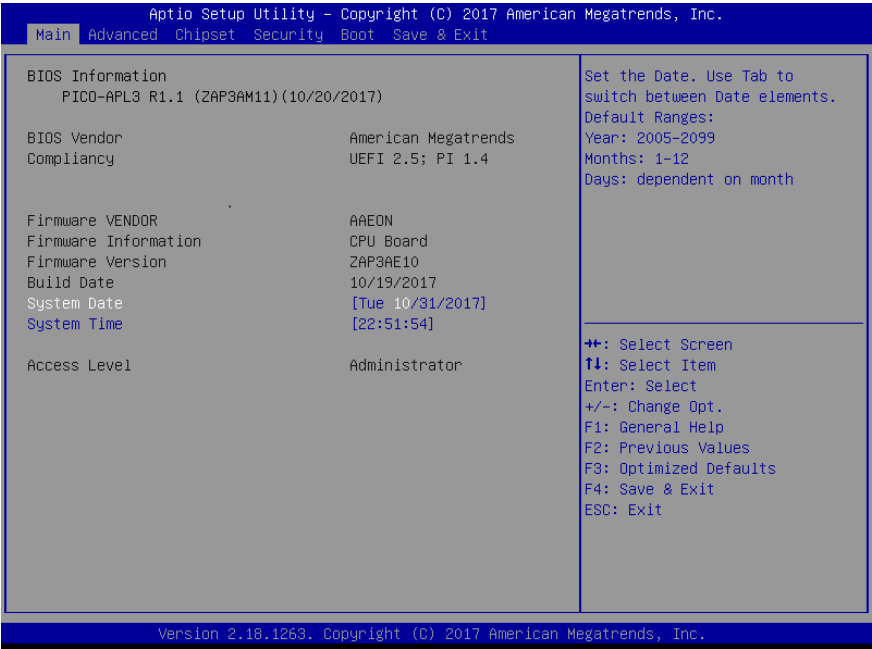

3.4 Setup Submenu: Advanced

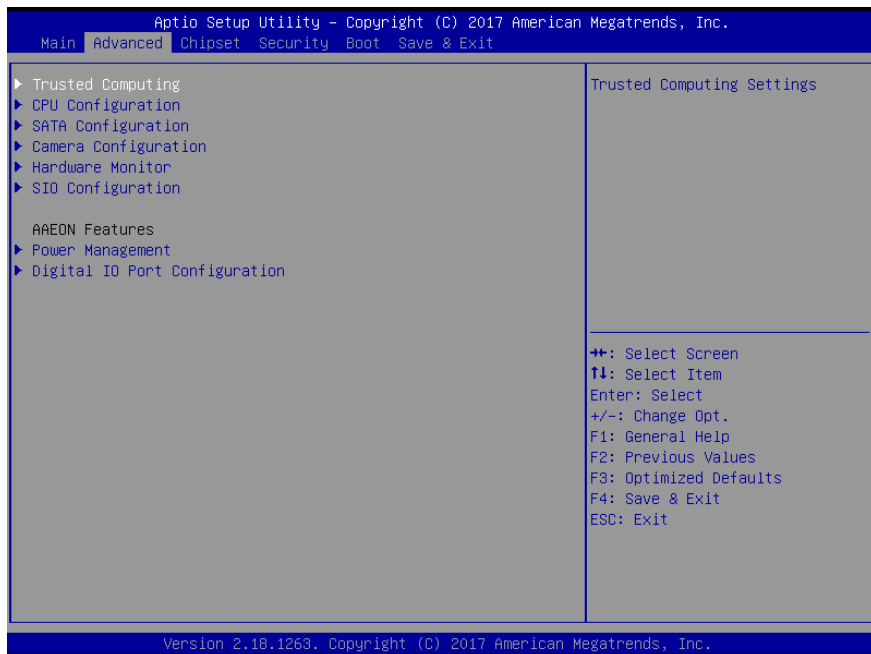


3.4.1 Trusted Computing

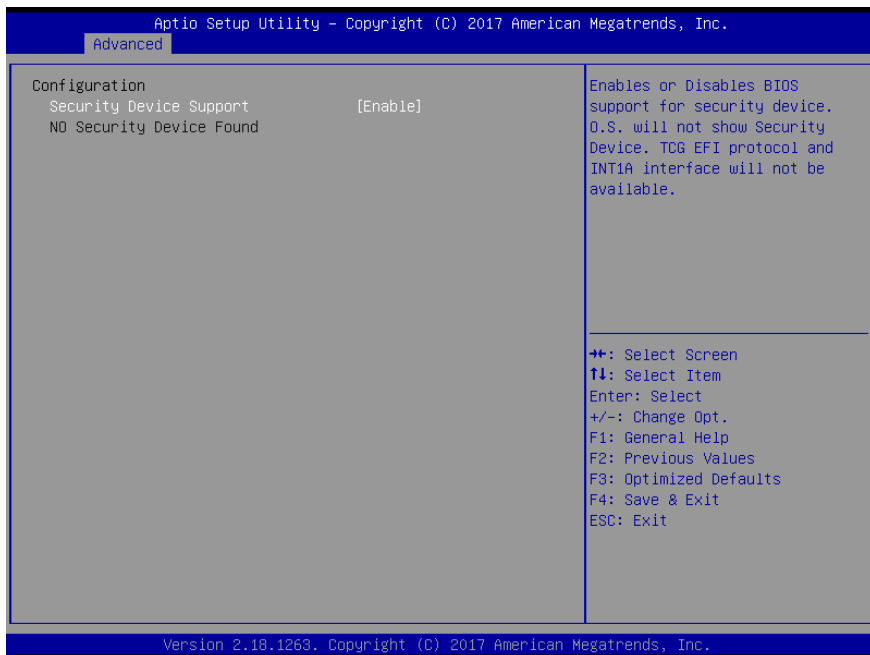

Options Summary		
Security Device Support	Disable	
	Enable	Optimal Default, Failsafe Default
Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.		
SHA-1 PCR Bank	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable SHA-1 PCR Bank.		
SHA256 PCR Bank	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable SHA256 PCR Bank.		
Pending Operation	None	Optimal Default, Failsafe Default
	TPM Clear	
Schedule an Operation for the Security Device. NOTE: Your Computer will reboot during restart in order to change State of Security Device.		

Options Summary		
Platform Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or disable Platform Hierarchy.		
Storage Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Storage Hierarchy.		
Endorsement Hierarchy	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable Endorsement Hierarchy.		
TPM2.0 UEFI Spec Version	TCG_1_2	
	TCG_2	Optimal Default, Failsafe Default
Select the TCG2 Spec Version Support. TCG_1_2: The Compatible mode for Win8/Win10. TCG_2: Support new TCG2 protocol and event format for Win10 or later.		
Physical Presence Spec Version	1.2	
	1.3	Optimal Default, Failsafe Default
Select to Tell O.S. to support PPI Spec Version 1.2 or 1.3. Note some HCK tests might not support 1.3.		

3.4.2 CPU configuration

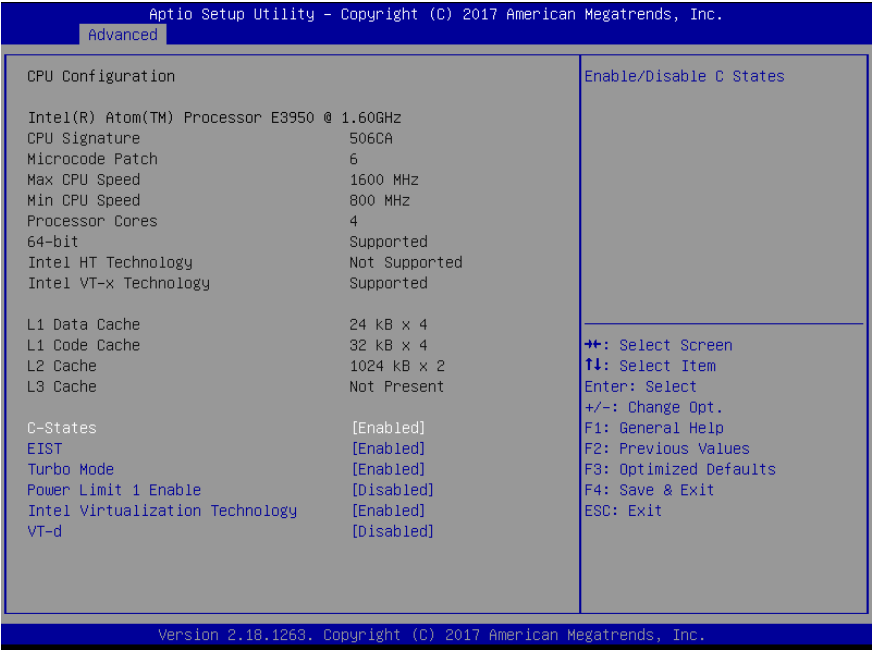

Options Summary		
C-States	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable C States.		
EIST™	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable Intel SpeedStep.		
Turbo Mode	Disabled	
	Enabled	Optimal Default, Failsafe Default
Turbo Mode.		
Power Limit 1 Enable	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable Power Limit 1.		
Intel Virtualization Technology	Disabled	
	Enabled	Optimal Default, Failsafe Default

Options Summary

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

VT-d	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable CPU VT-d.		

3.4.3 SATA Configuration

Aptio Setup Utility - Copyright (C) 2017 American Megatrends, Inc.

Advanced

SATA Configuration		Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port). ++: Select Screen Tl: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Chipset SATA	[Enable]	
SATA Port 0		
HGST HTE725032 (320.0GB)		
Port 0	[Enabled]	
SATA Port 0 Hot Plug Capability	[Disabled]	
SATA Port 1		
[Not Installed]		
Port 1	[Enabled]	
SATA Port 1 Hot Plug Capability	[Disabled]	


Version 2.18.1263, Copyright (C) 2017 American Megatrends, Inc.

Options Summary


Chipset SATA	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port).		
Port 0	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SATA Port.		

Options Summary		
SATA Port 0 Hot Plug Capability	Disabled	Optimal Default, Failsafe Default
	Enabled	
If enabled, SATA port will be reported as Hot Plug capable.		
Port 1	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable or Disable SATA Port.		
SATA Port 0 Hot Plug Capability	Disabled	Optimal Default, Failsafe Default
	Enabled	
If enabled, SATA port will be reported as Hot Plug capable.		
Port 0/1	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable SATA port.		

3.4.4 Hardware Monitor

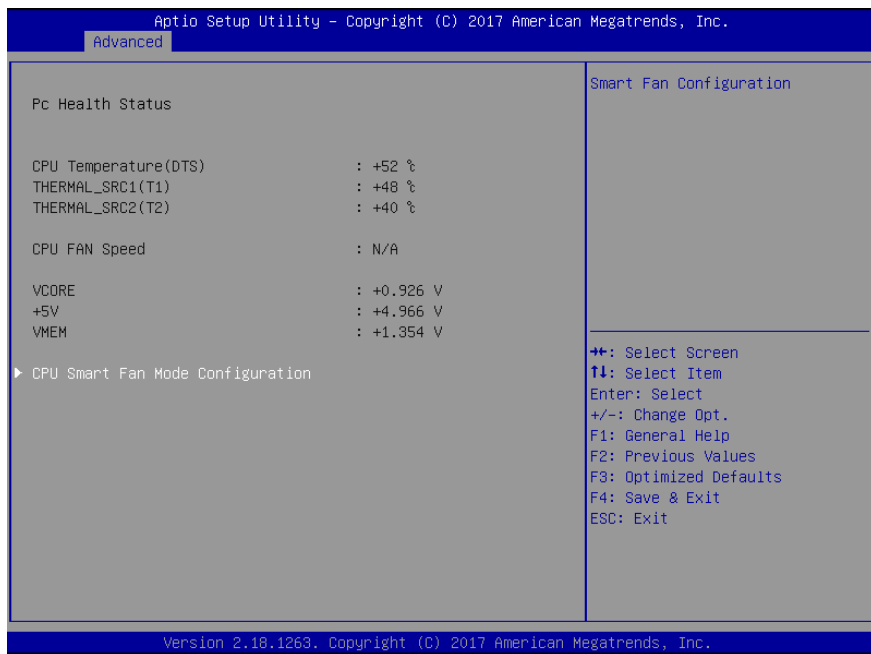


3.4.4.1 CPU Smart Fan Mode Configuration

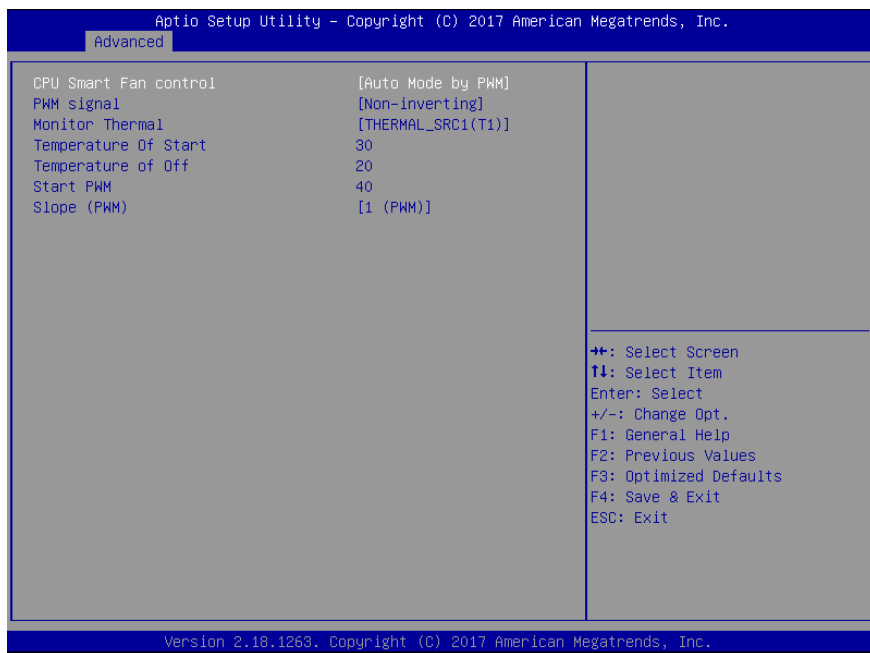


Options Summary		
CPU Smart Fan Control	Full Mode	Optimal Default, Failsafe Default
	Manual Mode by PWM	
	Auto Mode by PWM	
PWM signal	Non-inverting	
	Inverting	Optimal Default, Failsafe Default
Select output PWM of inverting or non-inverting signal.		
Monitor Thermal	THERMAL_SRC1(T1)	Optimal Default, Failsafe Default
	THERMAL_SRC2(T2)	
Select monitor thermal source.		
Temperature of Start	30	Optimal Default, Failsafe Default
Temperature Of Start.		
Temperature of Off	20	Optimal Default, Failsafe Default
Temperature Of Off.		
Start of PWM	40	Optimal Default, Failsafe Default
Start PWM.		

Options Summary		
Slope (PWM)	1 (PWM)	Optimal Default, Failsafe Default
Slope (PWM).		

3.4.5 SIO Configuration

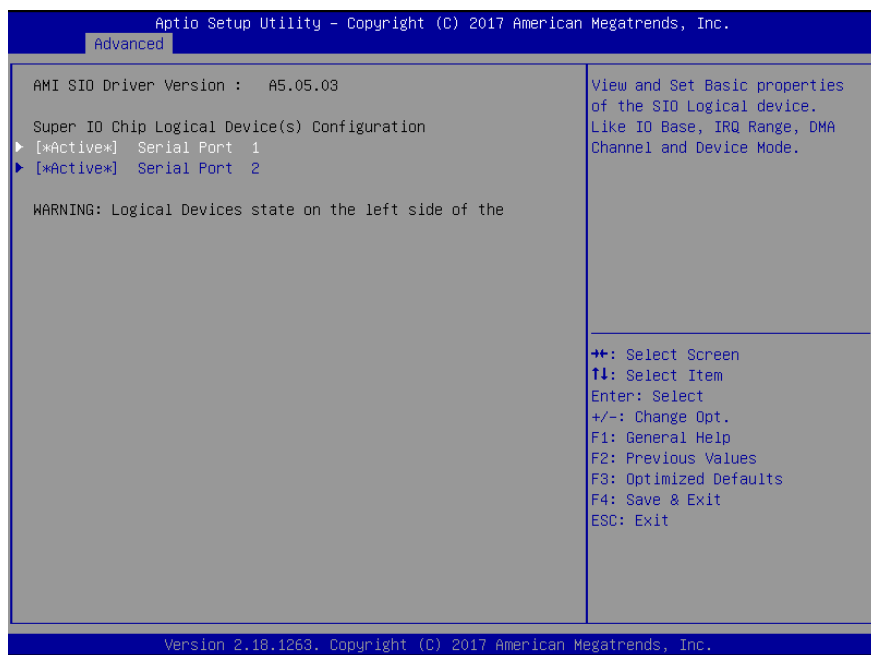


3.4.5.1 Serial Port 1 Configuration

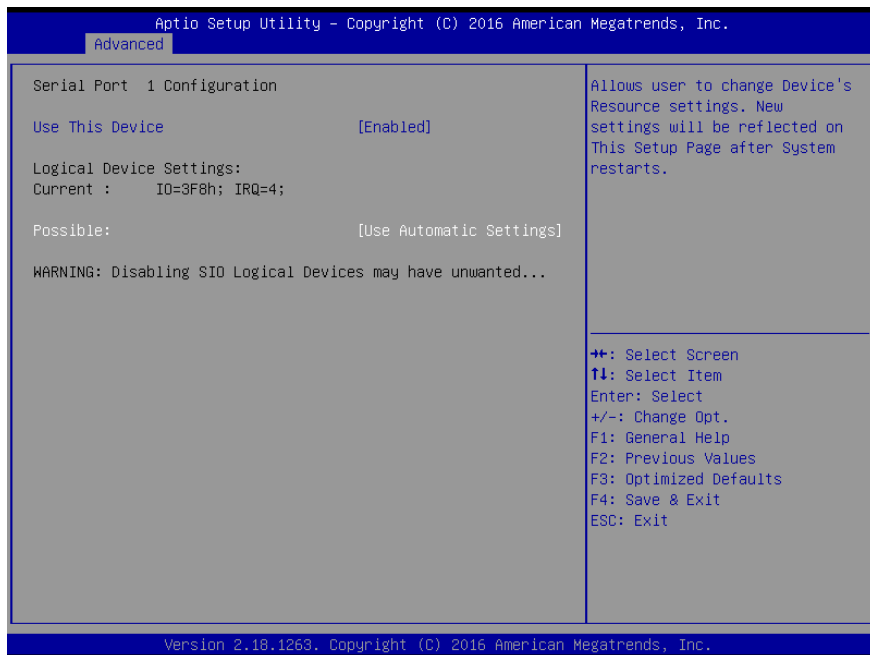


Options Summary		
Use This Device	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=3F8h; IRQ=4	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		

3.4.5.2 Serial Port 2 Configuration

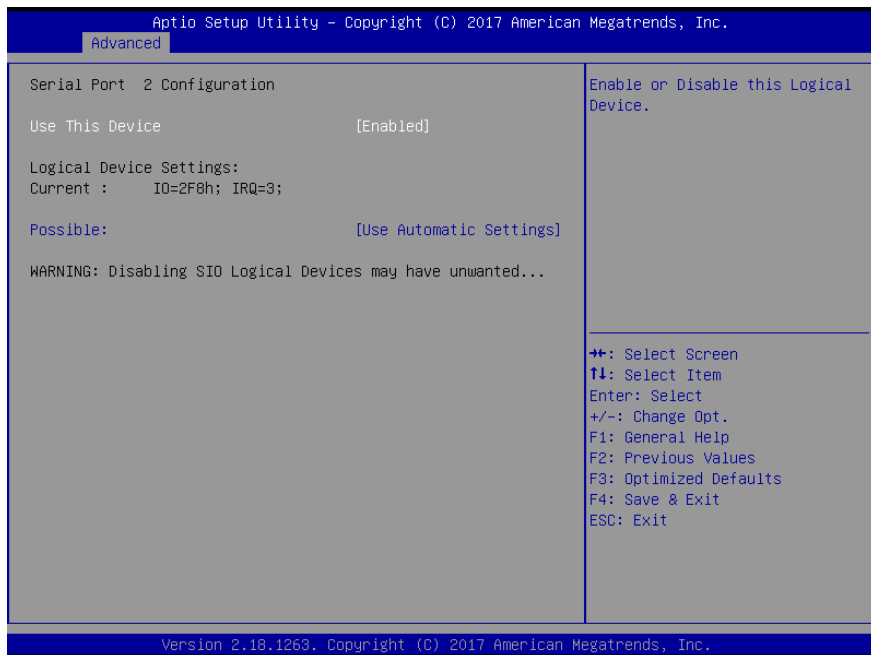


Options Summary		
Use This Device	Disable	
	Enable	Optimal Default, Failsafe Default
Enable or Disable this Logical Device.		
Possible:	Use Automatic Settings	Optimal Default, Failsafe Default
	IO=2F8h; IRQ=3	
Allows user to change Device's Resource settings. New settings will be reflected on This Setup Page after System restarts.		

3.4.6 Power Management

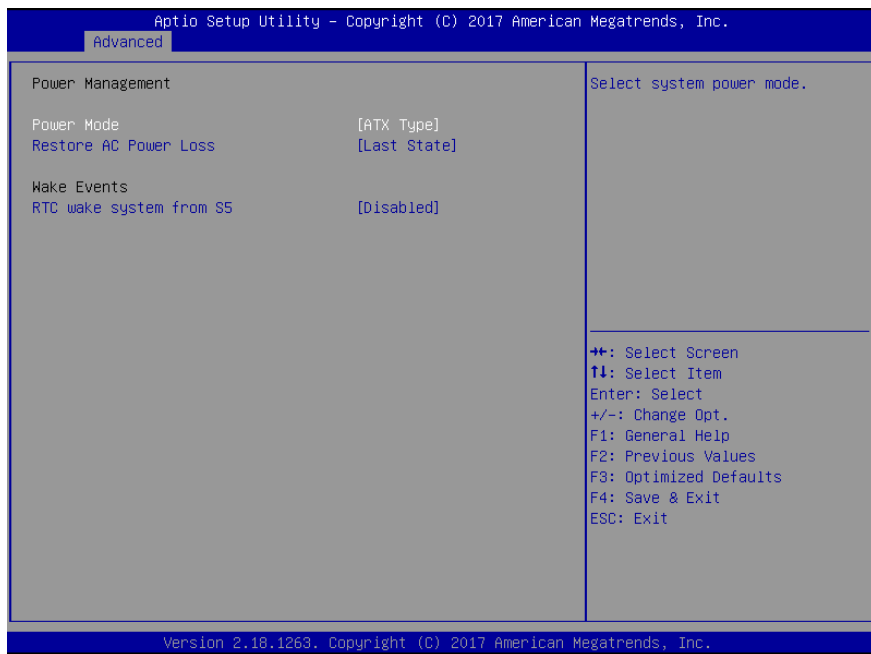


Options Summary		
Power Mode	ATX Type	Optimal Default, Failsafe Default
	AT Type	
Select system power mode.		
Restore AC Power Loss	Last State	Optimal Default, Failsafe Default
	Always On	
	Always Off	
RTC wake system from S5	Disable	Optimal Default, Failsafe Default
	Fixed Time	
Fixed Time: System will wake on the hr::min::sec specified.		

3.4.7 Digital IO Port Configuration

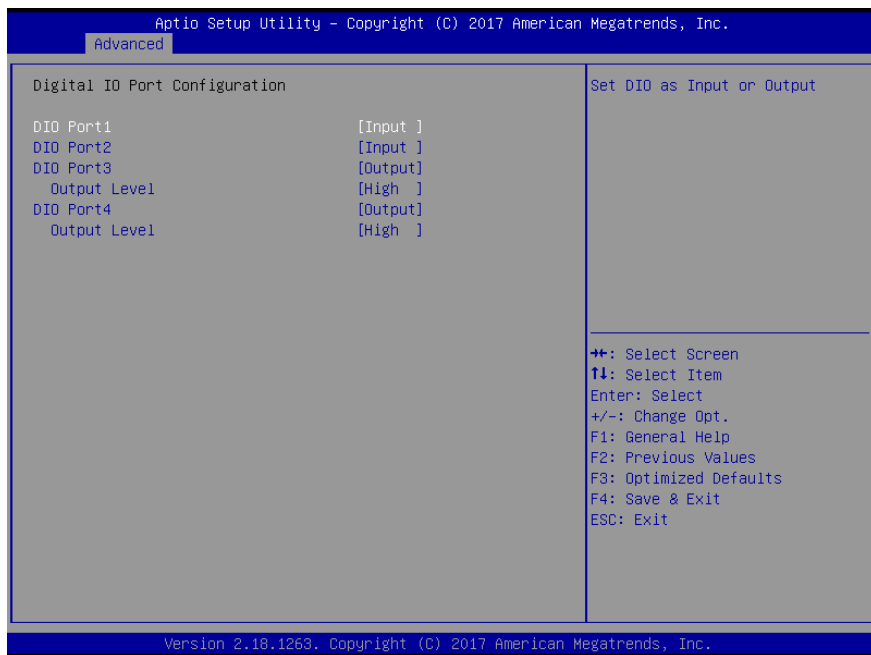


Options Summary		
DIO Port*	Output	
	Input	
Set DIO as Input or Output.		
Output Level	High	Optimal Default, Failsafe Default
	Low	
Set output level when DIO pin is output.		

3.5 Setup Submenu: Chipset

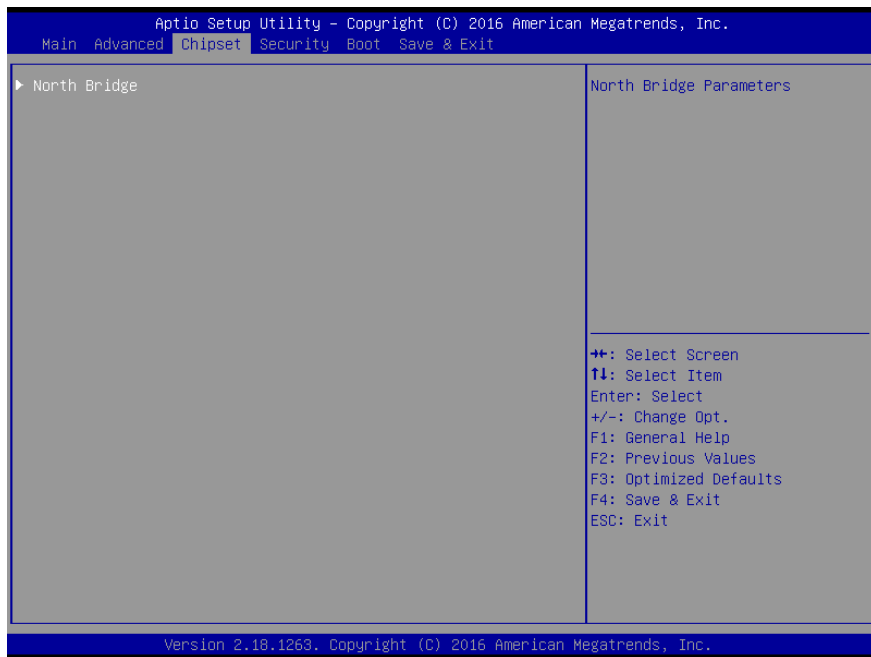

3.5.1 North Bridge

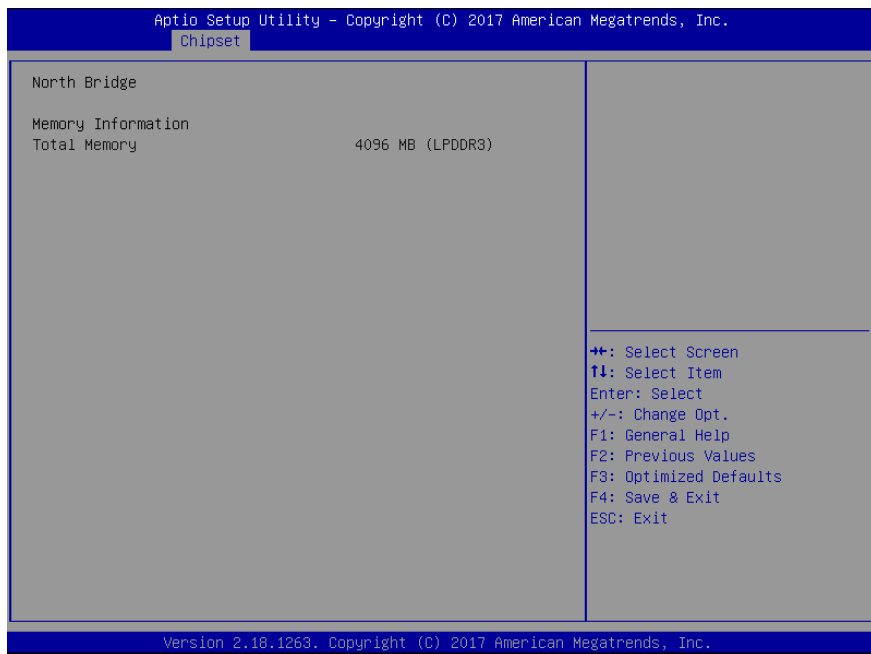

3.6 Setup Submenu: Security



Change User/Supervisor Password


You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

If you highlight these items and press Enter, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is required at boot time, or when the user enters the Setup utility.

Removing the Password


Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.7 Setup Submenu: Boot

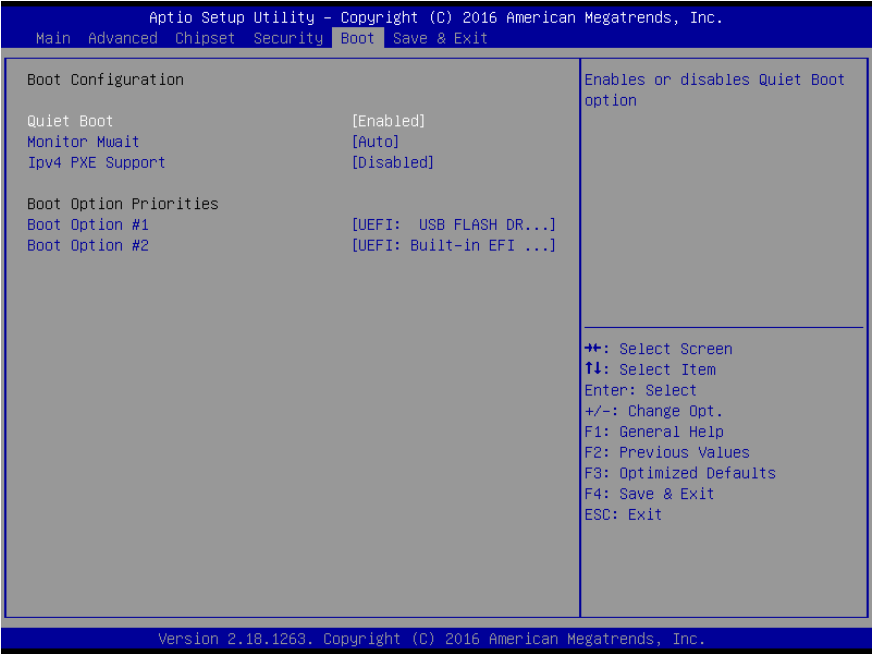

Options Summary		
Quiet Boot	Disabled	
	Enabled	Optimal Default, Failsafe Default
Enable/Disable showing boot logo.		
Monitor Mwait	Disable	
	Enabled	
	Auto	Optimal Default, Failsafe Default
Enable/Disable Monitor Mwait. To install Linux OS, please set this item to disable.		
Ipv4 PXE Support	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable Ipv4 PXE Boot Support. If disabled IPV4 PXE boot option will not be created.		

3.8 Setup Submenu: Exit

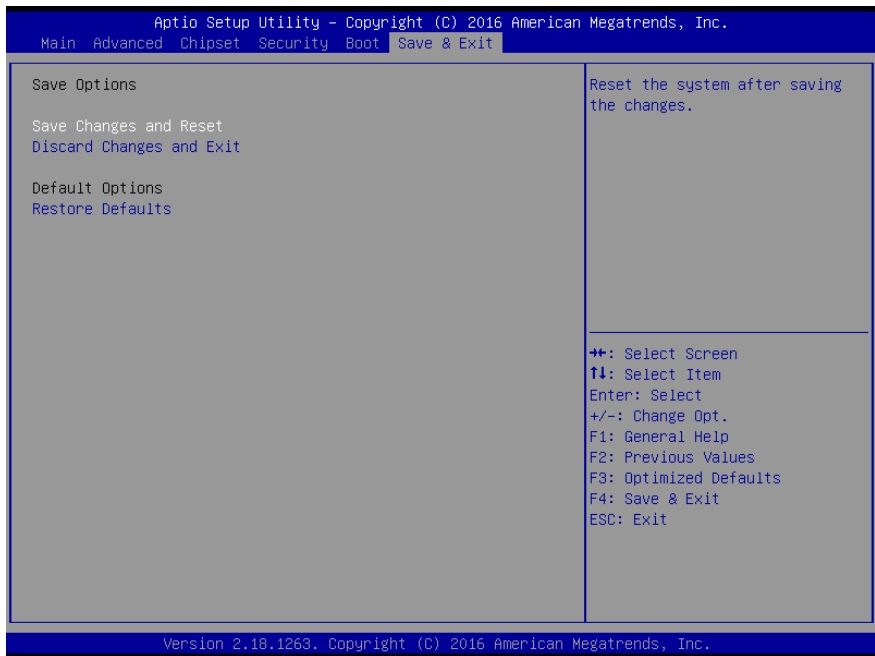

Chapter 4

Drivers Installation

4.1 Driver Download/Installation

Drivers for the PICO-APL3-SEMI can be downloaded from the product page on the AAEON website by following this link:

<https://www.aaeon.com/en/p/pico-itx-boards-pico-apl3-semi>

Download the driver(s) you need and follow the steps below to install them.

Install Chipset Driver

1. Open the **Chipset Driver** folder and open the **SetupChipset.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Install Graphic Driver

1. Open the **Graphics Driver** folder and open the **Setup.exe** file
2. Follow the instructions
3. Driver will be installed automatically

Install LAN Driver

1. Open the **LAN Driver** folder and open the **Setup.exe** file
2. Follow the instructions
3. Driver will be installed automatically

Install Audio Driver

1. Open the **STEP4 - AUDIO** folder and open the **0005-Win7_Win8_Win81_Win10_R279.exe** file
2. Follow the instructions
3. Driver will be installed automatically

Install TXE Driver

1. Open the **ME & TXE Driver** folder and open the **SetupTXE.exe** file
2. Follow the instructions
3. Driver will be installed automatically

Install Serial IO Driver

1. Open the **COM Port Driver** folder and open the **SetupSerialIO.exe** file
2. Follow the instructions
3. Driver will be installed automatically

Appendix A

Watchdog Timer Programming

A.1 Watchdog Timer Registers

Table 1: Embedded BRAM Relative Register Table

	Default Value	Note
Index	0x284(Note1)	BRAM Index Register
Data	0x285(Note2)	BRAM Data Register
Logical Device Number	0xA8(Note3)	Watch dog Logical Device Number
Function and Device Number	0x00(Note4)	Watch dog Function/Device Number

Table 2: Watchdog Relative Register Table

	Option Register	BitNum	Value	Note
Timer Counter	0x00(Note5)		(Note10)	Time of watchdog timer (0~255)
Counting Unit	0x01(Note6)	0(Note7)	0(Note11)	Select time unit. 0: second 1: minute
Watchdog RST pulse width	0x01(Note8)	[3:2](Note9)	0(Note12)	0: 20ms 1: 60ms 2: 100ms 3: 250ms

```

*****
// Embedded BRAM relative definition (Please reference to Table 1)
#define byte EcBRAMIndex //This parameter is represented from Note1
#define byte EcBRAMData //This parameter is represented from Note2
#define byte BRAMLDNReg //This parameter is represented from Note3
#define byte BRAMFnDataReg //This parameter is represented from Note4
#define byte EcBRAMReadByte(byte Offset);
#define void IOWriteByte(byte Offset, byte Value);
#define byte IOReadByte(byte Offset);
// Watch Dog relative definition (Please reference to Table 2)
#define byte TimerReg //This parameter is represented from Note5
#define byte TimerVal // This parameter is represented from Note10
#define byte UnitReg //This parameter is represented from Note6
#define byte UnitBit //This parameter is represented from Note7
#define byte UnitVal //This parameter is represented from Note11
#define byte RSTReg //This parameter is represented from Note8
#define byte RSTBit //This parameter is represented from Note9
#define byte RSTVal //This parameter is represented from Note12
*****

```

```
*****
VOID Main(){
    // Procedure : AaeonWDTConfig
    // (byte)Timer : Time of WDT timer.(0x00~0xFF)
    // (boolean)Unit : Select time unit(0: second, 1: minute).
    AaeonWDTConfig();

    // Procedure : AaeonWDTEnable
    // This procedure will enable the WDT counting.
    AaeonWDTEnable();
}
*****
```

```

*****
// Procedure : AaeonWDTEnable
VOID AaeonWDTEnable (){
    WDTEnableDisable(1);
}

// Procedure : AaeonWDTConfig
VOID AaeonWDTConfig (){
    // Disable WDT counting
    WDTEnableDisable(0);
    // WDT relative parameter setting
    WDTParameterSetting();
}

VOID WDTEnableDisable(byte
    Value){ ECBRAMWriteByte(TimerReg , Value);
}

VOID
    WDTParameterSetting(){ By
        te TempByte;

        // Watchdog Timer counter setting
        ECBRAMWriteByte(TimerReg , TimerVal);
    // WDT counting unit setting
    TempByte = ECBRAMReadByte(UnitReg);
    TempByte |= (UnitVal << UnitBit);
    ECBRAMWriteByte(UnitReg , TempByte);
    // WDT RST pulse width setting
    TempByte = ECBRAMReadByte(RSTReg);
    TempByte |= (RSTVal << RSTBit);
    ECBRAMWriteByte(RSTReg , TempByte);
}
*****

```

```

*****
VOID ECBRAMWriteByte(byte OPReg, byte OPBit, byte Value){
    IOWriteByte(EcBRAMIndex, 0x10);
    IOWriteByte(EcBRAMData, BRAMLDNReg);
    IOWriteByte(EcBRAMIndex, 0x11);
    IOWriteByte(EcBRAMData, BRAMFnDataReg);

    IOWriteByte(EcBRAMIndex, 0x13 + OPReg);
    IOWriteByte(EcBRAMData, Value);

    IOWriteByte(EcBRAMIndex, 0x12);
    IOWriteByte(EcBRAMData, 0x30);                //Write start
}

Byte ECBRAMReadByte(byte
    OPReg){ IOWriteByte(EcBRAMIndex, 0x10);
    IOWriteByte(EcBRAMData, BRAMLDNReg);
    IOWriteByte(EcBRAMIndex, 0x11);
    IOWriteByte(EcBRAMData, BRAMFnDataReg);

    IOWriteByte(EcBRAMIndex, 0x12);
    IOWriteByte(EcBRAMData, 0x10);                //Read start

    IOWriteByte(EcBRAMIndex, 0x13 + OPReg);
    Return      IOWriteByte(EcBRAMData, Value);
}
*****

```

Appendix B

I/O Information

B.1 I/O Address Map

Input/output (IO)	
[0000000000000000 - 000000000000006F]	PCI Express Root Complex
[0000000000000020 - 0000000000000021]	Programmable interrupt controller
[0000000000000024 - 0000000000000025]	Programmable interrupt controller
[0000000000000028 - 0000000000000029]	Programmable interrupt controller
[000000000000002C - 000000000000002D]	Programmable interrupt controller
[000000000000002E - 000000000000002F]	Motherboard resources
[0000000000000030 - 0000000000000031]	Programmable interrupt controller
[0000000000000034 - 0000000000000035]	Programmable interrupt controller
[0000000000000038 - 0000000000000039]	Programmable interrupt controller
[000000000000003C - 000000000000003D]	Programmable interrupt controller
[0000000000000040 - 0000000000000043]	System timer
[000000000000004E - 000000000000004F]	Motherboard resources
[0000000000000050 - 0000000000000053]	System timer
[0000000000000061 - 0000000000000061]	Motherboard resources
[0000000000000063 - 0000000000000063]	Motherboard resources
[0000000000000065 - 0000000000000065]	Motherboard resources
[0000000000000067 - 0000000000000067]	Motherboard resources
[0000000000000070 - 0000000000000070]	Motherboard resources
[0000000000000070 - 0000000000000077]	System CMOS/real time clock
[0000000000000078 - 000000000000007F]	PCI Express Root Complex
[0000000000000080 - 000000000000008F]	Motherboard resources
[0000000000000092 - 0000000000000092]	Motherboard resources
[00000000000000A0 - 00000000000000A1]	Programmable interrupt controller
[00000000000000A4 - 00000000000000A5]	Programmable interrupt controller
[00000000000000A8 - 00000000000000A9]	Programmable interrupt controller
[00000000000000AC - 00000000000000AD]	Programmable interrupt controller
[00000000000000B0 - 00000000000000B1]	Programmable interrupt controller
[00000000000000B2 - 00000000000000B3]	Motherboard resources
[00000000000000B4 - 00000000000000B5]	Programmable interrupt controller
[00000000000000B8 - 00000000000000B9]	Programmable interrupt controller
[00000000000000BC - 00000000000000BD]	Programmable interrupt controller
[00000000000002F8 - 00000000000002FF]	Communications Port (COM2)
[00000000000003F8 - 00000000000003FF]	Communications Port (COM1)
[0000000000000400 - 000000000000047F]	Motherboard resources
[00000000000004D0 - 00000000000004D1]	Programmable interrupt controller
[0000000000000500 - 00000000000005FE]	Motherboard resources
[0000000000000680 - 000000000000069F]	Motherboard resources
[0000000000000D00 - 0000000000000FFF]	PCI Express Root Complex
[0000000000000E00 - 0000000000000E7F]	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8
[0000000000000EF00 - 0000000000000EFFF]	Realtek PCIe GBE Family Controller
[0000000000000F000 - 0000000000000F03F]	Intel(R) HD Graphics
[0000000000000F040 - 0000000000000F05F]	Intel(R) Celeron(R)/Pentium(R) Processor SMBUS - 5AD4
[0000000000000F060 - 0000000000000F07F]	Standard SATA AHCI Controller
[0000000000000F080 - 0000000000000F083]	Standard SATA AHCI Controller
[0000000000000F090 - 0000000000000F097]	Standard SATA AHCI Controller

B.2 Memory Address Map

▼	Memory
	[00000007B800001 - 00000007BFFFFFFF] PCI Express Root Complex
	[00000007C000001 - 00000007FFFFFFF] PCI Express Root Complex
	[000000080000000 - 00000008FFFFFFF] Intel(R) HD Graphics
	[000000080000000 - 00000008CFFFFFFF] PCI Express Root Complex
	[000000090000000 - 000000090FFFFFFF] Intel(R) HD Graphics
	[000000091000000 - 0000000910FFFFFF] High Definition Audio Controller
	[000000091100000 - 0000000911FFFFFF] Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8
	[0000000911FF000 - 0000000911FFFFFF] Realtek PCIe GBE Family Controller
	[000000091200000 - 00000009120FFFFFFF] Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
	[000000091210000 - 000000091213FFF] High Definition Audio Controller
	[000000091214000 - 000000091215FFF] Standard SATA AHCI Controller
	[000000091218000 - 0000000912180FFF] Intel(R) Celeron(R)/Pentium(R) Processor SMBUS - 5AD4
	[000000091219000 - 000000091219FFF] Intel SD Host Controller
	[00000009121A000 - 00000009121AFFF] Intel SD Host Controller
	[00000009121B000 - 00000009121BFFF] Intel(R) Serial IO I2C Host Controller - 5AB4
	[00000009121C000 - 00000009121CFFF] Intel(R) Serial IO I2C Host Controller - 5AB4
	[00000009121D000 - 00000009121DFFF] Intel(R) Serial IO I2C Host Controller - 5AAE
	[00000009121E000 - 00000009121EFFF] Intel(R) Serial IO I2C Host Controller - 5AAE
	[00000009121F000 - 00000009121FFFF] Intel(R) Serial IO I2C Host Controller - 5AAC
	[000000091220000 - 000000091220FFF] Intel(R) Serial IO I2C Host Controller - 5AAC
	[000000091221000 - 0000000912217FF] Standard SATA AHCI Controller
	[000000091222000 - 0000000912220FF] Standard SATA AHCI Controller
	[000000091226000 - 000000091226FFF] Intel(R) Trusted Execution Engine Interface
	[00000000CFF0000 - 00000000CFFFFFFF] Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8
	[00000000CFFC000 - 00000000CFFFFFFF] Realtek PCIe GBE Family Controller
	[00000000D0C0000 - 00000000D0C0653] Intel(R) Serial IO GPIO Host Controller - INT3452
	[00000000D0C4000 - 00000000D0C40763] Intel(R) Serial IO GPIO Host Controller - INT3452
	[00000000D0C5000 - 00000000D0C5076B] Intel(R) Serial IO GPIO Host Controller - INT3452
	[00000000D0C7000 - 00000000D0C70673] Intel(R) Serial IO GPIO Host Controller - INT3452
	[00000000E000000 - 00000000EFFFFFFF] Motherboard resources
	[00000000E000000 - 00000000EFFFFFFF] PCI Express Root Complex
	[00000000FEA0000 - 00000000FEAFFFFFFF] Motherboard resources
	[00000000FED0000 - 00000000FED003FF] High precision event timer
	[00000000FED0100 - 00000000FED01FFF] Motherboard resources
	[00000000FED0300 - 00000000FED03FFF] Motherboard resources
	[00000000FED0600 - 00000000FED06FFF] Motherboard resources
	[00000000FED0800 - 00000000FED09FFF] Motherboard resources
	[00000000FED1C00 - 00000000FED1CFFF] Motherboard resources
	[00000000FED4000 - 00000000FED44FFF] Trusted Platform Module 2.0
	[00000000FED4000 - 00000000FED44FFF] Trusted Platform Module 2.0
	[00000000FED8000 - 00000000FED8BFFF] Motherboard resources
	[00000000FEE0000 - 00000000FEEFFFFFFF] Motherboard resources

B.3 IRQ Mapping Chart

▼		Interrupt request (IRQ)	
		(ISA) 0x00000000 (00)	System timer
		(ISA) 0x00000003 (03)	Communications Port (COM2)
		(ISA) 0x00000004 (04)	Communications Port (COM1)
		(ISA) 0x00000008 (08)	High precision event timer
		(ISA) 0x0000000E (14)	Intel(R) Serial IO GPIO Host Controller - INT3452
		(ISA) 0x0000000E (14)	Intel(R) Serial IO GPIO Host Controller - INT3452
		(ISA) 0x0000000E (14)	Intel(R) Serial IO GPIO Host Controller - INT3452
		(ISA) 0x0000000E (14)	Intel(R) Serial IO GPIO Host Controller - INT3452
		(ISA) 0x00000036 (54)	Microsoft ACPI-Compliant System
		(ISA) 0x00000037 (55)	Microsoft ACPI-Compliant System
		(ISA) 0x00000038 (56)	Microsoft ACPI-Compliant System
		(ISA) 0x00000039 (57)	Microsoft ACPI-Compliant System
		(ISA) 0x0000003A (58)	Microsoft ACPI-Compliant System
		(ISA) 0x0000003B (59)	Microsoft ACPI-Compliant System
		(ISA) 0x0000003C (60)	Microsoft ACPI-Compliant System
		(ISA) 0x0000003D (61)	Microsoft ACPI-Compliant System
		(ISA) 0x0000003E (62)	Microsoft ACPI-Compliant System
		(ISA) 0x0000003F (63)	Microsoft ACPI-Compliant System
		(ISA) 0x00000040 (64)	Microsoft ACPI-Compliant System
		(ISA) 0x00000041 (65)	Microsoft ACPI-Compliant System
		(ISA) 0x00000042 (66)	Microsoft ACPI-Compliant System
		(ISA) 0x00000043 (67)	Microsoft ACPI-Compliant System
		(ISA) 0x00000044 (68)	Microsoft ACPI-Compliant System
		(ISA) 0x00000045 (69)	Microsoft ACPI-Compliant System
		(ISA) 0x00000046 (70)	Microsoft ACPI-Compliant System
		(ISA) 0x00000047 (71)	Microsoft ACPI-Compliant System
		(ISA) 0x00000048 (72)	Microsoft ACPI-Compliant System
		(ISA) 0x00000049 (73)	Microsoft ACPI-Compliant System
		(ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System

	(ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004B (75)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004C (76)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004D (77)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004E (78)	Microsoft ACPI-Compliant System
	(ISA) 0x0000004F (79)	Microsoft ACPI-Compliant System
	(ISA) 0x00000050 (80)	Microsoft ACPI-Compliant System
	(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
	(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
	(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
	(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
	(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
	(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
	(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
	(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
	(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
	(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
	(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
	(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
	(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
	(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
	(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
	(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
	(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
	(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
	(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
	(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System

	(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
	(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
	(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
	(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
	(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
	(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
	(ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
	(ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
	(ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
	(ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
	(ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
	(ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
	(ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
	(ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
	(ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
	(ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
	(ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
	(ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
	(ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
	(ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
	(ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
	(ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
	(ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
	(ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System

 (ISA) 0x00001E3 (483)	Microsoft ACPI-Compliant System
 (ISA) 0x00001E4 (484)	Microsoft ACPI-Compliant System
 (ISA) 0x00001E5 (485)	Microsoft ACPI-Compliant System
 (ISA) 0x00001E6 (486)	Microsoft ACPI-Compliant System
 (ISA) 0x00001E7 (487)	Microsoft ACPI-Compliant System
 (ISA) 0x00001E8 (488)	Microsoft ACPI-Compliant System
 (ISA) 0x00001E9 (489)	Microsoft ACPI-Compliant System
 (ISA) 0x00001EA (490)	Microsoft ACPI-Compliant System
 (ISA) 0x00001EB (491)	Microsoft ACPI-Compliant System
 (ISA) 0x00001EC (492)	Microsoft ACPI-Compliant System
 (ISA) 0x00001ED (493)	Microsoft ACPI-Compliant System
 (ISA) 0x00001EE (494)	Microsoft ACPI-Compliant System
 (ISA) 0x00001EF (495)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F0 (496)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F1 (497)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F2 (498)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F3 (499)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F4 (500)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F5 (501)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F6 (502)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F7 (503)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F8 (504)	Microsoft ACPI-Compliant System
 (ISA) 0x00001F9 (505)	Microsoft ACPI-Compliant System
 (ISA) 0x00001FA (506)	Microsoft ACPI-Compliant System
 (ISA) 0x00001FB (507)	Microsoft ACPI-Compliant System
 (ISA) 0x00001FC (508)	Microsoft ACPI-Compliant System
 (ISA) 0x00001FD (509)	Microsoft ACPI-Compliant System
 (ISA) 0x00001FE (510)	Microsoft ACPI-Compliant System
 (ISA) 0x00001FF (511)	Microsoft ACPI-Compliant System
 (PCI) 0x00000016 (22)	Realtek PCIe GBE Family Controller
 (PCI) 0x00000019 (25)	High Definition Audio Controller
 (PCI) 0x0000001B (27)	Intel(R) Serial IO I2C Host Controller - 5AAC
 (PCI) 0x0000001C (28)	Intel(R) Serial IO I2C Host Controller - 5AAE
 (PCI) 0x0000001F (31)	Intel(R) Serial IO I2C Host Controller - 5AB4
 (PCI) 0x00000027 (39)	Intel SD Host Controller
 (PCI) 0xFFFFF0FA (-6)	Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
 (PCI) 0xFFFFF0FB (-5)	Intel(R) Trusted Execution Engine Interface
 (PCI) 0xFFFFF0FC (-4)	Intel(R) HD Graphics
 (PCI) 0xFFFFF0FD (-3)	Standard SATA AHCI Controller
 (PCI) 0xFFFFF0FE (-2)	Intel(R) Celeron(R)/Pentium(R) Processor PCI Express Root Port - 5AD8

Appendix C

Mating Connectors

C.1 List of Mating Connectors and Cables

The table notes mating connectors and available cables.

Connector Label	Function	Mating Connector		Available Cable	Cable P/N
		Vendor	Model no		
CN7	BIO Connector	Hirose	FX18-80S-0.8SV20	N/A	N/A
CN9	Battery	Molex	51021-0200	Battery Cable	175011301C
CN12	Audio	Molex	51021-1000	Audio Cable	1709100254
CN14	External +12V Input	Molex	19211-0003	Power Cable	170204010R
CN18	LPC Port	JST	SHR-12V-S-B	AAEON LPC Cable	1703120130
CN39	SATA PWR	JST	PHR-4	SATA power cable	1702150121
CN43	eDP	KEL	SSL20-30S	N/A	170430030W
CN47/CN48	USB	Molex	51021-0400	USB Cable	1700040151
CN51/CN61	COM	JCTC	11002H00-9P	COM Port Cable	1701090122
CN52	Speaker	Molex	51021-0200	N/A	N/A
CN53	Front Panel	PINREX	633-92-04GB00	N/A	1709080102
CN60	DIO	PINREX	633-92-03GB00	N/A	N/A

Appendix D

Programming Digital IO

D.1 Digital I/O Register

Table 1: Embedded BRAM Relative Register Table		
	Default Value	Note
Index	0x284(Note1)	BRAM Index Register
Data	0x285(Note2)	BRAM Data Register
Logical Device Number	0xA2(Note3)	Watch dog Logical Device Number
IO DirectionFunction and Device Number	0x00(Note4)	DIO Input/Output Function/Device Number
IO Vaule/Status Function and Device Number	0x01(Note5)	DIO Output Data Function/Device Number

Table 2: Digital I/O Relative Register Table				
	Register			
	Option Register	BitNum	Value	Note
GPI0 Pin Status	0x00(Note6)	0(Note7)	(Note11)	GPF0
GPI1 Pin Status	0x00(Note6)	1(Note8)	(Note12)	GPF1
GPO0 Pin Status	0x00(Note6)	2(Note9)	(Note13)	GPE0
GPO1 Pin Status	0x00(Note6)	3(Note10)	(Note14)	GPE1

D.2 Digital I/O Sample Program

```

*****
// Embedded BRAM relative definition (Please reference to Table 1)
#define byte EcBRAMIndex //This parameter is represented from Note1
#define byte EcBRAMData //This parameter is represented from Note2
#define byte BRAMLDNReg //This parameter is represented from Note3
#define byte BRAMFnData0Reg //This parameter is represented from Note4
#define byte BRAMFnData1Reg //This parameter is represented from Note5
#define void EcBRAMWriteByte(byte Offset, byte Value);
#define byte EcBRAMReadByte(byte Offset);
#define void IOWriteByte(byte Offset, byte Value);
#define byte IOReadByte(byte Offset);
// Digital Input Status relative definition (Please reference to Table 2)
#define byte DIO0ToDIO7Reg // This parameter is represented from Note6
#define byte DIO0Bit // This parameter is represented from Note7
#define byte DIO1Bit // This parameter is represented from Note8
#define byte DIO2Bit // This parameter is represented from Note9
#define byte DIO3Bit // This parameter is represented from Note10
#define byte DIO0Val // This parameter is represented from Note11
#define byte DIO1Val // This parameter is represented from Note12
#define byte DIO2Val // This parameter is represented from Note13
#define byte DIO3Val // This parameter is represented from Note14
*****

```

```

*****
VOID Main(){
    Boolean PinStatus ;

    // Procedure : AaeonReadPinStatus
    // Input :
    //         Example, Read Digital I/O Pin 1 status
    // Output :
    //         InputStatus :
    //         0: Digital I/O Pin level is low
    //         1: Digital I/O Pin level is High
    PinStatus = AaeonReadPinStatus(DIO0ToDIO7Reg, DIO1Bit);

    // Procedure : AaeonSetOutputLevel
    // Input :
    //         Example, Set Digital I/O Pin 1
    //         level AaeonSetOutputLevel(DIO0ToDIO7Reg,
    //         DIO1Bit, DIO1Val);
}
*****

```

```

*****
Boolean AaeonReadPinStatus(byte OptionReg, byte BitNum){
    Byte TempByte;

    TempByte = ECBRAMReadByte(BRAMFnData1Reg,
    OptionReg); If (TempByte & BitNum == 0)
        Return 0;
    Return 1;
}
VOID AaeonSetOutputLevel(byte OptionReg, byte BitNum, byte Value){ Byte
    TempByte;

    TempByte = ECBRAMReadByte(BRAMFnData1Reg, OptionReg);
    TempByte |= (Value << BitNum); ECBRAMWriteByte(OptionReg, BitNum,
    Value);
}
*****

```

```
*****
```

```
VOID ECBRAMWriteByte(byte OPReg, byte OPBit, byte Value){
    IOWriteByte(EcBRAMIndex, 0x10);
    IOWriteByte(EcBRAMData, BRAMLDNReg);
    IOWriteByte(EcBRAMIndex, 0x11);
    IOWriteByte(EcBRAMData, BRAMFnDataReg);

    IOWriteByte(EcBRAMIndex, 0x13 + OPReg);
    IOWriteByte(EcBRAMData, Value);

    IOWriteByte(EcBRAMIndex, 0x12);
    IOWriteByte(EcBRAMData, 0x30);           //Write start
}
```

```
Byte ECBRAMReadByte(byte FnDataReg, byte
OPReg){ IOWriteByte(EcBRAMIndex, 0x10);
    IOWriteByte(EcBRAMData, BRAMLDNReg);
    IOWriteByte(EcBRAMIndex, 0x11);
    IOWriteByte(EcBRAMData, FnDataReg);

    IOWriteByte(EcBRAMIndex, 0x12);
    IOWriteByte(EcBRAMData, 0x10);           //Read start

    IOWriteByte(EcBRAMIndex, 0x13 + OPReg);
    Return      IOReadByte(EcBRAMData, Value);
}
```

```
*****
```